

CCD-TR323E/TR323EP

RMT-507

SERVICE MANUAL



AEP Model
UK Model
E Model

CCD-TR323E

Australian Model
CCD-TR323E/TR323EP

**Video8
Handycam**

A MECHANISM

Remote commander is available as a unit. But as individual parts the battery case lid of commander is only available.

CCD-TR323EP is a model that soft carrying case is added in CCD-TR323E.

CCD-TR323EP is different from CCD-TR323 only in the accessory and packing materials.

For MECHANISM ADJUSTMENTS, refer to the "8 mm Video MECHANICAL ADJUSTMENT MANUAL IV" (9-973-199-11).

SPECIFICATIONS

Video Camera Recorder

System

Video recording system
Two rotary heads, Helical scanning
FM system

Audio recording system
Two rotary heads, FM system

Video signal
PAL colour, CCIR standards

Usable cassette
8 mm video format cassette
(standard 8 mm)

Tape speed
SP mode: Approx. 2.0051 cm
(13/16 inches)/s
LP mode: Approx. 1.0058 cm
(13/32 inches)/s

Recording time
SP mode: 1.5 hours (P5-90)
LP mode: 3 hours (P5-90)

Playback time
SP mode: 1.5 hours (P5-90)
LP mode: 3 hours (P5-90)

Fastforward/rewind time
Approx. 6 min 30 s (P5-90)

Image device
CCD (Charge Coupled Device)

Viewfinder
Electronic viewfinder (monochrome)

Lens
Combined 10 x Power zoom lens
f = 6.2 to 62 mm
(1/4 to 2 7/16 inches)
F 1.6 to 2.9 (45 to 450 mm when
converted to a 35 mm still camera)
Attached 0.7 x Wide Angle lens
f = 4.4 mm
F 1.6 (32 mm when converted to a
35 mm still camera)
TTL autofocus system inner focus
wide macro system

Colour temperature
Auto

Minimum illumination
2 lx (F 1.6)

Illumination range
2 lx to 100,000 lx

Recommended illumination
More than 100 lx

Input and output connectors

Video output
Phono jack, 1 Vp-p, 75 Ω ,
unbalanced, sync negative

Audio output
Phono jacks -7.5 dBs, (2: stereo L
and R) (at load impedance 47 k Ω)
impedance less than 2.2 k Ω

RFU DC OUT
Special minijack, DC 5 V

Remote jack
Stereo mini-minijack (ϕ 2.5 mm)

MIC jack
minijack, -66 dBs low impedance
with 2.5 to 3 V DC, output
impedance 6.8 k Ω (ϕ 3.5 mm)

General

Power requirements
On battery mounting surface
6.0 V (battery pack)
7.5 V (AC power adaptor)

Average power consumption
6.0 W (camera recording) including
the viewfinder

Installation
Vertically, Horizontally

— Continued on next page —



8 VIDEO CAMERA RECORDER
SONY

Operating temperature
0°C to 40°C (32°F to 104°F)

Storage temperature
-20°C to +60°C (-4°F to +140°F)

Dimensions
Approx. 109 x 109 x 188 mm (w/h/d)
(4 3/8 x 4 3/8 x 7 1/2 inches)

Mass
About 790 g (1 lb 11 oz) excluding
the battery pack, lithium battery,
cassette, and shoulder strap
About 1,010 g (2 lb 4 oz) including
the battery pack NP-55, lithium
battery CR2025, cassette P5-90, and
shoulder strap

Microphone
Electric condenser microphone,
stereo type

AC power adaptor

Power requirements
110 — 240 V AC, 50/60 Hz

Power consumption
15 W

Output voltage
DC OUT: 7.5 V, 1.2 A in operating
mode
Battery charge terminal: 10 V, 1.1 A
in charge mode

Application
Sony battery packs NP-55/-55H,
NP-66/-66H, NP-77/-77H/-77HD

Operating temperature
0°C to 40°C (32°F to 104°F)

Storage temperature
-20°C to 60°C (-4°F to 140°F)

Dimensions
Approx. 103 x 49 x 63 mm (w/h/d)
(4 1/8 x 1 15/16 x 2 1/2 inches)
including projecting parts and
controls


Weight
Approx. 290 g (10 oz)

Design and specifications are subject to change
without notice.

Note

This appliance conforms with EEC Directive
87/308/EEC regarding interference suppression.

Supplied accessories

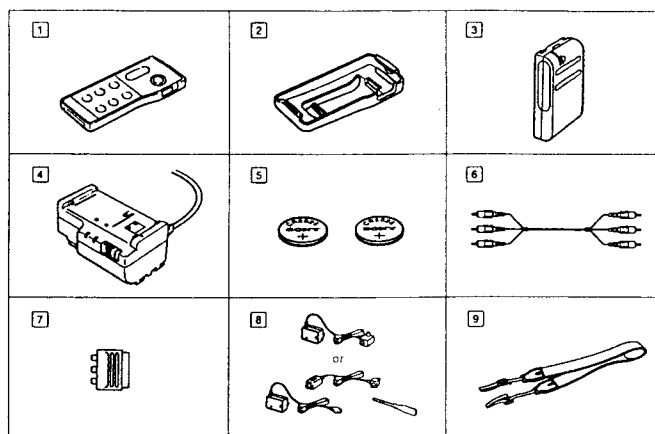

- 1 Wireless Remote Commander (1)
- 2 Remote Commander holder (1)
- 3 NP-55 Battery pack (1)
- 4 AC-V25 AC power adaptor (1)
- 5 CR2025 Lithium Battery (2)
(One is for the camcorder and the other
is for the Remote Commander)
- 6 A/V connecting cable (1) (p. 21)
- 7 21-pin adaptor (1) (P. 21)
- 8 RFU adaptor RFU-90E (1) (AEP model)
RFU-90AS (1) (Australian model)
RFU-89EA with an aerial selector and
a screwdriver (1) (UK/E model)
- 9 Shoulder strap (1)

SAFETY CHECK-OUT

After correcting the original service problem, perform the following
safety checks before releasing the set to the customer:

1. Check the area of your repair for unsoldered or poorly-soldered connections. Check the entire board surface for solder splashes and bridges.
2. Check the interboard wiring to ensure that no wires are "pinched" or contact high-wattage resistors.
3. Look for unauthorized replacement parts, particularly transistors, that were installed during a previous repair. Point them out to the customer and recommend their replacement.
4. Look for parts which, though functioning, show obvious signs of deterioration. Point them out to the customer and recommend their replacement.
5. Check the B+ voltage to see it is at the values specified.

SAFETY-RELATED COMPONENT WARNING!!

COMPONENTS IDENTIFIED BY MARK  OR DOTTED
LINE WITH MARK  ON THE SCHEMATIC DIAGRAMS
AND IN THE PARTS LIST ARE CRITICAL TO SAFE
OPERATION. REPLACE THESE COMPONENTS WITH
SONY PARTS WHOSE PART NUMBERS APPEAR AS
SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUB-
LISHED BY SONY.

【Zoom lens】

This unit employs two types of lens.

Note that the lenses are interchangeable, however their components are not.

Differentiating the lens

◀ : Changed portion

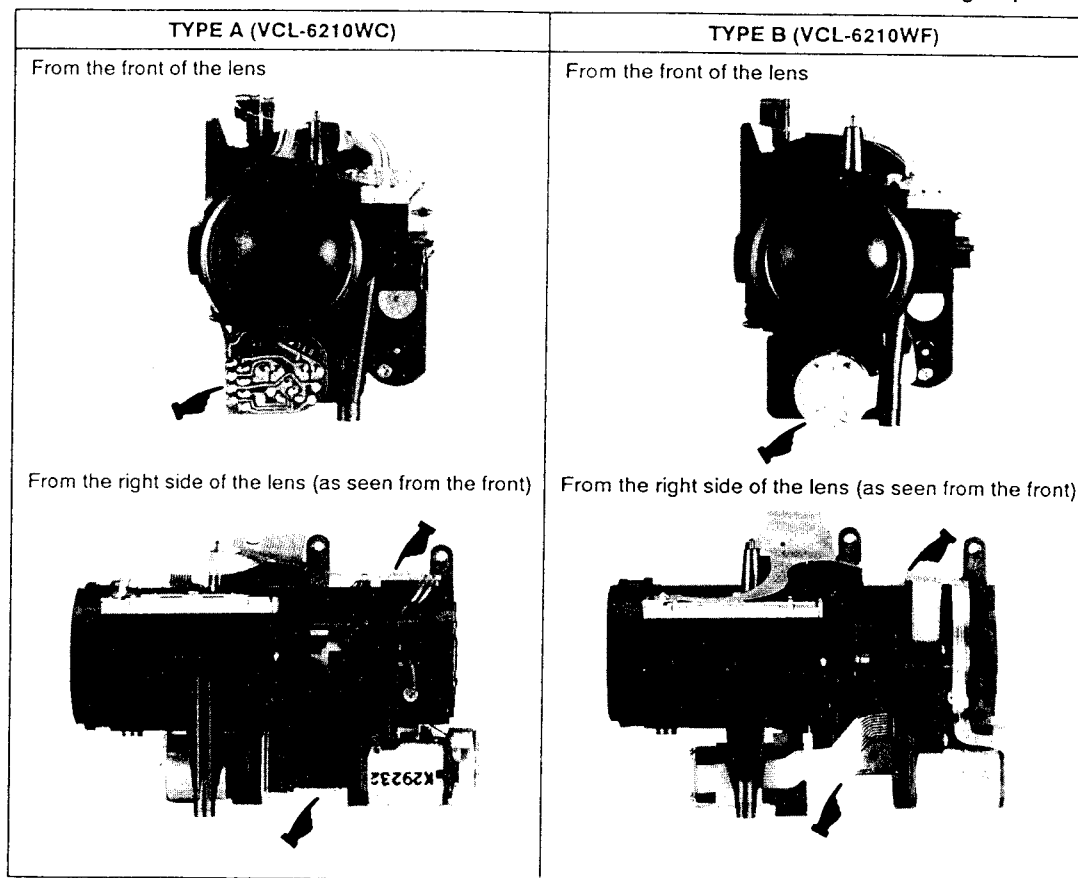


TABLE OF CONTENTS

Section	Title	Page	Section	Title	Page
SERVICE NOTE			3-8.	System Control Block Diagram	57
	Semiconductor for Correction List Display	7	3-9.	Audio Block Diagram	61
	Parts Location Diagram Related to Power Supply	7	3-10.	EVF Block Diagram	64
	Semiconductor Location	7	3-11.	Power Block Diagram	65
	Head Cleaning	7			
1. GENERAL			4. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS		
	Charging and Installing the Battery Pack	8	4-1.	Frame Schematic Diagram	68
	Tips for Using the Battery Pack	9	4-2.	Printed Wiring Boards and Schematic Diagrams	71
	Inserting the Lithium Battery	10	•	CD-106 Board	71
	Setting the Date and Time	11	•	VC-133 Board (Camera, Lens Drive)	74
	Inserting a Cassette	11	•	VC-133 Board (Camera)	77
	Adjusting the Viewfinder Lens	12	•	VC-133 Board (Lens Drive)	84
	BEEP Feature	12	•	VS-100 Board (REC/PB Head Amplifier, Video, Servo/System Control)	87
	Hints for Better Shooting	12	•	VS-100 Board (REC/PB Head Amplifier)	91
	Camera Recording	13	•	VS-100 Board (Video)	95
	Connections for Playback	16	•	VS-100 Board (Servo/System Control)	99
	Playing Back a Tape	17	•	CF-34, CN-73, ED-37, MF-214, VK-32, JK-99, LI-46 Boards	103
	Using Alternate Power Sources	18	•	SL-33, FP-442, LM-40, LS-33 Boards	110
	Focusing Manually	18	•	AU-150, MA-170, WS-11 Boards	117
	Using the PROGRAM AE Function	19	•	VF-42 Board	124
	Fade-in and Fade-out	20	•	DD-56, SW-223 Boards	130
	Using the World Clock	21	4-3.	Semiconductors	136
	Editing onto Another Tape	21	5. EXPLODED VIEWS		
	Playback Modes	22	5-1.	Cabinet (L) and F Panel Assemblies	137
	Maintenance Information and Precautions	22	5-2.	Cabinet (R) and EVF Assemblies	138
	Identifying the Parts	24	5-3.	Main Boards Assembly	139
	Indicators in the Viewfinder	26	5-4.	Cassette Compartment Holder Assembly	140
2. DISASSEMBLY			5-5.	LS Chassis Assembly	141
2-1.	Removal of Front Panel Assembly	28	5-6.	Mechanism Chassis Assembly (1)	142
2-2.	Removal of Cassette LID Assembly	28	5-7.	Mechanism Chassis Assembly (2)	143
2-3.	Removal of Cabinet (L) Assembly	28	5-8.	Zoom Lens Assembly (VCL-6210WC) (TYPE A)	144
2-4.	Removal of Cabinet (R) Assembly	29	5-9.	Zoom Lens Assembly (VCL-6210WF) (TYPE B)	145
2-5.	Removal of CF-34, ED-37 and VK-32 Boards	29	6. ELECTRICAL PARTS LIST		
2-6.	Removal of DD-56 and SW-223 Boards	30	146		
2-7.	Removal of JK-99, AU-150 and WS-11 Boards	30	HARDWARE LIST		
2-8.	Removal of LS LID Assembly	31	166		
2-9.	Removal of Lens Assembly (CD-106 Board)	31	7. INTERFACES • IC PIN FUNCTIONS		
2-10.	Opening of VC-133 Board	32	7-1.	Camera Microprocessor Pin Function (IC709 on VC-133 Board: CXP80624-434R)	167
2-11.	Removal of VS-100 Board	32	7-2.	Mechanism Control Microprocessor Pin Function (IC402 on VS-100 Board: CXP80624-428R)	168
2-12.	Removal of SL-33 Board	33	7-3.	Mode Control Microprocessor Pin Function (IC403 on VS-100 Board: μ PD75316GF-318-3B9)	170
2-13.	Removal of EVF Assembly (VF-42 Board)	33	7-4.	Interface	171
2-14.	Internal Views	34	7-4-1.	System Control – Video/Audio Block Interface (VS-100 Board)	171
3. DIAGRAMS			7-4-2.	System Control – Servo Block Interface	172
3-1.	Circuit Boards Location	35			
3-2.	Overall Block Diagram	36			
3-3.	Camera (1) Block Diagram	39			
3-4.	Camera (2) Block Diagram	43			
3-5.	Video (1) Block Diagram	47			
3-6.	Video (2) Block Diagram	51			
3-7.	Servo Block Diagram	54			

<u>Section</u>	<u>Title</u>	<u>Page</u>
8.	CAMERA SECTION ADJUSTMENTS	
8-1.	Preparations Before Adjustment (Camera Section)	173
8-1-1.	List of Service Tools	173
8-1-2.	Preparations	175
8-1-3.	Precautions	176
1.	Switch settings	176
2.	Adjustment Procedure	176
3.	Subject	176
8-1-4.	Adjusting Remote Control Unit	177
1.	Using the adjusting remote control unit	177
2.	Precautions upon using the adjusting remote control unit	177
8-1-5.	Page F Address List	178
8-1-6.	6 Page, 1 Page Address List	184
1.	Page 6	184
2.	Page 1	185
8-1-7.	Adjustment Connector	185
8-1-8.	Data Processing	186
8-2.	Camera System Adjustment	187
1.	Power Supply Voltage Check (DD-56 board)	187
2.	Page F Data Initialization	187
3.	Page F Data Modification	187
4.	28 MHz Original Oscillation Adjustment (VC-133 board)	188
5.	V SUB Adjustment (VC-133 board)	188
6.	VRG Adjustment (VC-133 board)	188
7.	CCD Imager Correction Data Write	188
8.	HALL Adjustment	189
9.	Flange Back Adjustment	190
10.	Flange Back Check	190
11.	SYNC Level Adjustment (VC-133 board)	191
12.	BURST Level Adjustment (VC-133 board)	191
13.	A/D Offset Adjustment	192
14.	Carrier Balance Adjustment	192
15.	Picture Frame Setting	193
16.	IRIS Level Adjustment (VC-133 board)	194
17.	MAX GAIN Adjustment (VC-133 board)	194
18.	IRIS IN/OUT Adjustment	195
19.	Pre-white Balance Adjustment	195
20.	Color Reproduction Adjustment	196
21.	Auto White Balance Preset Adjustment	197
22.	Auto White Balance Adjustment	197
23.	White Balance Check	198
24.	Linear Matrix Adjustment	199
25.	VIDEO OUT Level Check	200
8-3.	Electronic Viewfinder System Adjustments	200
8-3-1.	Horizontal Slant Adjustment	200
8-3-2.	Centering Adjustment	201
8-3-3.	Focus Adjustment	201
8-3-4.	Aberration Adjustment	201
8-3-5.	Horizontal Oscillation Frequency Adjustment (VF-42 board)	201
8-3-6.	Horizontal Amplitude Adjustment (VF-42 board)	202
8-3-7.	Vertical Amplitude Adjustment (VF-42 board)	202
8-3-8.	Brightness, Contrast Adjustments (VF-42 board)	202
8-3-9.	Horizontal Amplitude, Vertical Amplitude, Focus Check	202
8-4.	Arrangement Diagram for Adjustment Parts	204

<u>Section</u>	<u>Title</u>	<u>Page</u>
9.	MECHANICAL SECTION ADJUSTMENTS	
9-1.	Setting the Track Shift Mode	209
9-2.	Preparation for Adjustment	209
10.	VIDEO SECTION ADJUSTMENTS	
10-1.	Preparations Before Adjustment	210
10-1-1.	Equipments to be used	210
10-1-2.	Connecting the equipments	210
10-1-3.	How to Set the REC Mode	211
10-1-4.	Precautions upon adjustment	211
10-1-5.	Set-up during Adjustment	211
10-1-6.	Alignment Tape	212
10-1-7.	Output Level and Impedance	212
10-1-8.	Service Mode	213
1.	Setting the Service mode	213
2.	Types of Self-diagnostic Feature	215
3.	Page D Write Protect	215
4.	Page F Write Protect	215
5.	Test Mode Setting	216
6.	Emergency code	216
7.	Emergency mode	217
8.	Bit value Discrimination	217
9.	Check of Tape Distinction Switch, etc.	218
10.	Mode Switch Check	219
11.	Mechanism Control A/D Port Input Voltage Check ..	220
12.	Tape Top/End Sensor Condition Check	220
13.	Battery Voltage Check	220
14.	Individual Operations of the Drum, Capstan, and Loading Motor	220
15.	Mode control micro processor key matrix check	221
16.	Wireless Remote Control Unit Reception Content Check	221
17.	EDIT Switch, Remote Commander Switch Check	222
18.	White Balance Mode and Focus Mode Display/Switchover	222
19.	LCD, LED Check, etc.	222
20.	Page D Address List	223
10-2.	Power System Adjustments	225
1.	Oscillator Frequency Check (DD-56 board)	225
2.	Power Voltage Check (DD-56 board)	225
10-3.	System Control System Adjustments	225
1.	Page D Initial Value Input	225
2.	Battery End Adjustment	226
3.	Battery Down Check	226
10-4.	Servo System Adjustments	227
1.	Switching Position Adjustment (VS-100 board)	227
10-5.	Video Adjustments	227
1.	Playback Frequency Characteristic Adjustment (VS-100 board)	228
2.	Flying Erase Check (VS-100 board)	228
3.	VXO Oscillation Frequency Check (VS-100 board) ..	228
4.	EE Level Adjustment (VS-100 board)	229
5.	IR Adjustment (VS-100 board)	229
6.	Y/C Separation Adjustment (VS-100 board)	230
7.	Emphasis Input Level Adjustment (VS-100 board) ..	230
8.	PB Y Level Adjustment (VS-100 board)	231
9.	PB LINE OUT Level Adjustment	231

<u>Section</u>	<u>Title</u>	<u>Page</u>
10.	Y FM Carrier Frequency Adjustment (VS-100 board)	232
11.	Deviation Adjustment (VS-100 board)	232
12.	Chroma Emphasis f0 Adjustment (VS-100 board)	233
13.	REC Y Level Adjustment (VS-100 board)	233
14.	REC C Level Adjustment (VS-100 board)	234
15.	REC ATF Level Check (VS-100 board)	234
16.	REC AFM Level Check (VS-100 board)	235
10-6.	Audio System Adjustment	235
1.	IR Adjustment (AU-150 board)	236
2.	1.5 MHz Carrier Frequency Check (AU-150 board) ..	236
3.	1.7 MHz Carrier Frequency Check (AU-150 board) ..	236
4.	1.5 MHz Record Level Check (AU-150 board)	236
5.	1.7 MHz Record Level Check (AU-150 board)	237
6.	E-E Output Level Check (AU-150 board)	237
7.	REC Matrix L-R Adjustment (AU-150 board)	237
8.	REC Matrix L+R Check (AU-150 board)	237
9.	1.5 MHz Deviation Adjustment	238
10.	1.7 MHz Deviation Adjustment (AU-150 board)	238
11.	PB Matrix L Adjustment (AU-150 board)	239
12.	PB Matrix R Check (AU-150 board)	239
13.	Overall Level Characteristic, Distortion Check	239
14.	Separation Check	240
15.	Overall Noise Level Check	240
10-7.	Arrangement Diagram for Adjustment Parts	242

There is the color reproduction standard frame at the back of the book.

SERVICE NOTE

[SEMICONDUCTOR FOR CORRECTION LIST DISPLAY]

Part code and part name of the semiconductor for correction of the print board is described in the space of each print figure. Use this list when ordering parts.


[PARTS LOCATION DIAGRAM RELATED TO POWER SUPPLY]

The parts location diagram for the power supply which are often checked and replaced when repairing the fuse and IC link and so on. (See pages 88, 89, 100, 101, 131 and 133.)

This diagram is useful for repair.

[SEMICONDUCTOR LOCATION]

In this service manual, the mounted locations of the semiconductors (IC, transistor, diodes) are indicated in red in schematic diagrams. This enables to find the location on the board easily when servicing.

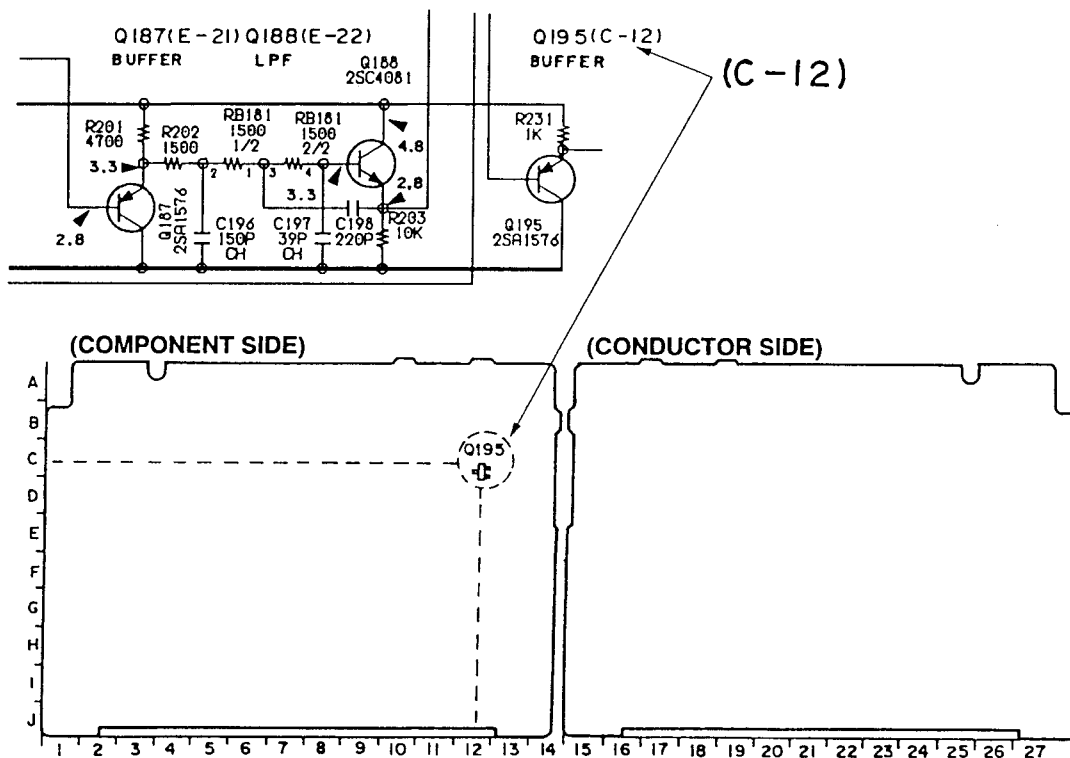

[HEAD CLEANING]

After an extended period of use the video image may become indistinct or may not appear at all during playback of a tape. The cause of this usually are dirty video heads. For remedy, cleaning of the heads is required.

Check for Head Clogs During Recording

- ① Use a blank tape, record a short section, then press the stop button to stop.
- ② Set to recording mode again.
- ③ If the [X] mark is flashing in the viewfinder at this time, head clogs are occurred.

Check During Playback of a Tape

- ① Play back a pre-recorded tape and display the image on a TV screen.
- ② If there is no sound and the image is unstable, no image appears on the screen, or tape transport is unstable, head clogs are occurred.

Remedy

[Cleaning method using a cleaning tape]

- Use the Cleaning Tape. (Please follow the instructions attached to the cleaning tape.)

SECTION 1 GENERAL

This section is extracted from
CCD-TR323E instruction manual.


Getting Started

Charging and Installing the Battery Pack

Before using your camcorder, you first need to charge and install the battery pack. To charge the battery pack, use the supplied AC-V25 AC power adaptor.

Charging the Battery Pack

Charge the battery pack on a flat place without vibration.
(1) Connect the power cord to a wall outlet. (2) Align the right side of the battery pack with the white line on the AC power adaptor, then slide the battery pack in the direction of the arrow. (3) Set the selector to CHARGE. The POWER lamp (green) and the CHARGE lamp (orange) light up. Charging begins. When charging is completed, the CHARGE lamp goes out. Set the selector to the center position and unplug the unit from the wall outlet. Then remove the battery pack and install it on the camcorder. To stop charging, set the selector to the center position.

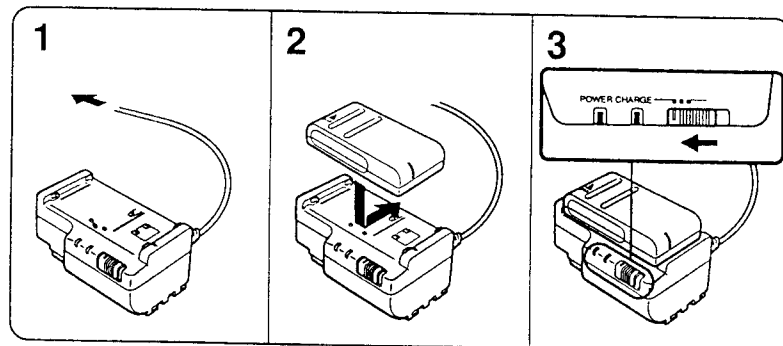

Charging Time and Battery Life

Battery pack	NP-55 (supplied)	NP-77H NP-77HD	NP-77	NP-66H	NP-55H
Charging time*	70	160	140	120	80
Battery life**	50	135	105	100	60

* Approximate charging time to charge an empty battery pack using the AC-V25. (Lower temperatures require a longer charging time.)

** Approximate continuous recording time indoors.

Important

Use the battery completely before re-charging!


Before you recharge the battery, make sure the battery has been used up (discharged) completely. Repeated charging while some capacity remains causes a lowering of battery capacity. However, the original battery capacity can be recovered if you use the battery completely and charge it fully again.

To use up the battery, remove the cassette and slide the POWER switch to CAMERA with the battery attached, and leave the camcorder until the indicator and the red lamp flash in the viewfinder.

Charging and Installing the Battery Pack

Removing the Battery Pack

Slide the battery pack in the direction of the arrow (see drawing).

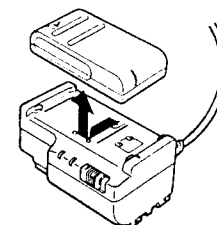


Note on charging the battery pack

- The POWER lamp will remain lit for a while even if the battery pack is removed and the power cord is unplugged after charging the battery pack. This is normal.
- If the POWER lamp does not light, set the selector to the center position and disconnect the power cord. After about one minute, reconnect the power cord and set the selector to CHARGE again.
- You cannot operate the camcorder using the AC power adaptor while charging the battery pack.


Installing the Battery Pack

(1) Lift up the viewfinder. (2) Align the right side of the battery pack with the white line on the camcorder, and slide the battery pack to the right.

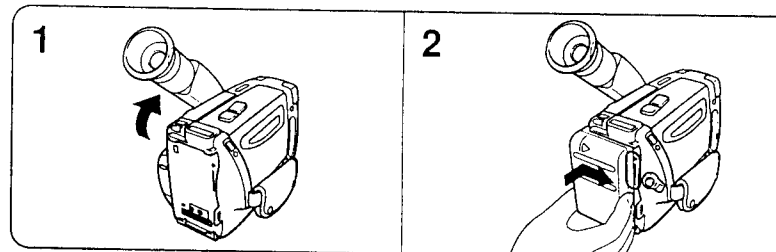

Removing the Battery Pack

(1) Lift up the viewfinder. (2) While pressing BATT, slide the battery pack to the left.

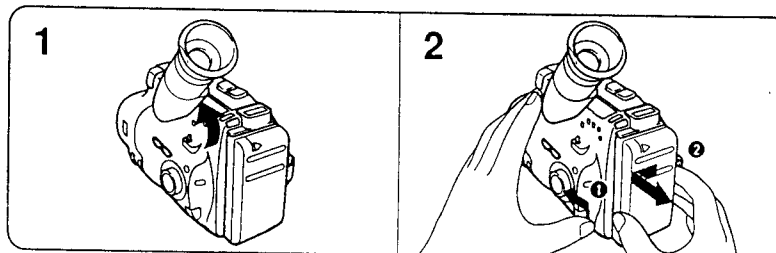

Checking Supplied Accessories / Charging and Installing the Battery Pack

Tips for Using the Battery Pack

This section shows you how you can get the most out of your battery pack.

Preparing the Battery Pack

Always Carry Additional Batteries

Have sufficient battery pack power to do 2 to 3 times as much recording as you have planned. "Battery life" indicated in this manual is measured by the continuous recording time of the camcorder, placed at room temperature using a fully-charged battery.

Battery Life is Shorter in Cold Environment

Battery efficiency is decreased and the battery will be used up more quickly if you are recording in cold environment.

To Save Battery Power

Turn the STANDBY switch on the camcorder down when not recording to save battery power. [a] A smooth transition between scenes can be made even if recording is stopped and started again. While positioning the subject, selecting an angle, or looking through the viewfinder lens, the lens moves automatically and the battery is used. The battery is also used when a tape is inserted or removed.

When to Replace the Battery Pack

While you are using your camcorder, the remaining battery indicator decreases gradually as battery power is used up.



When the remaining battery indicator reaches the lowest point, the  indicator appears and starts flashing in the viewfinder. [b]

When the  indicator in the viewfinder changes from slow flashing to rapid flashing while you are recording, slide the POWER switch to OFF on the camcorder and replace the battery pack. Leave the tape in the camcorder to obtain smooth transition between scenes after the battery pack is replaced.

Note on the remaining battery indicator

The remaining battery indicator of the camcorder may indicate a different remaining capacity from that of the NP-77HD battery pack (not supplied). The indicator of NP-77HD is more accurate.

Note on the Rechargeable Battery Pack

The Battery Heats Up

During charging or recording, the battery pack heats up. This is caused by energy that has been generated and a chemical change that has occurred inside the battery pack. This is not cause for concern.

Battery Care

- Remove the battery pack from the camcorder after using the battery pack, and keep it in a cool place. When the battery pack is attached to the camcorder, a small amount of current flows to the camcorder even if the POWER switch is set to OFF, which shortens battery life.
- The battery pack is always discharging even when it is not in use after charging. Therefore, you should charge the battery right before using the camcorder.

How to Use the Switch on the Battery Pack

This switch is provided so that you can mark the charged battery. Set the switch to the "no mark" position when charging is completed. Set the switch to the "red mark" position when the battery is used up (or in whichever direction you want to remind yourself). [c]

Tips for Using the Battery Pack

The Life of the Battery Pack

The battery pack can be fully charged and discharged about 500 times under normal temperatures. If the battery indicator flashes rapidly just after turning on the camcorder with a fully charged battery pack, the battery pack should be replaced with a new fully charged one.

Charging Temperature

You should charge batteries at temperatures from 10°C to 30°C (from 50°F to 86°F). Lower temperatures require a longer charging time.

Note on Charging

A Brand-new Battery

A brand-new battery pack is not charged. Before using the battery pack, charge it completely.

Before Recharging a Used Battery Pack

- Make sure to use up the battery before recharging.
- If recording is completed before the  indicator appears in the viewfinder, you should remove the tape, slide the POWER switch to CAMERA, turn up the STANDBY switch, and leave the camcorder until the battery indicator flashes rapidly.
- When you use the AC-S10 power adaptor or the DC-S10 car battery charger, you can use the discharging function.
- Charging the usable battery causes a lowering of battery capacity. Battery capacity can be recovered if you fully discharge and charge the battery again.

After Long Storage

Recharge the battery pack after a long period of storage. If the battery pack is charged fully but not used for a long time (about 1 year), it becomes discharged. Charge it again, but in this case the battery life will be shorter than normal. After several charging and discharging cycles, the battery life will recover its original capacity.


Note on the Terminals

If the terminals (metal parts on the back) are not clean, the battery duration will be shortened.

When the terminals are not clean or when the battery pack has not been used for a long time, repeat installing and removing the battery pack. This improves the contact condition. Also, wipe the + and - terminals with a soft cloth or paper.


Be Sure to Observe the Following

- To prevent an accident caused by a short circuit, do not allow metal objects such as a necklace to touch the battery terminals. Carry the battery pack attaching to the terminal cover. [d]
- Keep the battery pack away from fire.
- Keep the battery pack dry.
- Do not open nor convert the battery pack.
- Do not expose the battery pack to any mechanical shock.

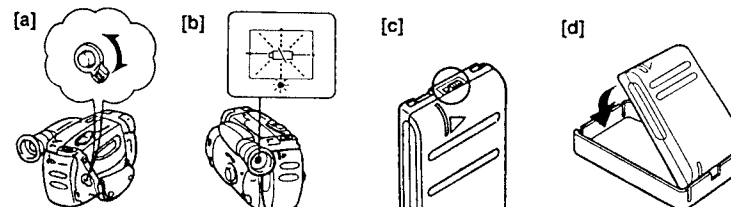


Inserting the Lithium Battery

Your camcorder is supplied with two lithium batteries. One is for the camcorder, and the other is for the Remote Commander. The lithium battery has a positive (+) side and a negative (-) side as illustrated below. Be sure to install the lithium battery with the positive side facing out.

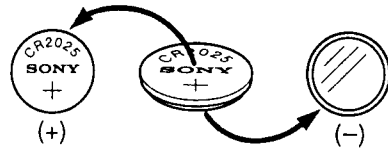

Inserting the Lithium Battery into the Camcorder

To activate the clock and the world clock, you must insert a lithium battery. (1) Detach the lid of the lithium battery compartment on the bottom of the camcorder. (2) Install the lithium battery with the positive (+) side facing out. (3) Replace the lid.

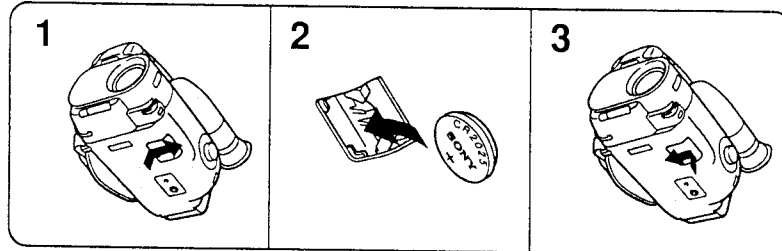

To Remove the Lithium Battery

Push the battery down once and pull it out from the holder. When replacing the lithium battery, keep the battery pack or other power source attached. Otherwise, you will need to reset the date and time.




Tips for Using the Battery Pack / Inserting the Lithium Battery

Inserting the Lithium Battery

Inserting the Lithium Battery into the Remote Commander

To use the Remote Commander, you must insert the lithium battery. Use one of the supplied CR2025 lithium batteries.

(1) Pull out the lithium battery holder from the Remote Commander. (2) Insert the lithium battery with the positive (+) side facing upward. (3) Put the lithium battery holder back into the Remote Commander.

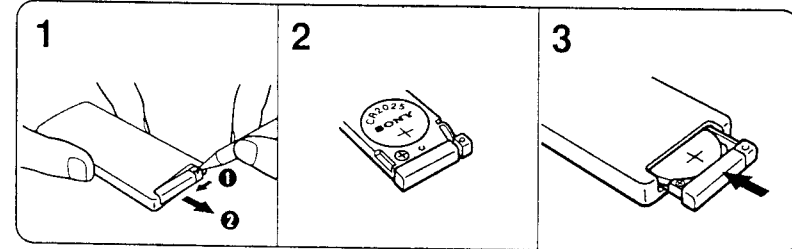


Lithium Battery Life

The lithium battery for the camcorder lasts for about 1 year under normal operation. When the battery becomes weak or dead, the  indicator flashes in the viewfinder for about 5 seconds when you set the POWER switch to CAMERA.

The lithium battery for the Remote Commander lasts about 6 months under normal operation. When the battery becomes weak or dead, the Remote Commander does not work.

In either case, replace the battery with a Sony CR2025 lithium battery. Use of any other battery may present a risk of fire or explosion.

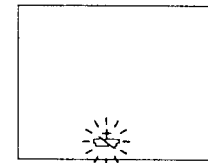

WARNING

The battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.


Caution

Keep the lithium battery out of the reach of children. Should the battery be swallowed, consult a doctor immediately.

Setting the Date and Time

You need to set the camcorder's date and time to record the correct ones onto your video. Before setting the clock, make sure a power source and lithium battery are installed.

(1) Pull out the viewfinder until it clicks. (2) While pressing the small green button on the POWER switch, slide it to CAMERA. (3) Turn the STANDBY switch to STANDBY. (4) Turn the viewfinder lens adjustment ring so that the indicators in the viewfinder come into sharp focus. (5) Press DATE (+) and TIME (NEXT) simultaneously until the area name and number appear in the viewfinder. (6) Press DATE (+) to set your home area. (See the table below.) (7) Set the Time: [a] For standard time, press TIME (NEXT). [b] For Summer Time, press SUMMERTIME and then press TIME (NEXT). (8) Adjust the flashing digits of the year, month, day and hour and minutes by pressing DATE (+) and TIME (NEXT). Note that when you keep DATE (+) pressed, the digits advance faster.

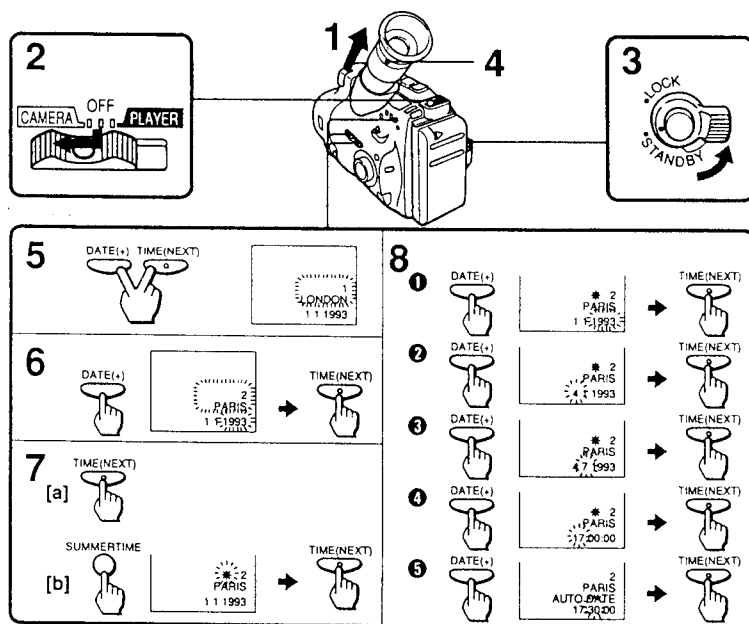

Time Zones and Area Numbers and Names

Countries	Area name	Area number
The United Kingdom and Portugal (GMT)	LONDON	1
Other European countries (CET)	PARIS	2
Finland, Greece, etc.	CAIRO	3

Setting the Date and Time

To Correct the Date and Time Settings

Press TIME (NEXT) repeatedly until the minute digits stop flashing. Then repeat steps 5 to 8.

To Check the Preset Date and Time

Press DATE (+) or TIME (NEXT). When you press the same button again, the indicator goes off.

To Reset to Standard Time

Press SUMMERTIME. The indicator goes off.

Note on the setting of the year


When you set the year, each time you press DATE (+) the digits change as follows.

1993 → 1994 → ... → 2020

Inserting a Cassette

Make sure that the power source is installed.

(1) While pressing the small blue button on the EJECT knob, slide it down. The cassette holder automatically lifts up and opens. (2) Insert a tape with the window facing out. (3) Close the cassette holder by pressing the "PUSH" mark on the cassette holder.

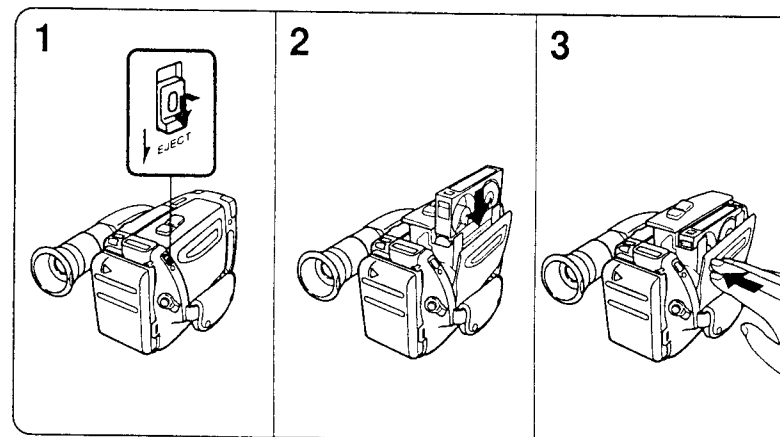


To Eject the Cassette

While pressing the small blue button on the EJECT knob, slide it down.

Inserting the Lithium Battery / Setting the Date and Time

Adjusting the Viewfinder Lens


Before you use the camcorder for the first time or after someone else has used it, focus the viewfinder lens. Make sure that the power source is attached to the camcorder. (1) Pull out the viewfinder until it clicks. (2) While pressing the small green button on the POWER switch, slide it to CAMERA. (3) Turn the STANDBY switch to STANDBY. (4) Turn the viewfinder lens adjustment ring so that the indicators in the viewfinder come into sharp focus.

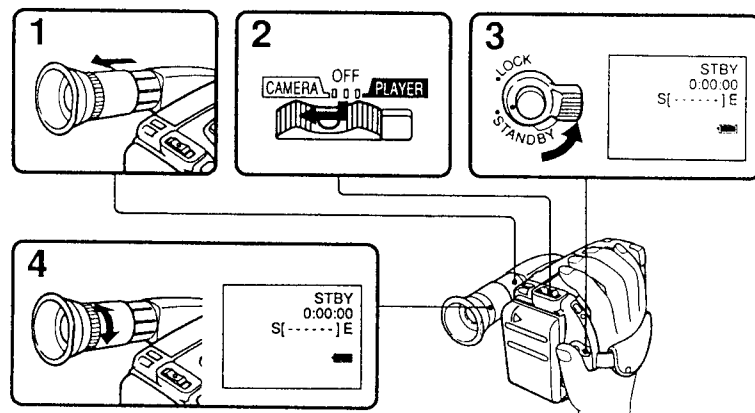

Setting the Date and Time / Inserting a Cassette / Adjusting the Viewfinder Lens


BEEP Feature

A beep sounds when you start recording and two beeps sound when you stop recording, confirming the operation. Several beeps also sound as a warning of any unusual condition of the camcorder. Note that the beep sound is not recorded on the tape. If you do not want to hear the beep sound, set BEEP to OFF.

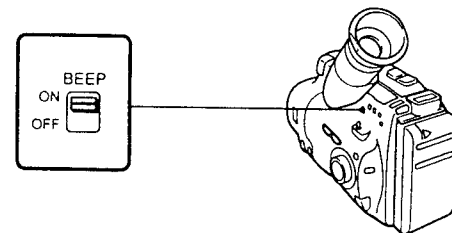

Hints for Better Shooting

For hand-held shots, you'll get better results by holding the camcorder according to the following suggestions.

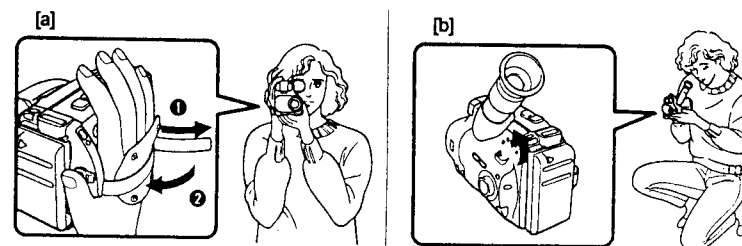

- Hold the camcorder firmly and secure it with the grip strap so that you can easily manipulate the controls with your thumb. [a]
- Place your right elbow against your side.
- Place your left hand under the camcorder to support it.
- Place your eye firmly against the viewfinder eyecup.
- Use the viewfinder frame as a guide to determine the horizontal plane.
- You can also record in a low position to get an interesting recording angle. Turn the viewfinder up for recording from a low position. [b]

Place the camcorder on a flat surface or use a tripod

Try placing the camcorder on a table top or any other flat surface of suitable height. If you have a tripod for a still camera, you can also use it with the camcorder (p. 41). Make sure the tripod screw is shorter than 6.5 mm (9/32 in).


Basic Operations

Camera Recording

Make sure that the power source is installed and a cassette is inserted. If you set the date (p. 11), the date is automatically recorded for 10 seconds after you start recording (AUTO DATE feature). This feature works only once a day. You can use the Remote Commander to record yourself with your friends or family. When you use the Remote Commander, make sure that the REMOTE COMMANDER switch on the camcorder is set to ON (p. 43).

Before you record one-time events, you may want to make a trial recording to make sure that the camcorder is working perfectly.

(1) Pull out the viewfinder until it clicks. (2) Slide the LENS COVER switch to OPEN. (3) Set the REC MODE/EDIT switch to LP (long play) or SP (standard play), according to the length of your planned recording. (4) While pressing the small green button on the POWER switch, slide it to CAMERA. (5) Set the white mark of the PROGRAM AE dial to the green position. (6) Turn the STANDBY switch to LOCK. Adjust the viewfinder lens so that the indicators in the viewfinder come into sharp focus (p. 13). (7) Press START/STOP. As the camcorder starts recording, the red lamps in the viewfinder and the camera recording/battery lamp on the camcorder light up.

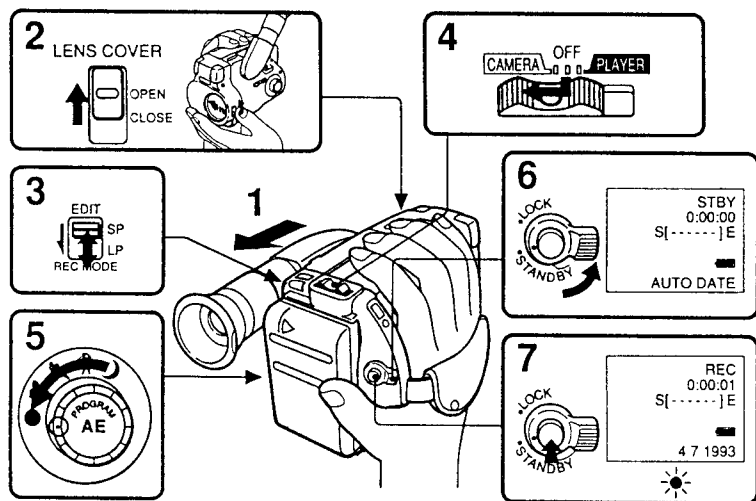

To Stop Recording Momentarily

Press START/STOP again. The "STBY" indicator appears in the viewfinder (Standby mode).

To Finish Recording

Turn the STANDBY switch to LOCK and slide the POWER switch to OFF. Slide the LENS COVER switch to CLOSE and eject the tape (p. 12).

Notes on Standby mode

If you leave the camcorder in Standby mode for 5 minutes, the camcorder goes off automatically. This prevents wearing down the battery and wearing out the tape. To resume Standby mode, turn the STANDBY switch to LOCK once and turn it to STANDBY again. To start recording, press START/STOP.

Camera Recording

Note on the tape counter

The tape counter indicates the recording or playback time. Use it as a guide. There will be a time lag of several seconds from the actual time. To set the counter to zero, press COUNTER RESET.

Note on the AUTO DATE feature

The AUTO DATE feature works once a day. However, the date may automatically appear more than once a day when:

- you reset the date and time.
- you eject and insert the tape again.
- you stop recording within 10 seconds.

If you wear glasses

You can bend back the eyecup to get a better view of the viewfinder.

When moving from indoors to outdoors (or vice versa)

Turn the STANDBY switch to STANDBY and point the camcorder at a white object for about 15 seconds so that the white balance is properly adjusted.

Note on recording


When you record from the beginning of a tape, run the tape for about 15 seconds before starting the actual recording. This will ensure that you won't miss any start-up scenes when you playback the tape.

Recording mode

This camcorder records in the SP mode (approximately 20.051 mm/second) and in the LP mode (approximately 10.058 mm/second) and can playback in the SP mode and LP mode. The quality of the playback picture in the LP mode, however, will not be as good as that in the SP mode.

Preventing Accidental Erasure

To prevent accidental erasure, slide the tab on the cassette to expose the red mark. If you try to record with the red mark exposed, the and indicators flash in the viewfinder, and you cannot record. To re-record on this tape, slide the tab back out covering the red mark.

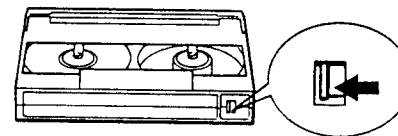


Using the Zoom Feature

Zooming is a recording technique that lets you change the size of the subject in the scene. You can also use the zoom to focus manually or to decide on a shooting angle before you start recording. However, when you use the WIDE ANGLE, zooming is automatically set to the maximum wide-angle setting, and the power zoom button does not function.

For more professional-looking recordings, use the zoom function sparingly.

"T" side: for telephoto (subject appears closer)

"W" side: for wide-angle (subject appears farther away)

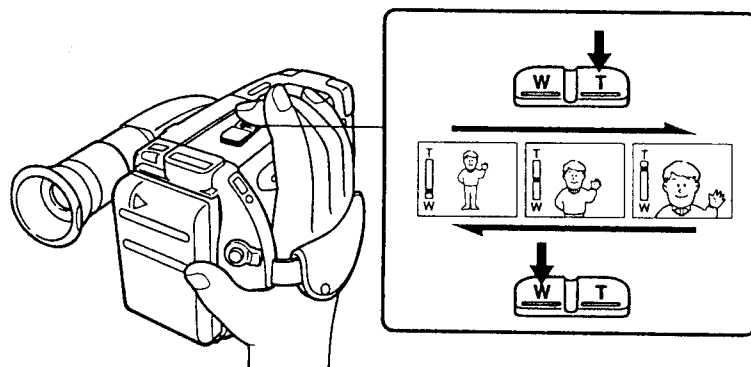

Zooming Speed (Dual speed zooming)

Press the power zoom button firmly for a high-speed zoom, press it softly for a relatively slow zoom.

When you shoot a subject using a telephoto zoom

If you cannot get a sharp focus while in extreme telephoto zoom, press the "W" side of the power zoom button until the focus is sharp. You can shoot a subject that is at least 80 cm (about 31 1/2 inches) away from the lens surface in the telephoto position, or 1 cm (about 1/2 inches) in the wide-angle position.

Manual focusing in macro


You can also shoot with manual focus while doing close-ups (p. 27).

Camera Recording

Camera Recording


Using the WIDE ANGLE

The WIDE ANGLE delivers wide-angle pictures easily. Set the WIDE ANGLE switch in the direction of the arrow.

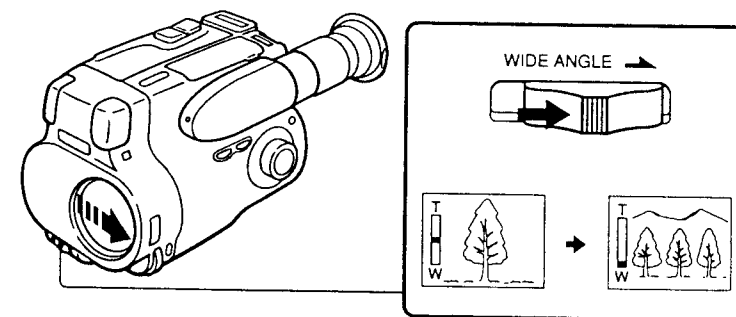


Note on using the WIDE ANGLE

- When you use the WIDE ANGLE, the power zoom button does not function.
- When you use the WIDE ANGLE, zooming is automatically set to the maximum wide-angle setting. The power zoom indicator stays at the end of the "W" side.
- The frame of the picture through the WIDE ANGLE changes [a] and the picture has slightly lower quality.
- When you use the WIDE ANGLE together with the auto-focus function in the following types of situations, the camera will focus not on the subject but on the light source. In this event, either orient the camera so that light does not enter the frame directly, or else use focus the shot manually.
 - When shooting into the light
 - When shooting a subject that gives off a large amount of light
- If there is dust between the regular lens and the WIDE ANGLE, the subjects may become out of focus. Remove the dust by using a blower.
- You cannot use any optional lens or filter with the WIDE ANGLE.

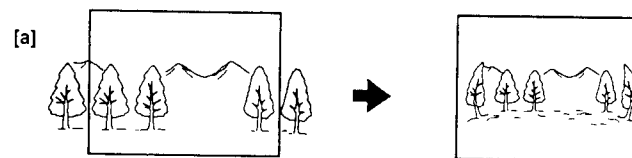

Recording the Date or Time

While you are recording, press DATE (+) or TIME (NEXT). The date or time displayed in the viewfinder is recorded with the picture. You cannot record the date and time at the same time. Except for the date or time indicator, no indicator in the viewfinder is recorded.

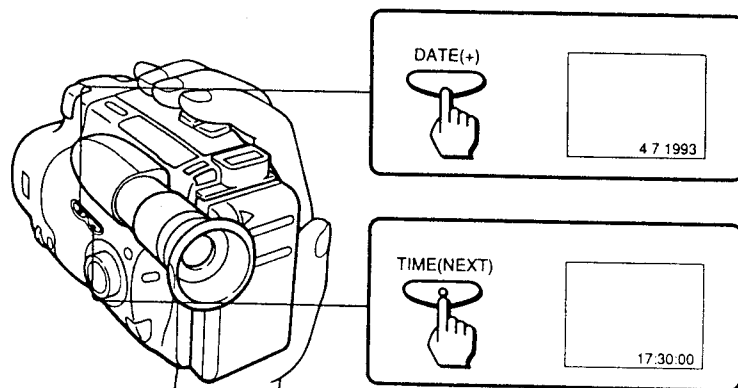

To Stop Recording with the Date and Time

Press DATE (+) or TIME (NEXT) again. The date or time indicator disappears. The recording continues.

Camera Recording


Checking the Recorded Picture in the Viewfinder

Using EDITSEARCH, you can review the last recorded scene or check the recorded picture in the viewfinder.

(1) While pressing the small green button on the POWER switch, slide it to CAMERA. (2) Turn the STANDBY switch to STANDBY. (3) Press the - (EDITSEARCH) side of EDITSEARCH momentarily; the last few seconds of the recorded portion plays back (Rec Review).

Keep pressing EDITSEARCH to play back the last recorded portion (Edit Search).

+ side: to view the forward playback picture
- side: to view the reverse playback picture

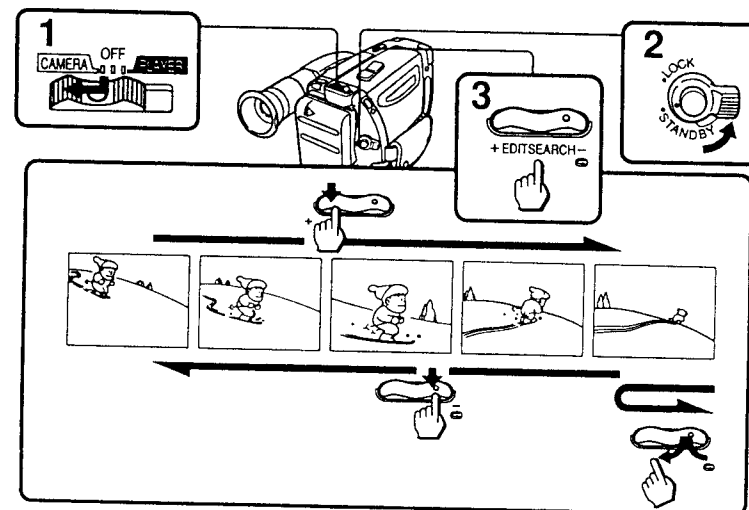

To Stop Playback

Release EDITSEARCH.

To Begin Re-recording


Press START/STOP. Re-recording begins from the point you released EDITSEARCH. Provided you do not eject the tape, the transition between the last scene you recorded and the next scene you record will be smooth.

Connections for Playback

You can use this camcorder as a VTR by connecting it directly to your TV for playback. There are several ways to connect the camcorder to your TV.

Connecting to a TV with Audio/Video Input Jacks or VTR

Connect the camcorder to the TV using the supplied A/V connecting cable. Set the TV/VTR selector on the TV to VTR.

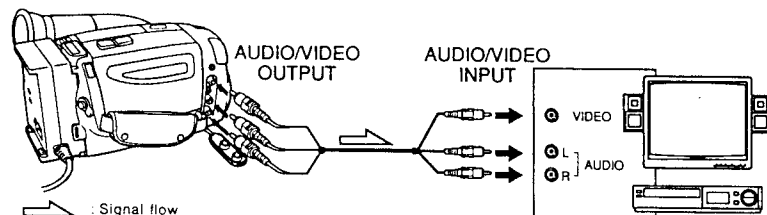

If your TV or VTR is a Monaural Type


Connect only the white plug for audio on both the camcorder and the TV or the VTR. With this connection, the sound is in monaural.

Note on playing back a bilingual tape

You can listen to the main sound (only) by connecting the L ch plug. If you connect both L ch and R ch, the sound from both channels is mixed.

If your TV has a 21-pin connector (EUROCONNECTOR)

Use the supplied 21-pin adaptor.




Camera Recording / Connections for Playback

Connections for Playback

Connecting to a TV without Audio/Video Input Jacks


For the Customers Supplied with the RFU-90E

Connect the camcorder to the TV by using the supplied RFU adaptor. Set the channel selector on the RFU adaptor to 3CH or 4CH whichever is not used in your area. Turn on the TV and select the 0 position. Tune the TV so that you can get picture and sound from the camcorder.

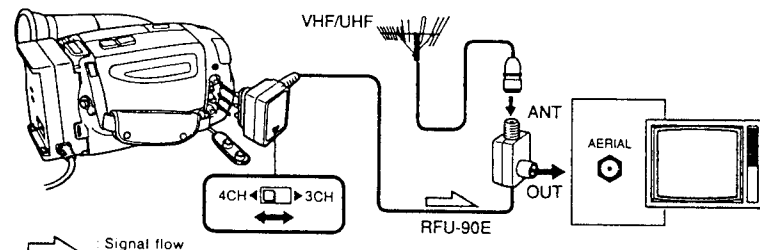


For the Customers Supplied with the RFU-89EA and an Aerial Selector

Connect the camcorder to the TV by using the supplied RFU adaptor. Set the I/G selector on the RFU adaptor according to the TV system of your country. Set the ANT/VTR selector on the aerial selector to VTR. Turn on the TV and select a programme position that is not used to receive a TV station. Tune the TV so that you can get a picture and sound from the camcorder.

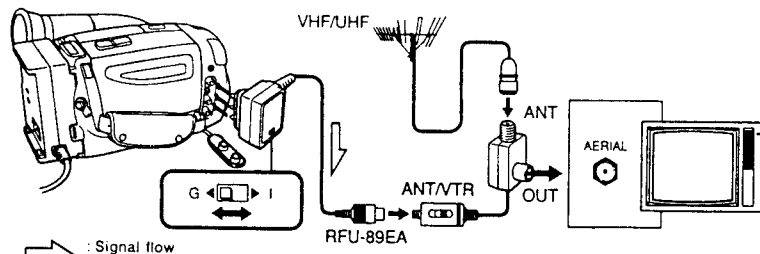

If the Playback Picture is Deteriorated

Set the ANT/VTR selector on the aerial selector to ANT. Tune the TV between UHF channels 30 and 39, so that the TV shows no picture and a steady rustling sound or no sound is heard. Set the ANT/VTR selector on the aerial selector to VTR. Turn the RF channel setting screw of the RFU adaptor slowly with the supplied screwdriver so that the playback picture is clearly displayed on the TV screen.

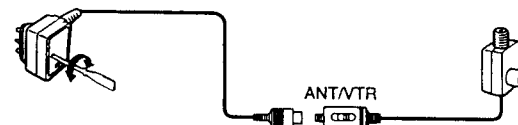


Playing Back a Tape

Playing Back a Tape

You can monitor the playback picture in the viewfinder. You can also monitor the picture on a TV screen, after connecting the camcorder to a TV or VTR (p. 21, 22). You can use the supplied Remote Commander to control playback, if you want. Before using the Remote Commander, slide the HOLD switch in the opposite direction of the arrow and make sure that the REMOTE COMMANDER switch on the camcorder is set to ON (p. 43).

(1) While pressing the small green button on the POWER switch, slide it to PLAYER. (2) Insert the recorded tape with the window facing out. (3) Open the lid of the control panel. (4) Press $\triangleright$. Playback starts.

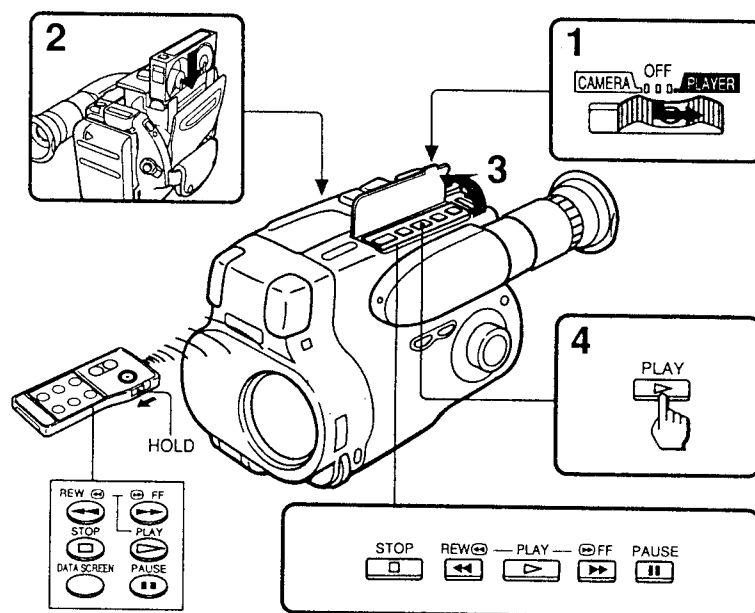

To stop playback, press $\square$.
To rewind the tape, press $\ll$.
To fastforward the tape, press $\gg$.

Playing Back a Tape

Various Playback Modes

To view a still picture

Press $\square$ during playback. To resume playback, press $\square$ or $\triangleright$.

To locate a scene (Picture search)

Keep pressing $\ll$ or $\gg$ during playback. To resume normal playback, release the button.

To monitor the high-speed picture during fastforward or rewind (Skip scan)

Keep pressing $\ll$ while rewinding or $\gg$ while advancing the tape. To resume normal playback, press $\triangleright$.

To view the picture in a sequence of stop-motion images

Press EDITSEARCH in playback pause mode. If you keep pressing EDITSEARCH, you can view the picture playback in the forward (+) or reverse (-) direction.

Note on playback

- Streaks appear and the sound is muted in the various playback modes.
- When still picture mode lasts for 5 minutes, the camcorder automatically enters stop mode.

To display the viewfinder screen indicators on the TV

Press DATA SCREEN on the Remote Commander. To erase the indicators, press it again.

Connections for Playback / Playing Back a Tape

Advanced Operations Using Alternate Power Sources


You can choose any of the following power sources for your camcorder: battery pack (p. 6), house current, and 12/24 V car battery. Choose the appropriate power source depending on where you want to use your camcorder.

Place	Power source	Accessory to be used
Indoors	House current	AC-V25 AC power adaptor (supplied), AC-S10
Outdoors	Battery pack	NP-55 Battery pack (supplied), NP-77HD, NP-77H, NP-77, NP-66H, NP-55H
In the car	12 V or 24 V car battery	DCP-77 DC pack

Using House Current

To use the supplied AC-V25 AC power adaptor:

(1) Lift up the viewfinder. (2) Connect the AC power cord to a wall outlet. The POWER lamp (green) lights up. Connect the bottom of the AC power adaptor to the battery mounting surface of the camcorder. (3) Set the selector to VTR (DC OUT).

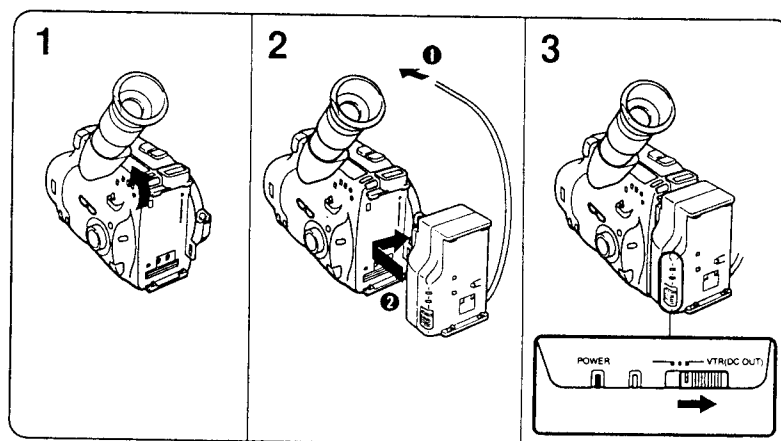

Note on the POWER lamp

- The POWER lamp will remain lit for a while even if the unit is unplugged after use. This is normal.
- If the POWER lamp does not light, set the selector to the center position and disconnect the power cord. After about one minute, reconnect the power cord and set the selector to VTR (DC OUT) again.

To remove the adaptor

The adaptor is removed in the same way as the battery pack. (p. 6)

Using Alternate Power Sources

Using a Car Battery

Use the DCP-77 DC pack (not supplied). Connect the cord of the DC pack to the cigarette lighter socket of the car (12 V or 24 V). Connect the DC pack to the battery mounting surface of the camcorder.

To remove the DC pack

The DC pack is removed in the same way as the battery pack. (p. 6)

Options for Charging the Battery Pack


AC-S10 AC power adaptor:

You can charge a battery pack whether it is used up or not with this adaptor because it has a discharging function.

Focusing Manually

When to Use Manual Focus

In the following cases you should obtain better results by adjusting the focus manually.

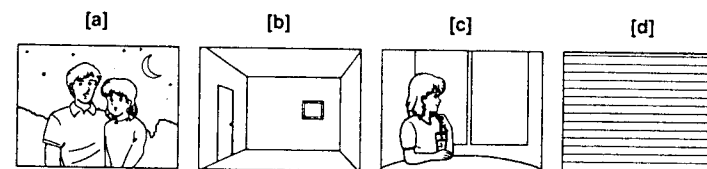

- Insufficient light [a]
- Subjects with little contrast — walls, sky, etc. [b]
- Too much brightness behind the subject [c]
- Horizontal stripes [d]
- Subject through frosted glass
- Subjects beyond nets, etc.
- Bright subject or subject reflecting light
- Shooting a stationary subject when using a tripod


Note on using the WIDE ANGLE

Readjust the focus if, while using manual focusing, you have switched to the WIDE ANGLE or if you have switched from the WIDE ANGLE to the normal lens.

Focusing Manually

Focusing Manually

When focusing manually, first focus in telephoto before recording, and then reset the shot length.
 (1) Press FOCUS. The  indicator appears in the viewfinder. (2) Keep pressing the "T" (telephoto) side of the power zoom button until the zooming stops. (3) Turn the focus dial to achieve a sharp focus. (4) Set the desired shot length.

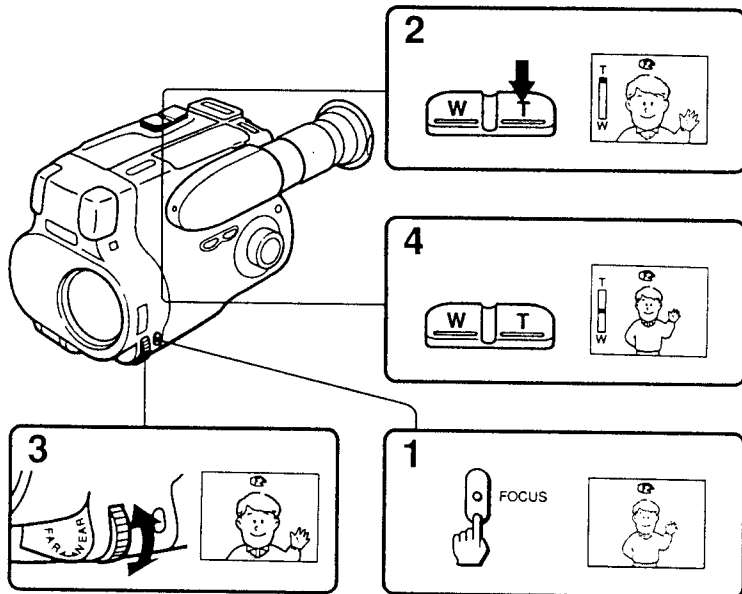

To Reactivate Autofocusing

Press FOCUS until the  indicator in the viewfinder disappears.

Shooting in relatively dark places

Shoot at wide-angle after focusing in the telephoto position.

Note on the focus dial

The focus dial does not have a stop position.

Using Alternate Power Sources / Focusing Manually

Using the PROGRAM AE Function

You can select from four PROGRAM AE (Auto Exposure) modes to suit your shooting situation. When you use PROGRAM AE, you can get a Portrait effect (the subject is in focus and the background is out of focus) or capture high-speed action or record night views.

Selecting the Best Mode

Select one of four modes, referring to the following.



Portrait mode

- A still subject such as a person or a flower
- Zooming in on a subject in the telephoto mode
- A subject behind an obstacle such as a net

Sports mode

- Outdoor sports scene such as football, tennis, golf or skiing
- A landscape in a moving car

High-speed shutter mode


- A golf swing or a tennis match in fine weather with the ball captured clearly
- Playing back certain scenes with high-speed movements in a clear, sharp picture

Twilight mode

- Recording night views, neon signs or fireworks

Using the PROGRAM AE Function

Set the white mark of the PROGRAM AE dial to the desired PROGRAM AE mode. The indicator of the selected PROGRAM AE mode appears in the viewfinder.

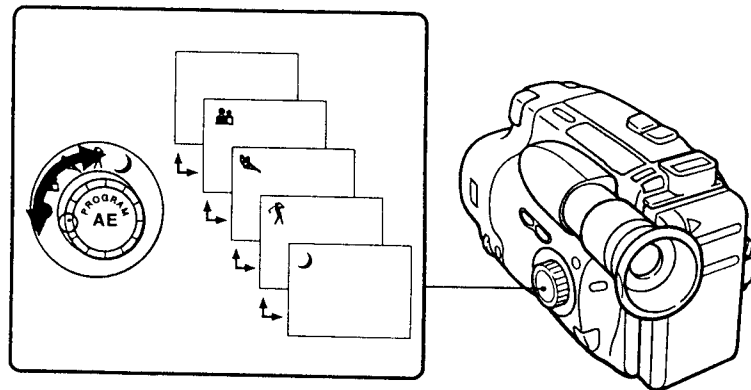

Note on shutter speed

The shutter speed in each PROGRAM AE mode is as follows:

Portrait mode — between 1/50 to 1/2000

Sports mode — between 1/50 to 1/500

High-speed shutter mode — 1/4000

Twilight mode — 1/50

Using the PROGRAM AE Function

Fade-in and Fade-out



You can fade a picture in or out with sound to give your recording a professional appearance. When fading in, you can make the picture gradually appear from black or mosaic while increasing the sound. When fading out, you can make the picture gradually fade to black or mosaic while decreasing the sound.

When Fading in [a]

(1) During the camcorder is in Standby mode, press FADER. (2) Press START/STOP. The fade indicator stops flashing and the recording starts fading in.

When Fading out [b]

(1) During recording, press FADER. (2) Press START/STOP. The fade indicator stops flashing and the picture fades out. Then, recording stops.

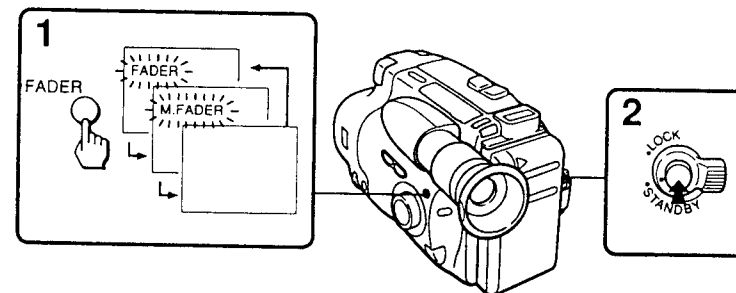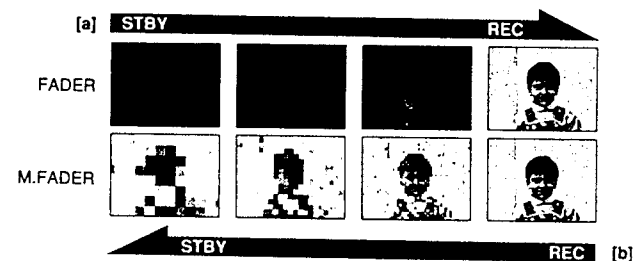


To Cancel the Fade-in/Fade-out Function

Before pressing START/STOP, press FADER until the fade indicator disappears.

Using the World Clock

Before using the world clock, you need to set the date and time in your home area (p. 11). Reset the clock according to the local time zone by pressing AREA. First, find the area name in the "Time Zone Chart" on page 32.

(1) While pressing the small green button on the POWER switch, slide it to CAMERA. (2) Turn the STANDBY switch to STANDBY. (3) Press TIME (NEXT). The setting of time appears. (4) Press AREA to select the area name where you will use the camcorder.

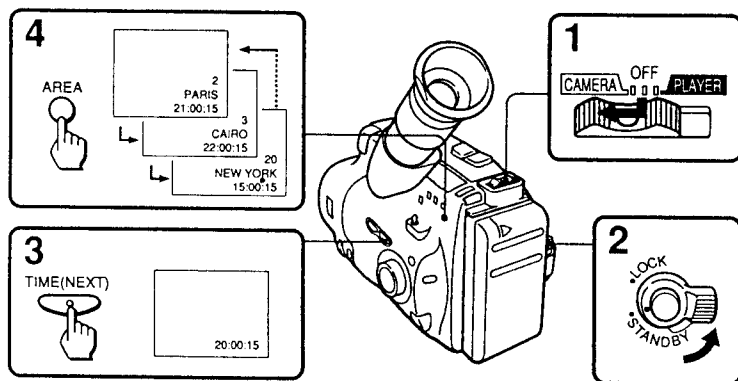


To Check the Date

Press DATE (+). To turn off the date indicator, press DATE (+) again.

To Adjust to Summer Time

Press SUMMERTIME. The * indicator appears and the time changes to summer time. To reset to standard time, press SUMMERTIME again.

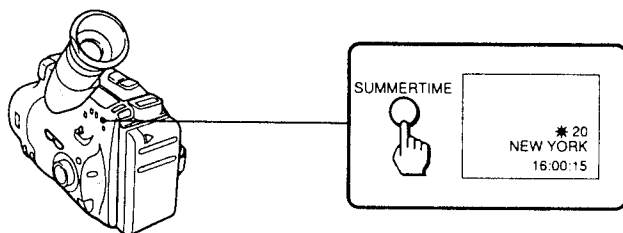

To Reset to Your Home Area Time again

Press AREA until your home area name appears.


Fade-in and Fade-out / Using the World Clock

Editing onto Another Tape

You can create your own video program by editing with any other 8 mm, Hi8, Hi8i, Betamax, VHS, S-VHS, S-VHS, VHS or S-VHS VTR that has audio/video inputs.

Before Editing

Connect the camcorder to the VTR using the supplied A/V connecting cable. (p. 21, 22) Set the input selector on the VTR to LINE, if available. Set EDIT on the camcorder in the direction of the arrow. Set the POWER switch to PLAYER.

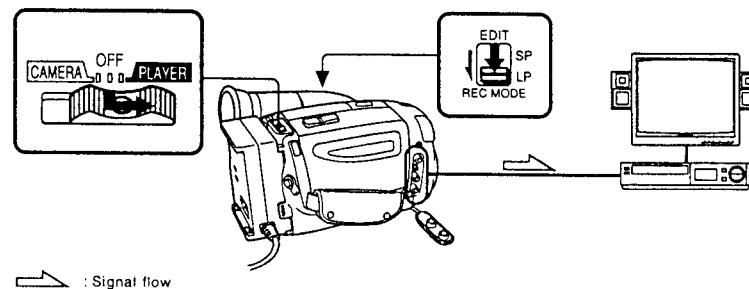

Starting Editing

(1) Insert a blank tape (or a tape you want to record over) into the VTR. And insert your recorded tape into the camcorder. (2) Playback the tape on the camcorder until you locate the point where you want to start editing, then set the camcorder in the playback pause mode. (3) On the VTR, locate the recording start point and set the VTR in the recording pause mode. (4) Press II on the camcorder and VTR simultaneously to start editing.

To Edit More Scenes

Repeat steps 2 to 4.

To Stop Editing Momentarily

Press II on the VTR.

To Stop Editing

Press □ on both the camcorder and the VTR.

Use of the EDITSEARCH button

You can playback the tape in normal/reverse direction by keep pressing EDITSEARCH during Standby or playback pause mode. You can also playback still pictures successively at specific intervals by pressing EDITSEARCH intermittently.

Note on the EDIT switch

When you set EDIT in the direction of the arrow, you can keep picture deteriorations resulting from editing to a minimum. However, when you edit or copy to another VTR, avoid using the edited tape for multiple generations of editing. After editing, be sure to set this switch in the opposite direction of the arrow.

Note on the DATA SCREEN function

If you have displayed the viewfinder screen indicators on the TV, erase the indicators by pressing DATA SCREEN on the Remote Commander so that they will not be superimposed on the edited tape.

Using the World Clock / Editing onto Another Tape

Additional Information Playback Modes

The playback mode (SP or LP) is selected automatically according to the format in which the tape has been recorded. The quality of the recorded picture in LP mode, however, will not be as good as that in SP mode.

Note on AFM Hi-Fi stereo

When you playback a tape, the sound is in monaural if:

- You record the tape using this camcorder, then play it back on an AFM Hi-Fi monaural video recorder/player.
- You record the tape on an AFM Hi-Fi monaural video recorder, then play it back on this camcorder.

Recording mode

When you playback a tape, the SP/LP indicator in the viewfinder shows the recording mode SP/LP.

Foreign 8 mm video

You cannot playback the software recorded on a different TV colour system. Because the TV colour systems differ from country to country, you may not be able to playback foreign pre-recorded software. Refer to page 39 to check the TV colour system of foreign countries.

Maintenance Information and Precautions

Video Head Cleaning

To ensure clear pictures, clean the video heads periodically. When playback pictures are "noisy" or hardly visible, the video heads may be contaminated.



[a] → [b]

[a] Slight contamination

[b] Critical contamination

If this happens, clean the video heads with the Sony V8-25CLH cleaning cassette (not supplied). After checking the picture, if it is still "noisy", repeat the cleaning. (Do not repeat cleaning more than 5 times.)

Caution

Do not use a commercially available wet-type cleaning cassette. It may damage the video heads.


Note

If the V8-25CLH cleaning cassette is not available in your area, consult your Sony service facility.

Maintenance Information and Precautions


Removing Dust from Inside the Viewfinder

(1) Pull out the viewfinder barrel until the illustrated mark appears. (2) Turn the viewfinder counterclockwise until it stops, and pull it out. (3) Clean the surface with a commercially available blower.

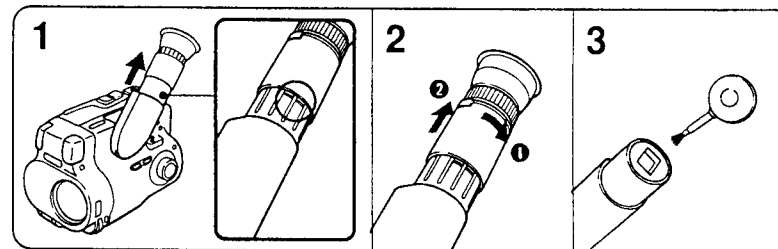

To Reattach the Viewfinder Barrel


(1) Align the mark on the viewfinder barrel with the mark on the viewfinder and push in the viewfinder barrel until it clicks. (2) Turn it clockwise until it stops and push it in.

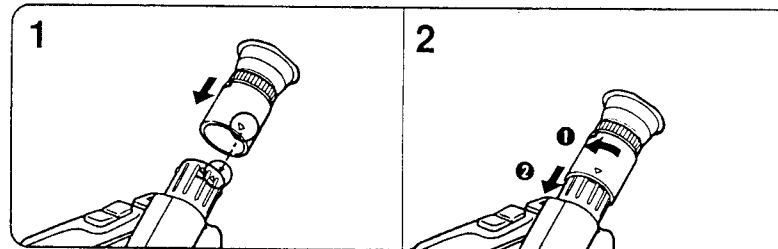

Maintenance Information and Precautions

Removing Dust from inside the WIDE ANGLE

(1) Slide the LENS COVER switch to OPEN. (2) Slide the WIDE ANGLE switch in the opposite direction of the arrow. (3) Detach the jack cover. Remove the dust by using a blower.

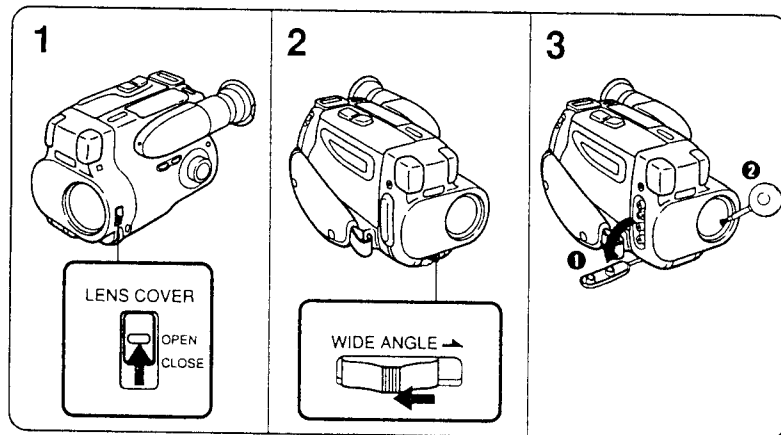

Moisture Condensation


If the camcorder is brought directly from a cold place to a warm place, moisture may condense inside the camcorder, on the surface of the tape, or on the lens. In this condition, the tape may stick to the head drum and be damaged or the unit may not operate correctly. To prevent possible damage under these circumstances, the camcorder is furnished with moisture sensors. However, take the following precautions.

Inside the Camcorder

When the  and  indicators flash in the viewfinder, moisture has condensed inside the camcorder. If this happens, no other functions except for tape ejection will work.

Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour in a dry place.

The camcorder can be used again if the  indicator does not appear when the power is turned on again.

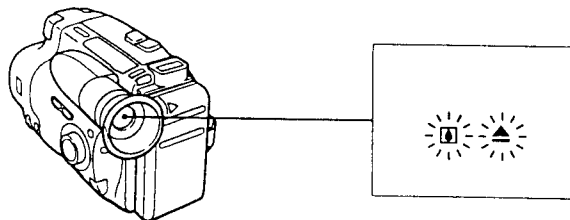

On the Surface of the Tape

If there is moisture on the surface of the tape, when the cassette is inserted and a tape transport button is pressed, the  indicator in the viewfinder flashes.

In this case, no other functions except for tape ejection will work. **Eject the tape, turn off the camcorder and leave it with the cassette holder open for at least one hour in a dry place.** The camcorder can be used again if the  indicator does not appear when you insert the cassette and press one of the tape transport buttons.

On the Lens

If moisture condenses on the lens, no indicator appears, but the picture becomes dim. Turn off the power and do not use the camcorder for about one hour.

How to Prevent Moisture Condensation

When bringing the camcorder from a cold place to a warm place, put the camcorder in a plastic bag and allow it to adapt to room conditions over a period of time.


(1) Be sure to tightly seal the plastic bag containing the camcorder.

(2) Remove the bag when the air temperature inside it has reached the temperature surrounding it (after about one hour).


Precautions

Camcorder Operation


- Operate the camcorder on 6.0 V (battery pack) or 7.5 V (AC power adaptor).
- For DC or AC operation, use the accessories recommended in this manual.
- Should any solid object or liquid fall into the casing, unplug the camcorder and have it checked by qualified personnel before operating it any further.
- Do not pick up the camcorder by the viewfinder [a].
- Avoid rough handling or mechanical shock. Be particularly careful of the lens.
- Keep the LENS COVER switch set to CLOSE when not using the camera.
- Do not wrap up the camcorder and operate it since heat may build up internally.
- Keep the camcorder away from strong magnetic fields or mechanical vibration.
- **Do not let sand get into the camcorder. When you use the camcorder on a sandy beach or dusty place, protect it from the sand or dust. Sand or dust may cause the unit to malfunction and sometimes the malfunction cannot be repaired [b].**
- **Do not let the camcorder get wet. Keep the camcorder away from rain or sea water. It may cause the unit to malfunction and sometimes the malfunction cannot be repaired [c].**

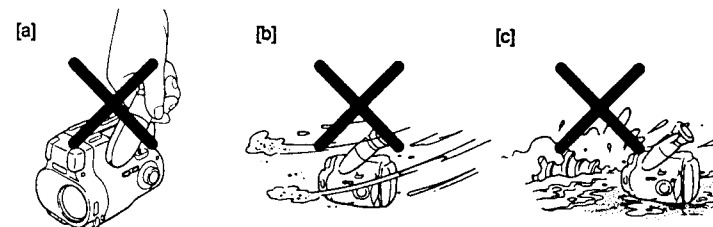

Identifying the Parts

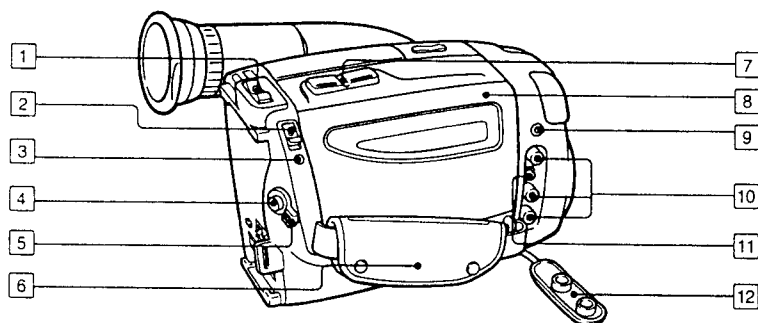


- 1 **POWER switch** (p. 15, 23)
CAMERA for camera recording
PLAYER for playing back or editing a tape
OFF power off
- 2 **EJECT knob** (p. 12)
Slide it to insert a cassette into the cassette holder or to eject the cassette.
- 3 **REMOTE (LANC) control jack**
Connect the LANC connecting cable to a wired remote control unit such as an editing controller. In this case, set the REMOTE COMMANDER switch to OFF.
stands for Local Application Control Bus System. The control jack is used for controlling the tape transport of video equipment and peripherals connected to it. This jack has the same function as the jack indicated as CONTROL L or REMOTE.
- 4 **START/STOP button** (p. 15)
To start recording, press it after setting the POWER switch to CAMERA and turn the STANDBY switch to STANDBY. To stop recording momentarily, press it again.
- 5 **STANDBY switch** (p. 15)
STANDBY To set the camcorder to recording standby mode.
LOCK To stop recording or to prevent from accidentally recording and wearing down the battery.
- 6 **Grip strap** (p. 14)
Put your hand through the grip strap to hold the camcorder. Adjust the length of the strap so that your thumb can easily touch START/STOP.
- 7 **Power zoom button** (p. 17)
Press it to change the size of the subject in the scene.
T side: for telephoto (subject appears closer)
W side: for wide-angle (subject appears further away)
- 8 **Cassette holder** (p. 12)
When you slide the EJECT knob, this holder lifts up and opens automatically.
- 9 **MIC jack (PLUG IN POWER)**
Connect an optional external microphone (stereo or monaural). This jack also accepts a "plug-in-power" microphone.
- 10 **Audio/Video output jacks** (p. 21)
To view the recorded picture on the TV or to rerecord onto another tape, connect these jacks and the Audio/Video input jacks on the TV or VTR using the supplied A/V connecting cable.
- 11 **RFU DC OUT (RFU adaptor DC output) jack** (p. 22)
To view the recorded picture on a TV that has only an antenna input, connect the RFU adaptor here.
- 12 **Jack cover**

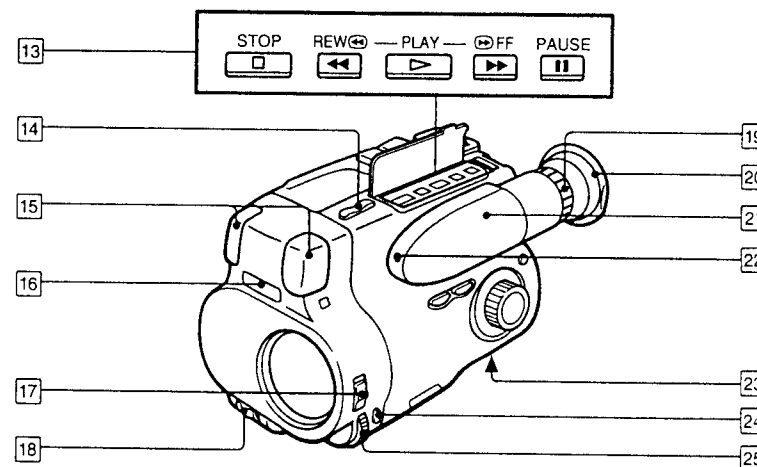

- 13 **Tape transport buttons** (p. 23)
STOP
REW (rewind)
PLAY (playback)
FF (fastforward)
PAUSE
- 14 **EDITSEARCH button** (p. 20)
Press it to check the recorded scene in the viewfinder in Standby mode.
+ side: to view the forward playback picture
- side: to view the reverse playback picture
- 15 **Built-in microphone (stereo)**
- 16 **Remote sensor** (p. 44)
Aim the Remote Commander here for remote control.
- 17 **LENS COVER switch**
Before recording, slide it to OPEN. When you finish recording, slide it to CLOSE to protect the lens.
- 18 **WIDE ANGLE switch**
Slide it in the direction of the arrow to get the wide-angle picture.
- 19 **Viewfinder lens adjustment ring** (p. 13)
To focus the viewfinder lens, turn this ring until the indicator in the viewfinder comes into sharp focus.
- 20 **Eyecup**
To achieve better camera recording, place your eye firmly against it. If you wear glasses, bend it back to get a better view of the viewfinder.
- 21 **Viewfinder** (p. 13, 20)
You can monitor the monochrome picture being recorded or played back. For details on the indicators in the viewfinder, see page 50.
- 22 **Camera recording/battery lamp**
This red lamp lights up during camera recording. When it flashes, the battery is dead.
- 23 **Tripod receptacle** (p. 14)
Attach a tripod (not supplied) here.
When attaching a non-SONY tripod, make sure that the length of the camera mounting screw is shorter than 6.5 mm (9/32 inches). Otherwise, the screw might damage the internal components of the camcorder.
- 24 **FOCUS button** (p. 27)
Press it to set the camcorder in manual focus.
- 25 **Focus dial** (p. 27)
Turn it to adjust the focus manually and to achieve a sharp focus in manual focus.

Identifying the Parts

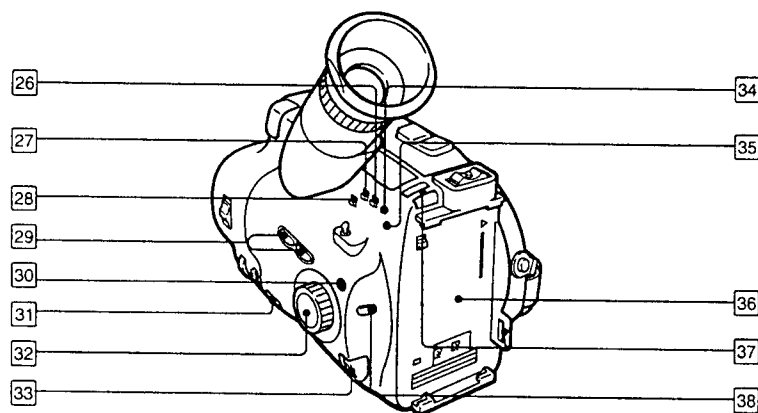

- 26 REC MODE/EDIT switch** (p. 15, 33)
When recording, set this switch to LP (long play) or SP (standard play), according to the length of your planned recording. When editing the recorded picture onto another tape on VTR, set this switch in the direction of the arrow.


Mode	Recording	Playback	Editing
Setting	EDIT SP LP REC MODE	EDIT SP LP REC MODE	EDIT SP LP REC MODE
Function	Recording mode switch	EDIT switch	

- 27 REMOTE COMMANDER switch** (p. 43)
To use the Remote Commander, set this switch to ON.
- 28 BEEP switch** (p. 14)
To hear the beep sound, set this switch to ON.
- 29 DATE (+) and TIME (NEXT) buttons** (p. 11)
Press them to set the clock or to display or turn off the date and time in the viewfinder. When setting the date and time, press DATE (+) button to advance numbers and press TIME (NEXT) button to set the next factor.

- 30 FADER button**
When fading-in, press this switch during Standby mode and then press START/STOP. When fading out, press this switch during recording and then press START/STOP.
- 31 Lithium battery compartment (bottom of the Camcorder)** (p. 9)
Insert a lithium battery here to activate the clock.
- 32 PROGRAM AE dial** (p. 29)
Set it to select from four PROGRAM AE modes (Portrait/Sports/High-Speed Shutter/Twilight mode) to fit the shooting situation.
- 33 BATT (battery eject) knob** (p. 6)
While pressing this knob, eject the battery pack.
- 34 SUMMERTIME (Summer Time) button** (p. 11, 31)
Press it to change the time to summer time. To reset to standard time, press it again.
- 35 AREA button**
Press it to reset the clock according to the required time zone.
- 36 Battery mounting surface** (p. 6)
- 37 Hooks for shoulder strap** (p. 44)
- 38 COUNTER RESET button** (p. 16)
Press it to reset the tape counter to zero.

Remote Commander


The buttons that have the same name on the Remote Commander and on the camcorder function identically.

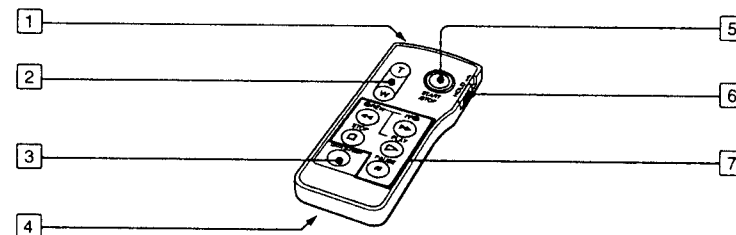

- 1 Transmitter**
Point toward the remote sensor to control the camcorder after turning on the POWER switch on the camcorder.
- 2 Power zoom button**
The zooming speed is unchangeable in the Remote Commander.
- 3 DATA SCREEN**
Press to display the viewfinder screen indicators on the TV when you connect the camcorder to a TV. To erase the indicators, press again.
- 4 Lithium battery holder** (p. 10)
- 5 START/STOP button**
- 6 HOLD Switch**
Slide it in the direction of the arrow to prevent any misoperation. Before using this Remote Commander, slide it in the opposite direction of the arrow.
- 7 Tape transport buttons**


Using the Remote Commander

Make sure that the REMOTE COMMANDER switch on the camcorder is set to ON and that the HOLD switch on the Remote Commander is not working.

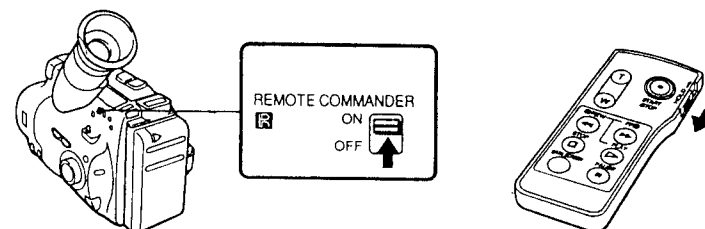

Identifying the Parts

Remote Control Direction

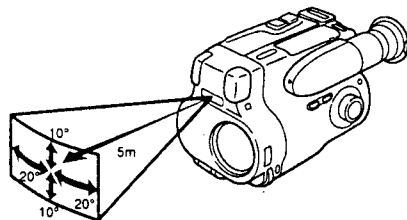


Note on the Remote Commander

- Keep the remote sensor away from strong light sources such as direct sunlight or illumination. Otherwise, the remote control may not be effective.
- Be sure that there is no obstacle between the remote sensor and the Remote Commander.
- This camcorder works at commander mode VTR 2. The commander modes (1, 2 and 3) are used to distinguish this camcorder from other Sony VTRs to avoid remote control misoperation. If you use another Sony VTR at commander mode VTR 2, we recommend you change the commander mode or cover the remote sensor of the VTR with black paper.


Using the Remote Commander Holder

You can clip the Remote Commander holder on your coat pocket or belt, or slide it onto the shoulder strap before attaching the Remote Commander to it.

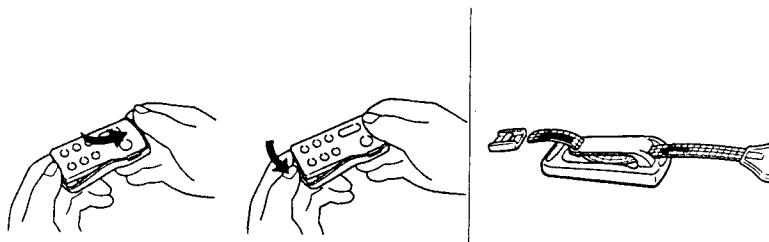

Attaching the Shoulder Strap


Attach the supplied shoulder strap to the hooks for the shoulder strap (p. 42).

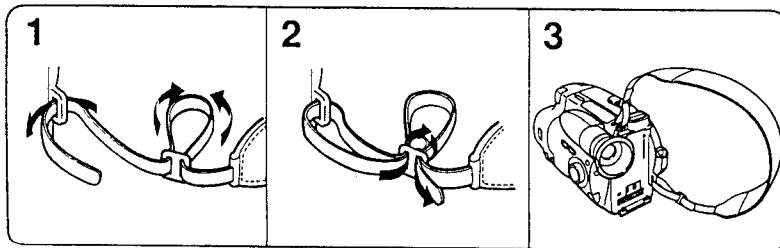

Indicators in the Viewfinder

Warning Indicators

If indicators flash in the viewfinder or a caution lamp on the camcorder flashes, check the following:
 : You can hear the beep sound when the BEEP switch is set to ON.

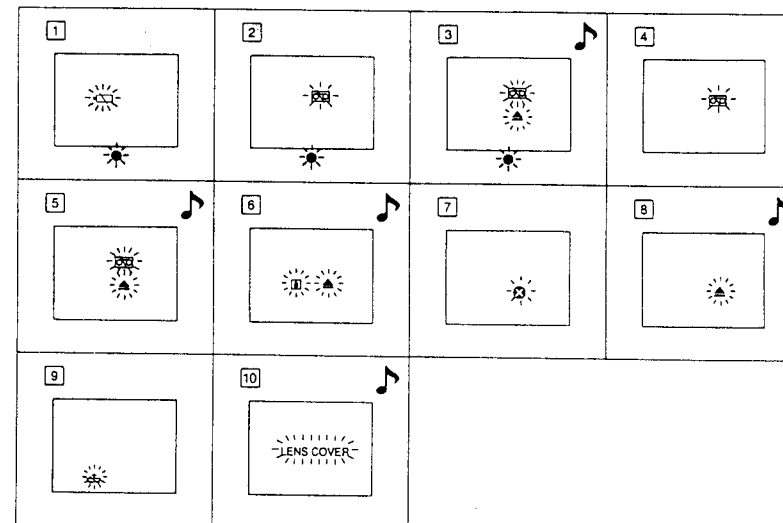


- 1 The battery is weak or dead.
Slow flashing: The battery is weak
Fast flashing: The battery is dead
- 2 The tape is near the end.
The flashing is slow.
- 3 The tape has run out.
The flashing becomes rapid.
- 4 No tape has been inserted.
- 5 The tab on the tape is out (red).

- 6 Moisture condensation has occurred. (p. 36)
- 7 The video heads may be contaminated. (p. 34)
- 8 Some other trouble has occurred.
Disconnect the power source and contact your Sony dealer or local authorized facility.
- 9 The lithium battery is weak or is not installed. (p. 10)
- 10 The LENS COVER switch is set to CLOSE.

Indicators in the Viewfinder

Operation Indicators

For details on each indicator, refer to the pages indicated in the parenthesis.

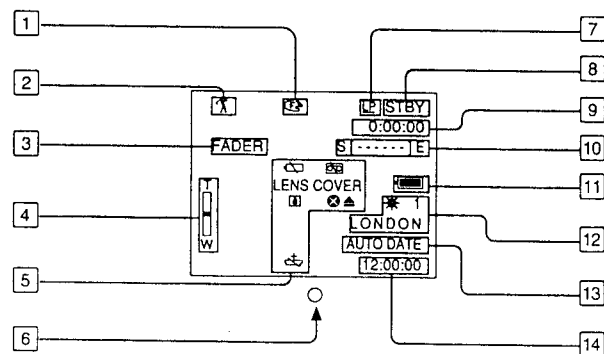


- 1 Manual focusing (p. 27)
- 2 PROGRAM AE indicator (p. 28)
- 3 FADER indicator (p. 30)
- 4 Power zoom indicator (p. 17)
- 5 Warning indicators (p. 49)
- 6 Recording lamp/Battery lamp
- 7 Indicates the recording mode when recording/playing back a tape (p. 15, 16)
- 8 Tape transport mode (p. 15, 23)
- 9 Tape counter (p. 16)


- 10 Remaining tape length indicator
S|...|E...|S...|E...|S...|E...|S...|E...
- 11 Remaining battery indicator (p. 7)
[Full battery] → [3/4 battery] → [1/2 battery] → [1/4 battery] → [Empty]
- 12 World clock indicator (p. 31)
- 13 AUTO DATE indicator (p. 15)
- 14 Date or Time (p. 11)

SECTION 2 DISASSEMBLY


2-1. REMOVAL OF FRONT PANEL ASSEMBLY

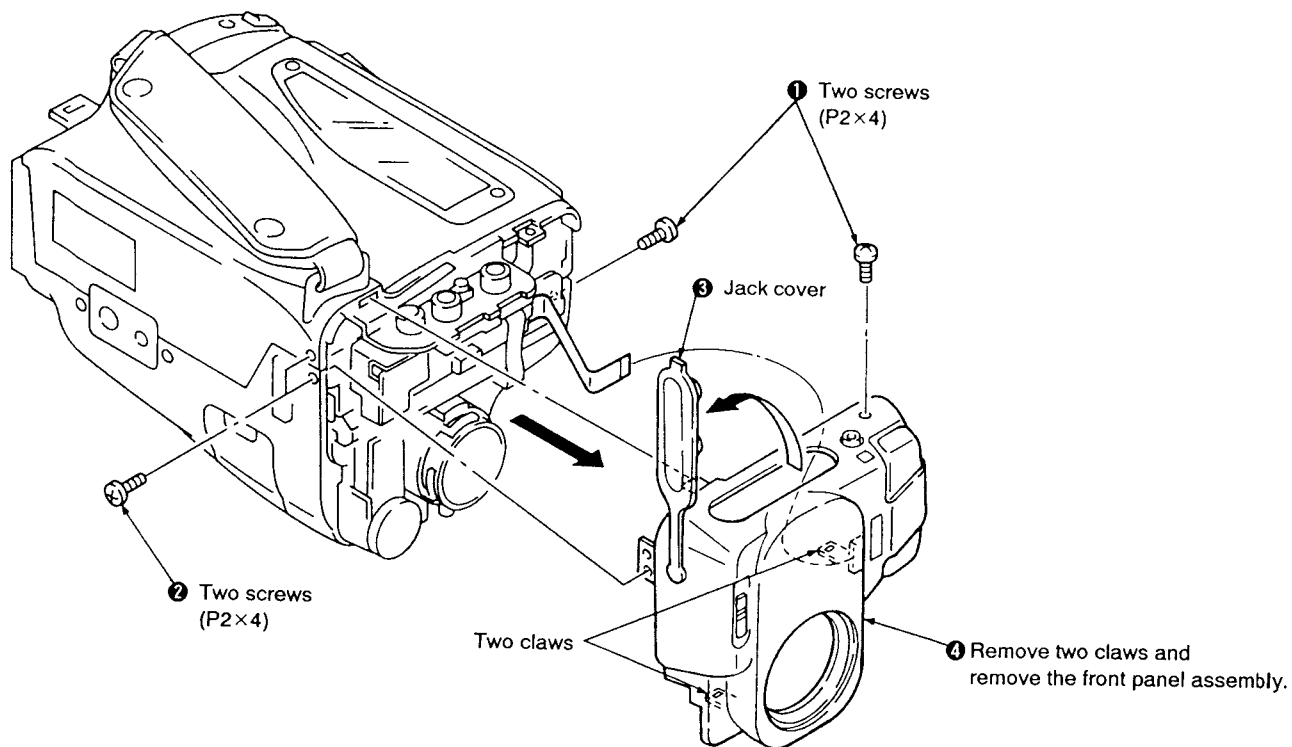


2-2. REMOVAL OF CASSETTE LID ASSEMBLY

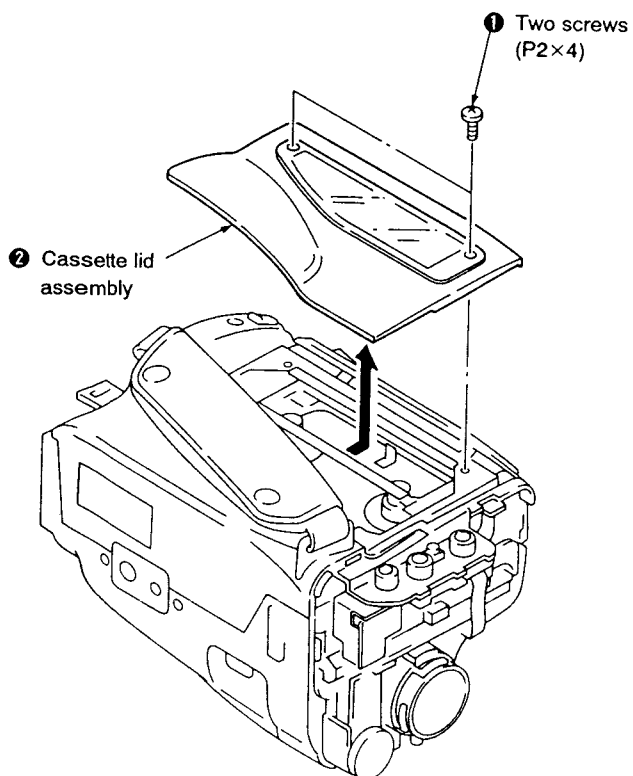


2-3. REMOVAL OF CABINET (L) ASSEMBLY

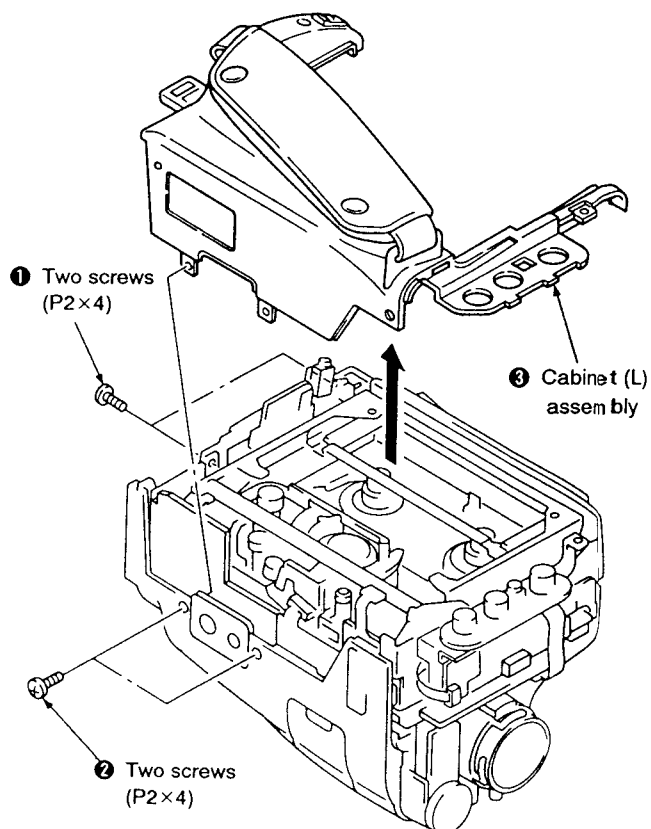


2-4. REMOVAL OF CABINET (R) ASSEMBLY

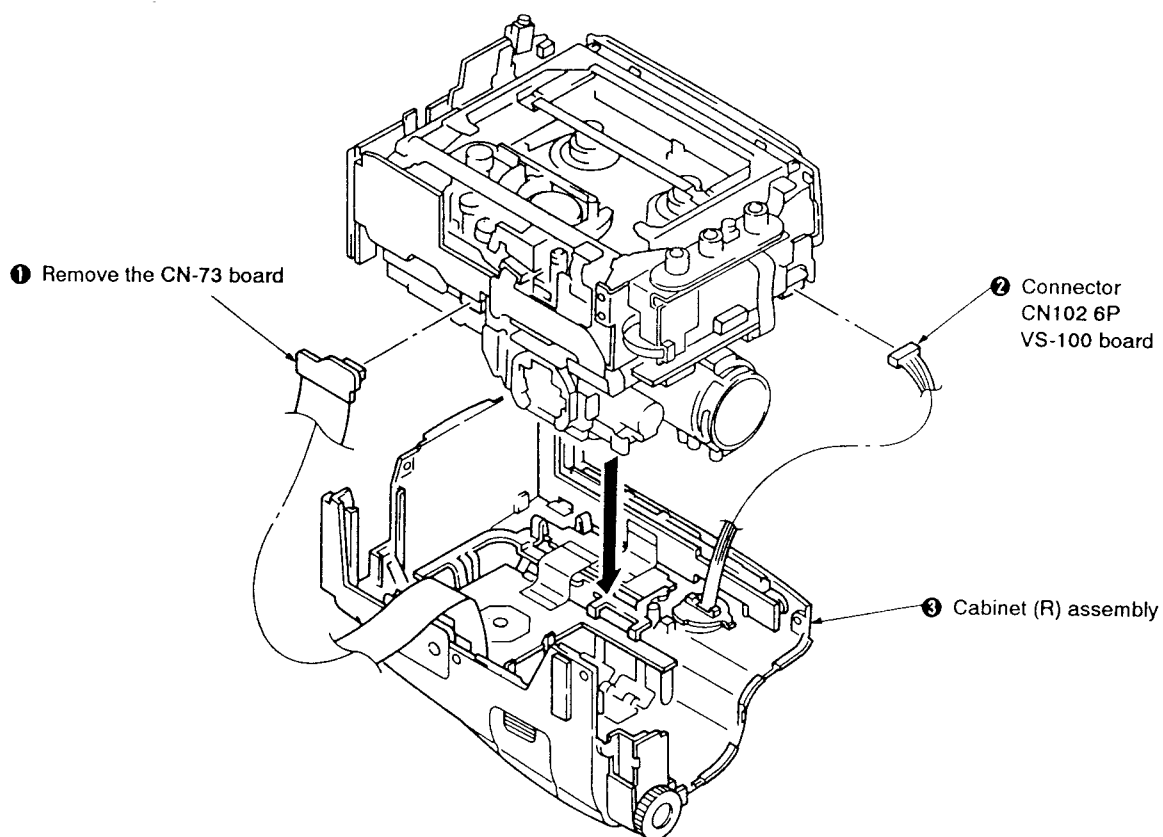


2-5. REMOVAL OF CF-34, ED-37 AND VK-32 BOARDS

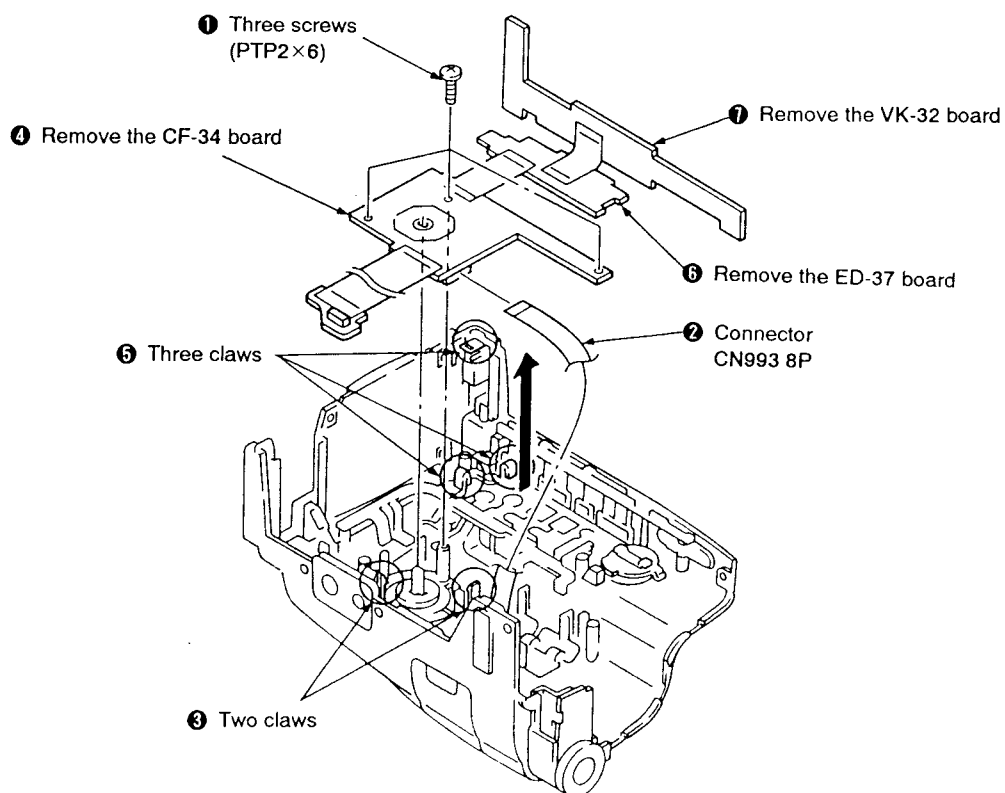


2-6. REMOVAL OF DD-56 AND SW-223 BOARDS

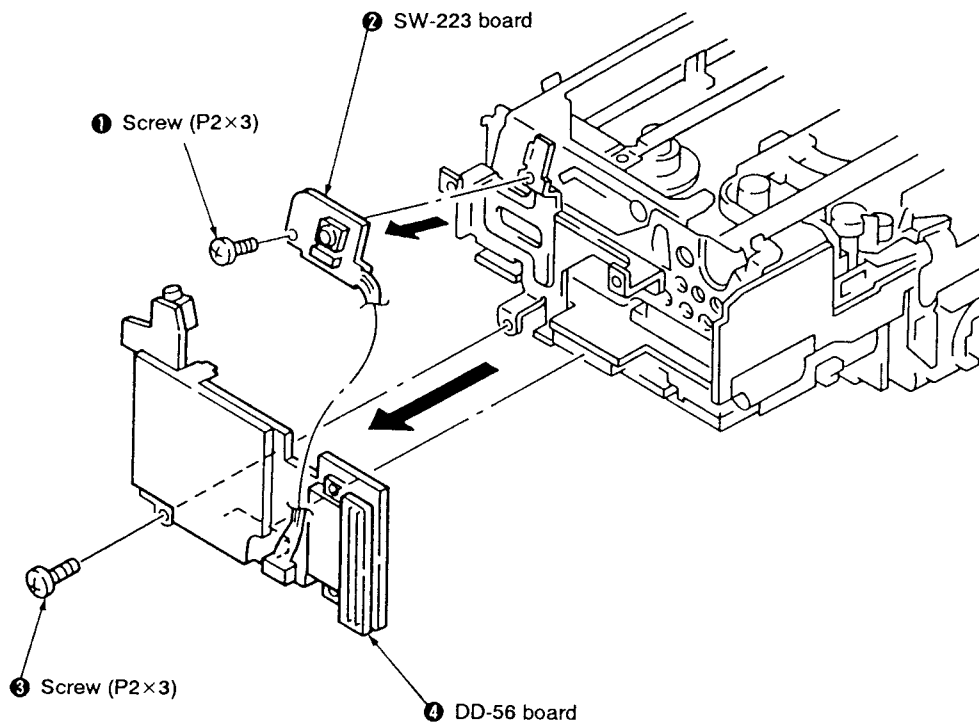


2-7. REMOVAL OF JK-99, AU-150 AND WS-11 BOARDS

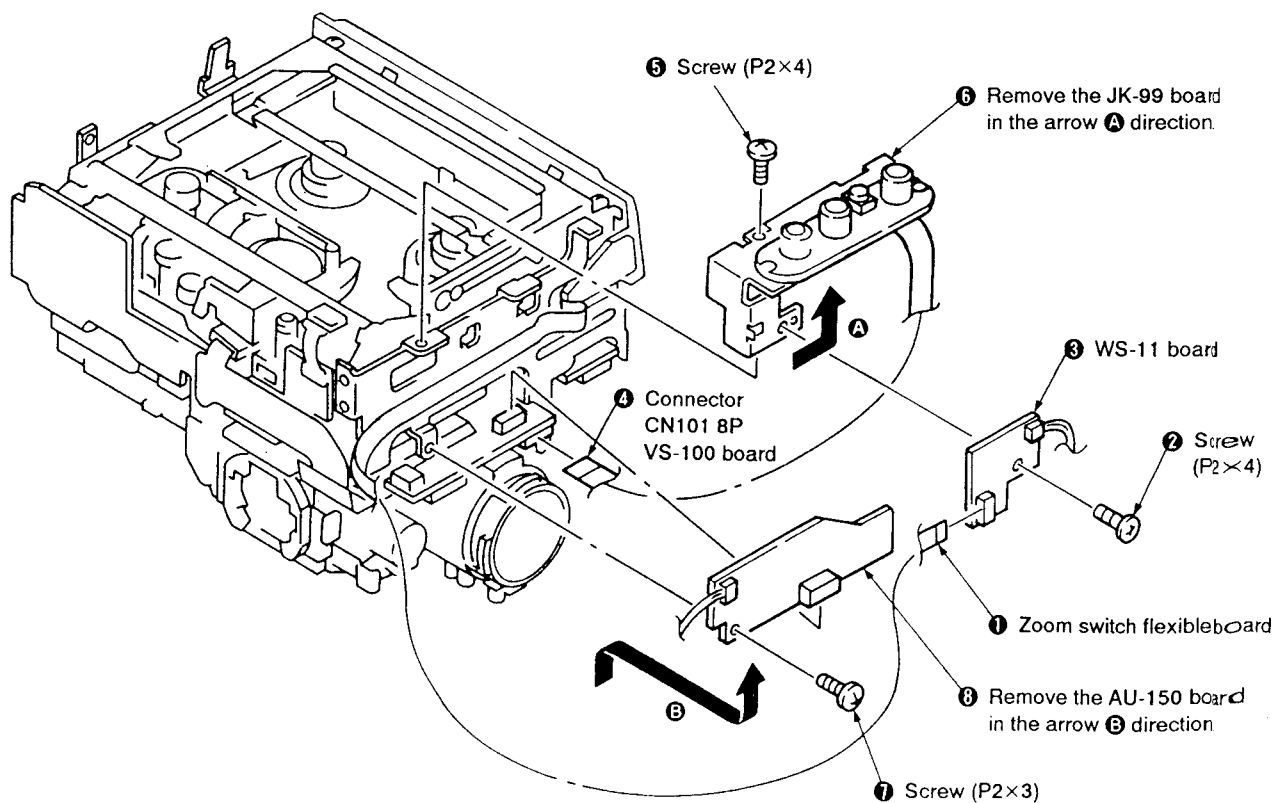


2-8. REMOVAL OF LS LID ASSEMBLY

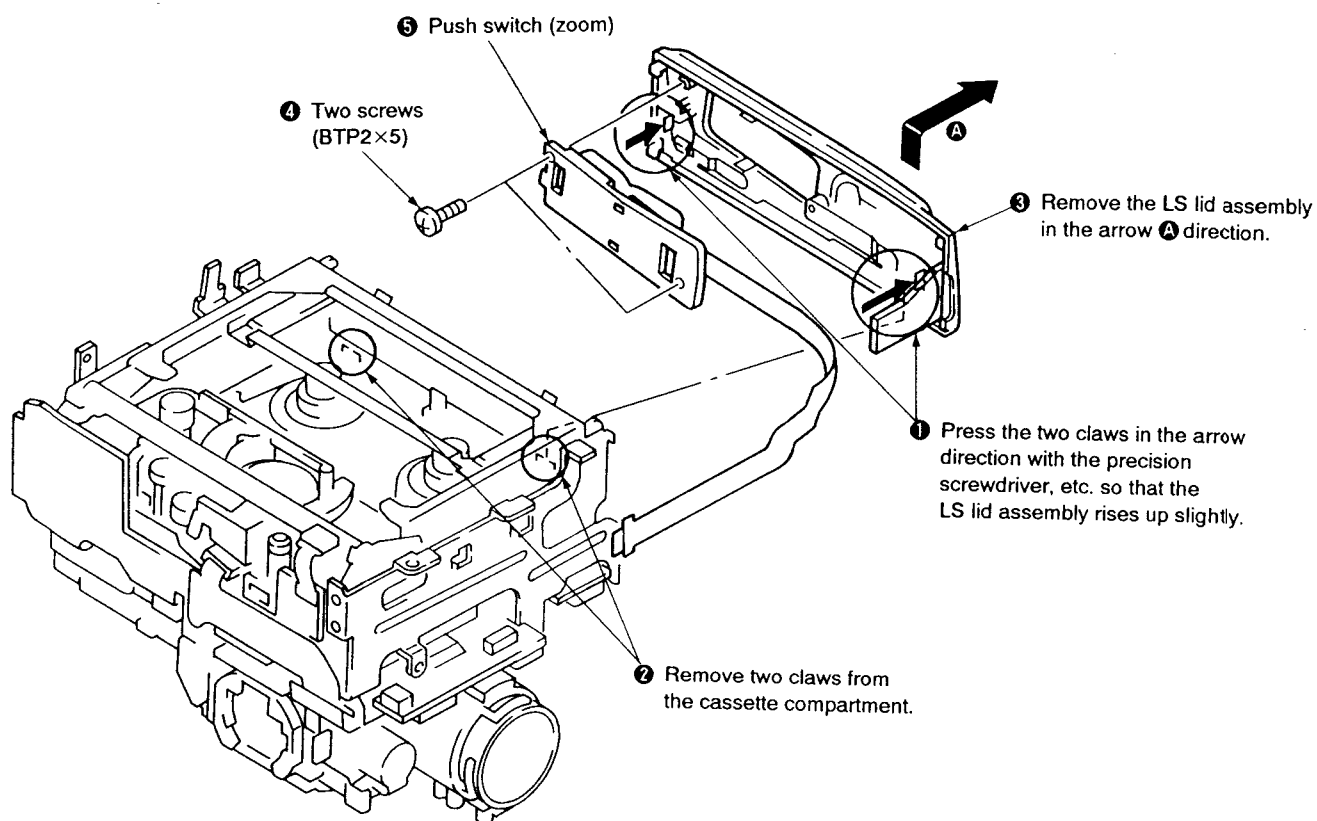


2-9. REMOVAL OF LENS ASSEMBLY (CD-106 BOARD)

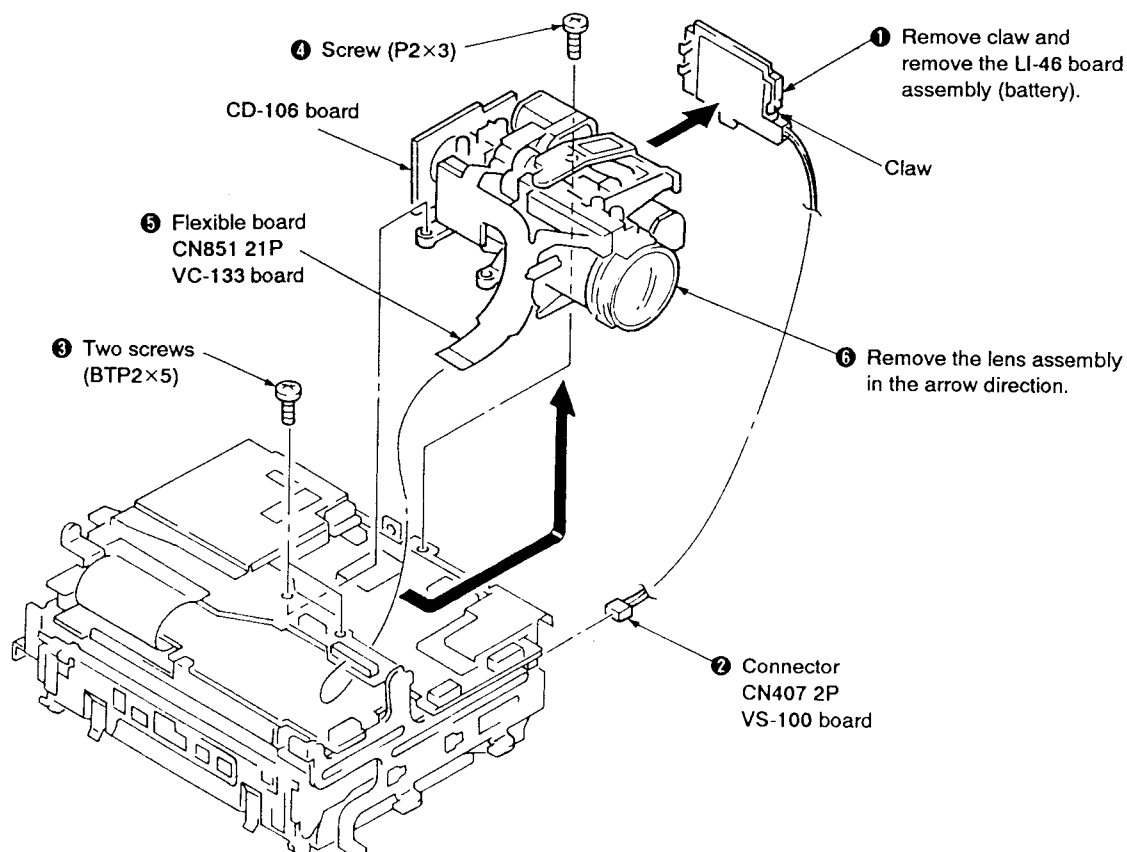


2-10. OPENING OF VC-133 BOARD

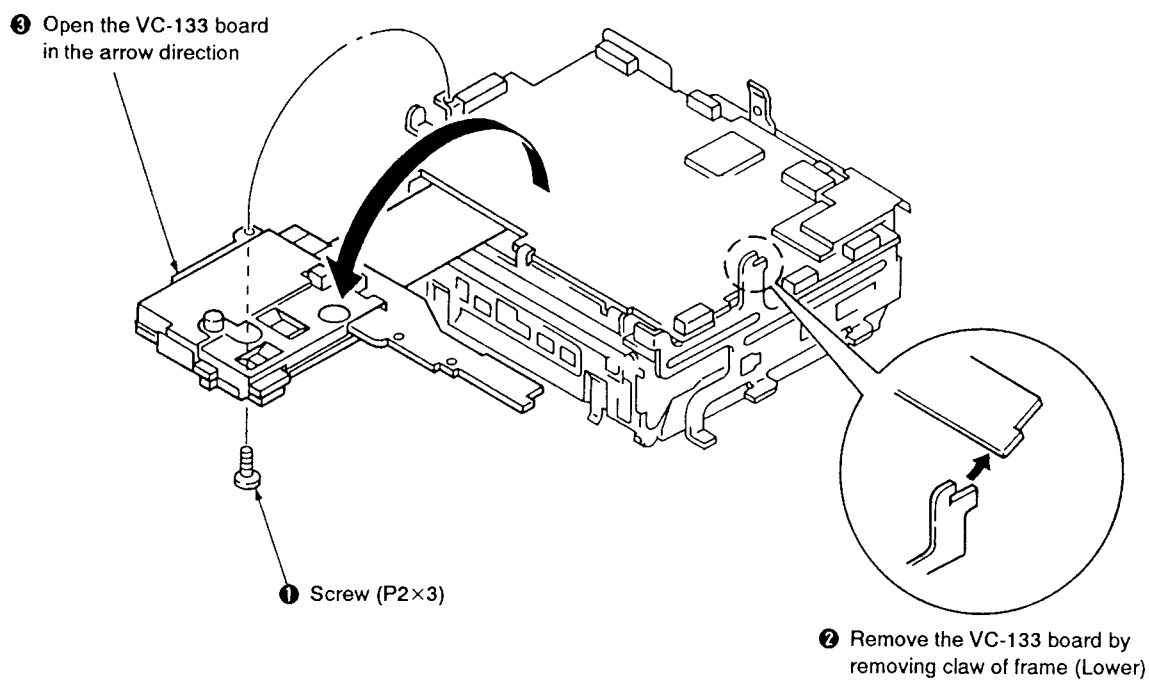


2-11. REMOVAL OF VS-100 BOARD

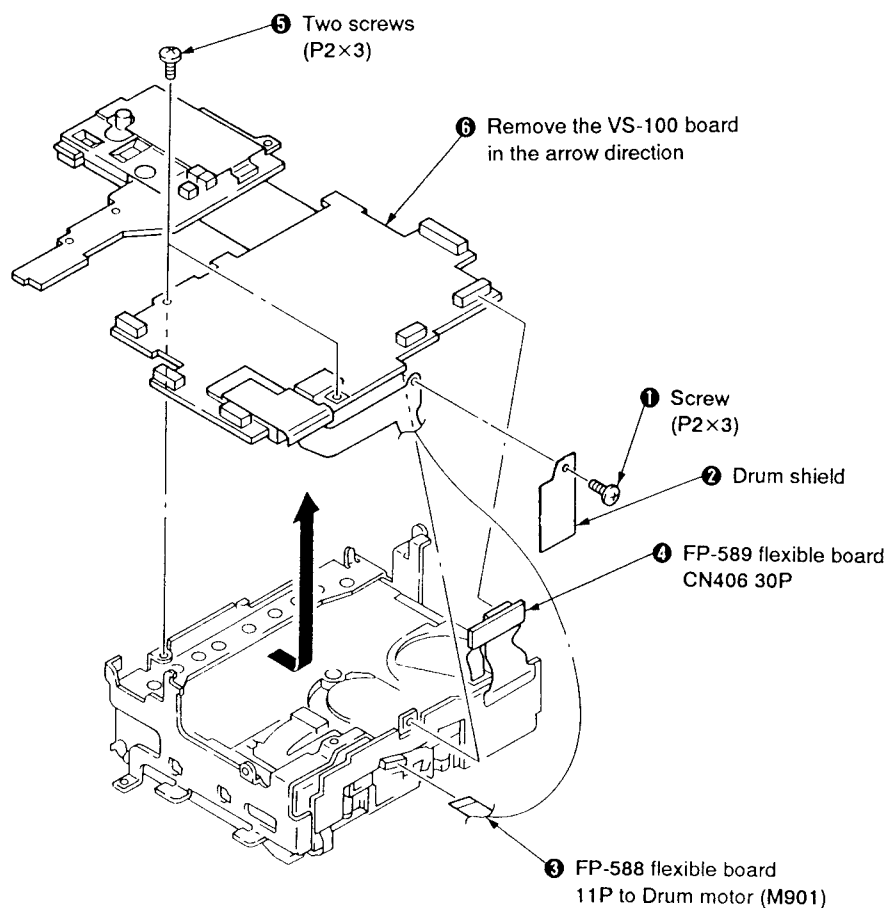

2-12. REMOVAL OF SL-33 BOARD

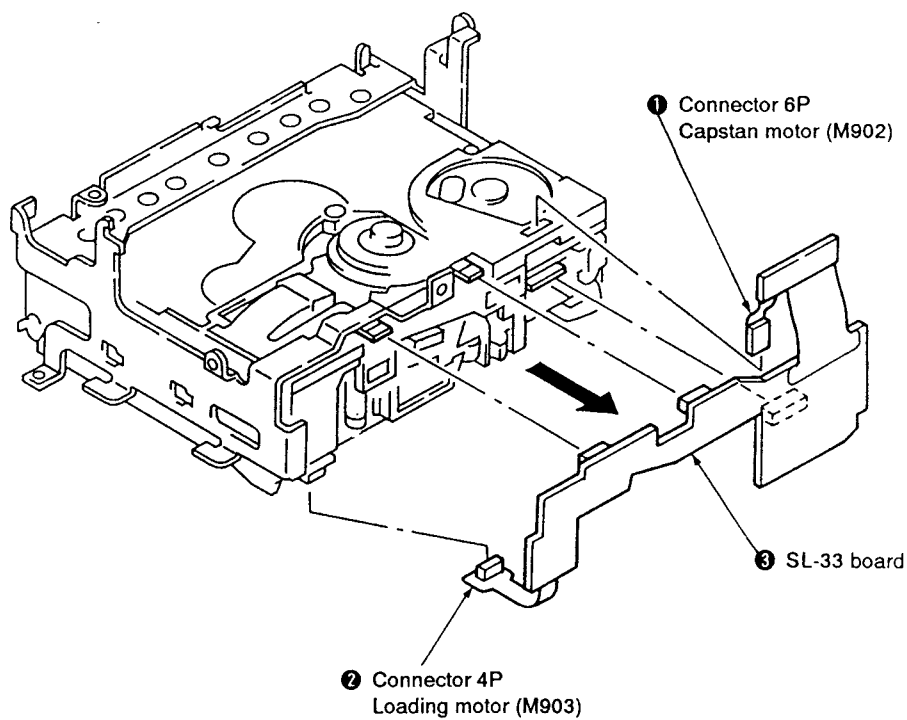


2-13. REMOVAL OF EVF ASSEMBLY (VF-42 BOARD)

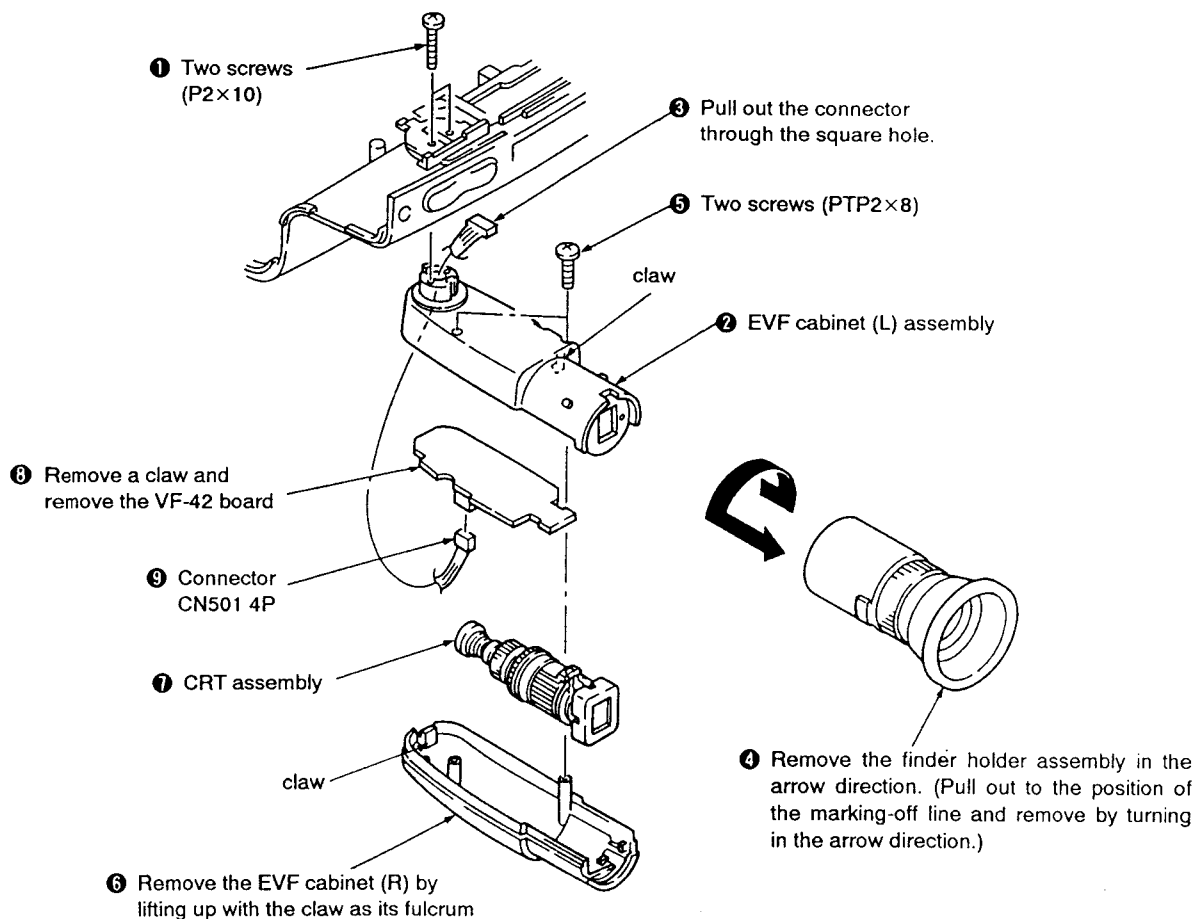


2-14. INTERNAL VIEWS

— Left side —

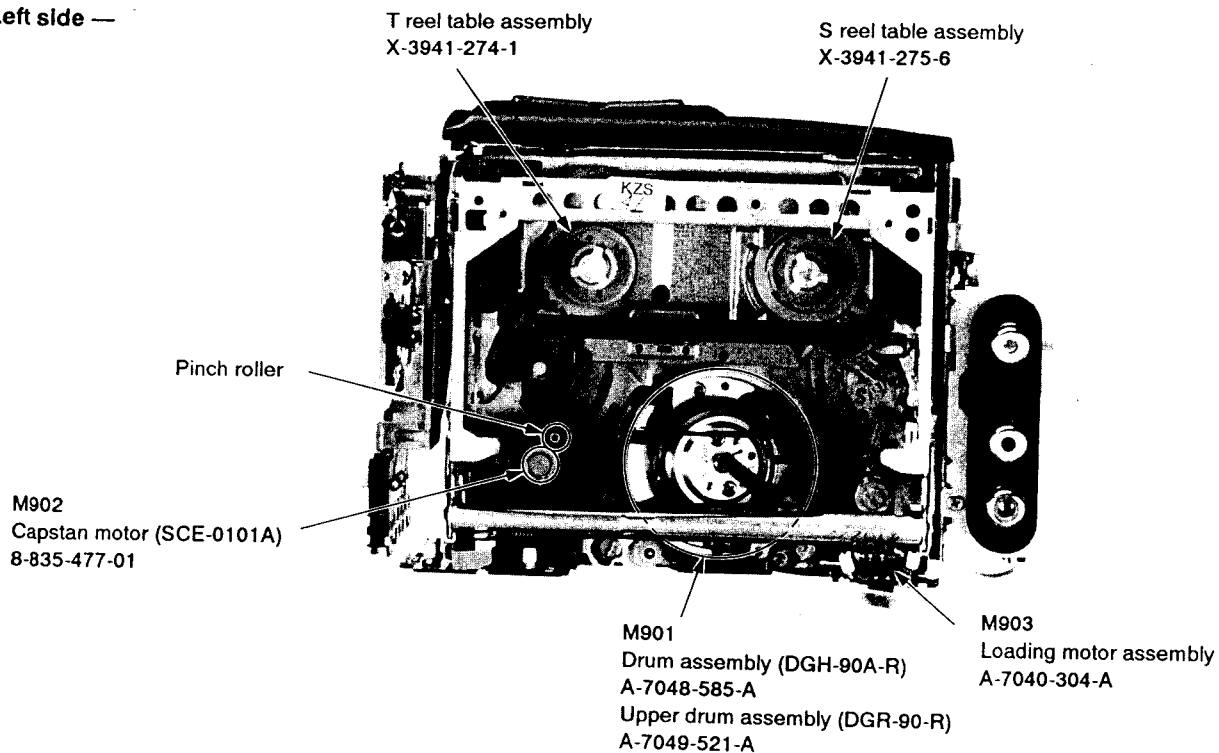


— Right side —


TYPE A

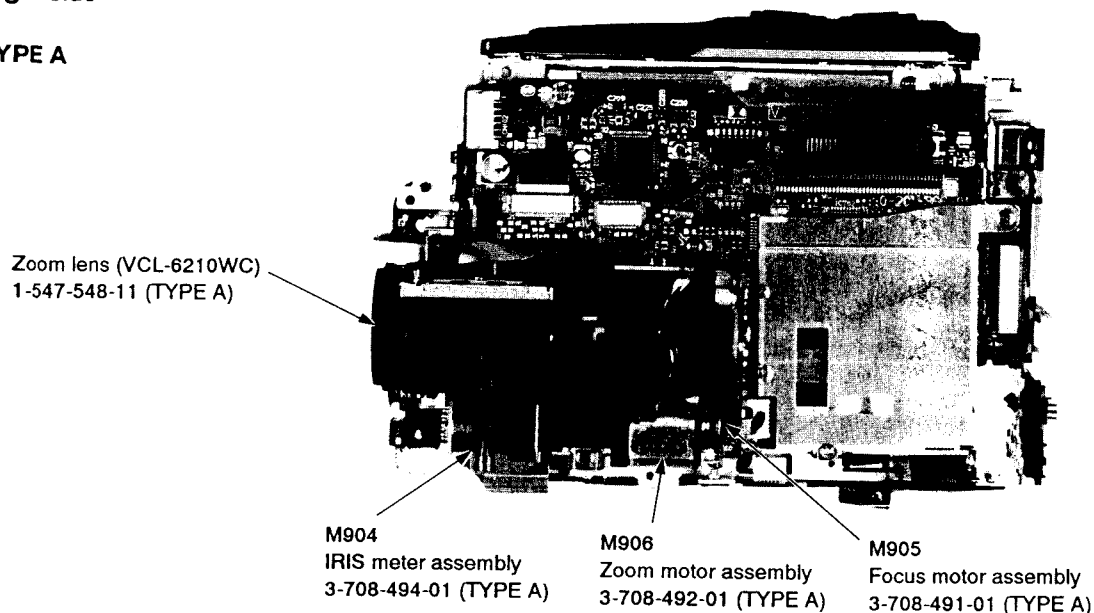


TYPE B

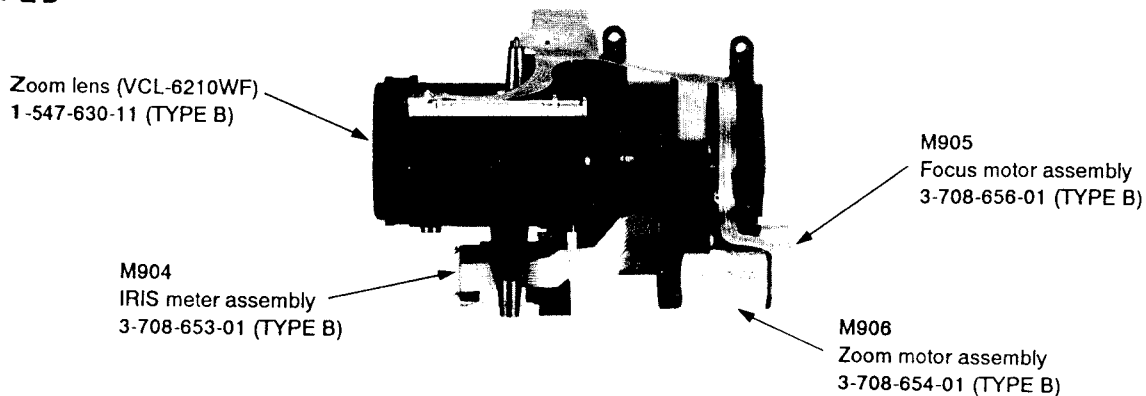

3-1. CIRCUIT BOARDS LOCATION



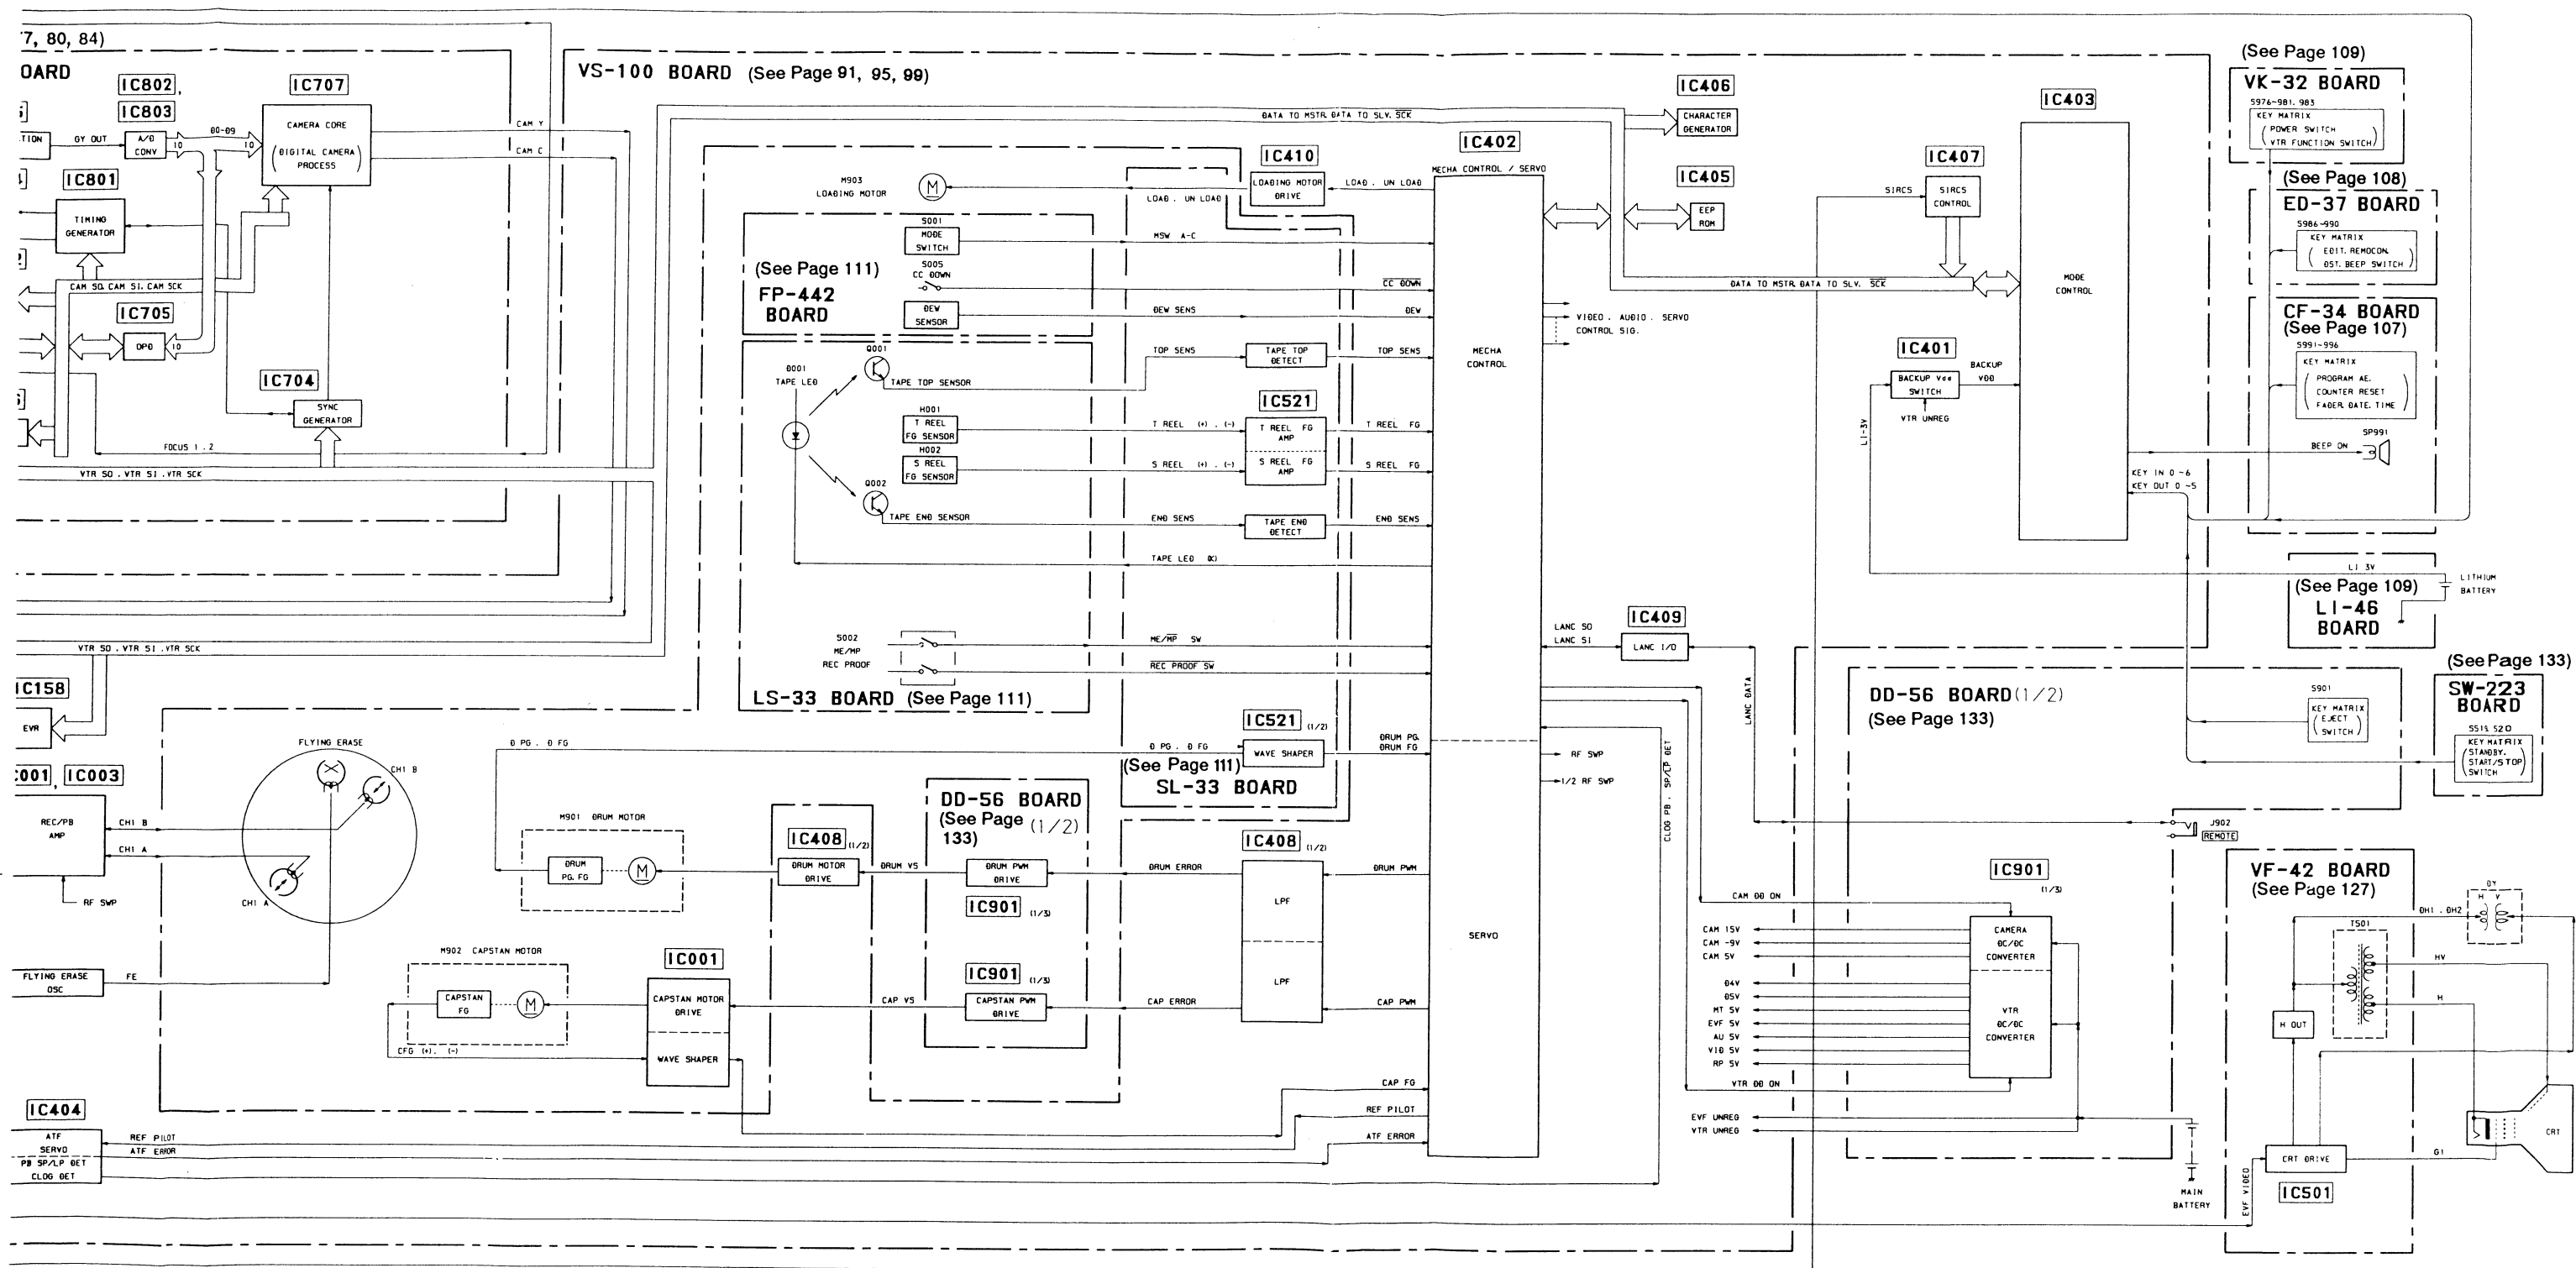

3-3. CAMERA (1) BLOCK DIAGRAM

(See Page 72)

CD-106 BOARD

IC875

CCD IMAGER

Q877

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

Q875

VC-133 BOARD (See Page 77, 80)

IC805

SIGNAL SEPARATION

ADC/IRIS CONTROL

IC801

TIMING GENERATOR

IC804

V DRIVE

IC802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

IC805

SIGNAL SEPARATION

ADC/IRIS CONTROL

IC801

TIMING GENERATOR

IC804

V DRIVE

IC802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

IC805

SIGNAL SEPARATION

ADC/IRIS CONTROL

IC801

TIMING GENERATOR

IC804

V DRIVE

IC802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

IC805

SIGNAL SEPARATION

ADC/IRIS CONTROL

IC801

TIMING GENERATOR

IC804

V DRIVE

IC802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

IC805

SIGNAL SEPARATION

ADC/IRIS CONTROL

IC801

TIMING GENERATOR

IC804

V DRIVE

IC802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802

Q802


Q802

Q802

Q802

Q802



Q802

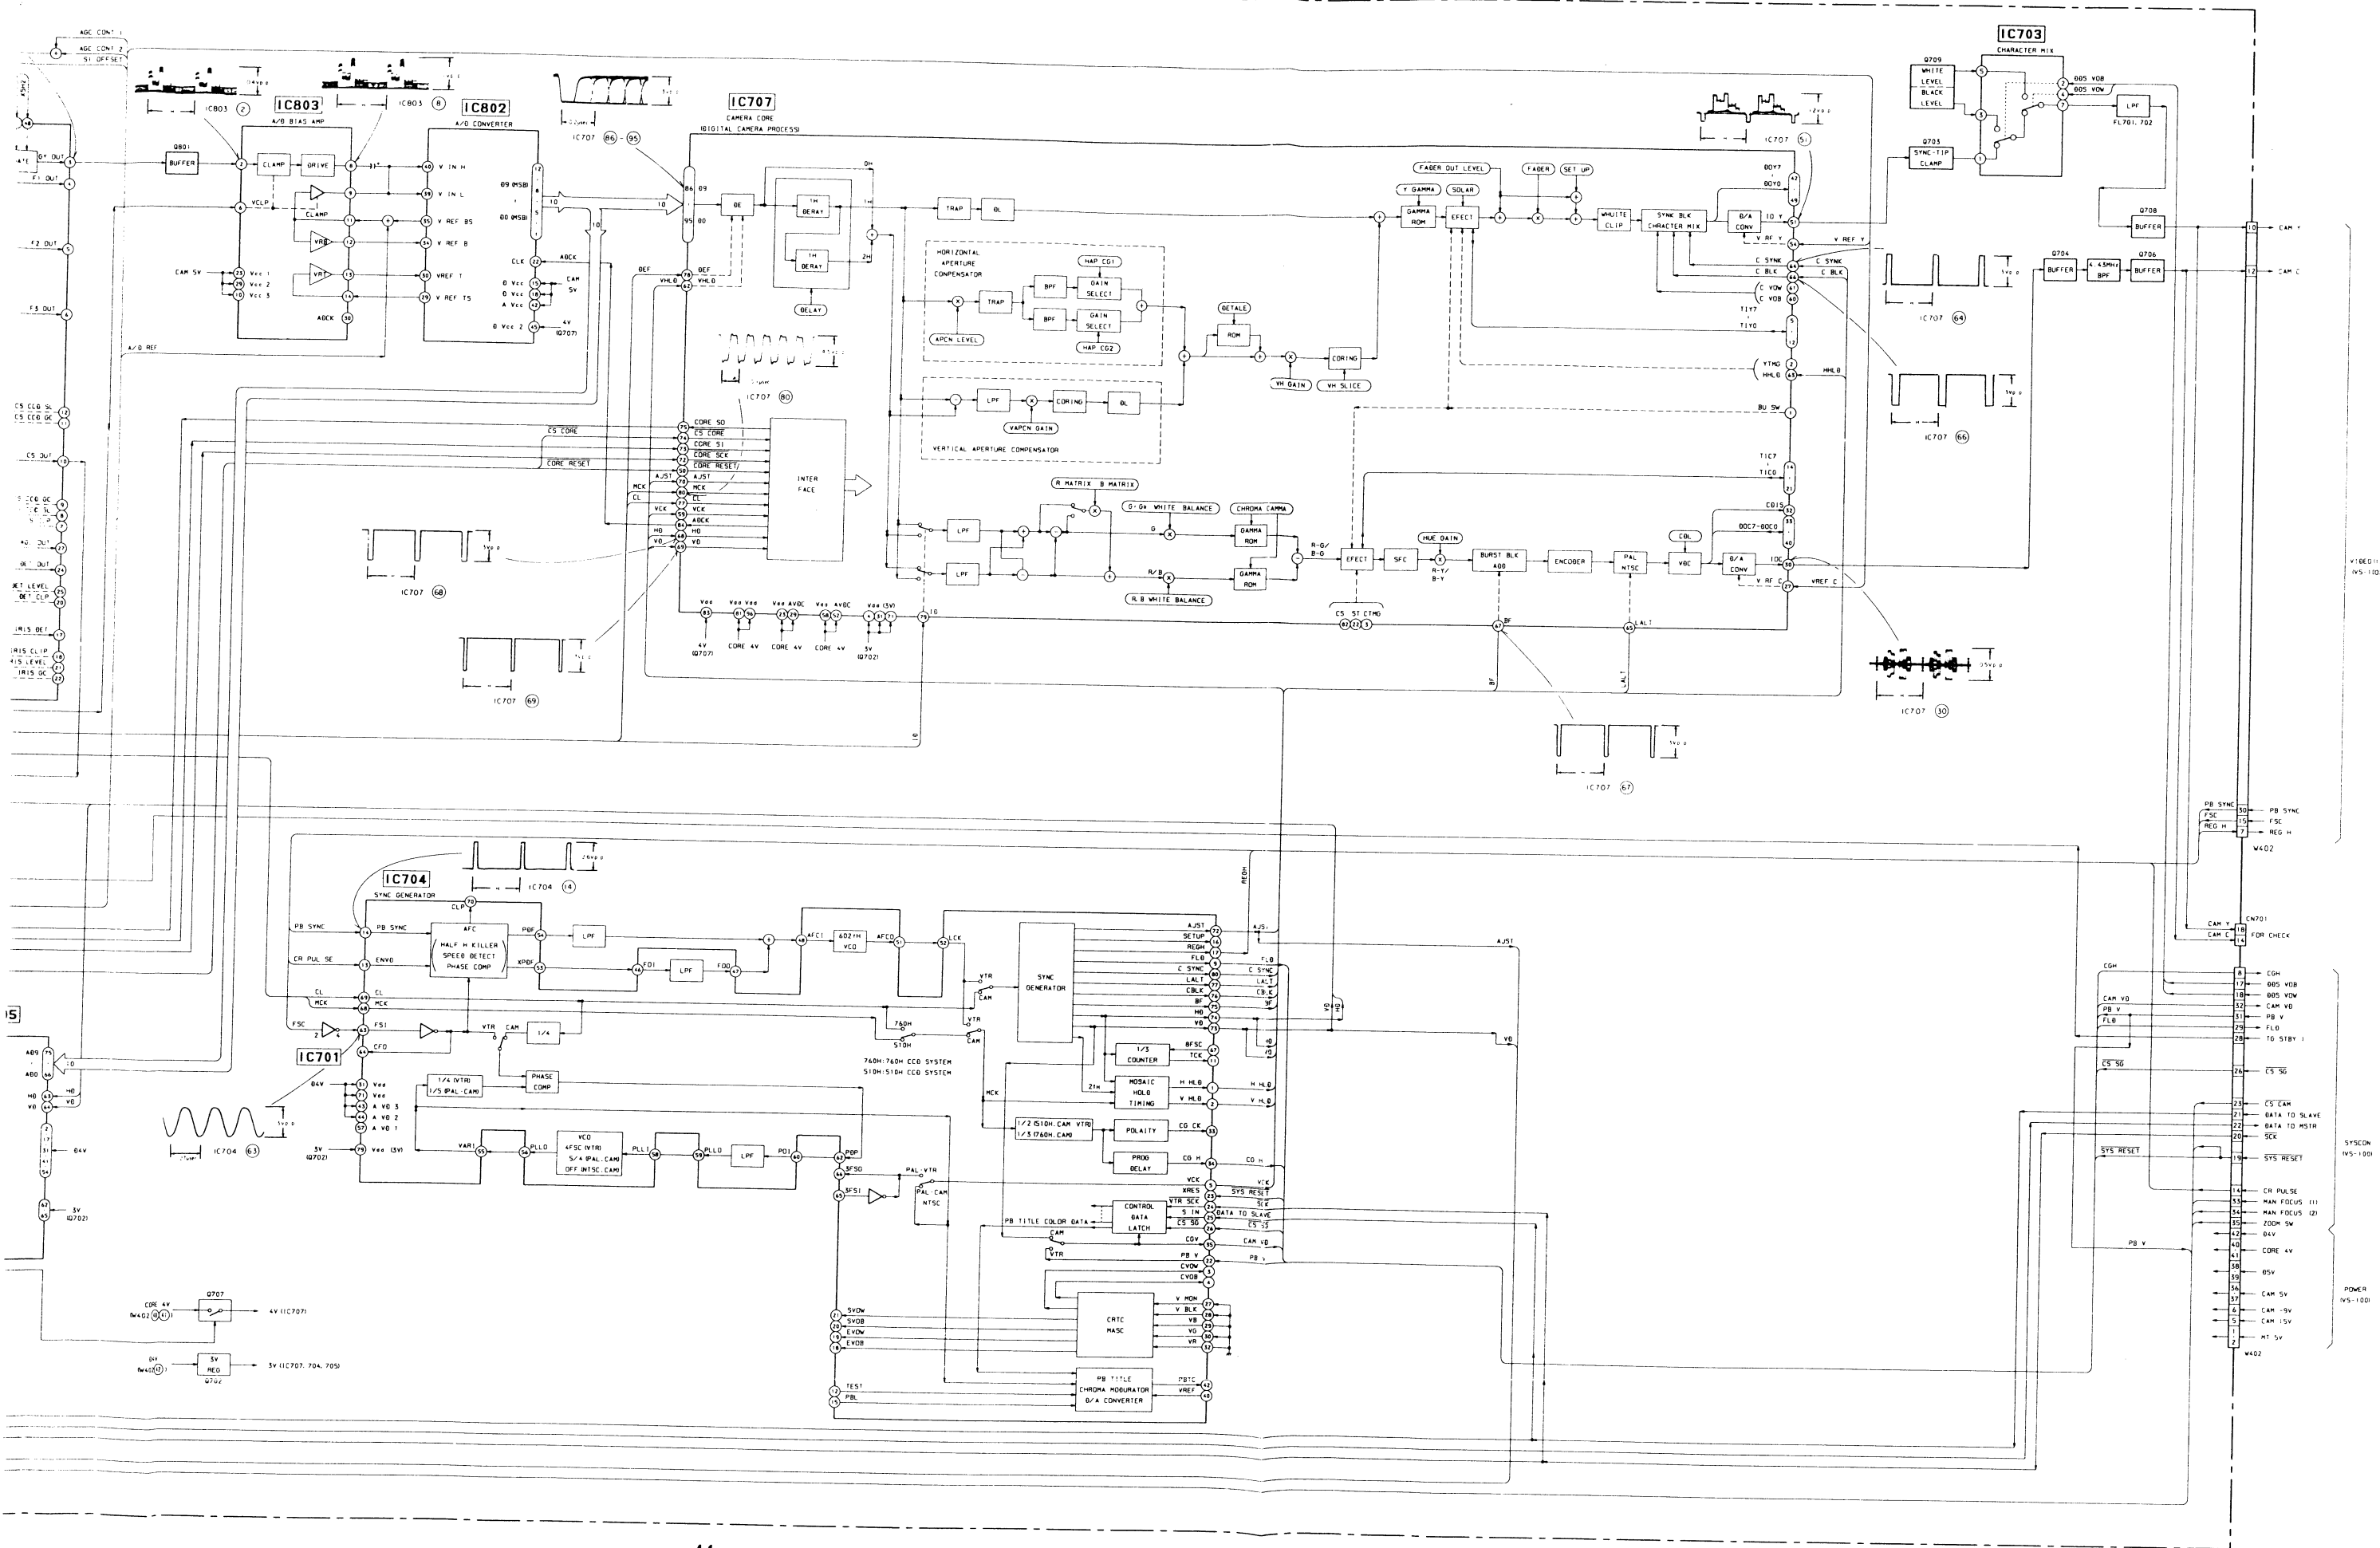




CCD-TR323E/TR323EP


3-5. VIDEO (1) BLOCK DIAGRAM

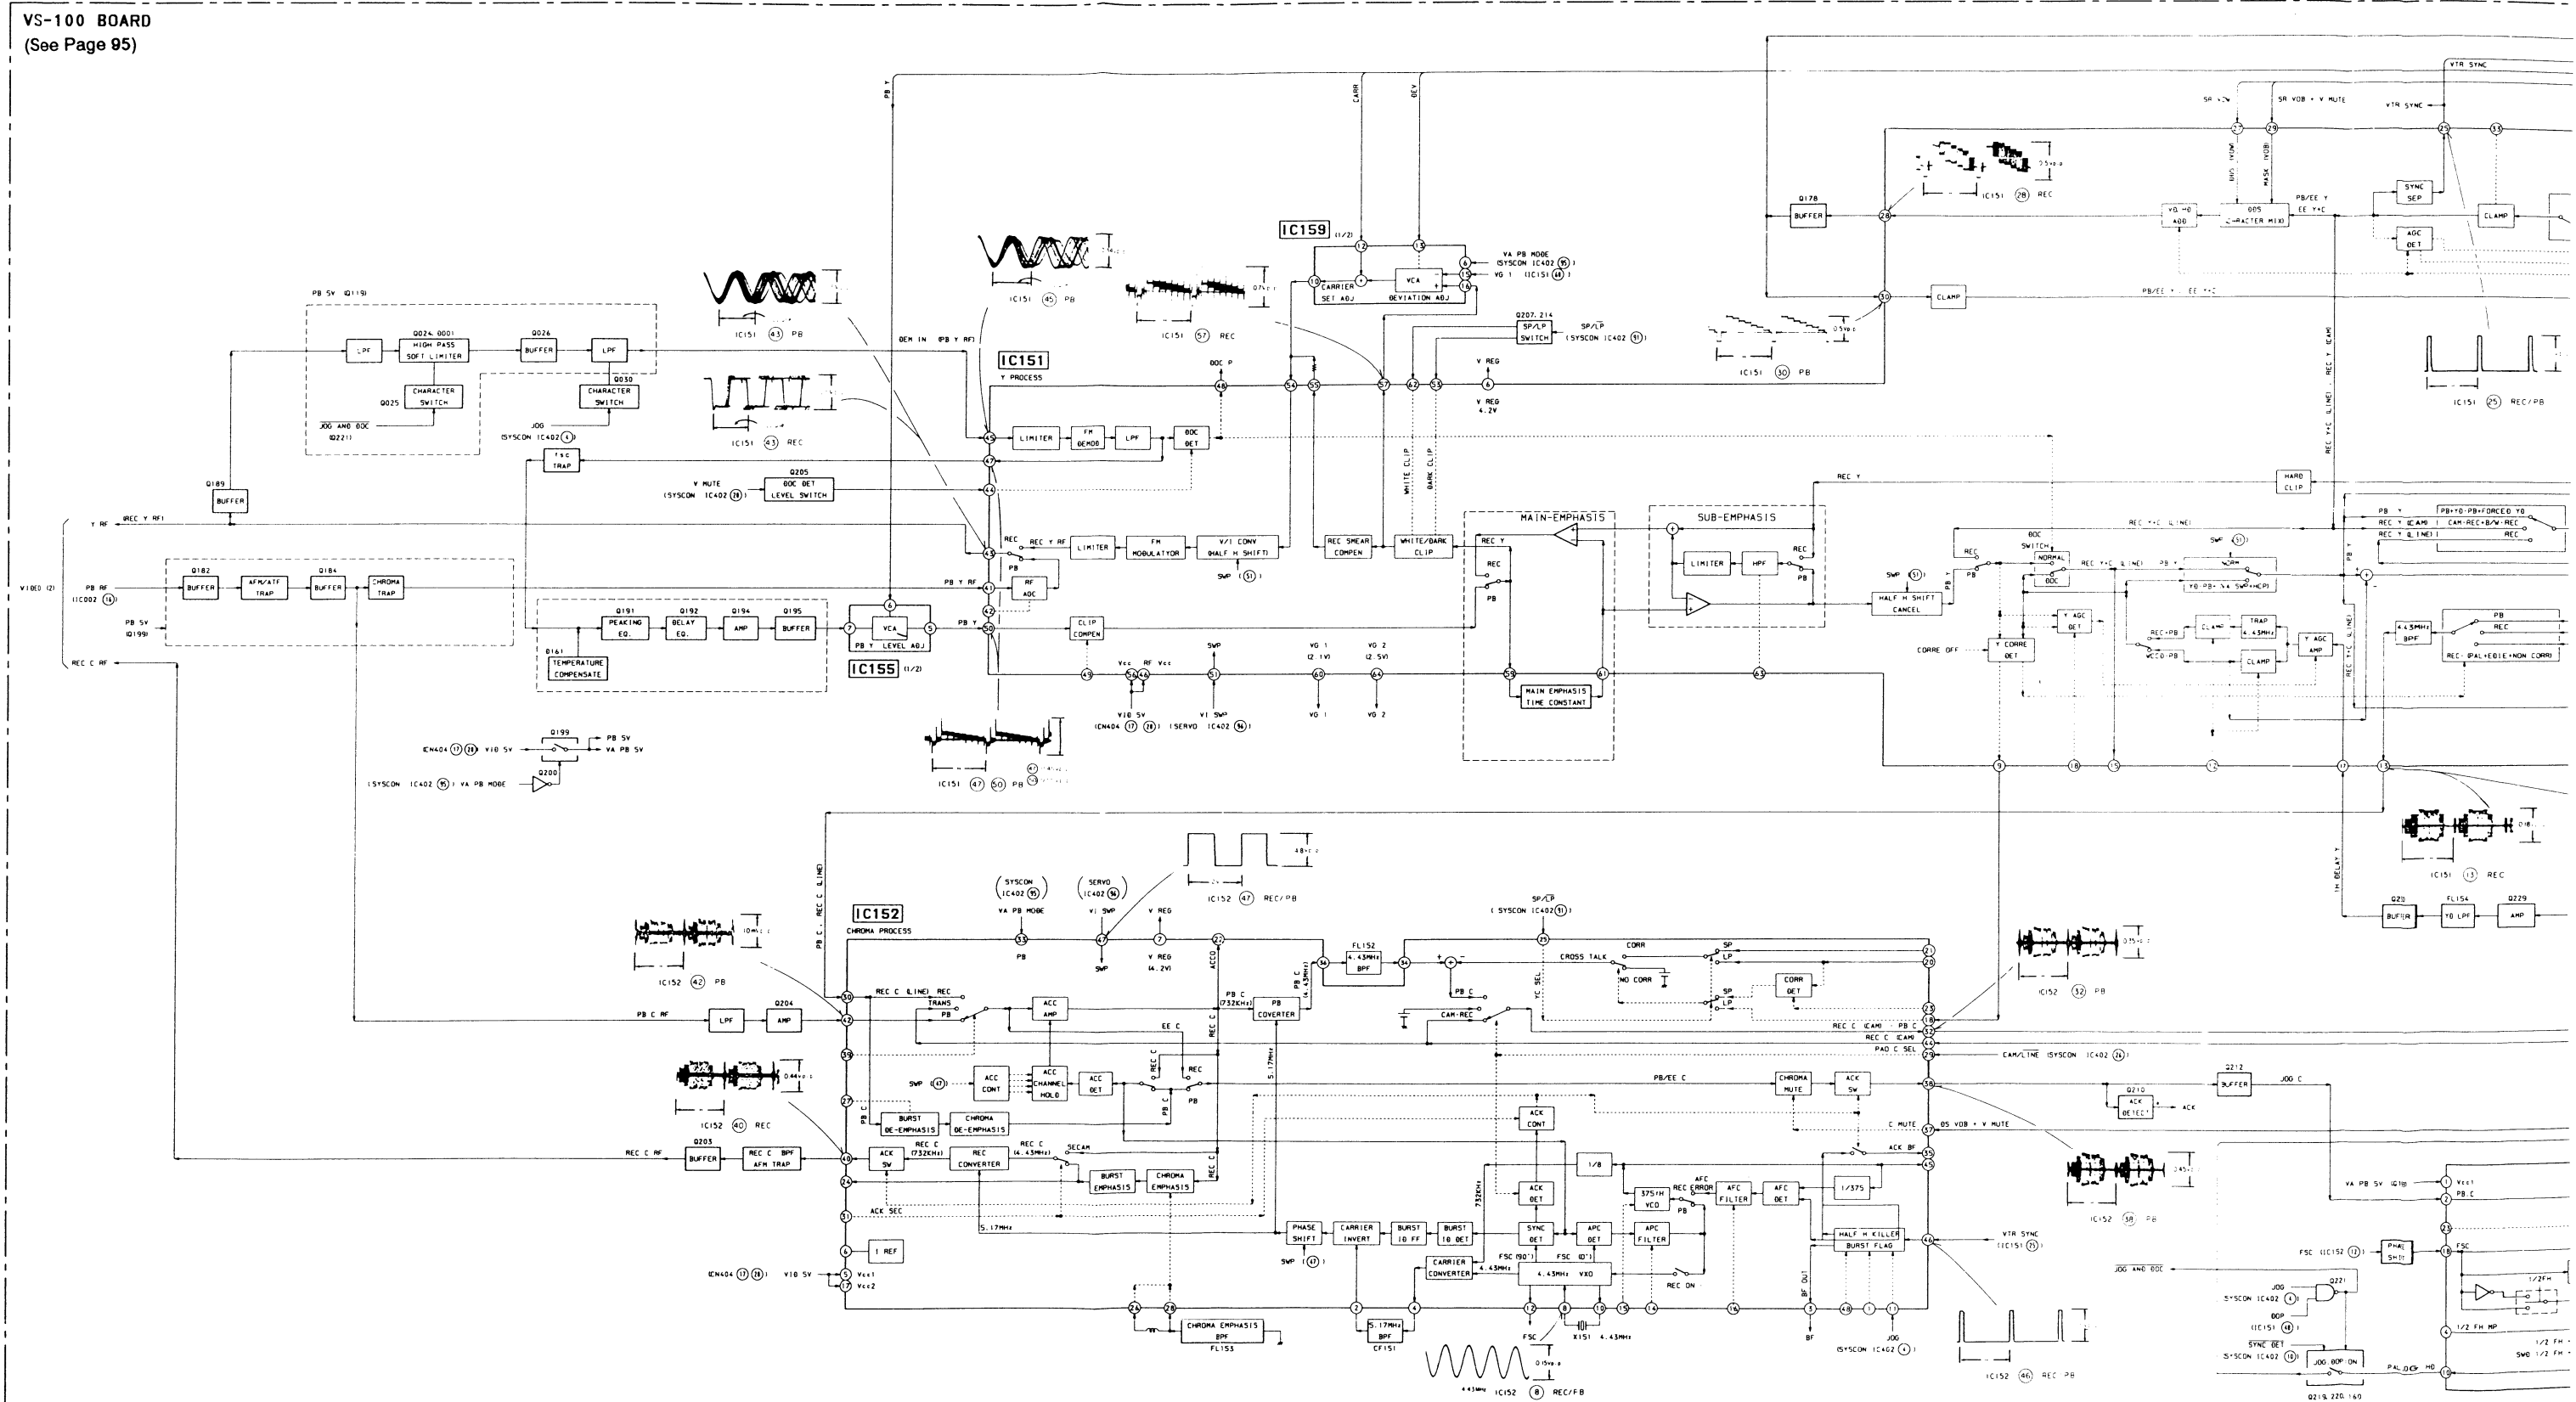


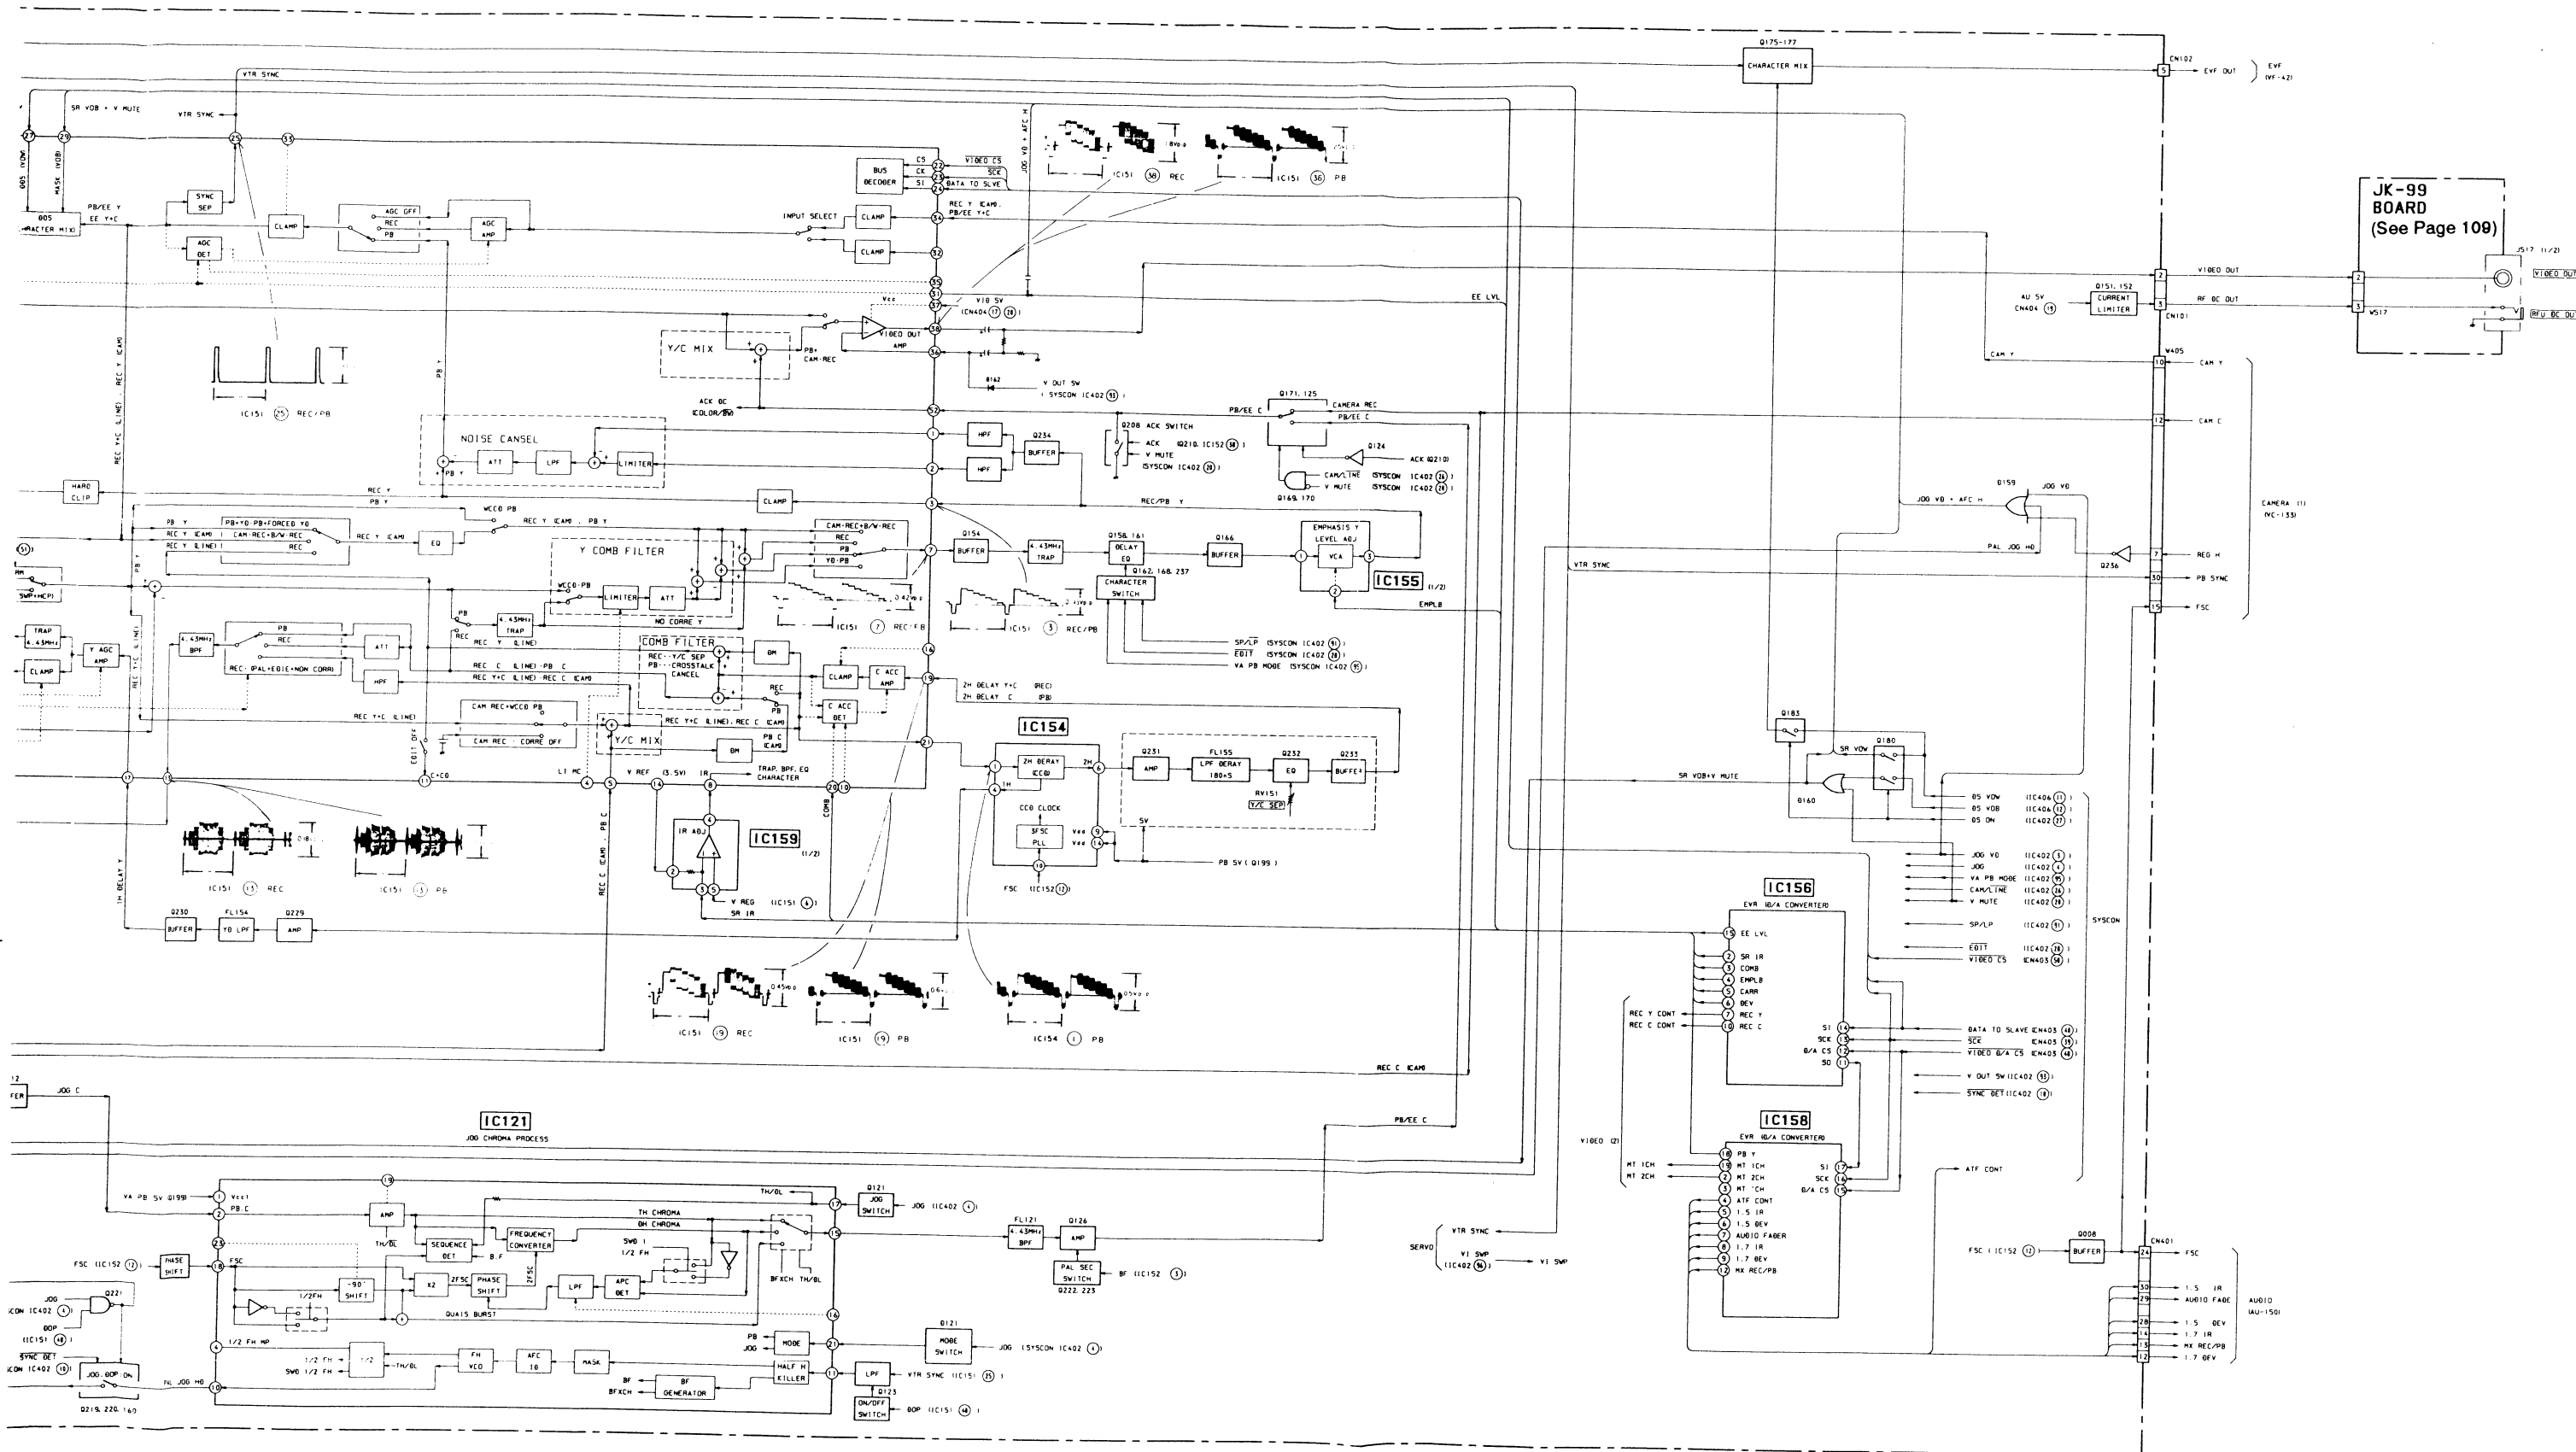


3-6. VIDEO (2) BLOCK DIAGRAM


VS-100BOARD (1/5)
(See Page 91)

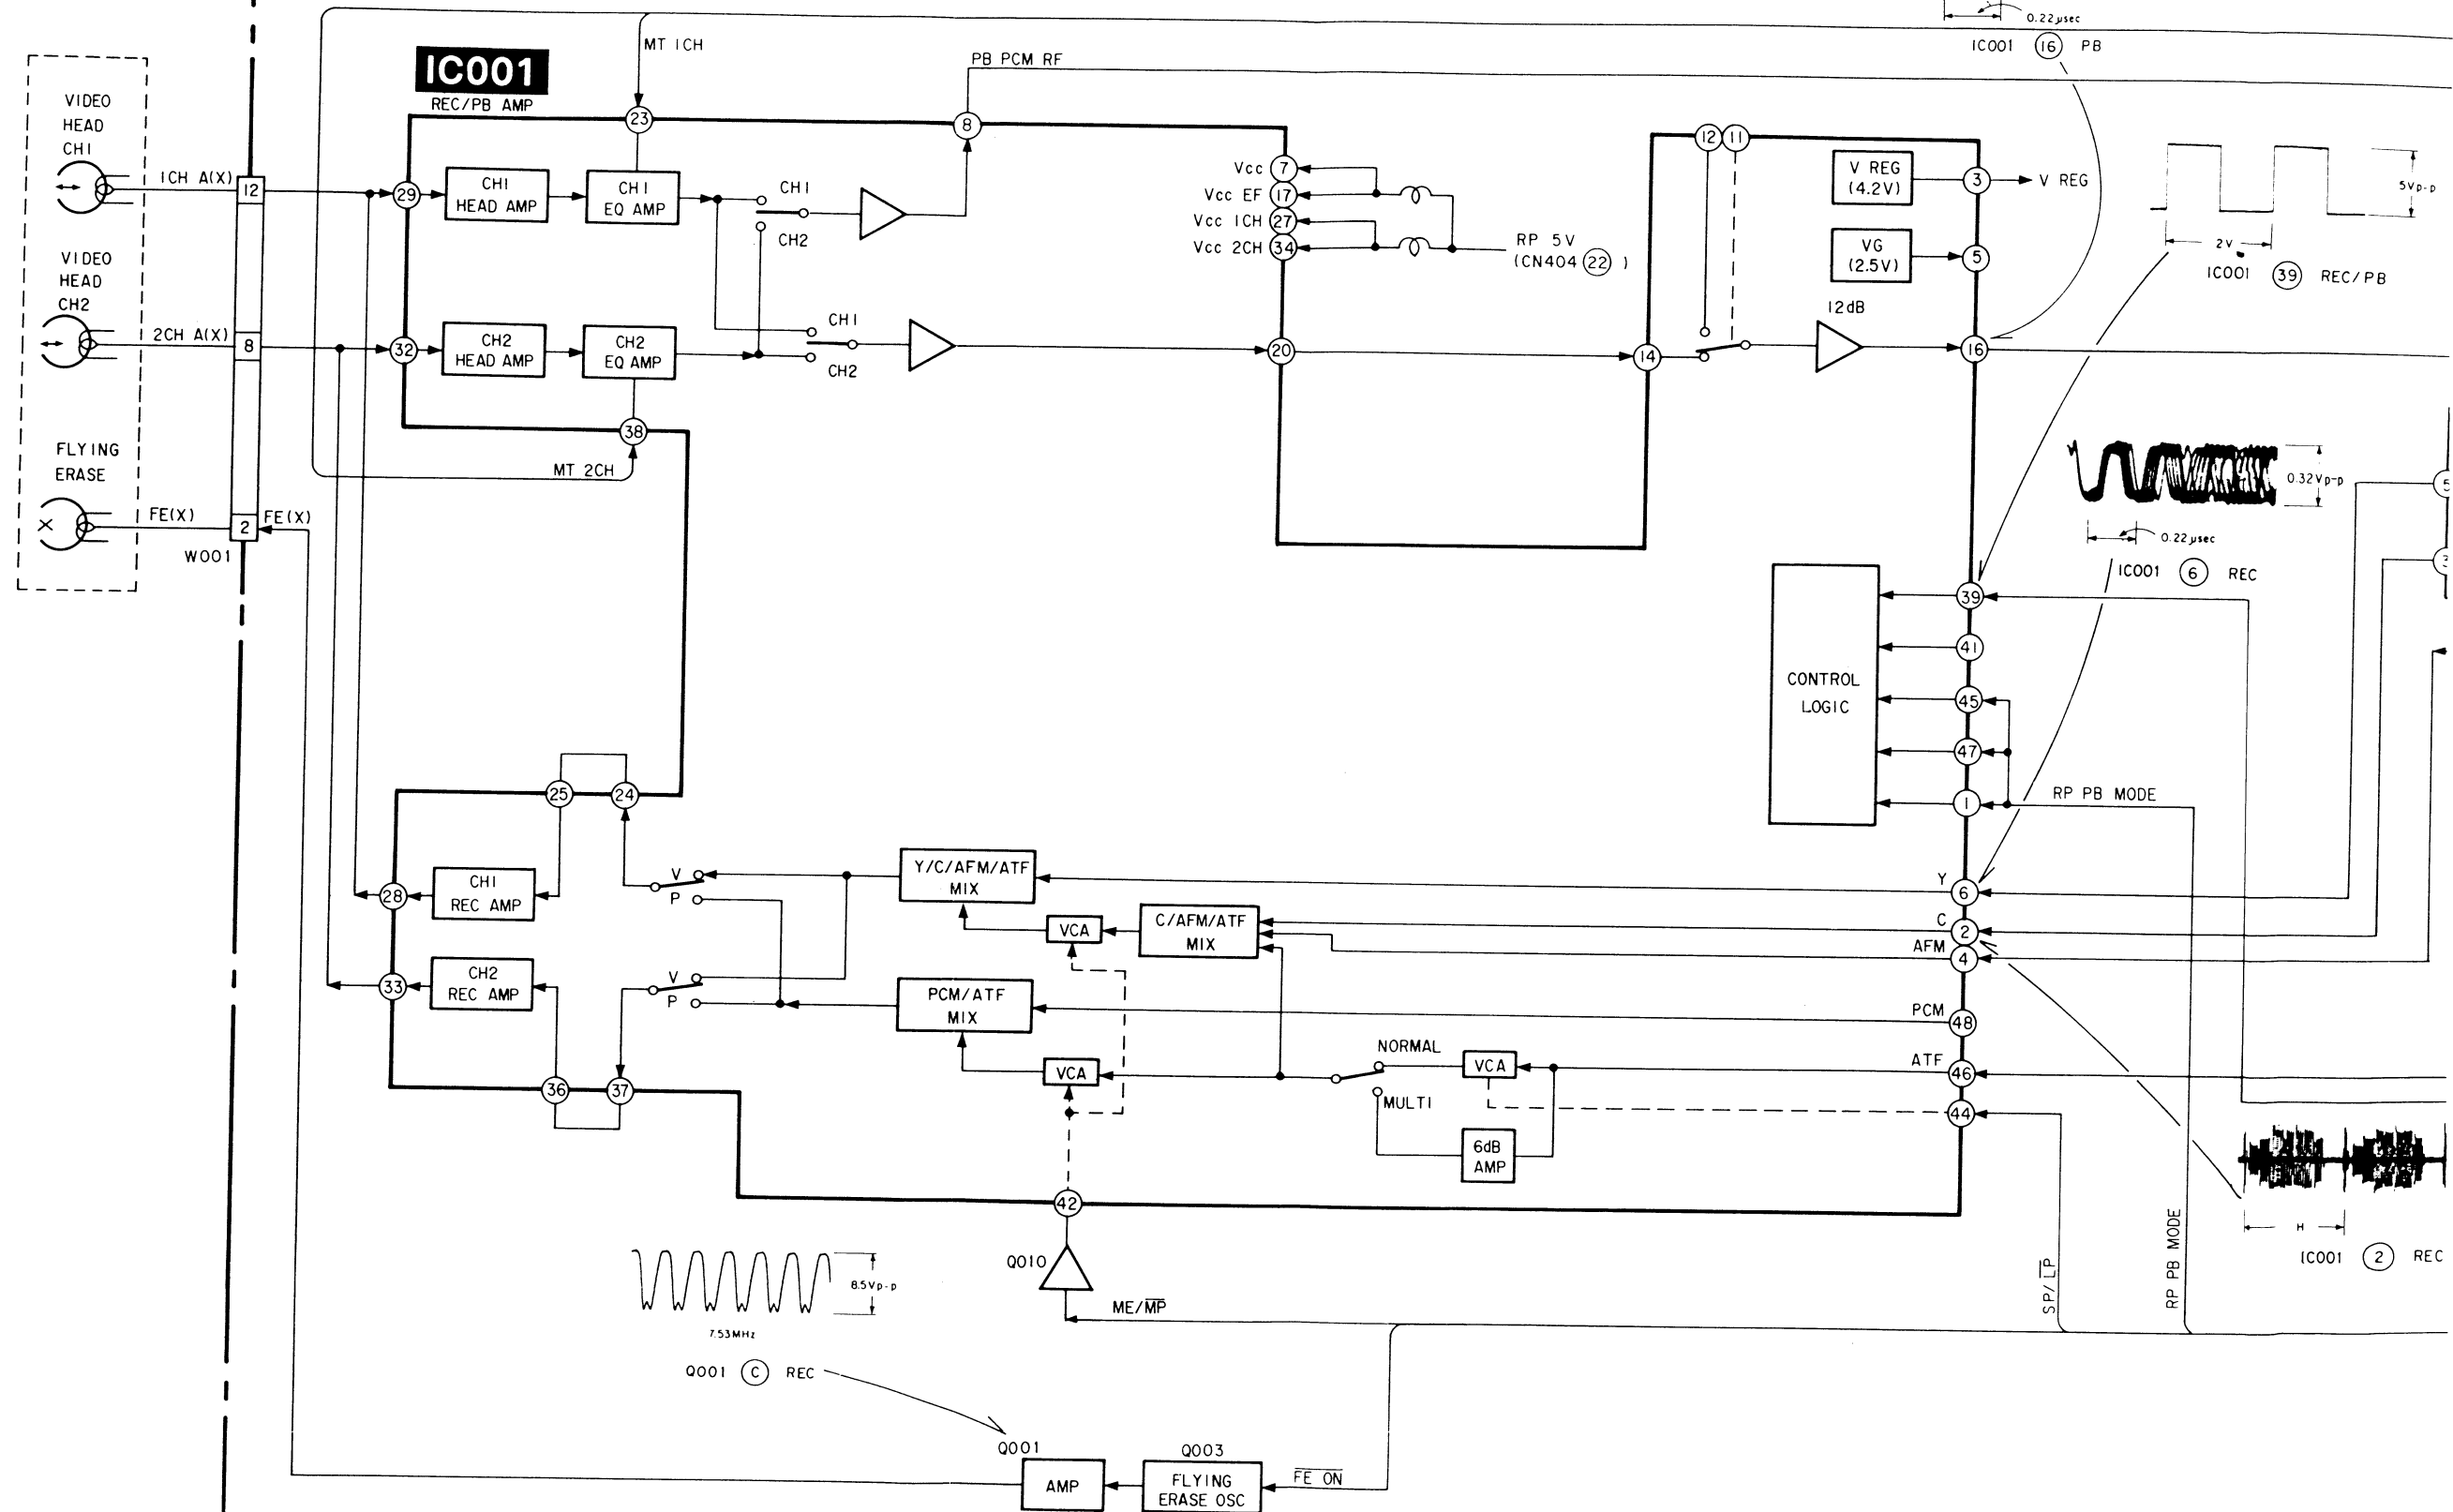


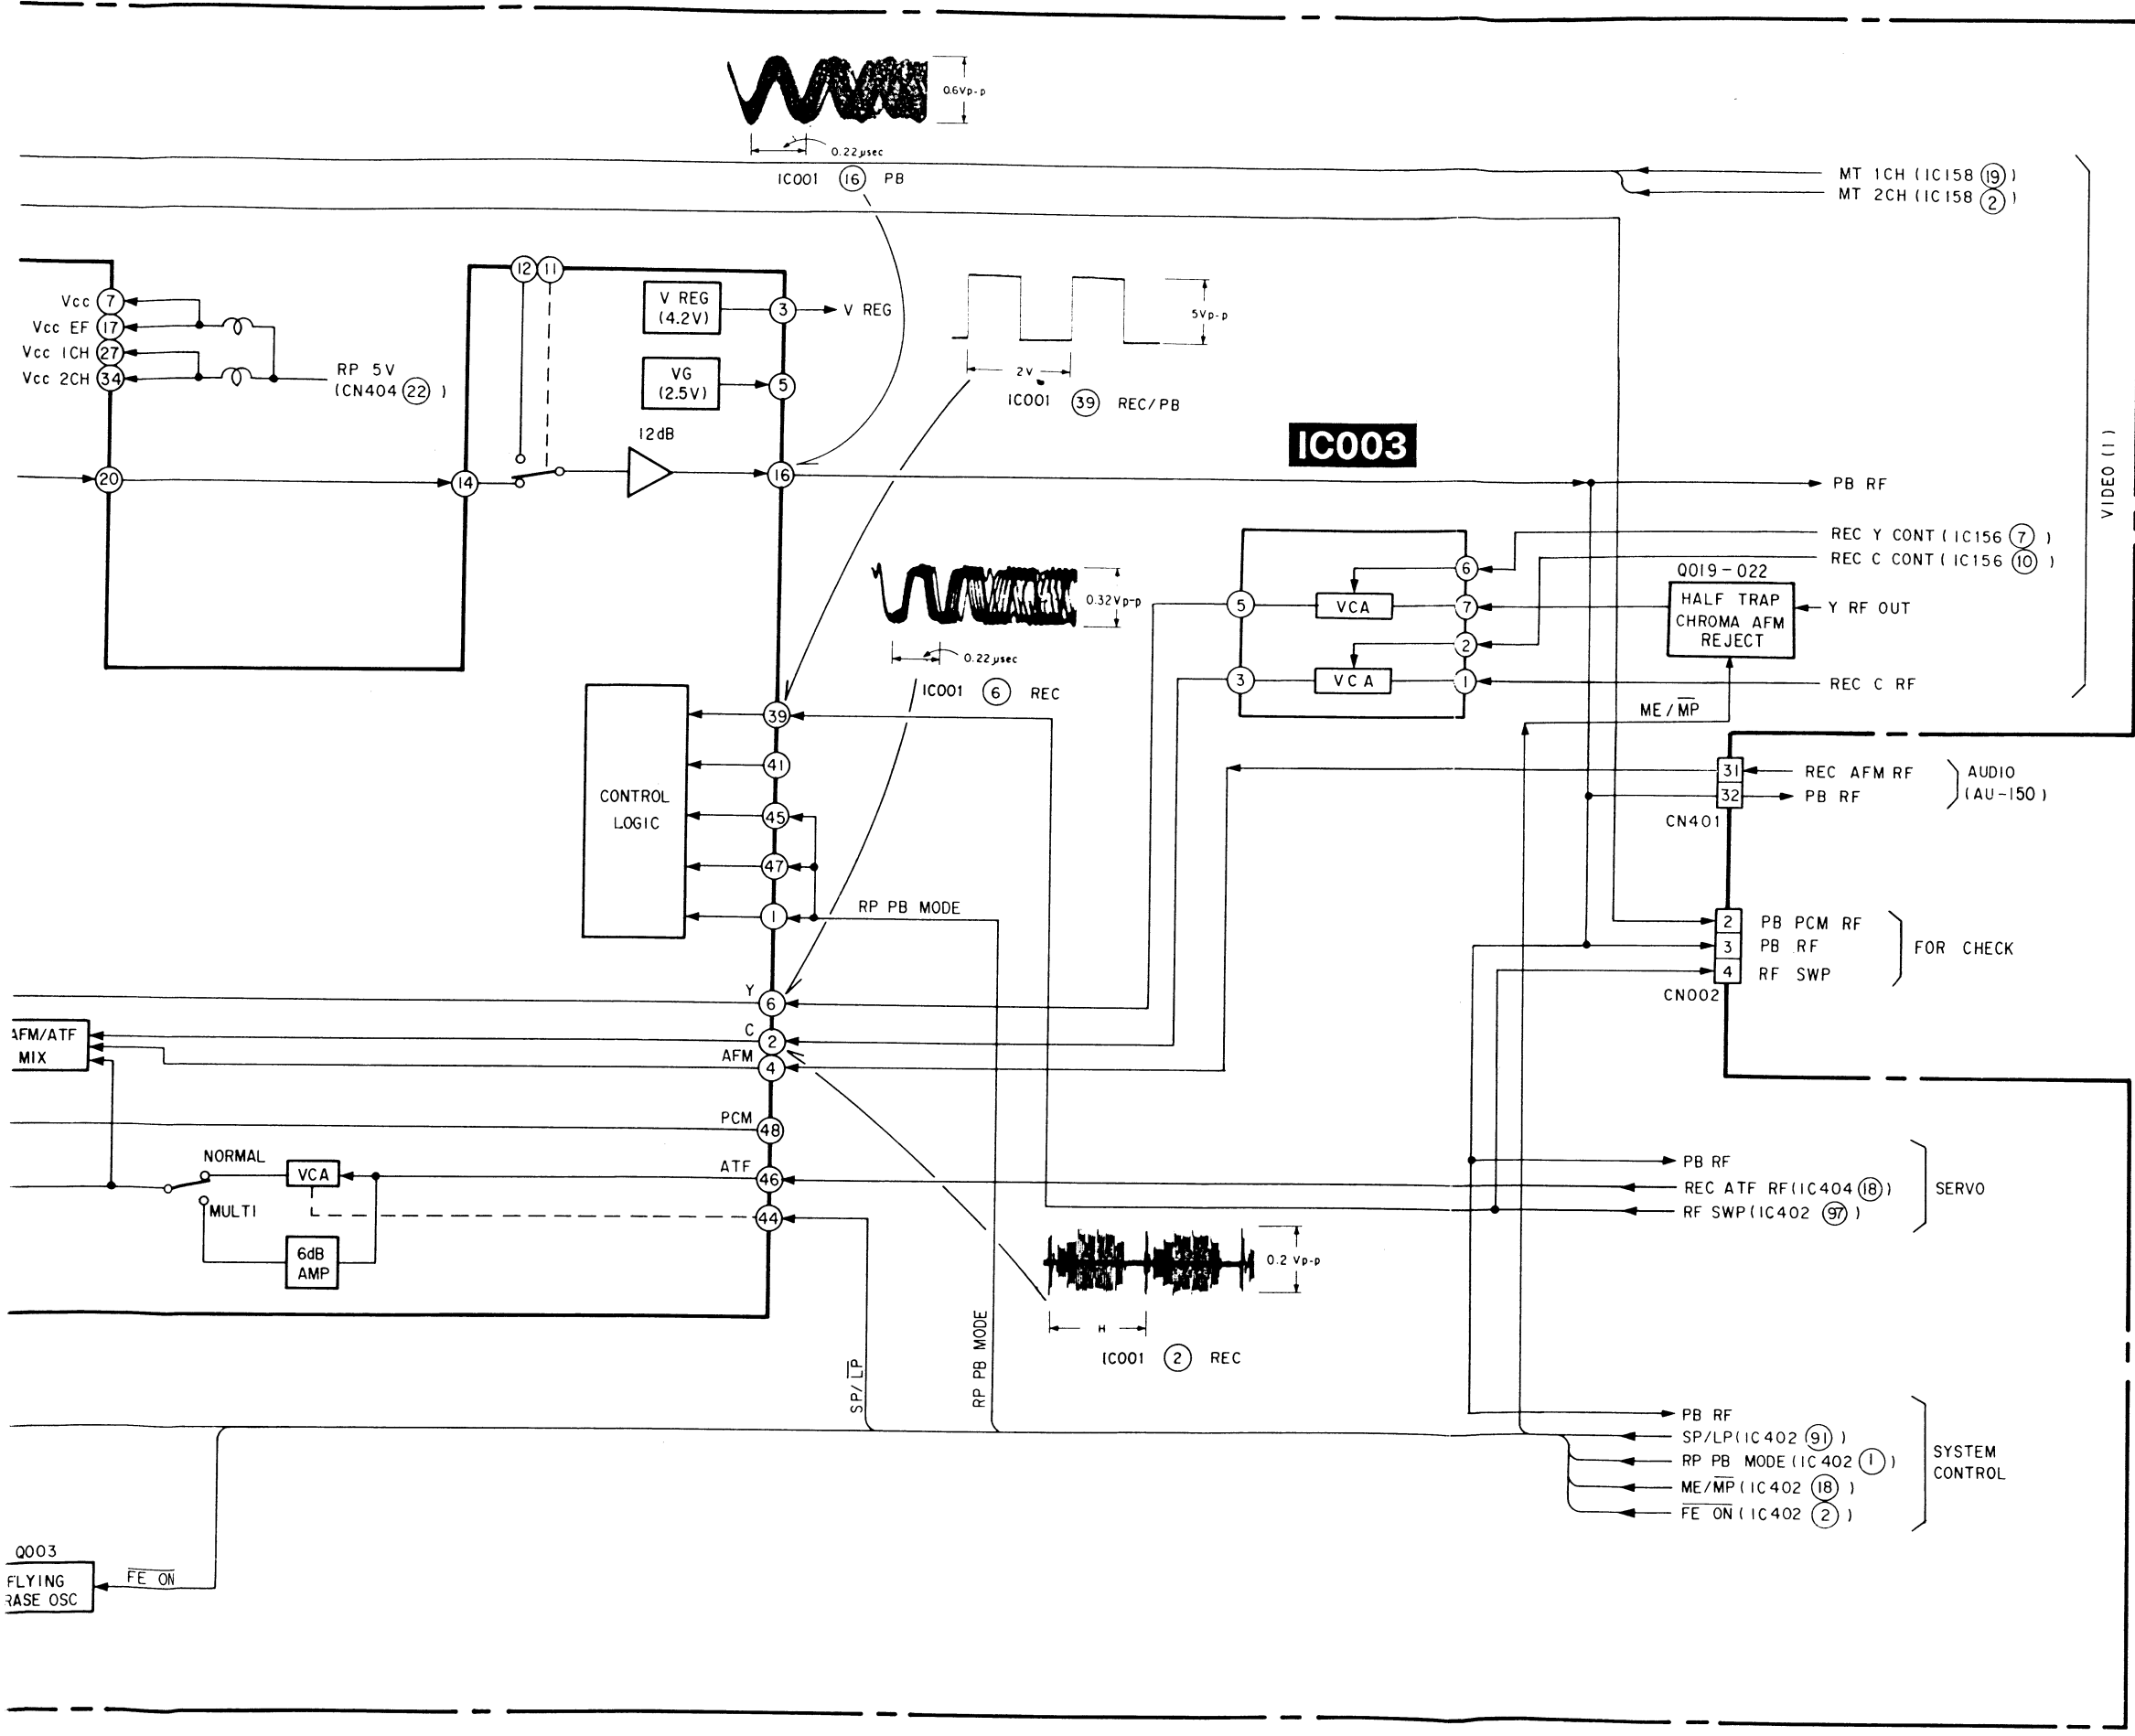




3-8. SYSTEM CONTROL BLOCK DIAGRAM


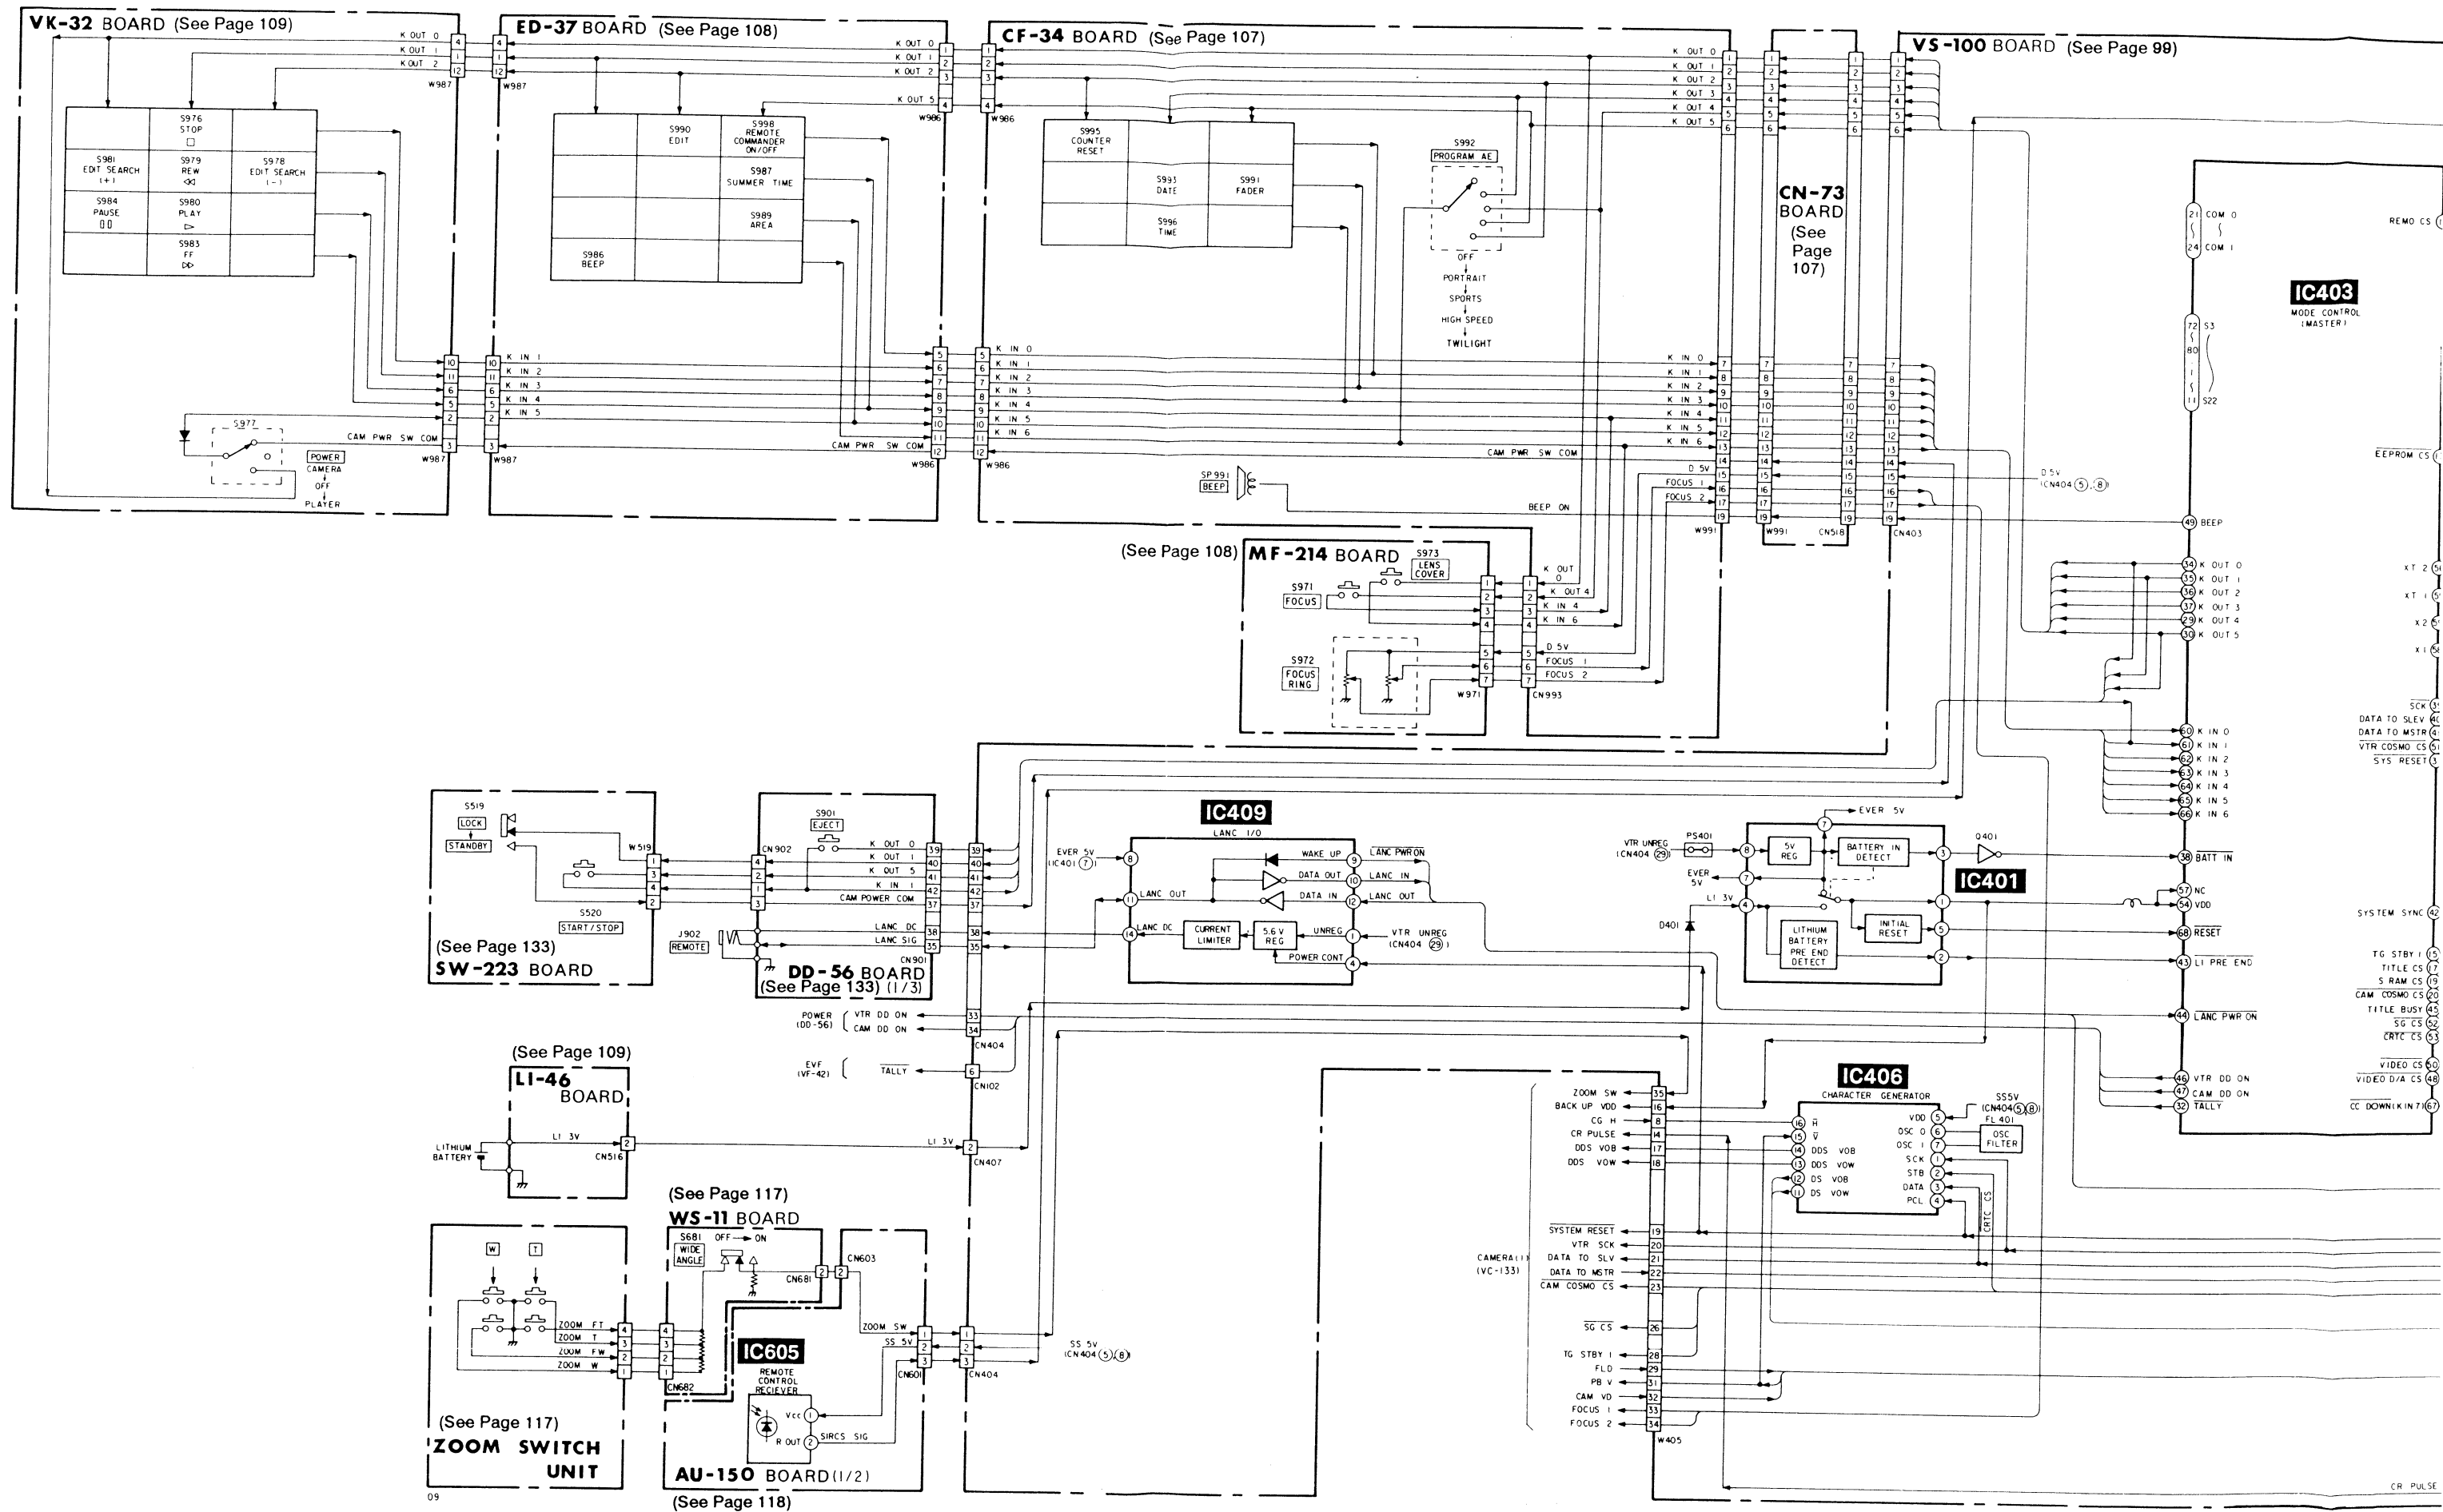


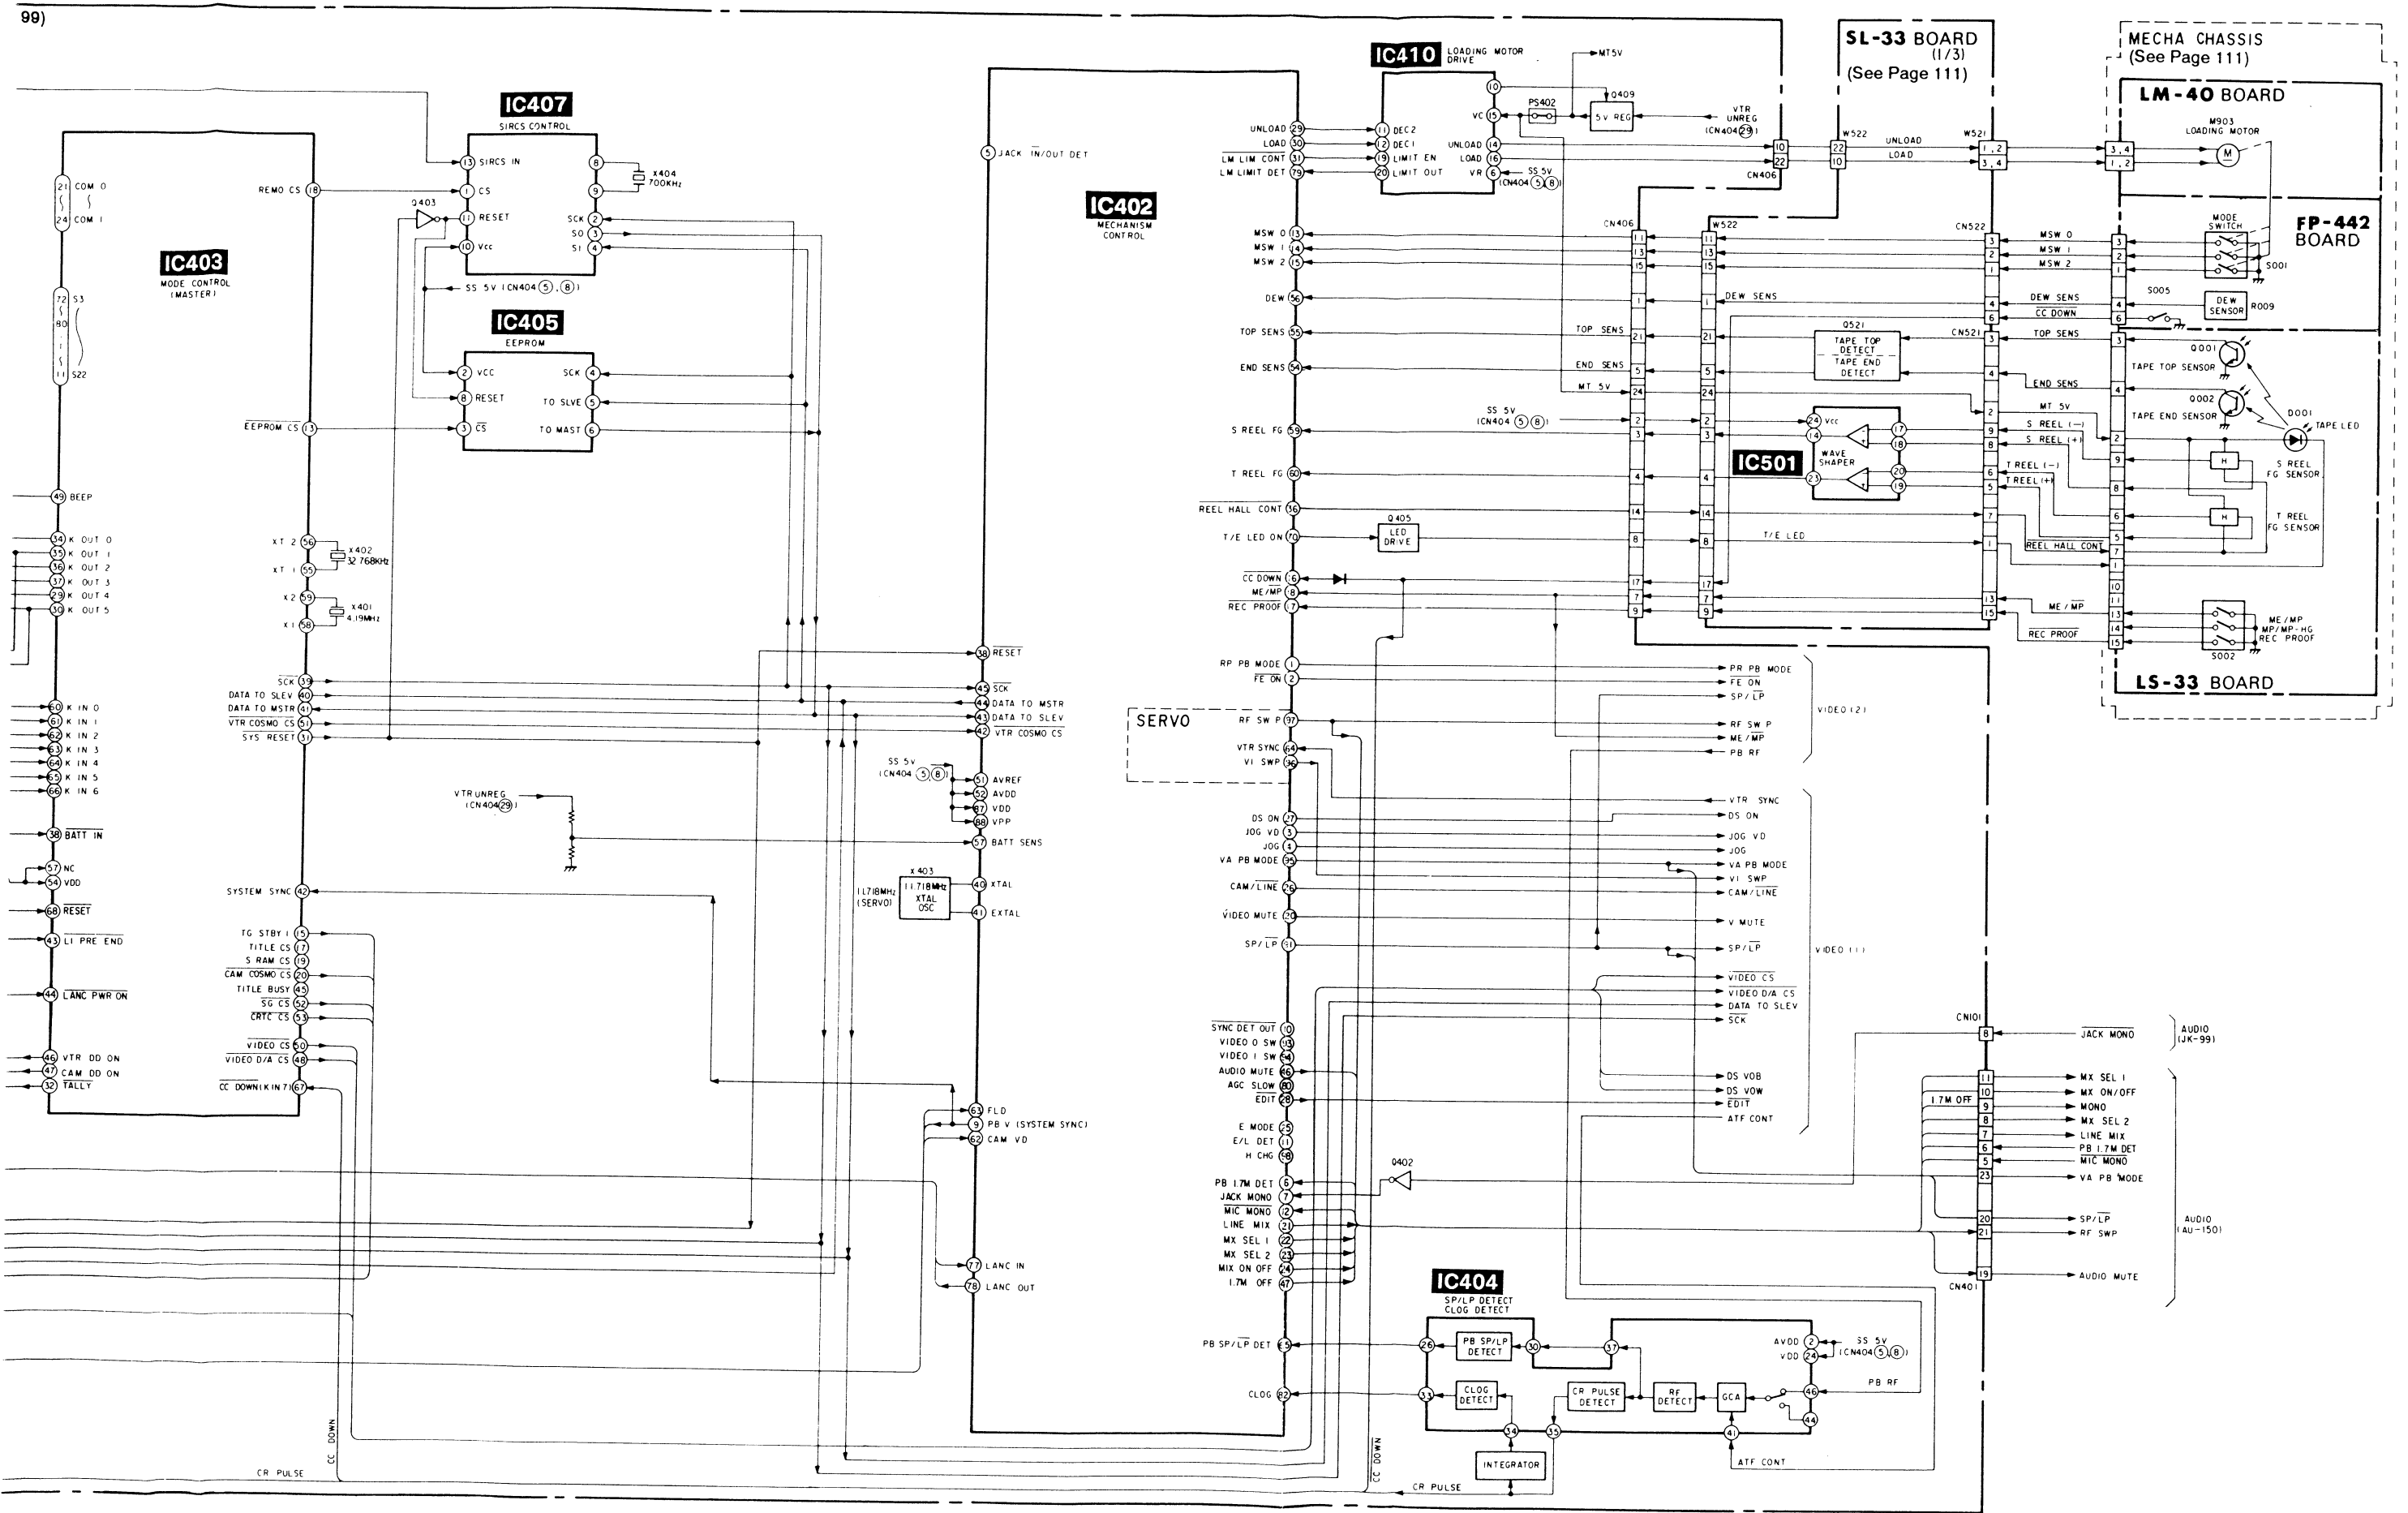


3-9. AUDIO BLOCK DIAGRAM

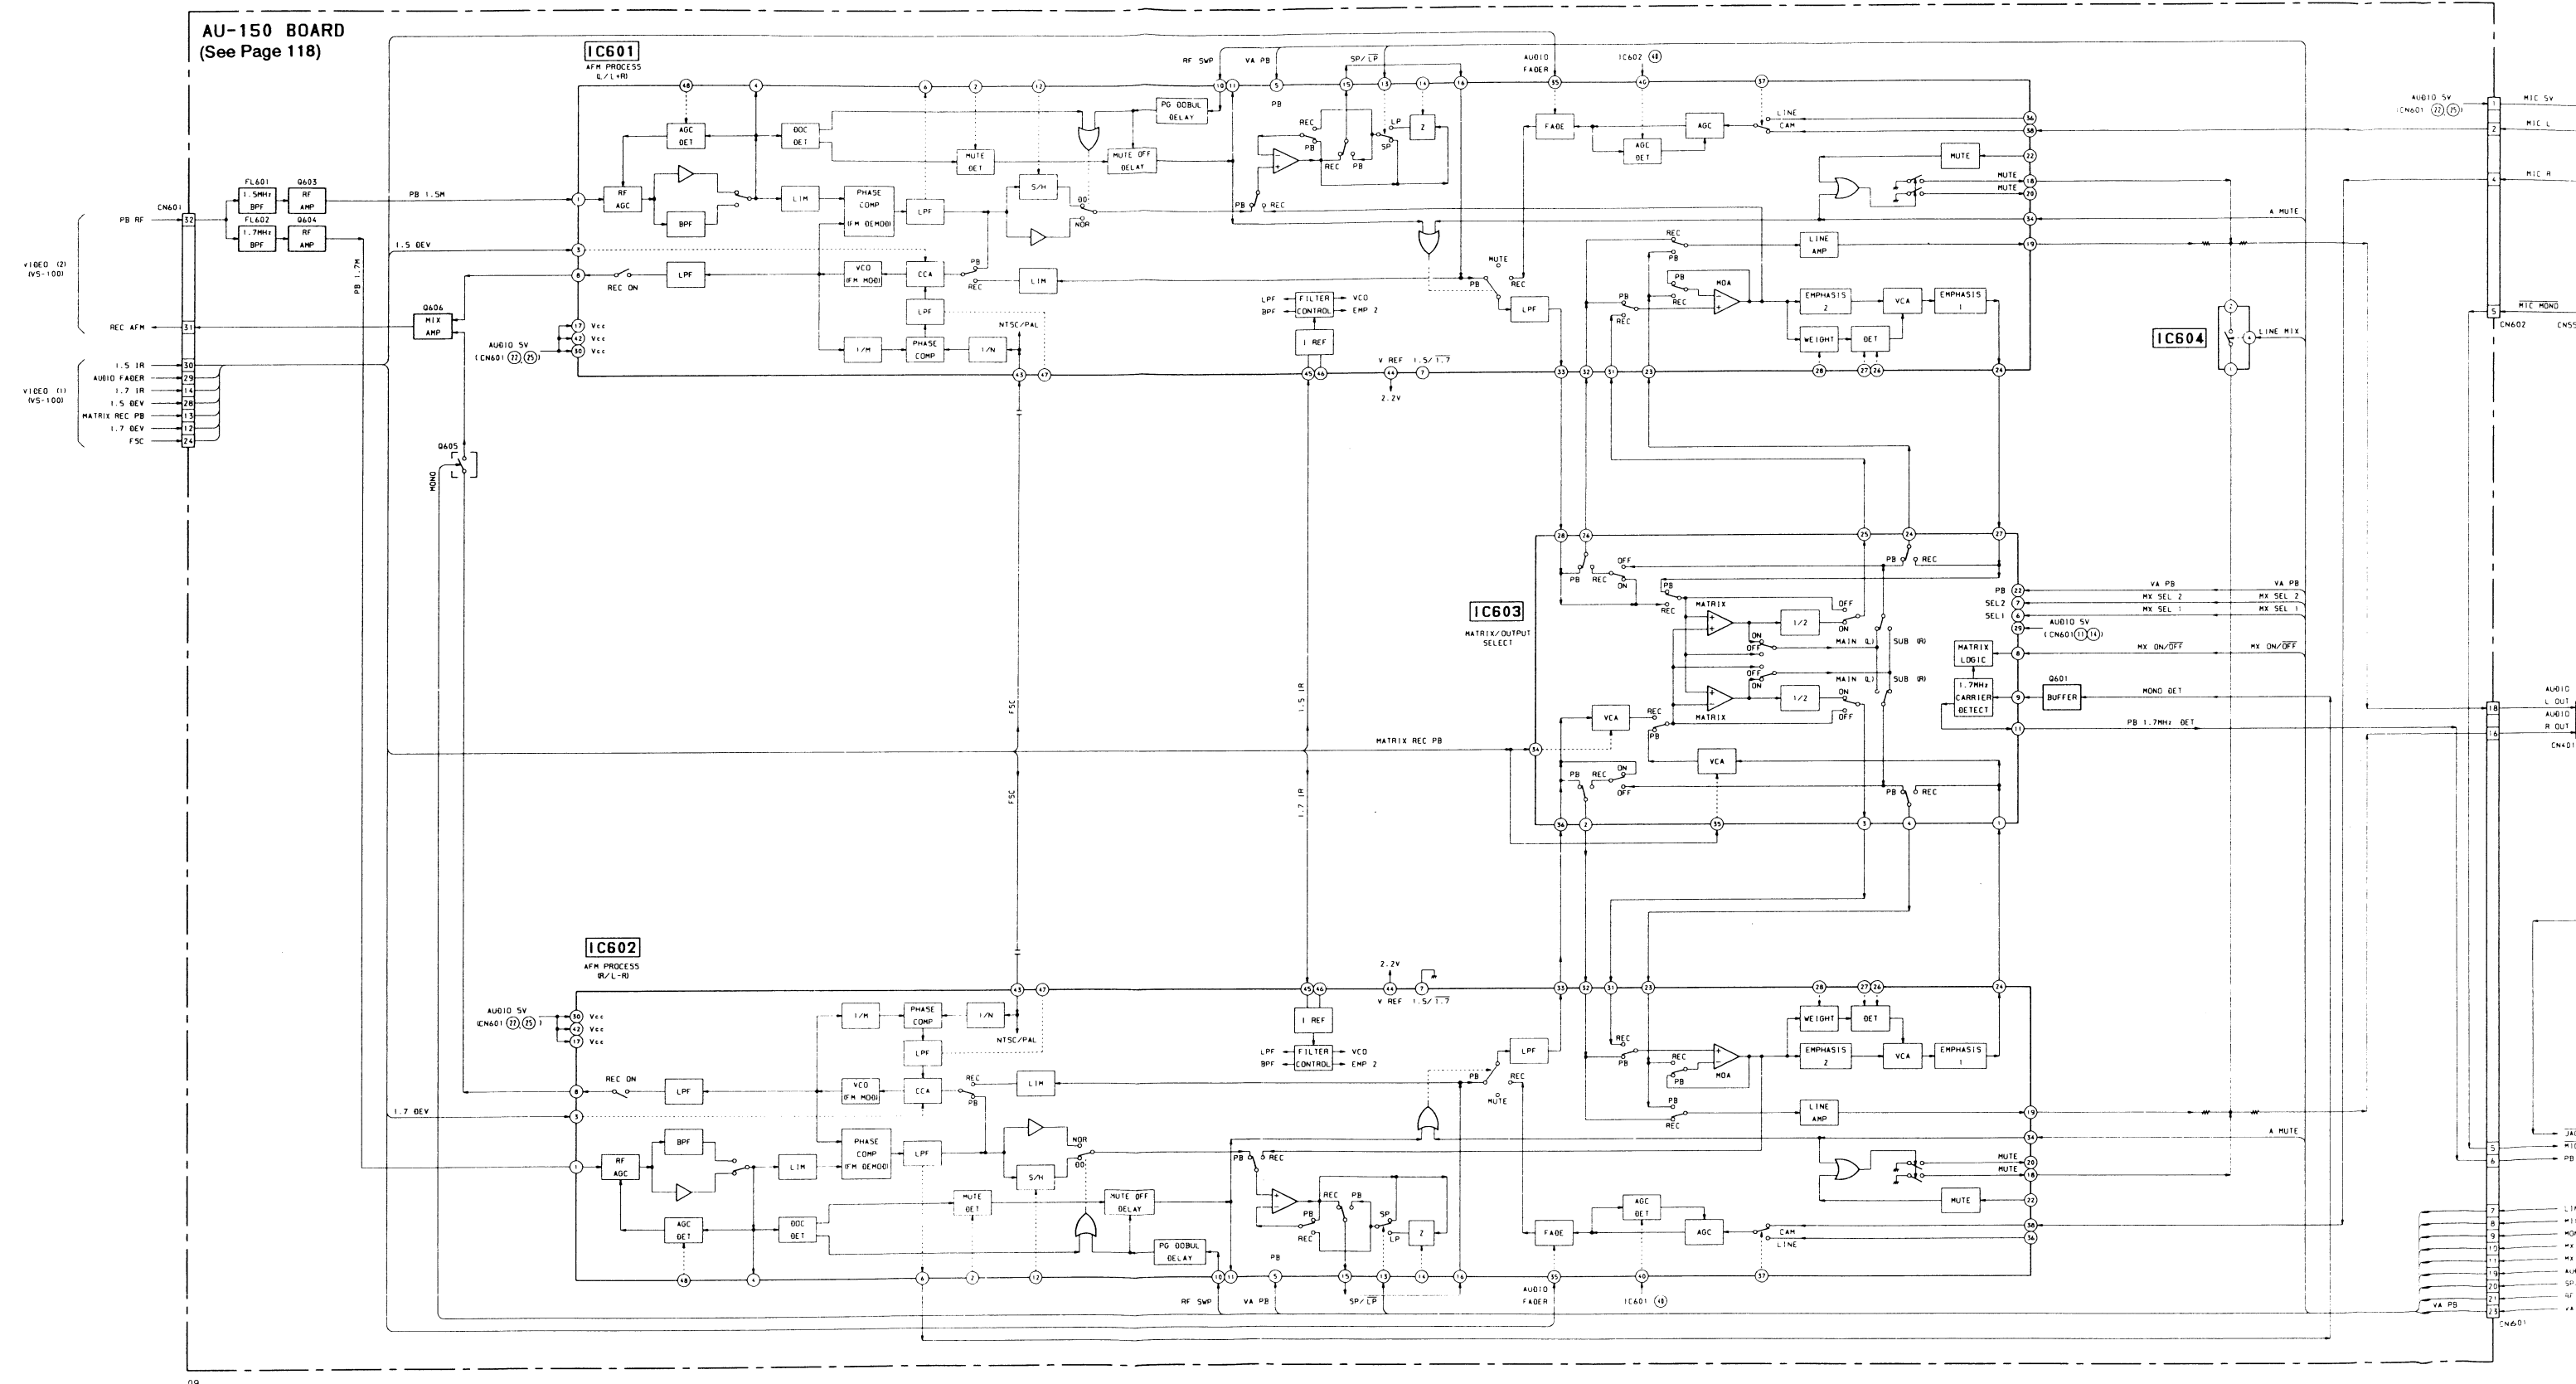

3-10. EVF BLOCK DIAGRAM

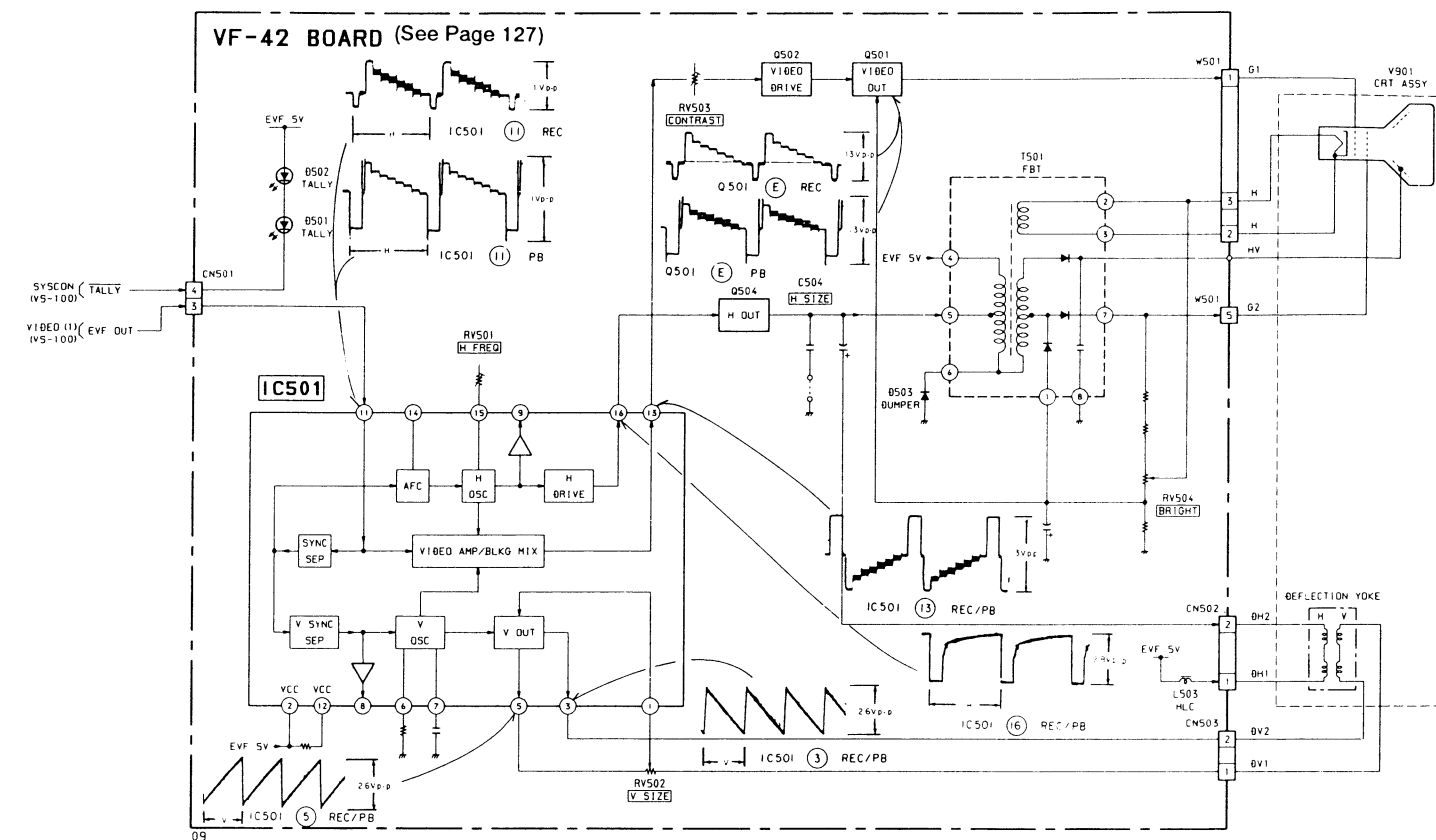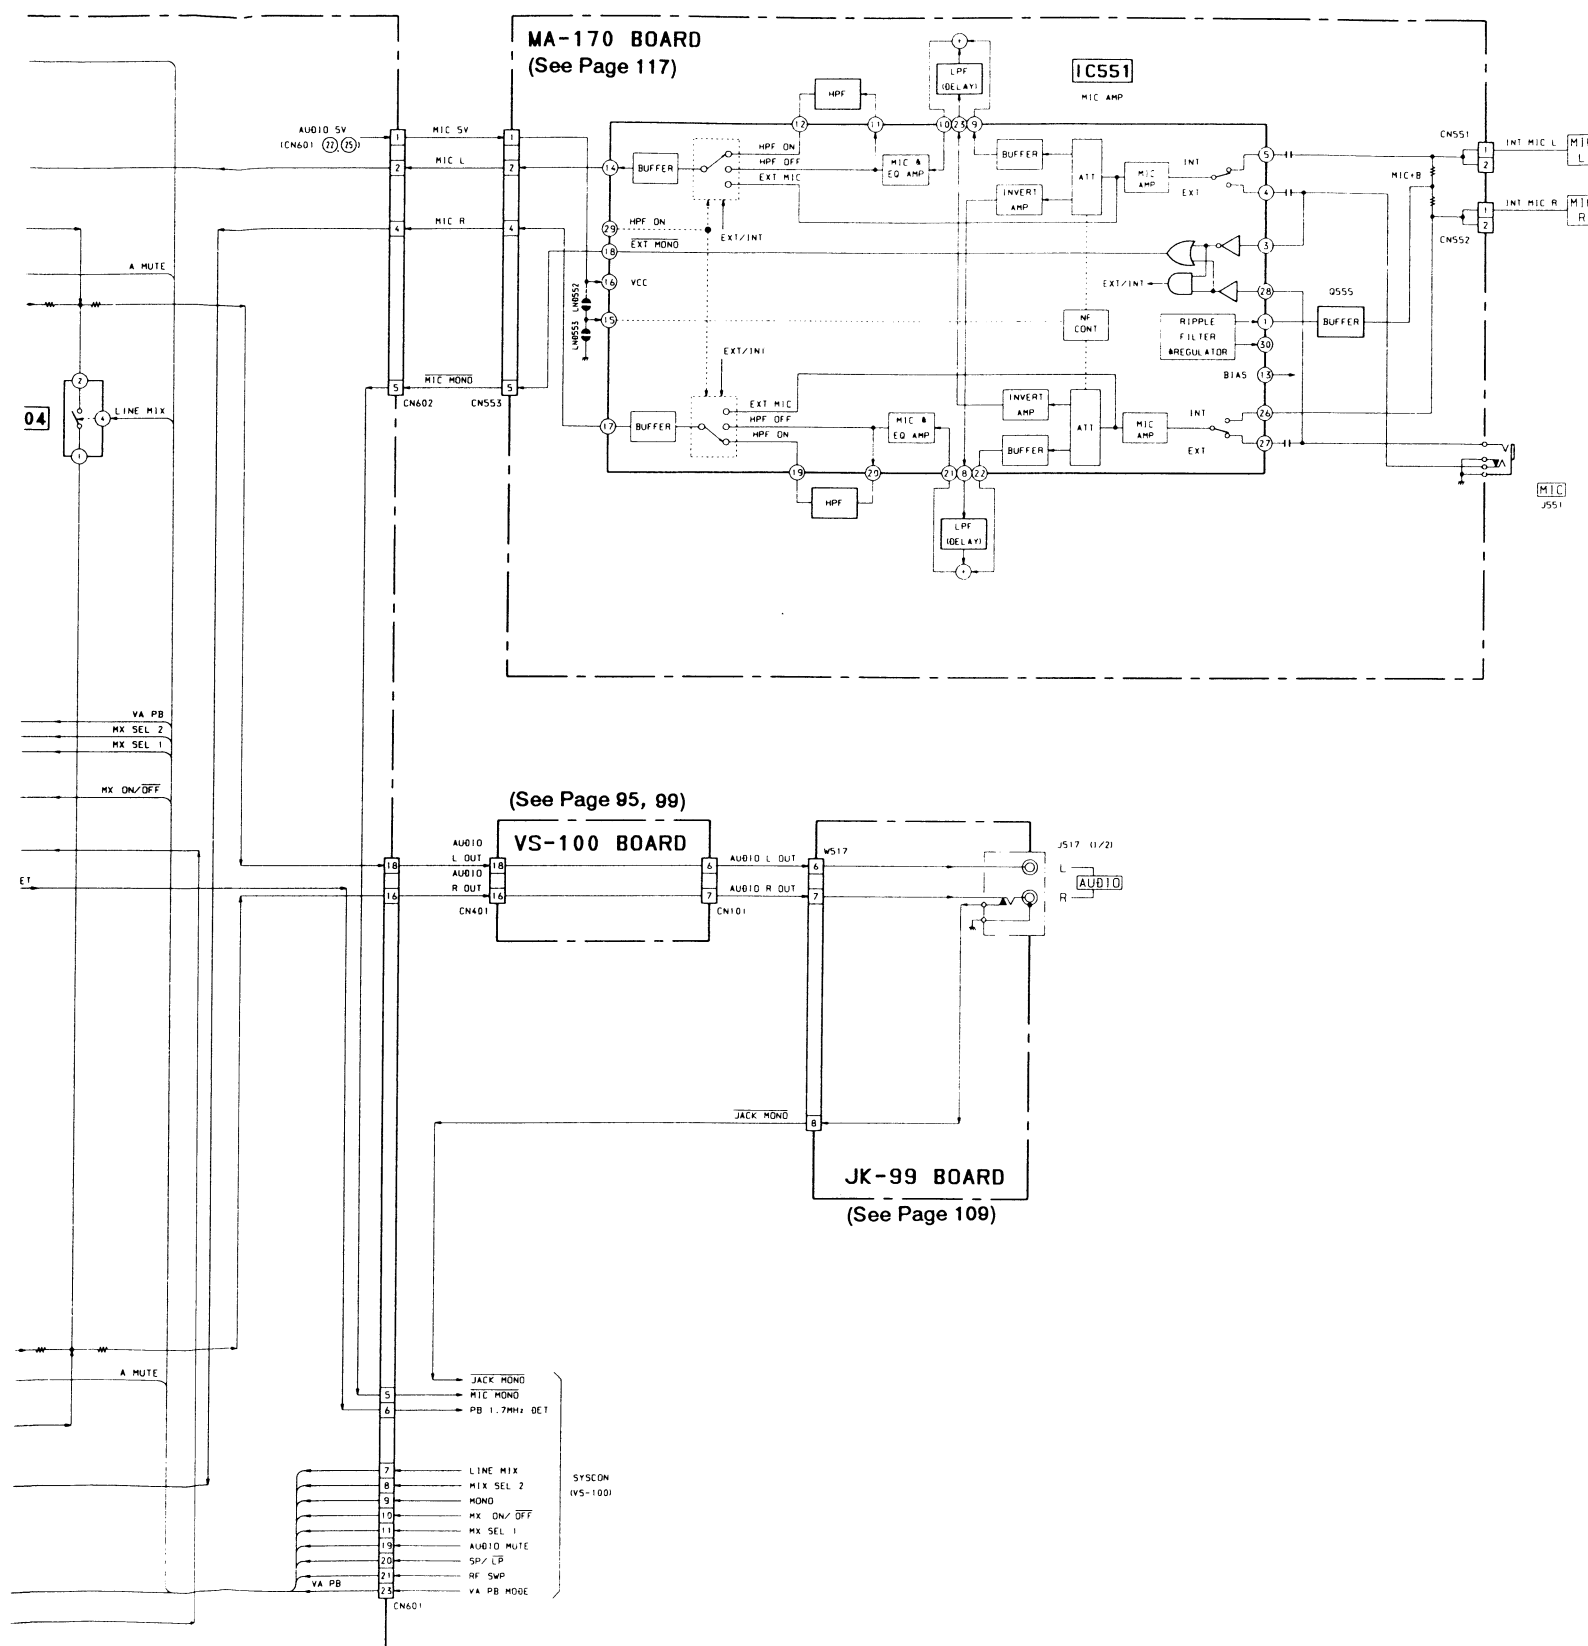

3-11. POWER BLOCK DIAGRAM

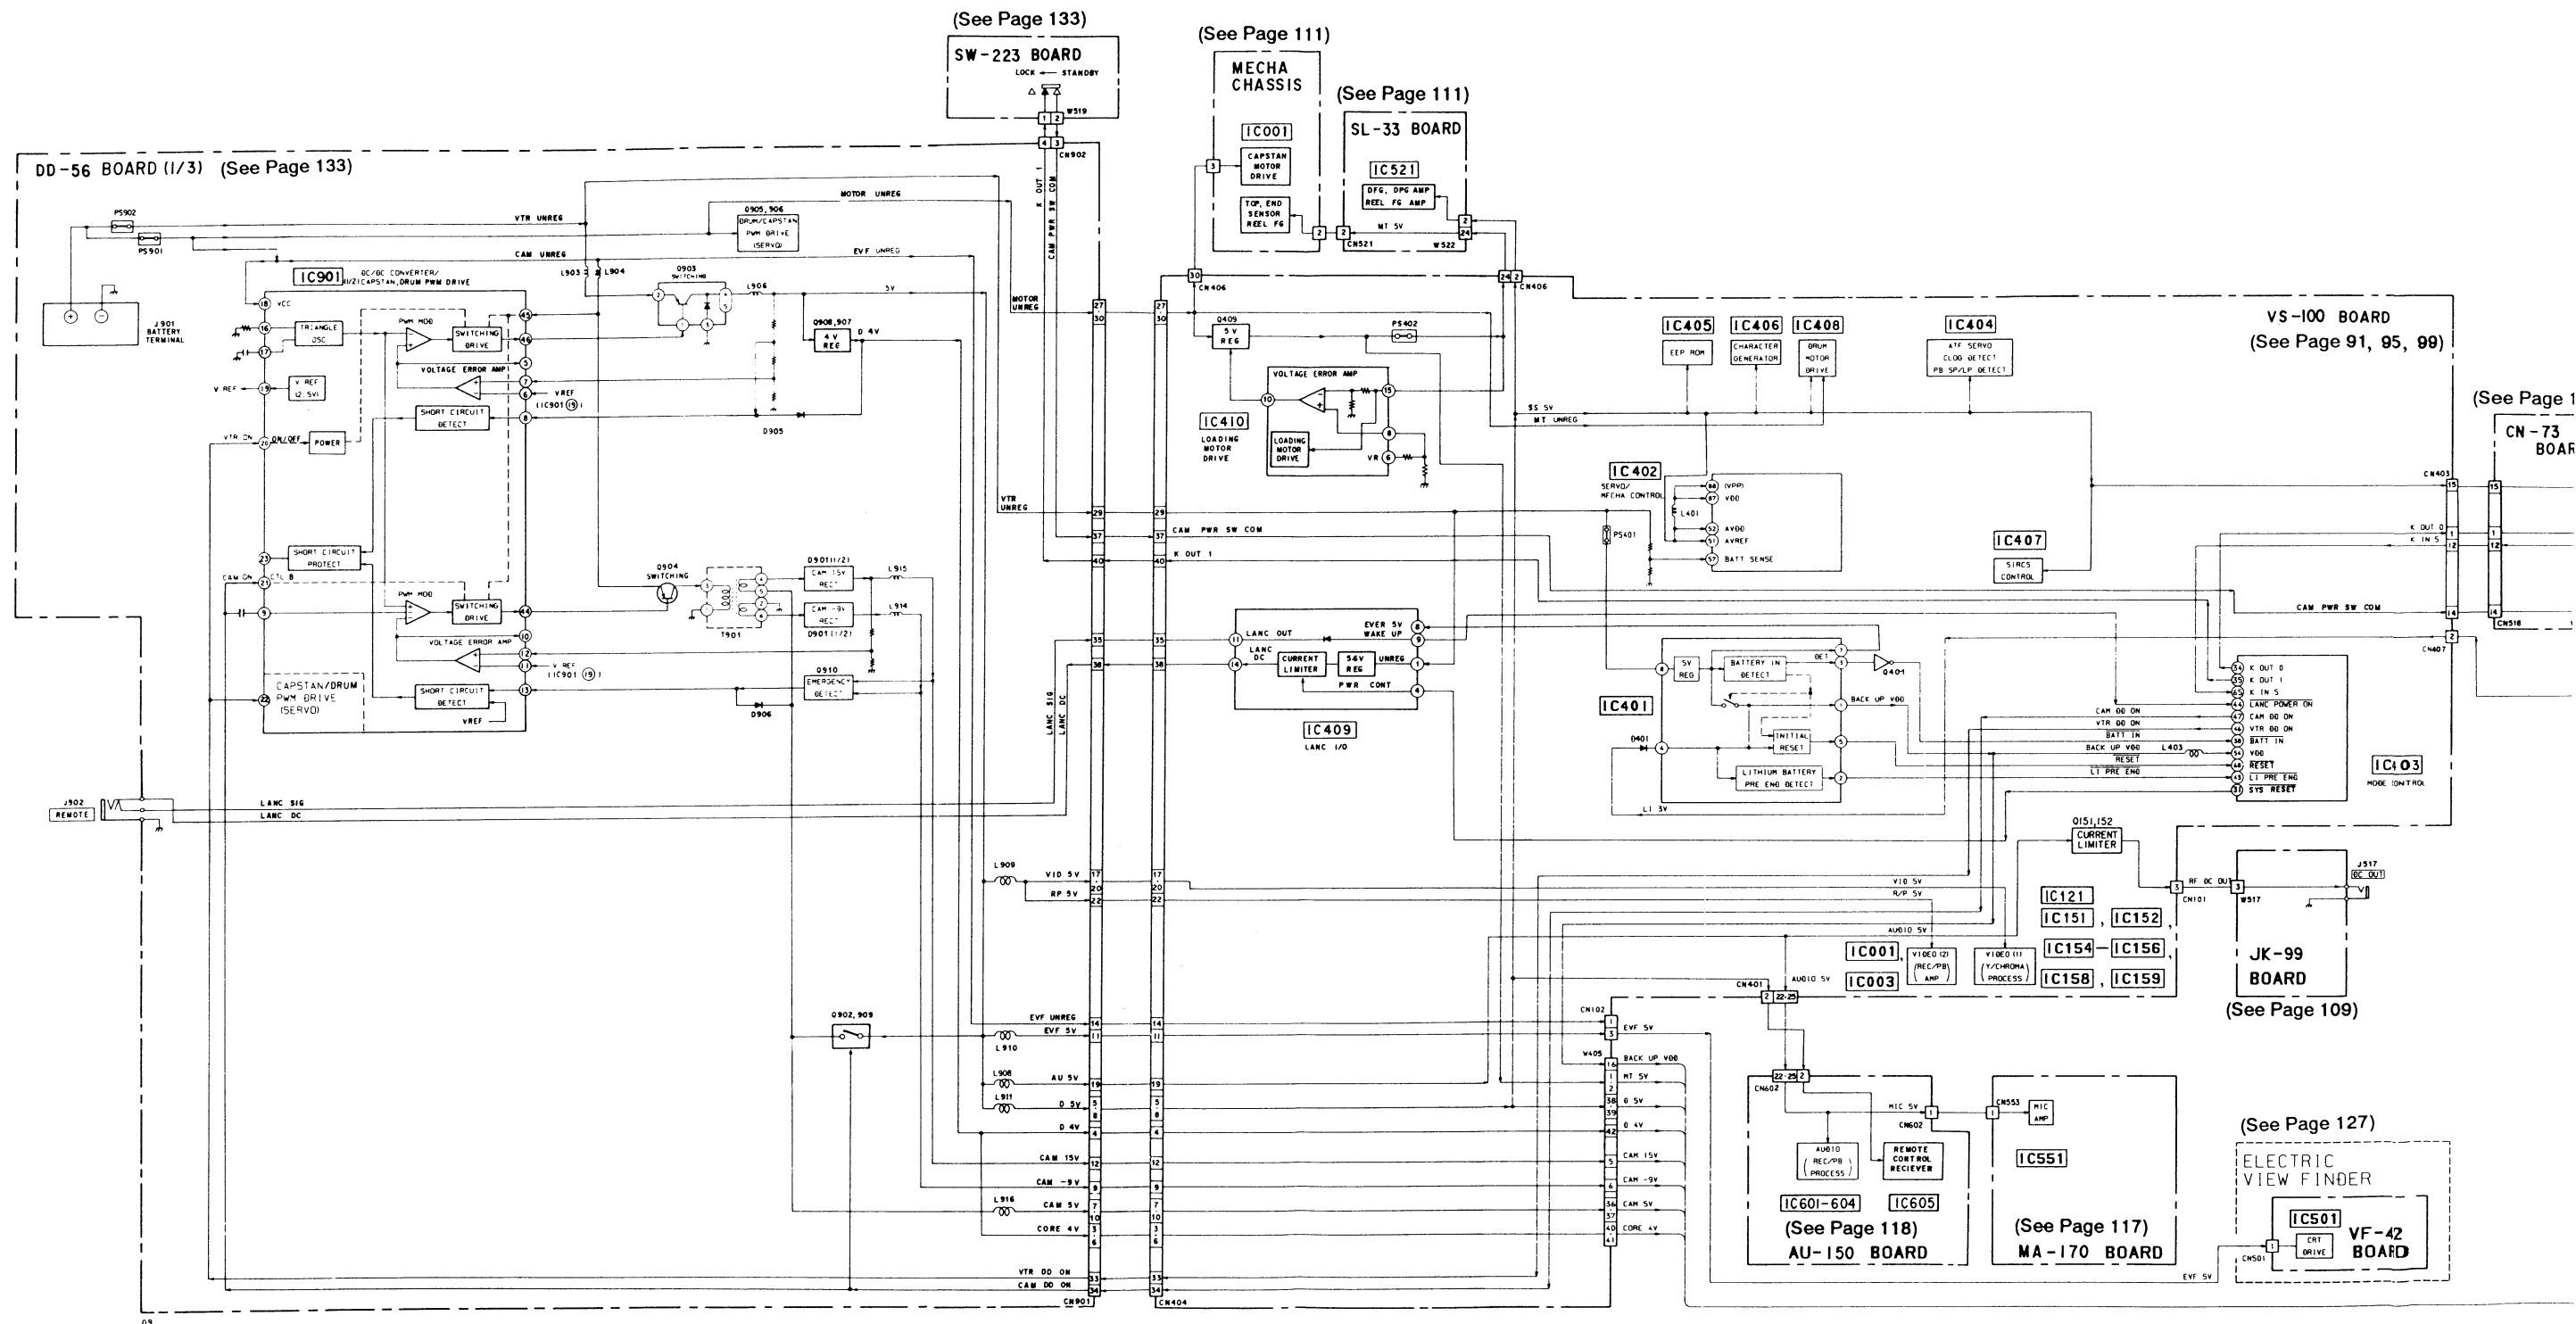

VK-32 BOARD

K OUT 1	1
K IN 5	2
CAM PWR SW COM	3
K OUT 4	4
K IN 4	5
K IN 3	6
N.C.	7
N.C.	8
N.C.	9
K IN 1	10
K IN 2	11
K OUT 2	12
CHASSIS GND	13

ED-37 BOARD

K OUT 1	1
K IN 5	2
CAM PWR SW COM	3
K OUT 4	4
K IN 4	5
K IN 3	6
N.C.	7
N.C.	8
N.C.	9
K IN 1	10
K IN 2	11
K OUT 2	12
CHASSIS GND	13

CF-34 BOARD

K OUT 0	1
K OUT 1	2
K OUT 2	3
K OUT 5	4
K IN 0	5
K IN 1	6
K IN 2	7
K IN 3	8
K IN 4	9
K IN 5	10
K IN 6	11
CAM PWR SW COM	12
CHASSIS GND	13

MF-214 BOARD

K OUT 0	1
K OUT 4	2
K IN 4	3
K IN 6	4
05V	5
FOCUS 1	6
FOCUS 2	7
REG GND	8

CD-106 BOARD

K OUT 0	1
K OUT 4	2
K IN 4	3
K IN 6	4
05V	5
FOCUS 1	6
FOCUS 2	7
REG GND	8

VF-42 BOARD

EVF 5V	1
EVF GND	2
EVF OUT	3
TALLY	4

JK-99 BOARD

VIDEO OUT	1
RFU BC OUT	2
L MONO	3
AUDIO OUT	4

MA-170 BOARD

MIC R GND	1
N.C.	2
INT MIC R	3
MIC L GND	4
N.C.	5
INT MIC L	6

LI-46 BOARD

LI GND	1
LI 3V	2

VS-100 BOARD

VIDEO GND	1
VIDEO OUT	2
RF BC OUT	3
RF BC GND	4
AUDIO GND	5
AUDIO L OUT	6
AUDIO R OUT	7
JACK MONO	8

SL-33 BOARD

BEW SENS	1
SS SV	2
REEL FG	3
REEL FG	4
END LED	5

AU-150 BOARD

UNREG GND	1
ZOOM FT	2
ZOOM FT	3
ZOOM FV	4
ZOOM FV	5
NON ZIF	6

FP-588


1CH A (G)	13
1CH A (D)	12
1CH A (Y)	11
2CH A (G)	10
2CH A (Y)	9
2CH A (D)	8
*CH (G)	7
*CH (D)	6
*CH (Y)	5
FE (G)	4
FE (Y)	3
FE (D)	2
GND	1

LM-40 BOARD

LOAD	1
LOAD	2
UNLOAD	3
UNLOAD	4

FP-442 BOARD (FLEXIBLE)

M SW 2	1
M SW 1	2
M SW 0	3
BEW SENS	4
SS GND	5
CC DOWN	6

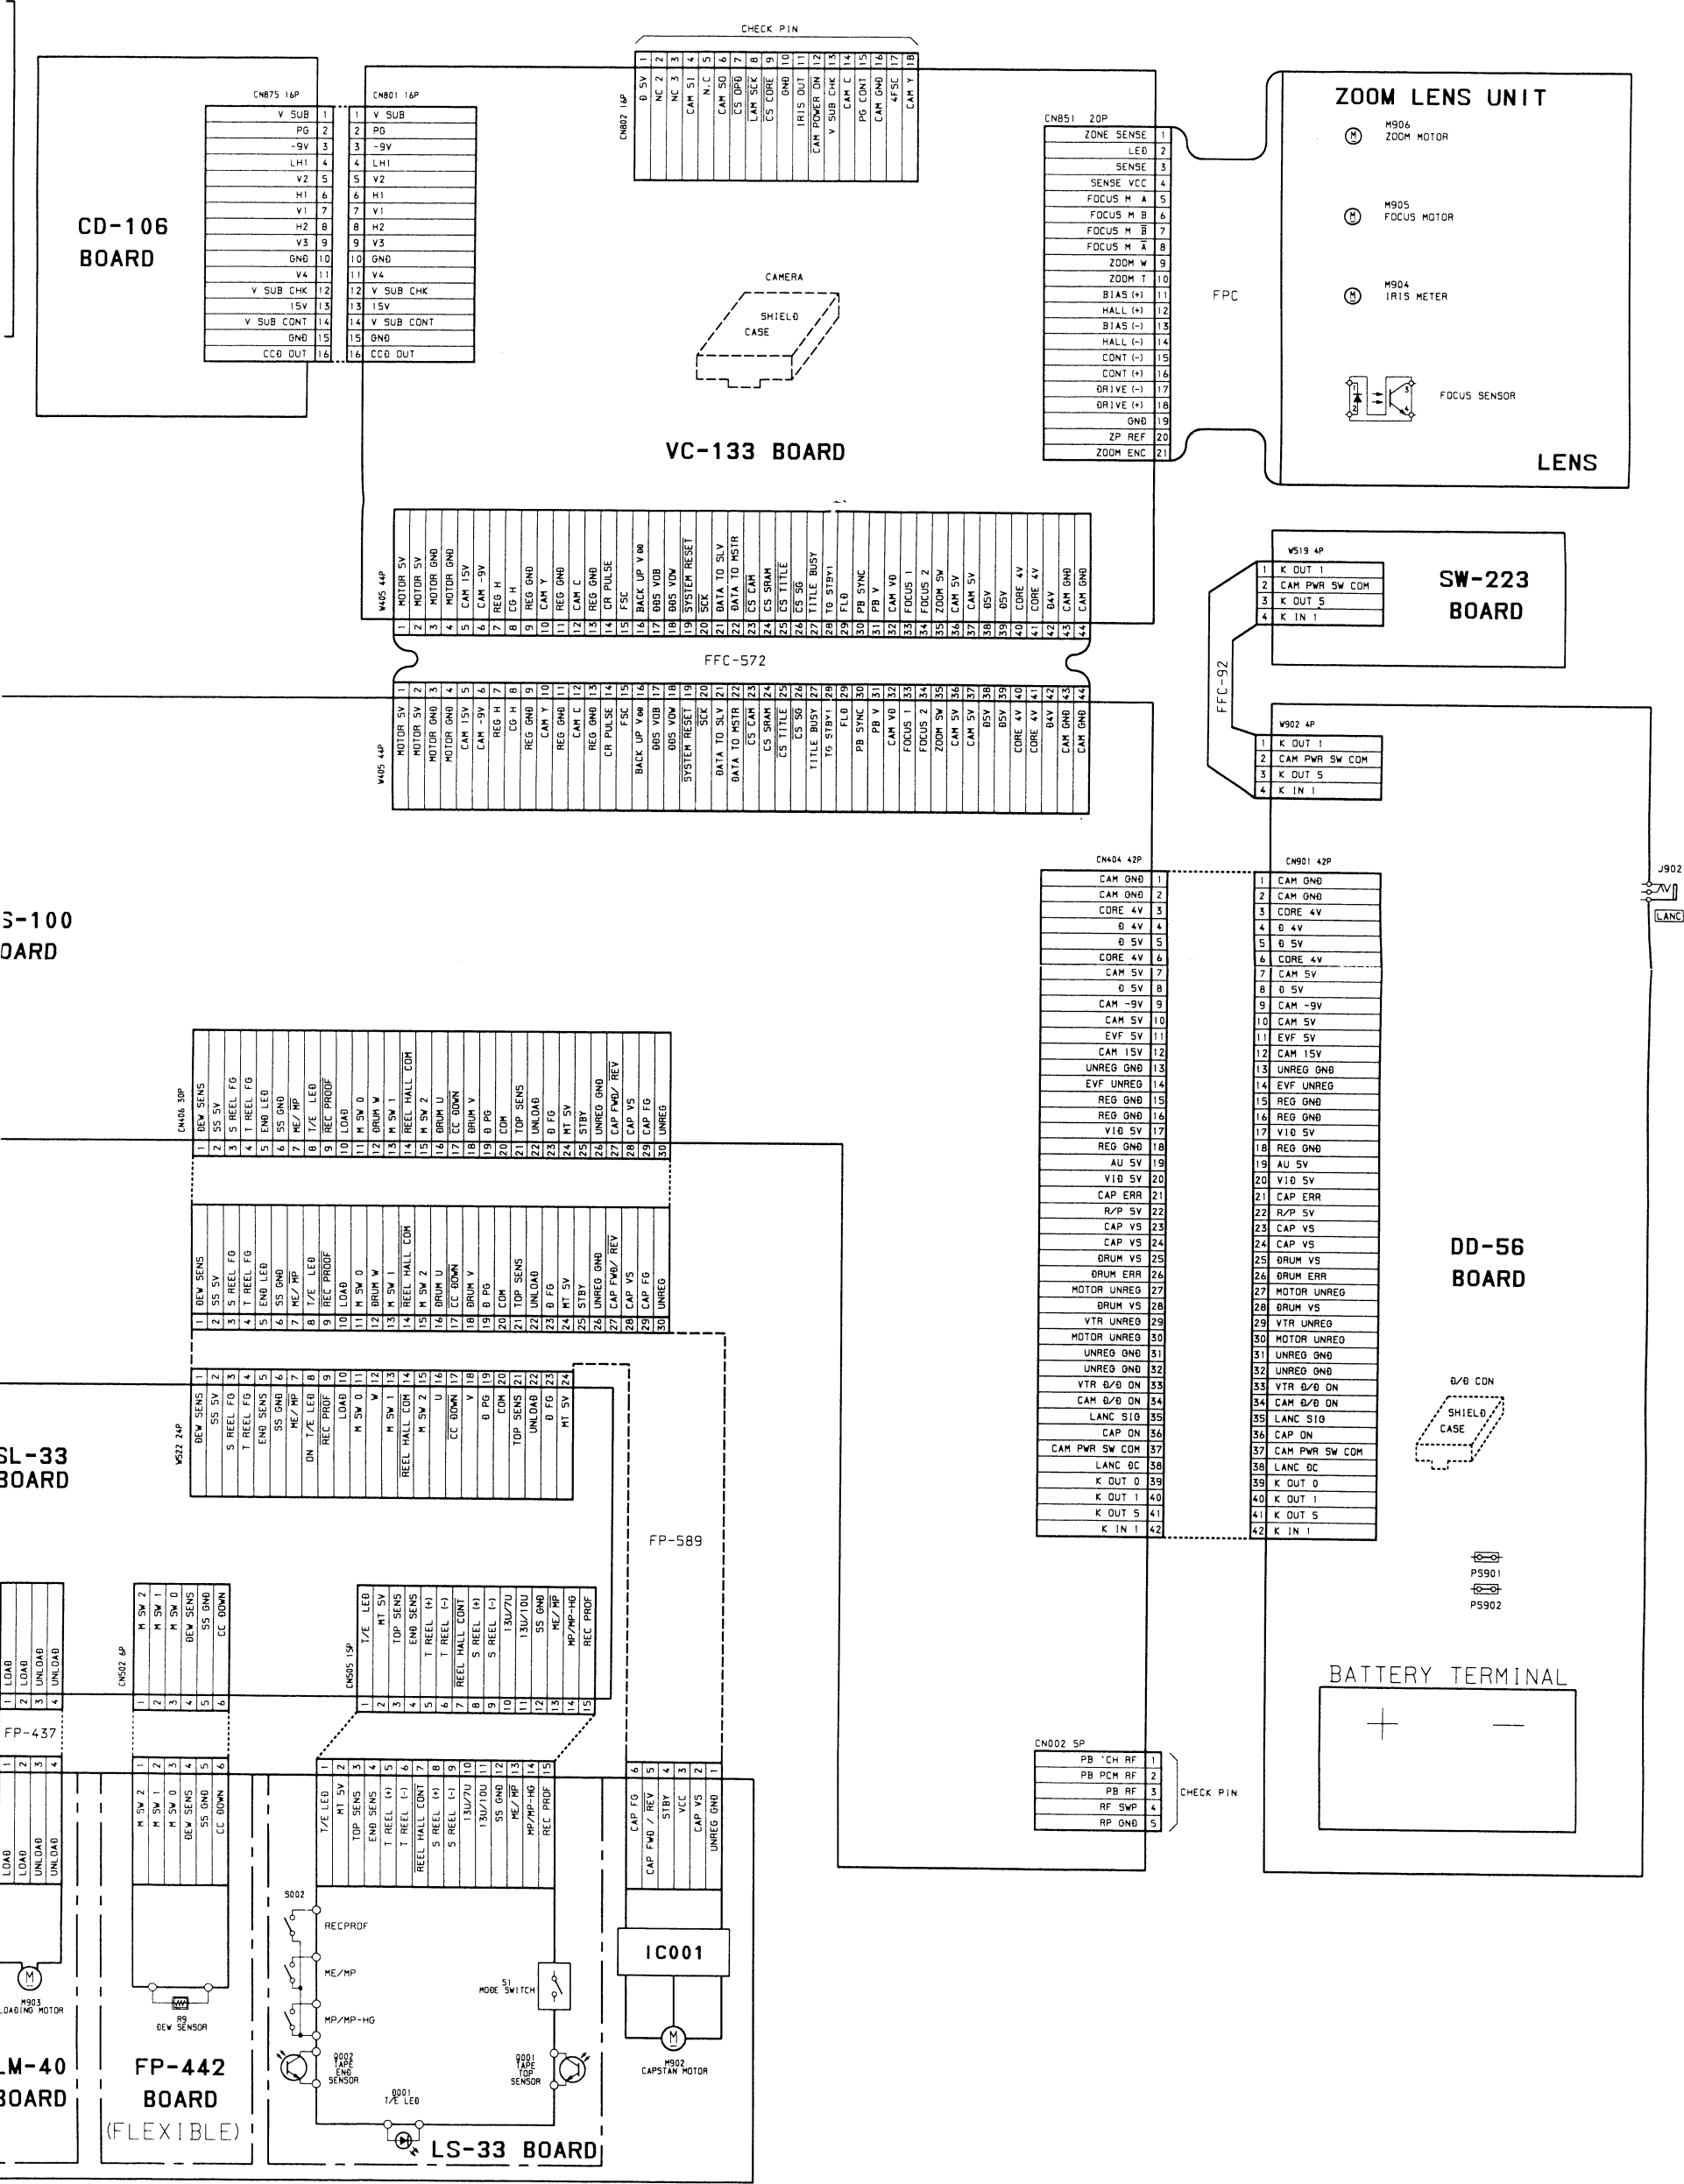

4-2. PRINTED WIRING BOARDS AND SCHEMATIC DIAGRAMS

THIS NOTE IS COMMON FOR PRINTED WIRING BOARDS
AND SCHEMATIC DIAGRAMS.

(In addition to this , the necessary note is printed
in each block.)

- For printed wiring boards.
-  : Pattern from the side which enables seeing.
(The other layers' patterns are not indicated.)
- Circled numbers refer to waveforms.
- (B) or (F), etc. of capacitors indicate the temperature characteristics.
- Through hole is omitted.

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the parts face are indicated.

- For schematic diagrams.
- Caution when replacing chip parts.
New parts must be attached after removal of chip.
Be careful not to heat the minuts side of tantalum capacitor, because it is damaged by the heat.
- All resistors are in ohms.
Chip resistor are 1/10W unless otherwise noted.
k Ω : 1000 Ω , M Ω : 1000k Ω .
- All capacitors are in μ F unless otherwise noted. pF: μ μ F.
50V or less are not indicated except for electrolytics and tantalums.
- All variable and adjustable resistors have characteristic curve B, unless otherwise noted.
-  : nonflammable resistor.
-  : fusible resistor.
-  : panel designation.
- Δ : internal component.

-  : adjustment for repair.
-  : B+ Line.
-  : B- Line.
-  : IN/OUT direction of (+, -) B
- Circled numbers refer to waveforms.

Note:


The components identi- fied by mark
mark Δ are critical for safty.
Replace only with part number specif

When indicating parts by refer-
ence number, please include the
board name.


CD-106 (CCD IMAGER) PRINTED WIRING BOARD

— Ref. No. CD-106 BOARD: 1000 series —


CD-106 BOARD (COMPONENT SIDE)

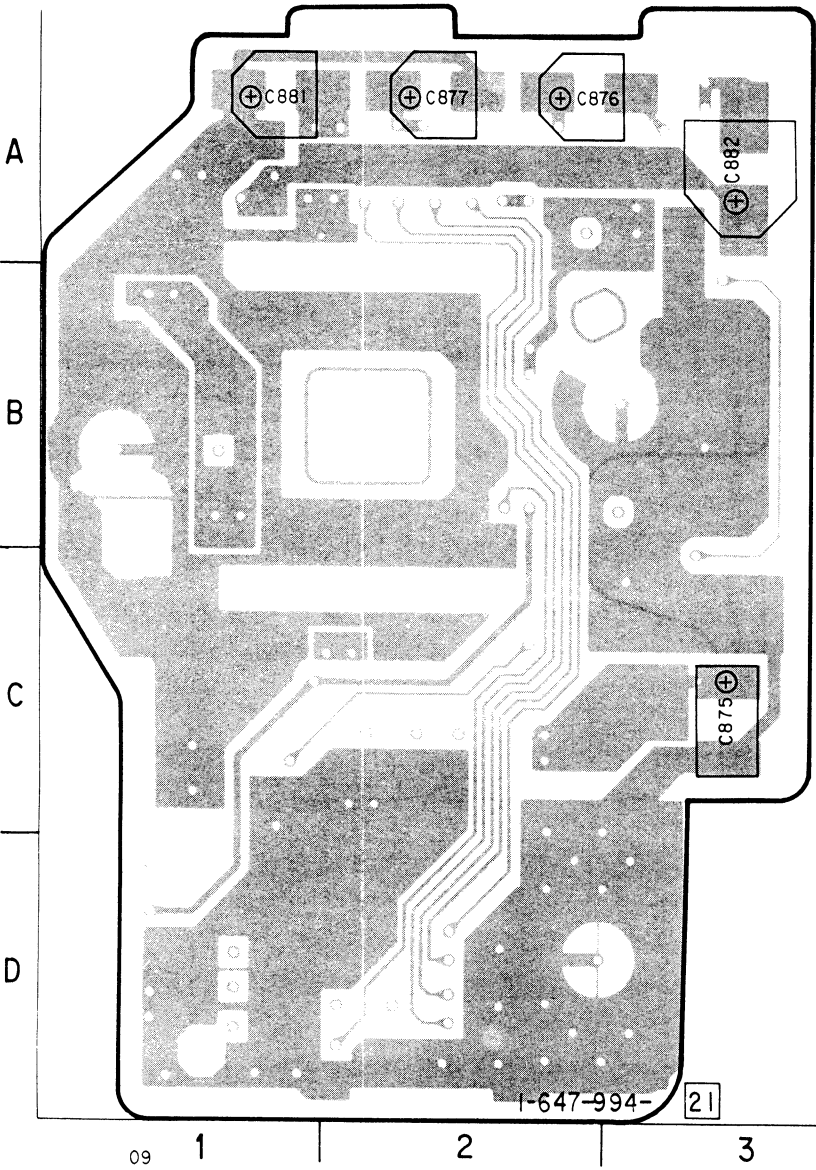

CD-106 BOARD (CONDUCTOR SIDE)

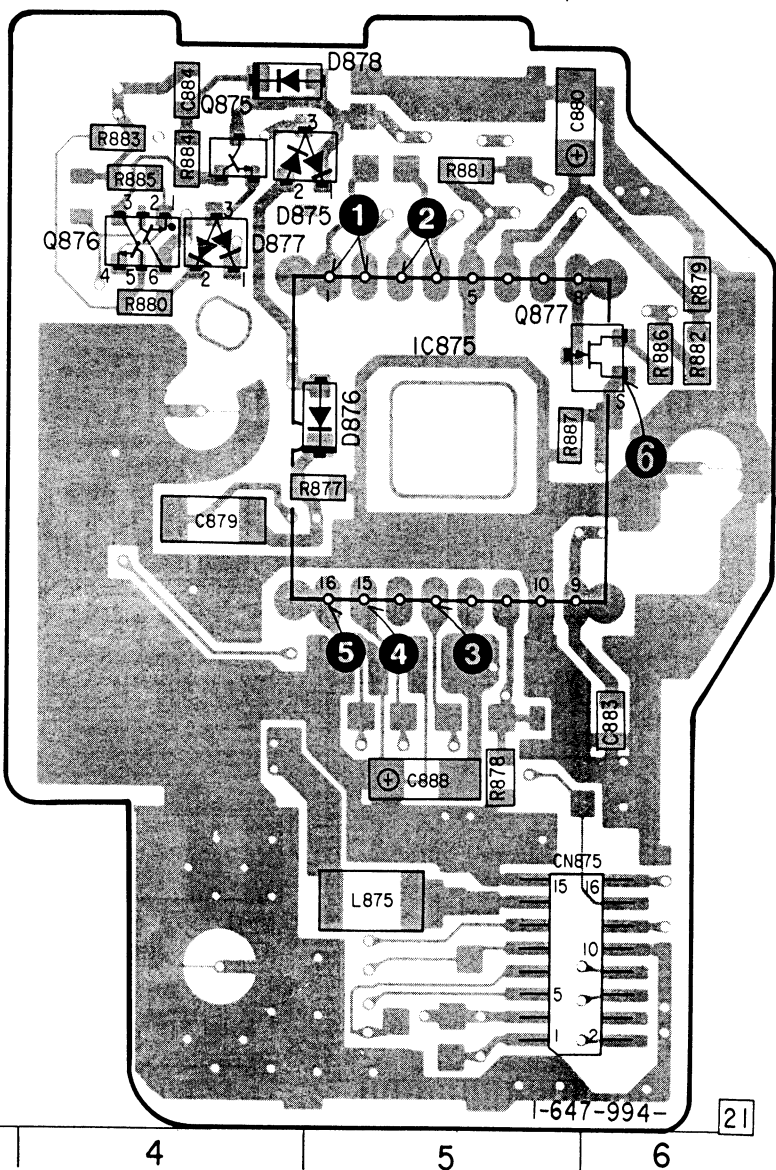


CD-106BOARD

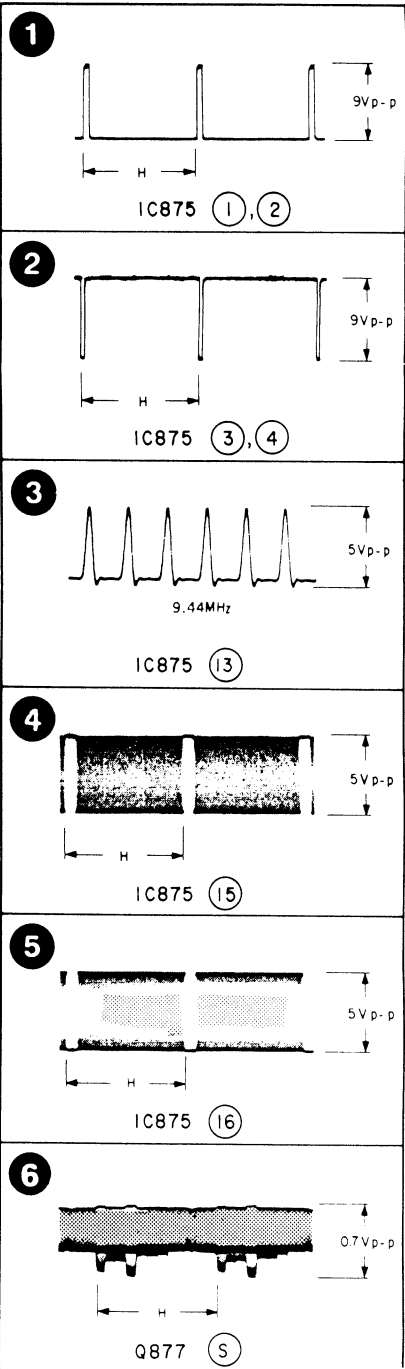

- For printed wiring boards.
- CD-106 board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- $\bullet$: Through hole is omitted.

Caution:

Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: Parts on the parts face side seen from the parts face are indicated.

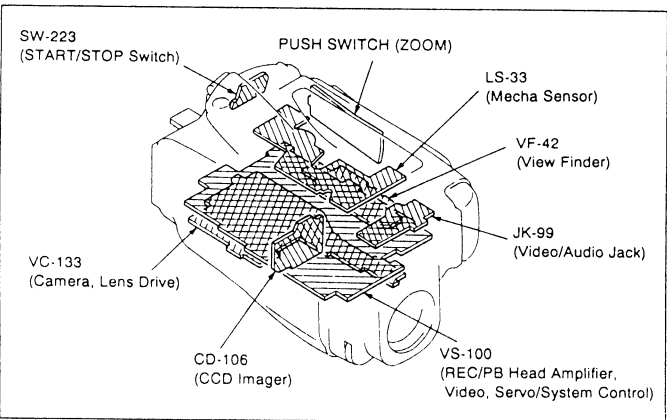

• Measuring conditions voltage value and waveform.
(CAMERA REC mode)

- Voltages are dc between ground and measurement points. Readings are taken with a digital multimeter (DC 10MΩ).
- Voltage variations may be noted due to normal production tolerances.

2. Adjust the distance so that the output waveform of Fig. a and the Fig. b can be obtain.

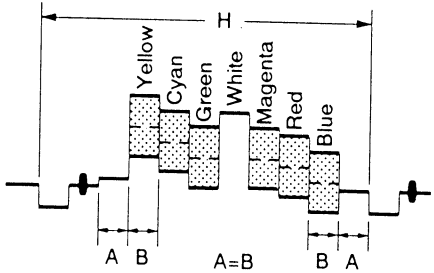


Fig. a (Video output terminal output waveform)

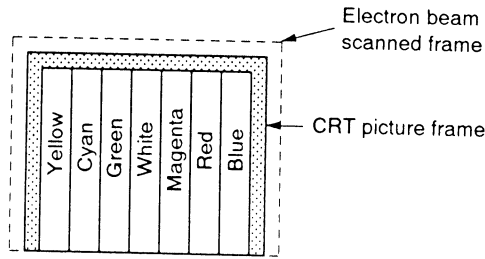



Fig. b (Picture on monitor TV)

(REC/PB mode)


- Voltages are dc between ground and measurement points.
- Readings are taken with a color-bar signal input.
- Readings are taken with a digital multimeter (DC10MΩ).
- Voltage variations may be noted due to normal production tolerances.

Note: Refer to "10-1-3. How to set the REC mode" in VIDEO SECTION ADJUSTMENTS.

1. Connection

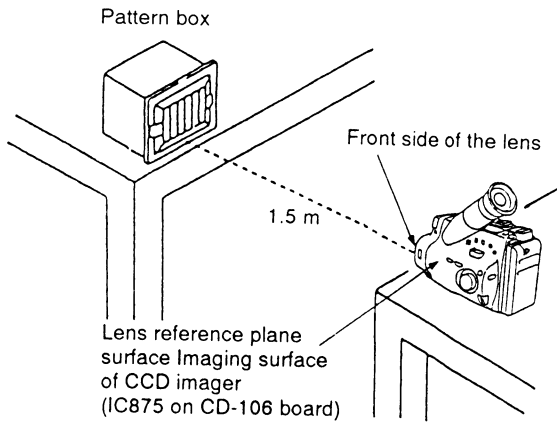

CD-106 (CCD IMAGER) SCHEMATIC DIAGRAM

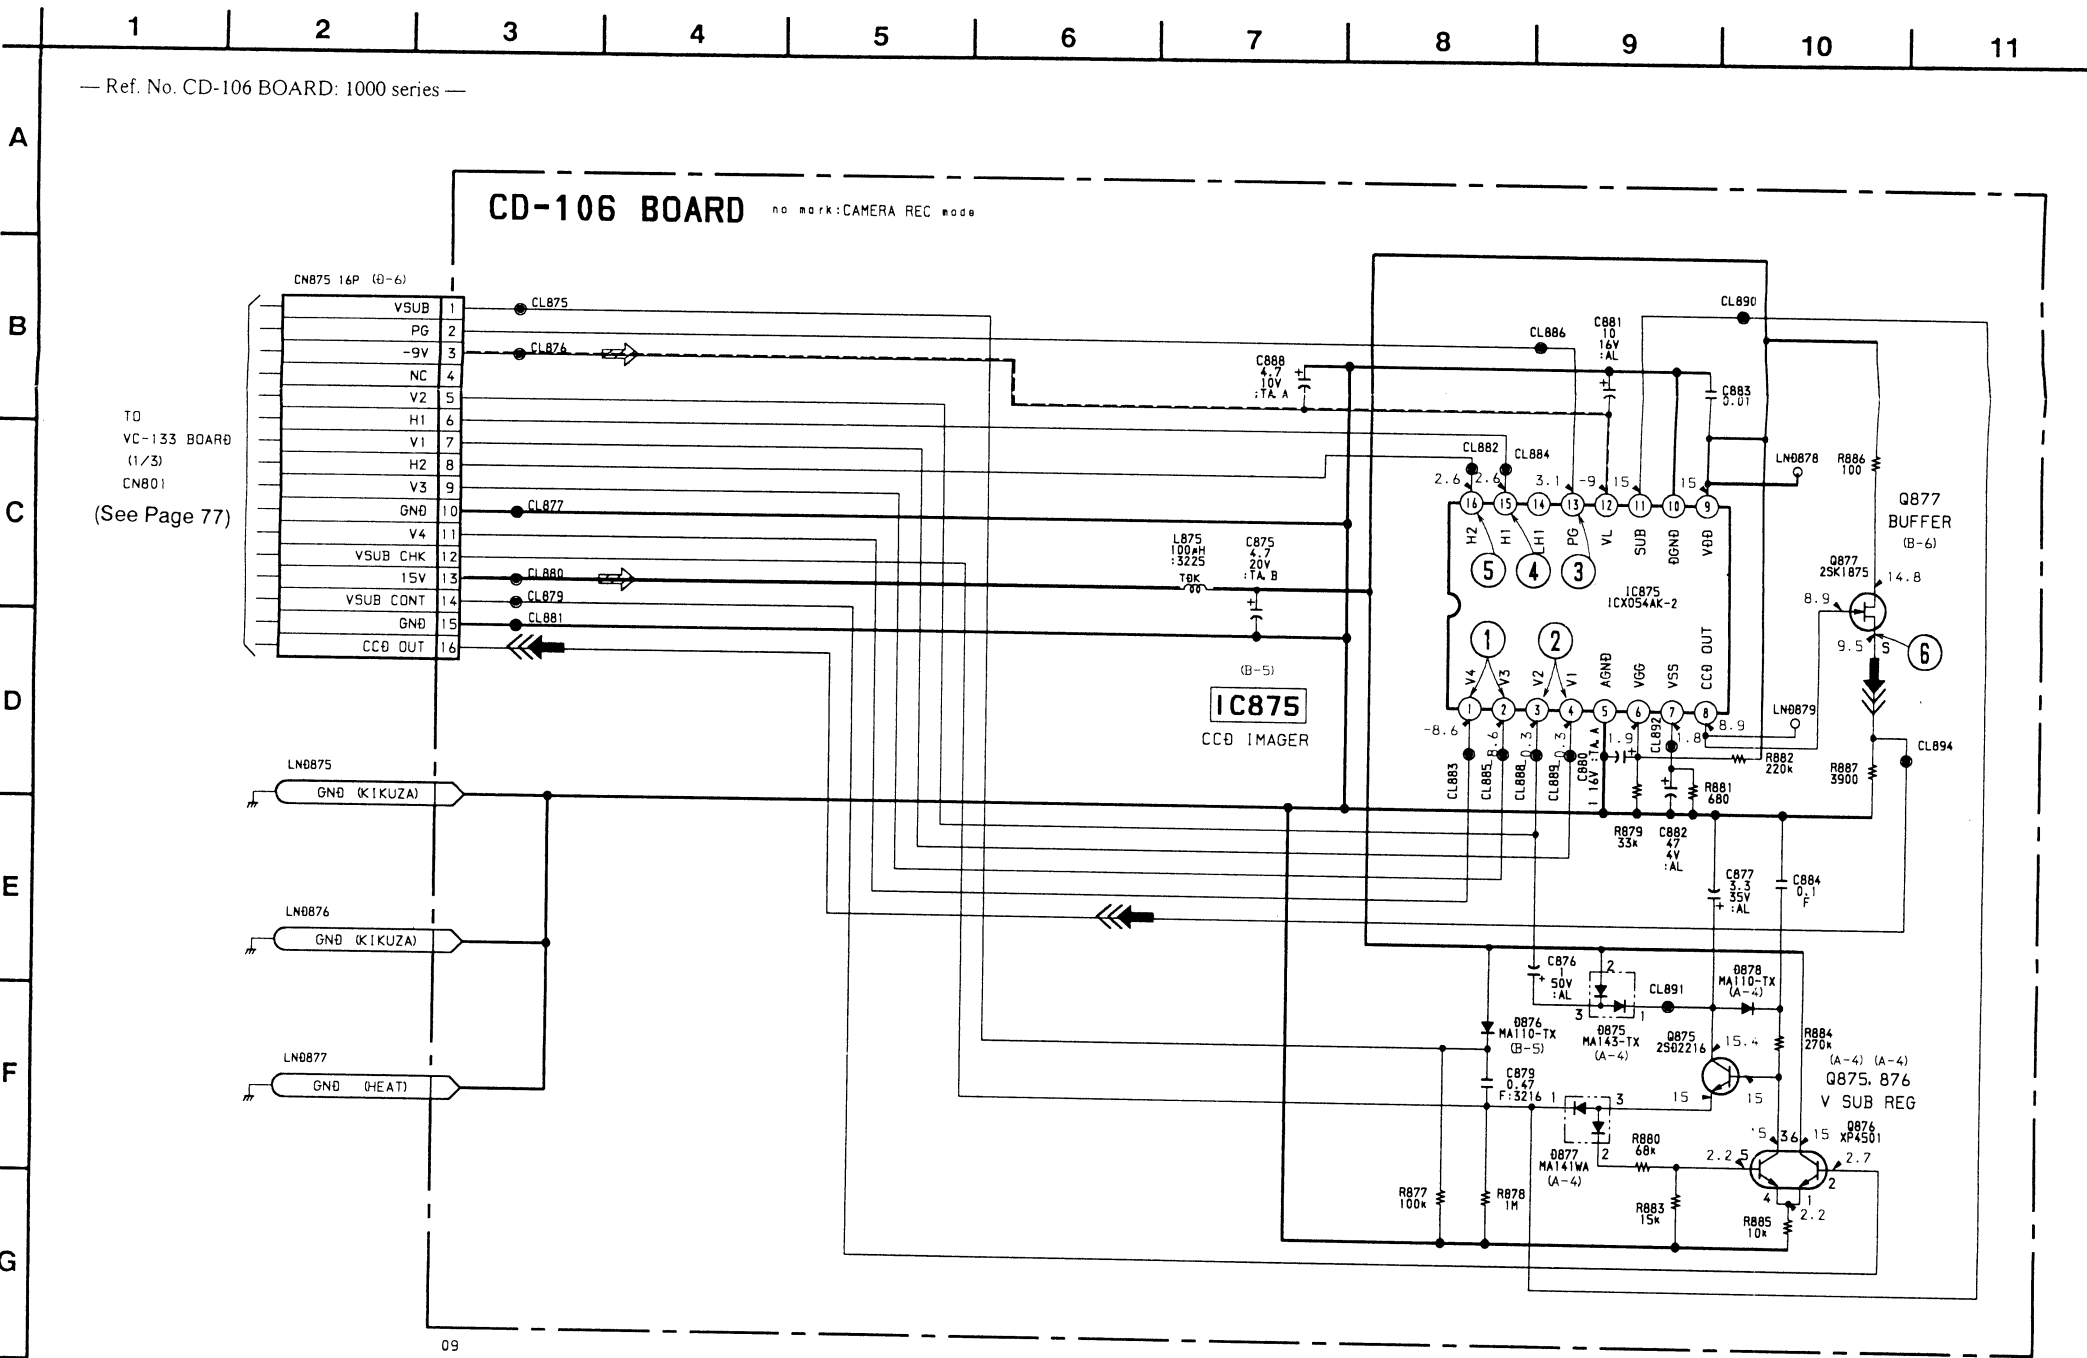

• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC			→→→
PB			




Note on the CCD Imager replacement



- Some of this units require the correction data by the CCD imager (IC875 on CD-106 board), some do not. The correction data is input in F page and addresses 1D to 2C of the camera micro processor (IC709 on VC-133 board), and also written on the CCD data label put on the shield case (upper) of the DD-56 board. The correction data is not required for the CCD imager supplied for repair. Therefore, when replacing the CCD imager to which the CCD data label is put, remove the CCD data label and input 00 to F page and addresses 1D to 2C of the camera micro processor. Refer to the camera adjustment for input method.

- The CCD imager is not mounted for the already mounted CD-106 board supplied as the repair parts. When replacing the CD-106 board, remove the CCD imager from the old board and install on the new board.
- Perform all adjustments of the camera block when the CCD imager has been replaced.
- Handle the CCD imager with attention such as MOS IC as it may be broken by static electricity in the structure. Also, prevent the receiving light section from dust attached and strong light.

- For printed wiring boards.
- VC-133 board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side:	Parts on the pattern face side seen from (Conductor Side) the pattern face are indicated.
Parts face side:	Parts on the parts face side seen from the (Component side) parts face are indicated.

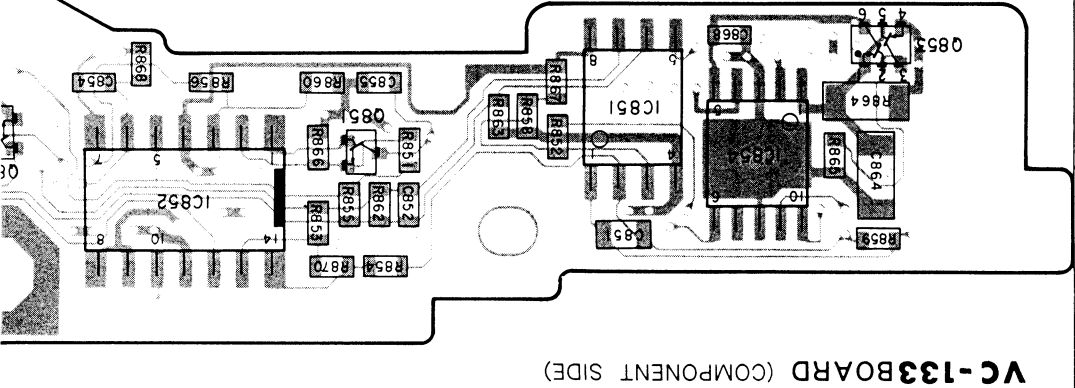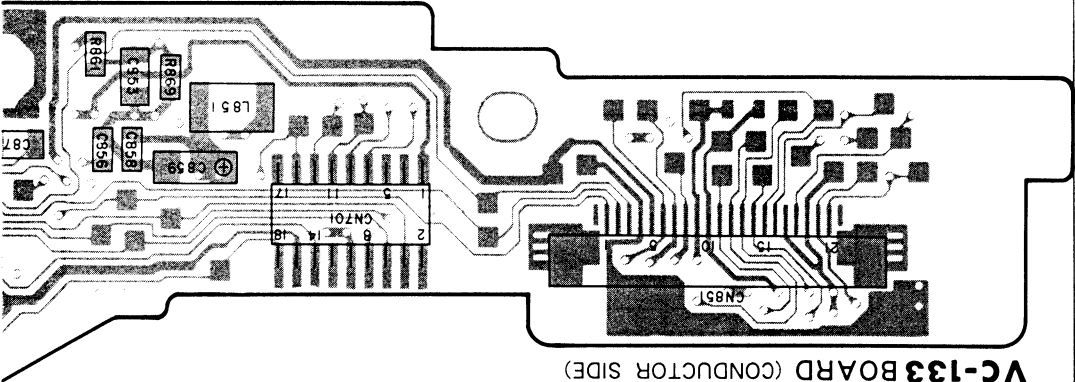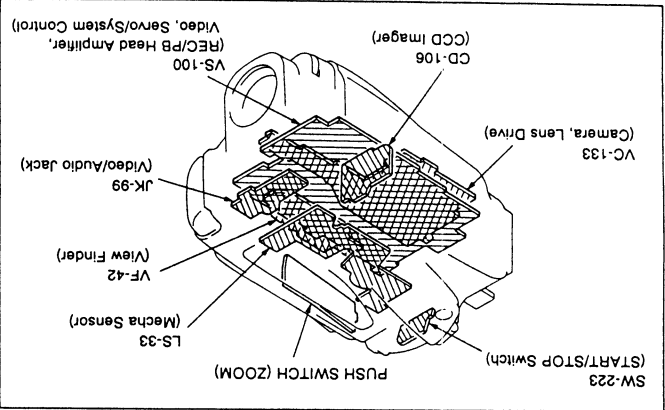

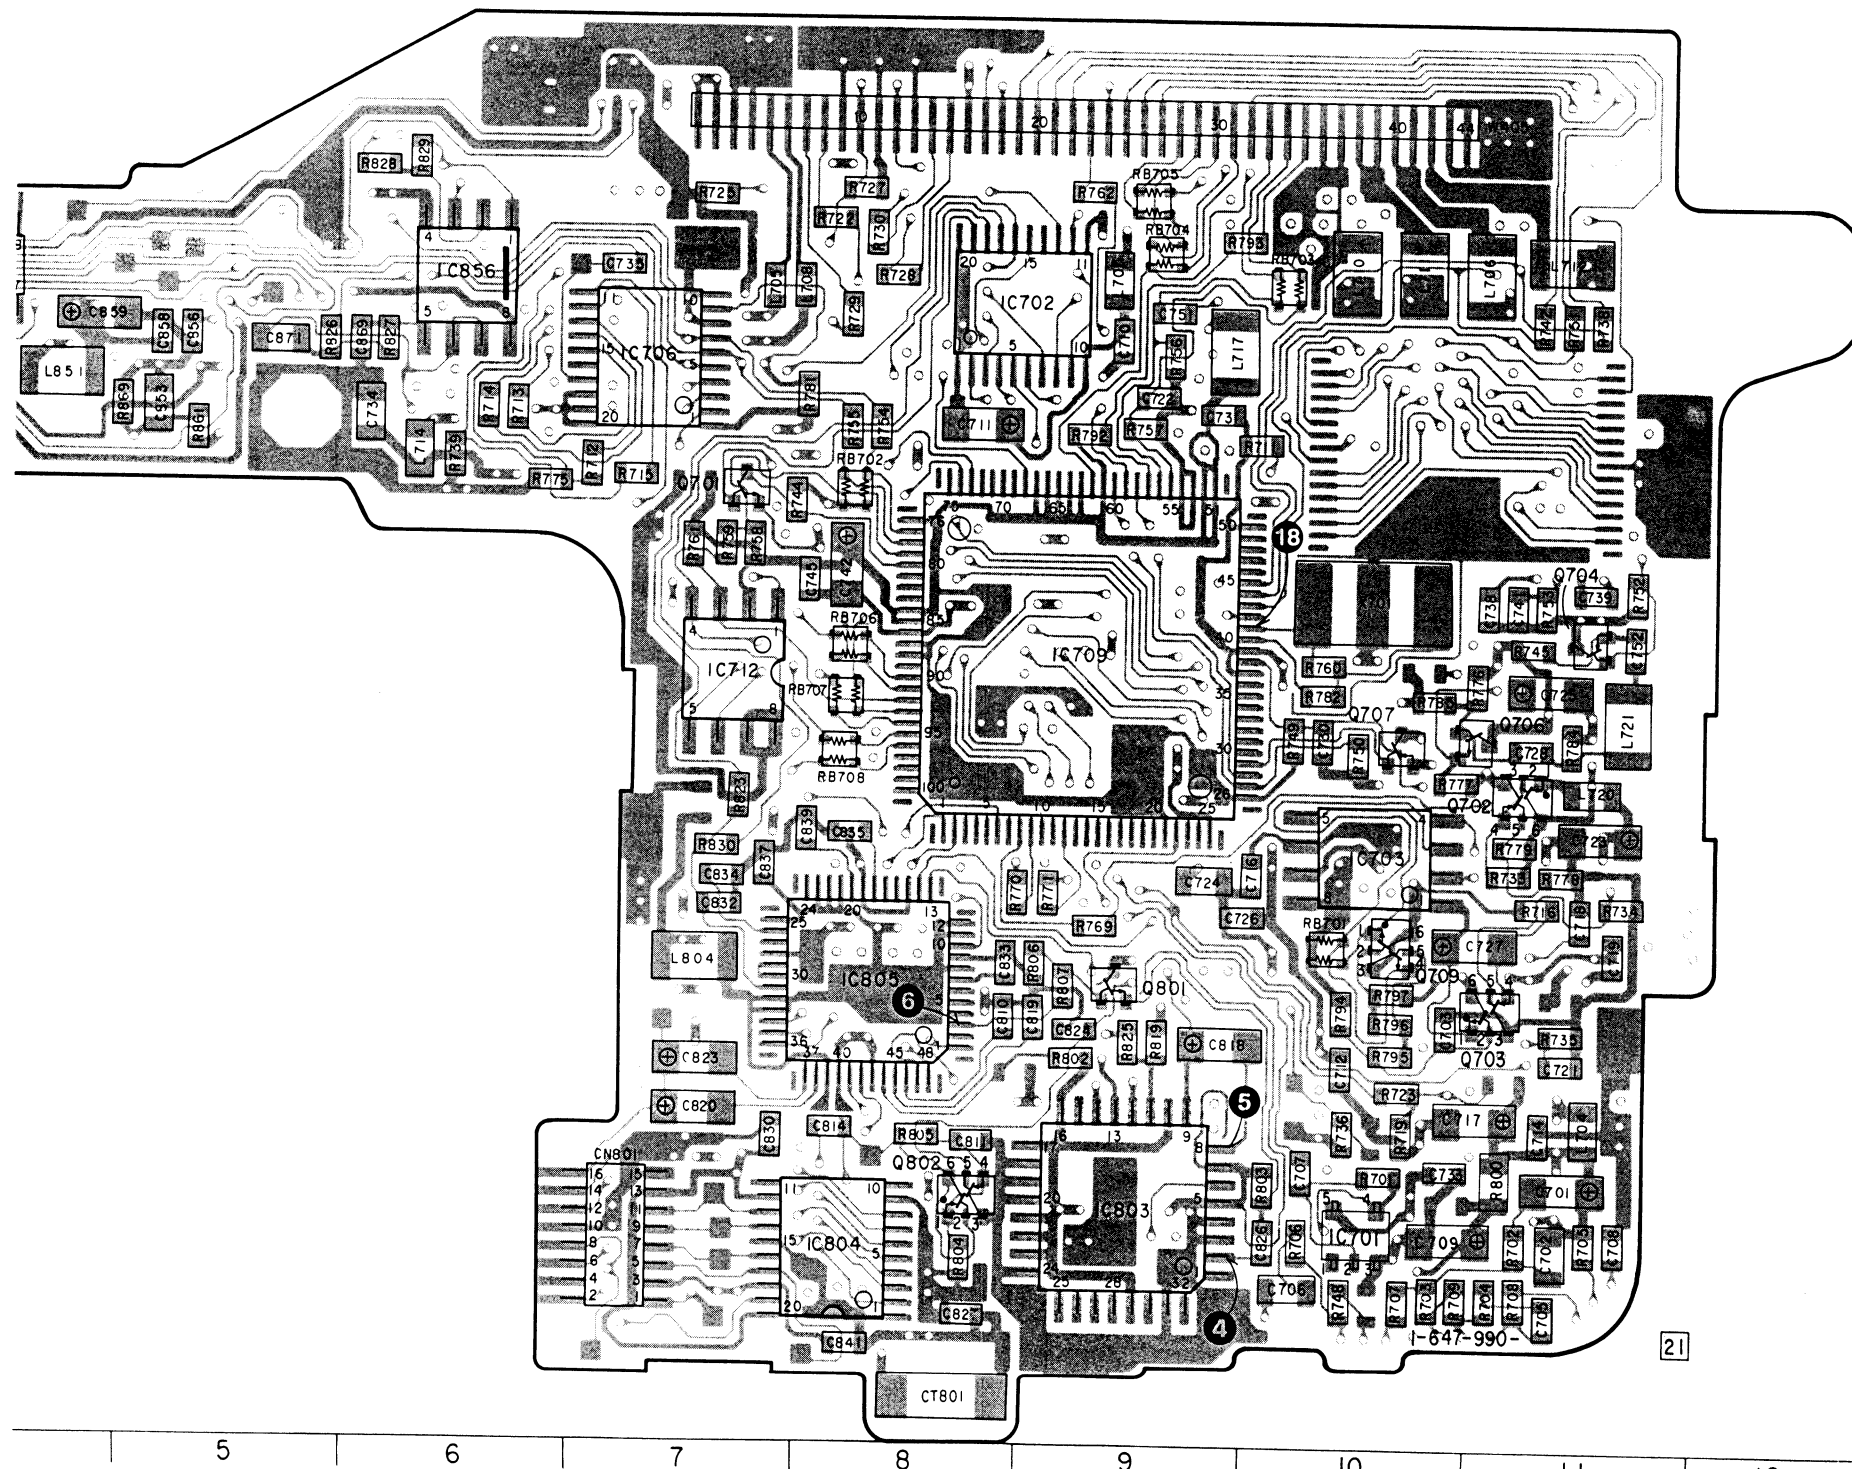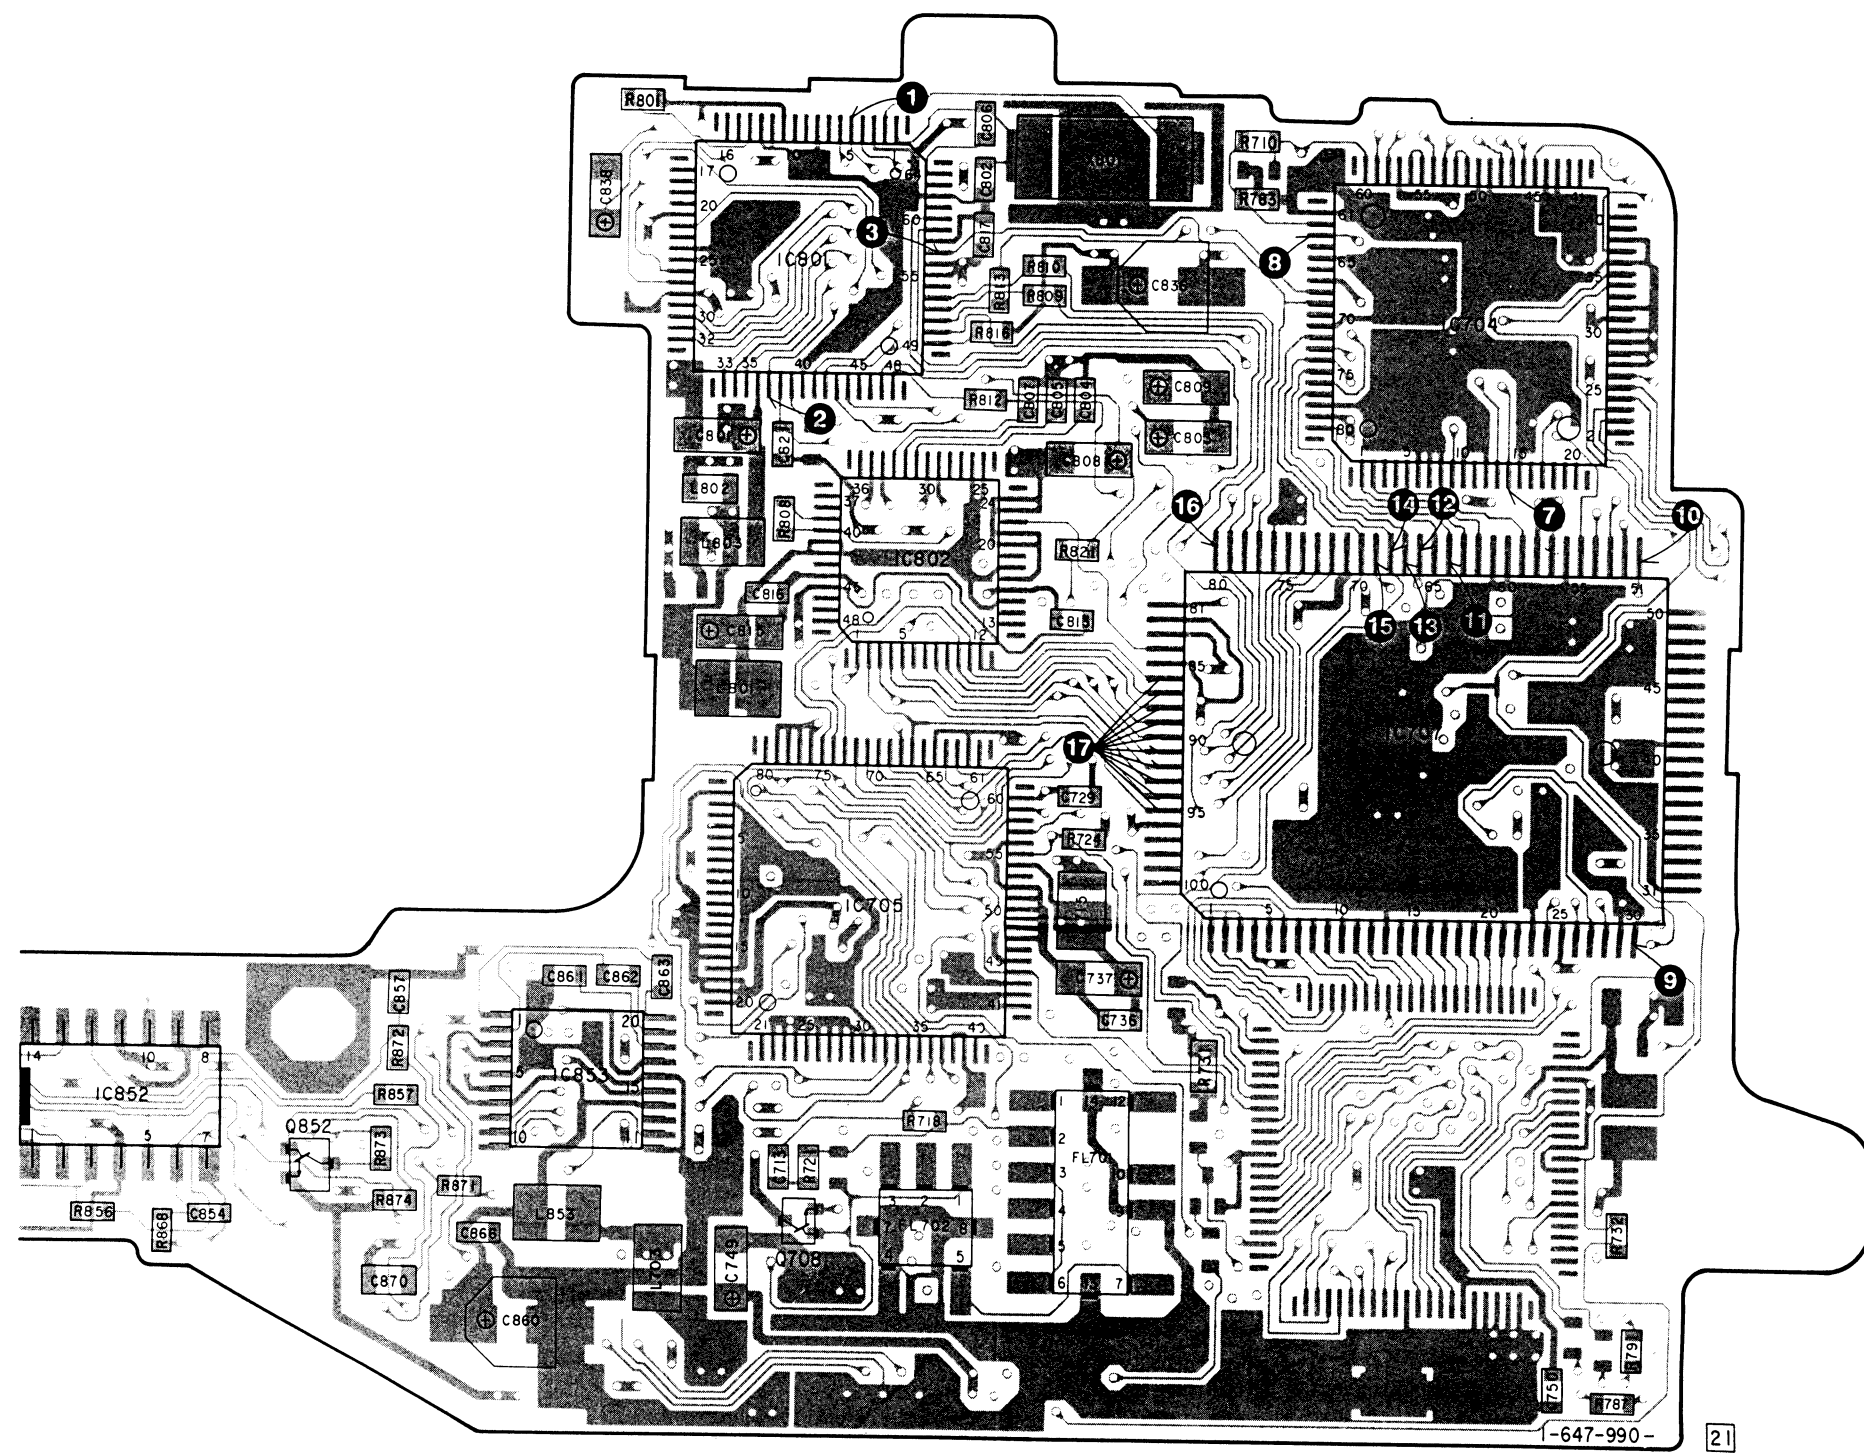

— Ref. No. VC-133 BOARD: 3000 series —



(See Page 80, 81)

VC-133 BOARD (2/3)


• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC			➡➡➡
PB			

VC-133 BOARD (1/3)

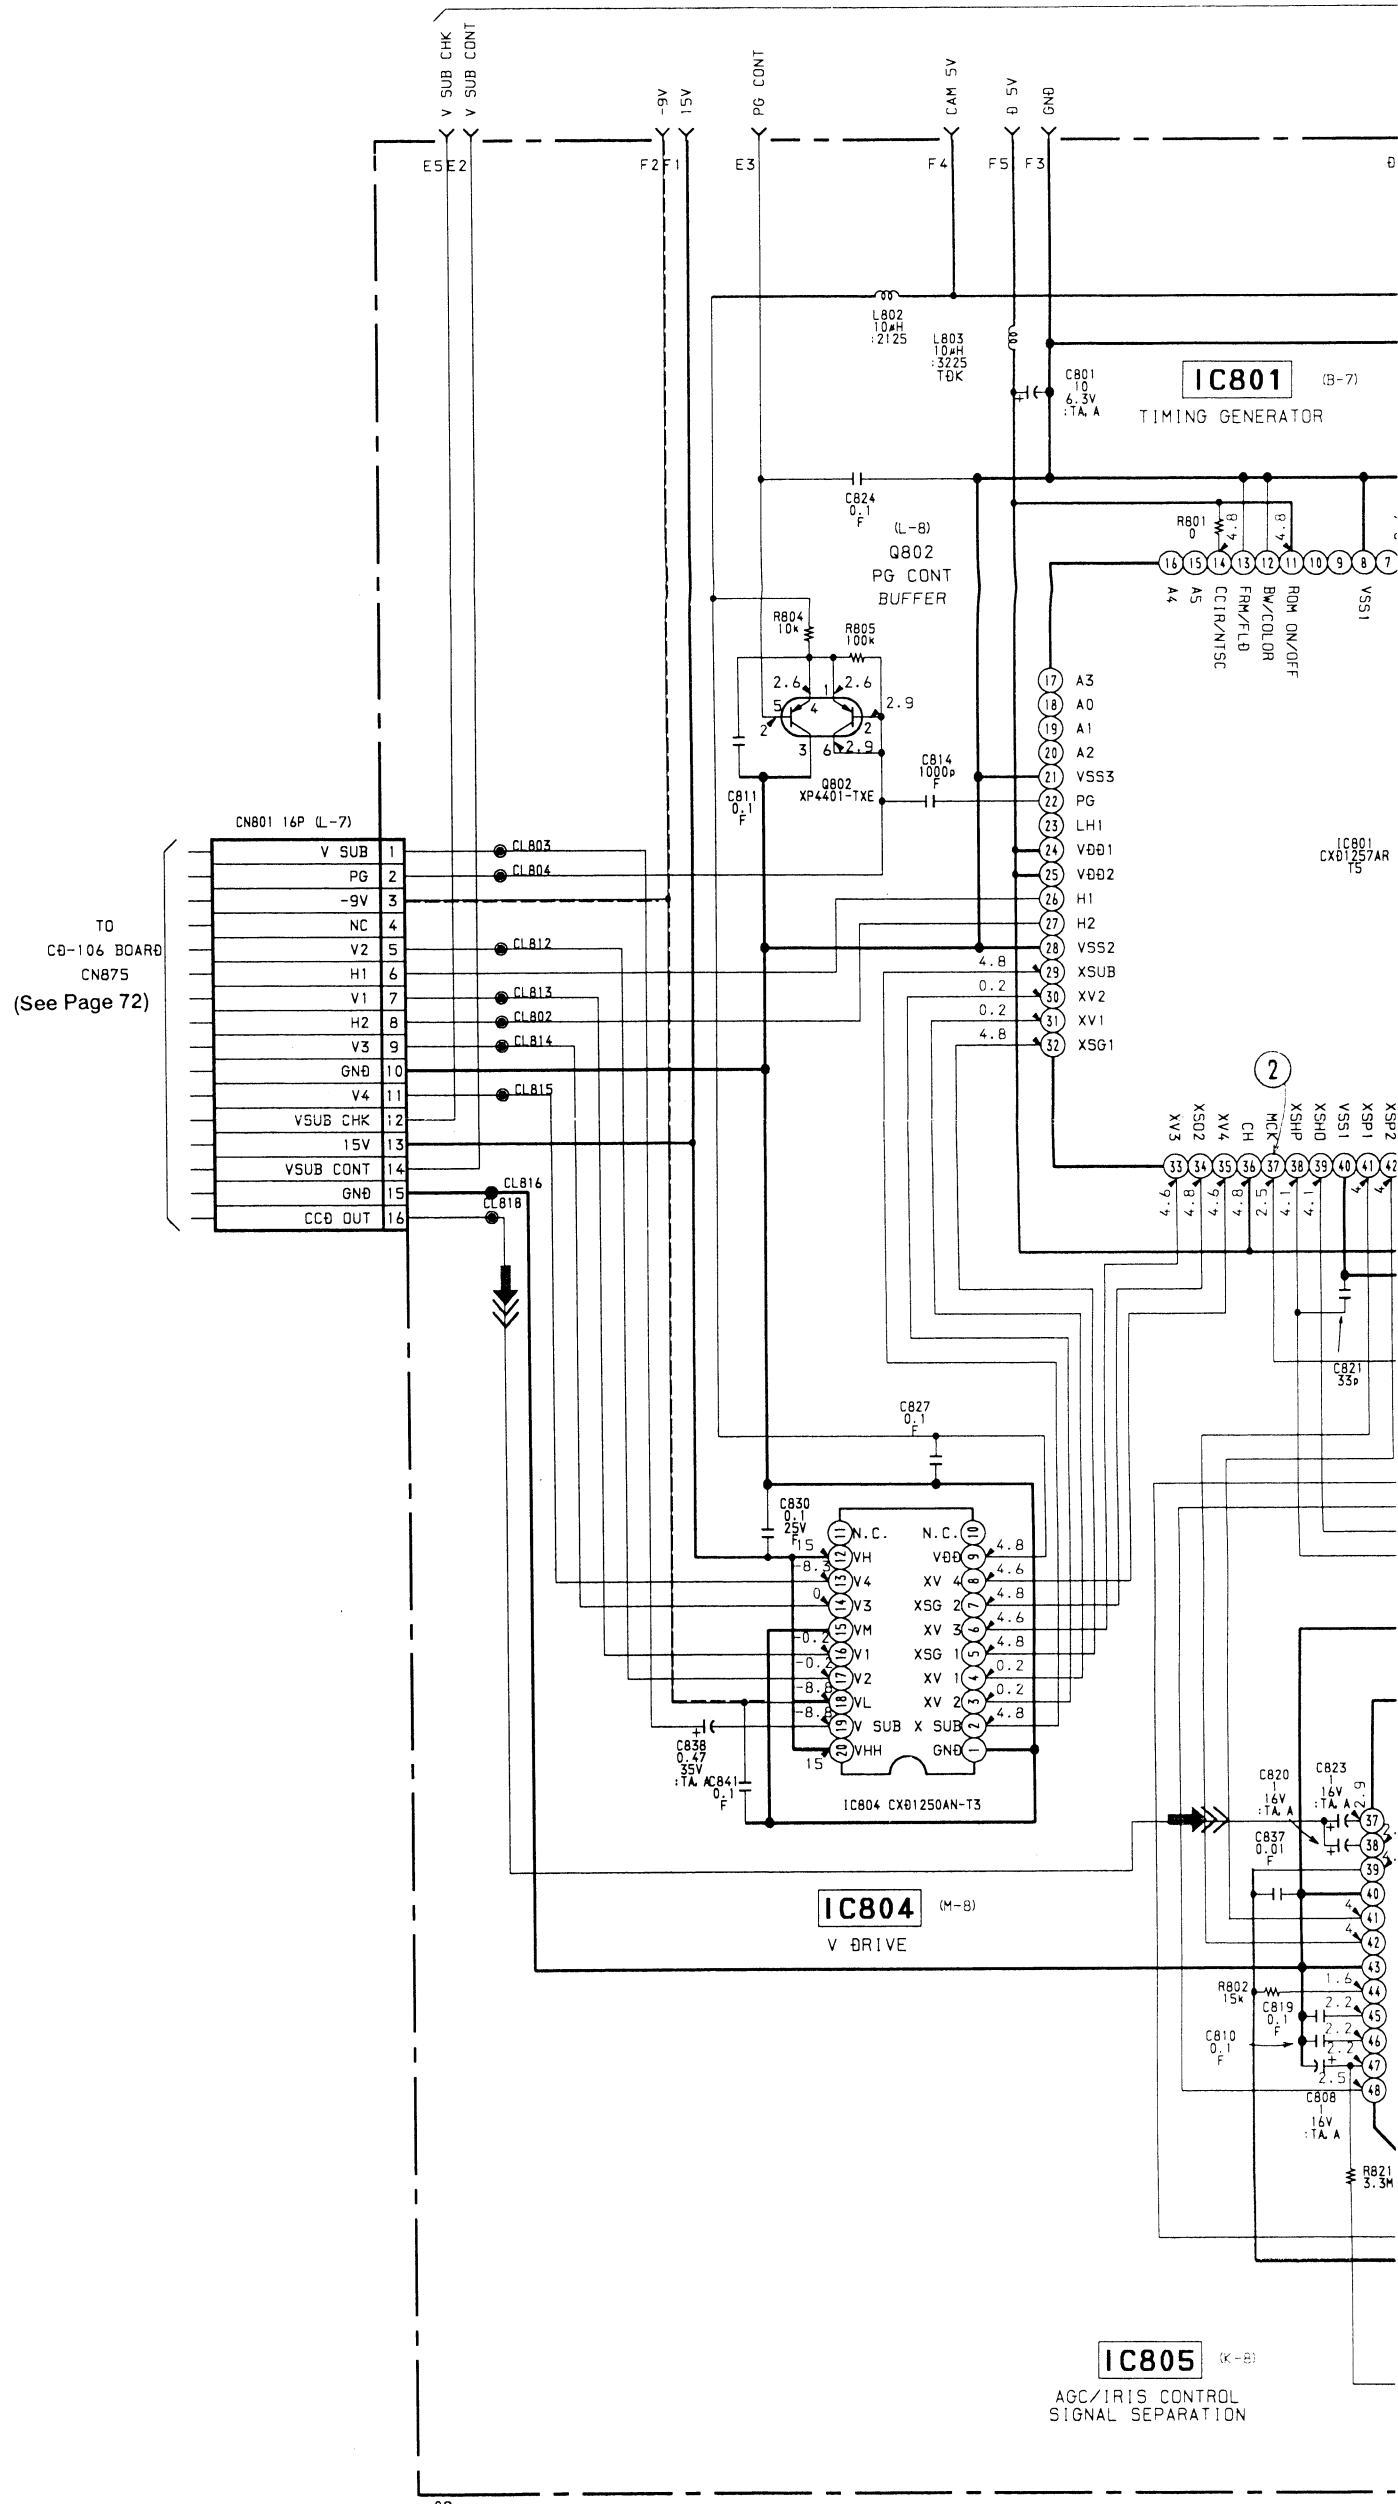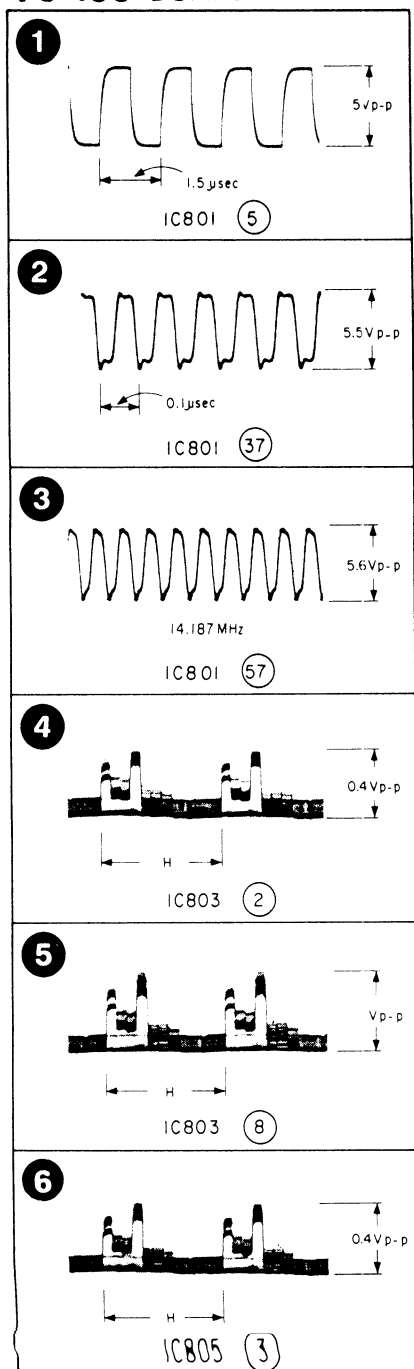


(See Page 81)
TO VC-133 BOARD (2/3)

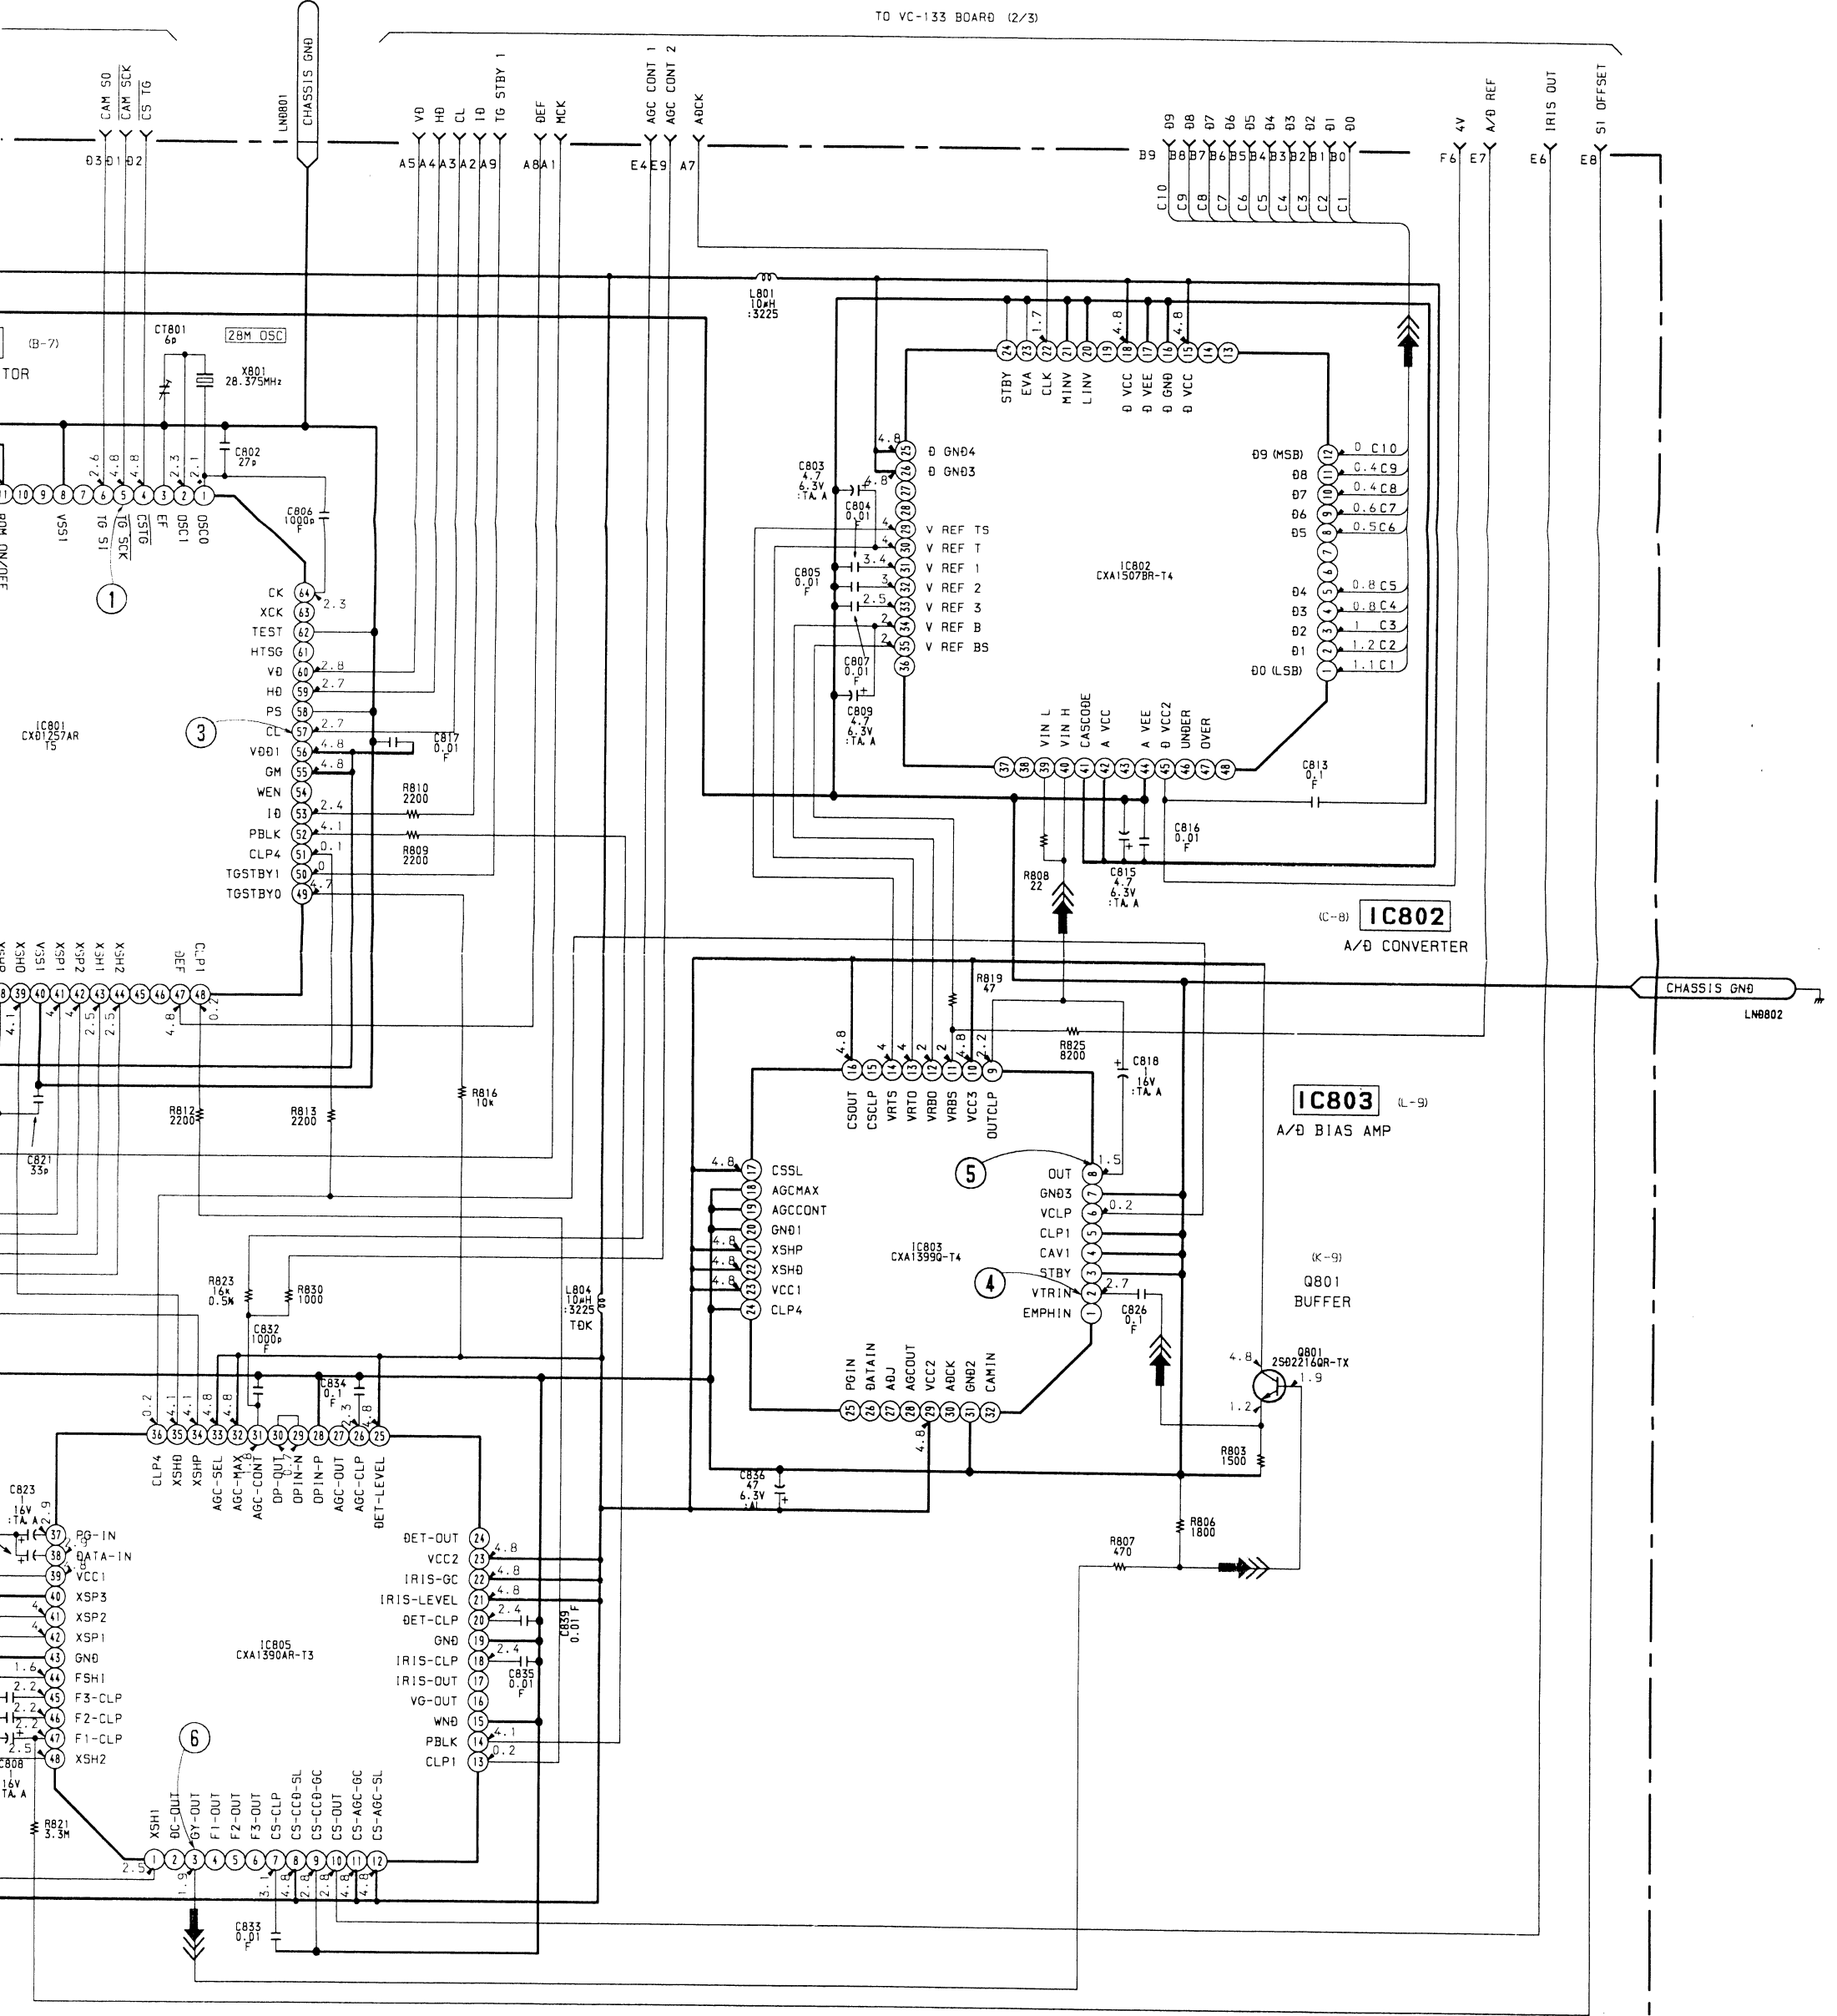



VC-133 BOARD (2/3)


VC-133 BOARD (2/3)

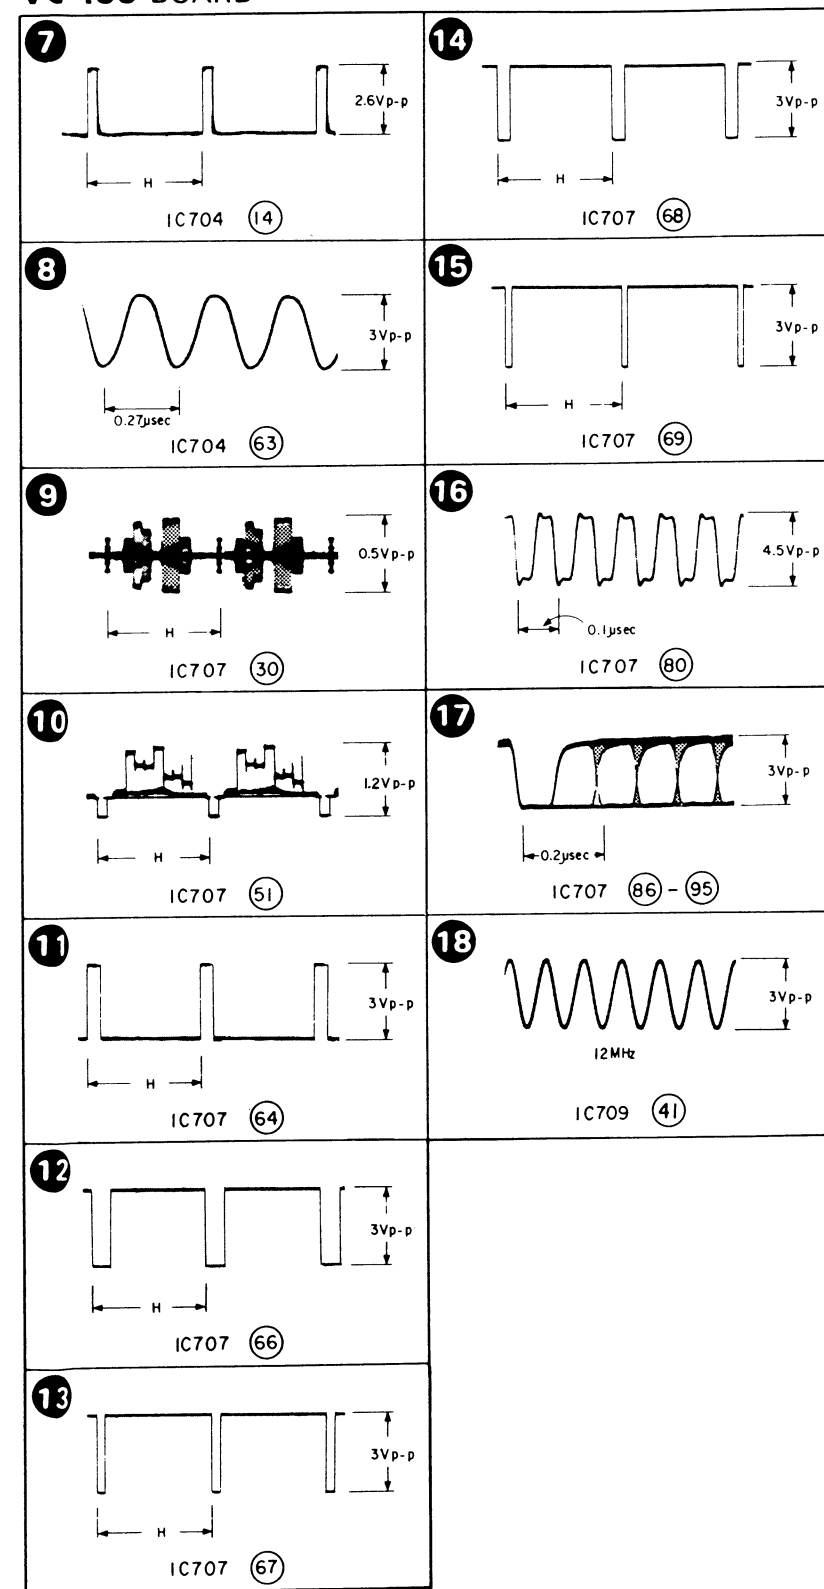


VC-133 (LENS DRIVE) SCHEMATIC DIAGRAM

Refer to page 74 for Printed Wiring Board.

Ref. No. VC-133 BOARD: 3000 series

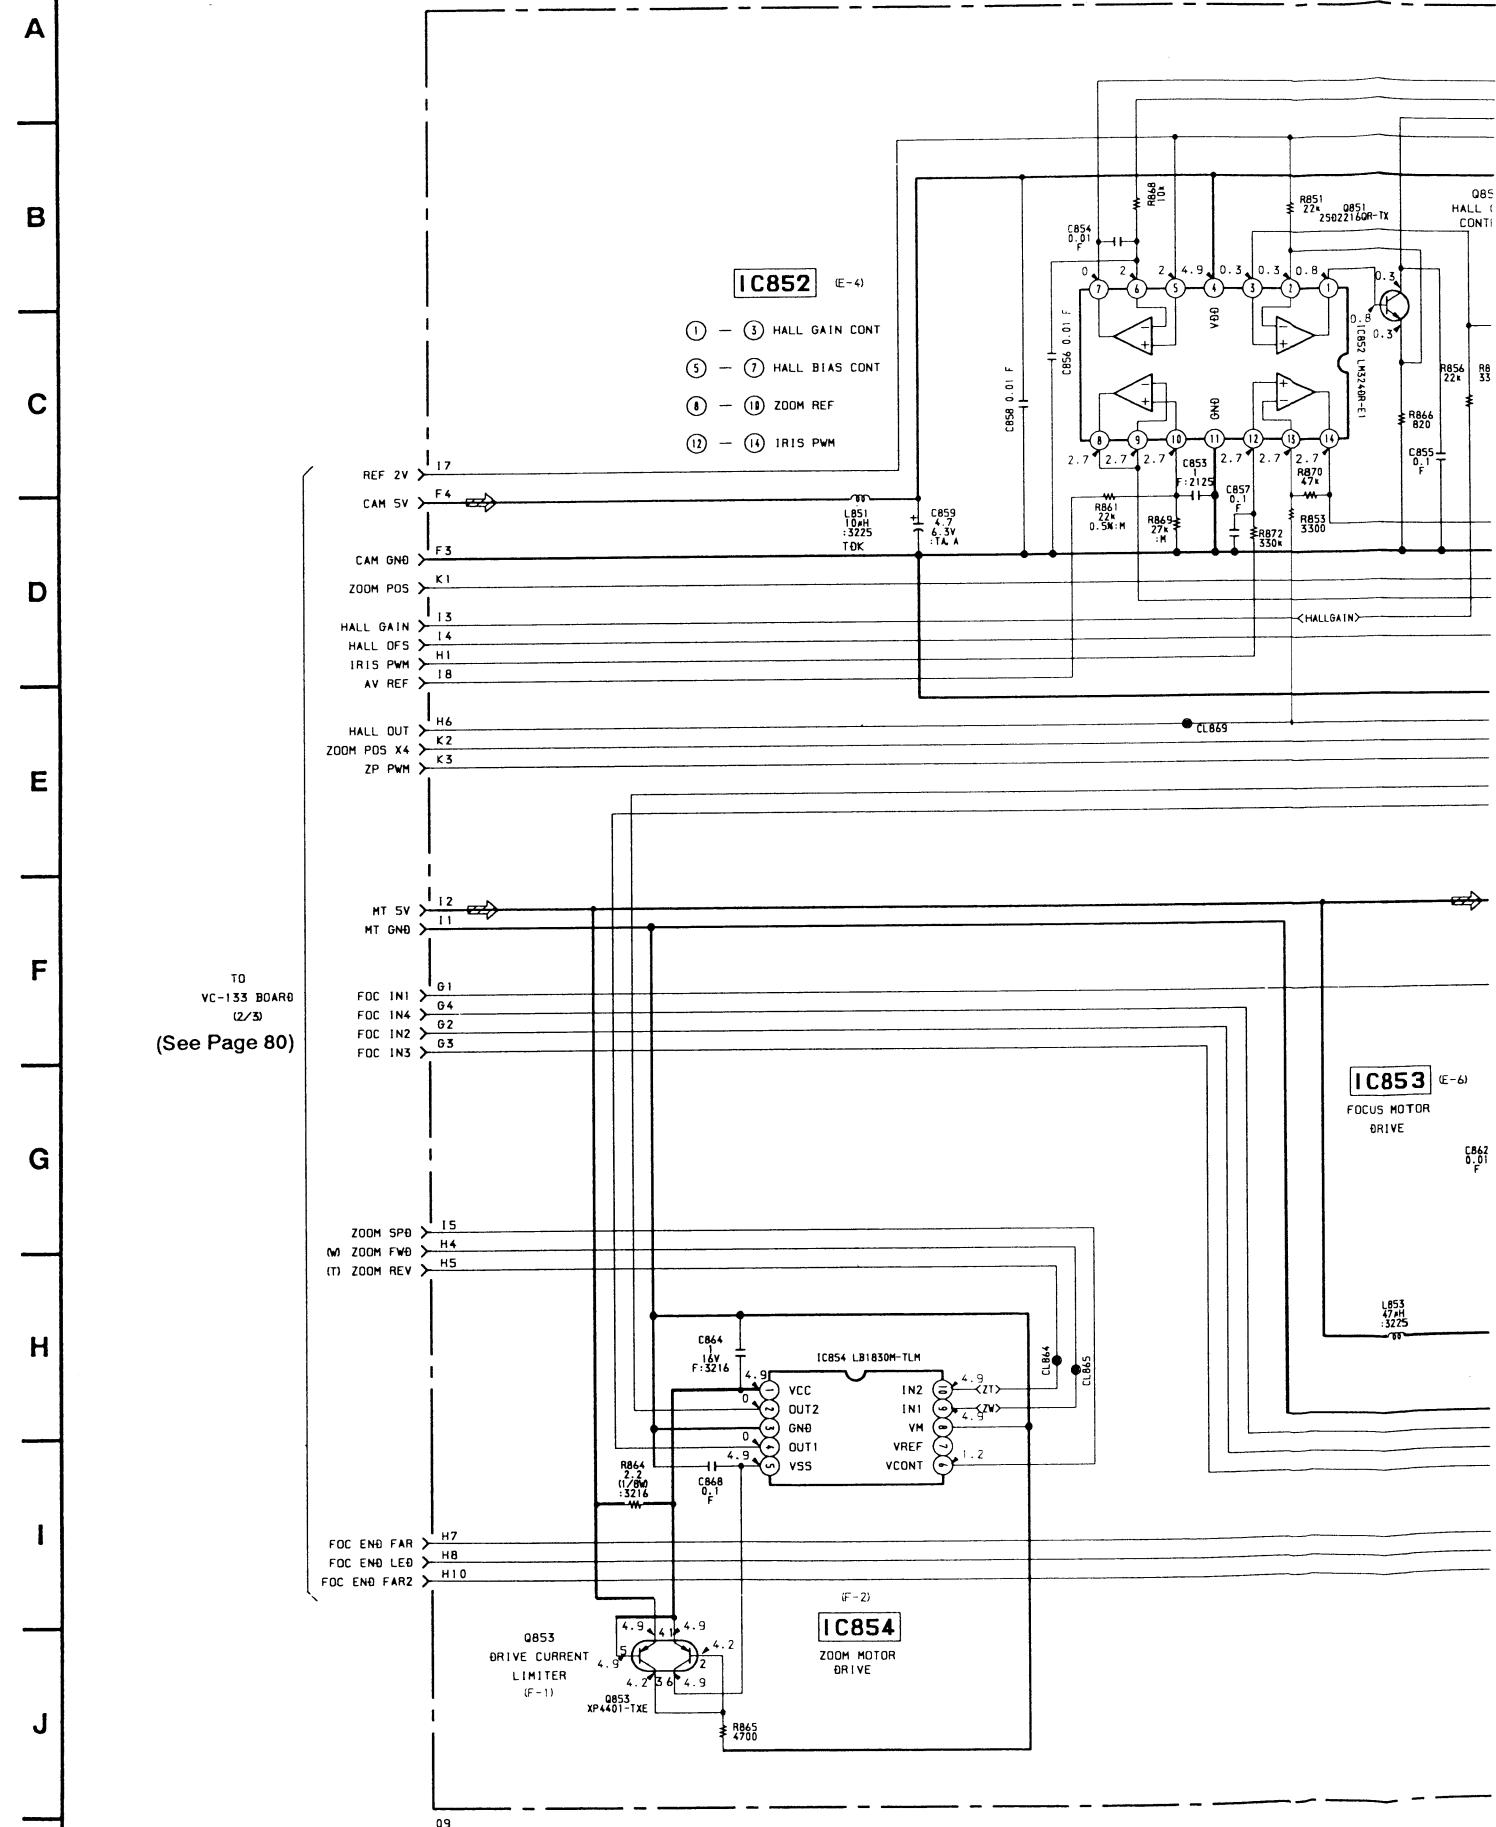

7 8 9 10 11 12 13 14 15 16

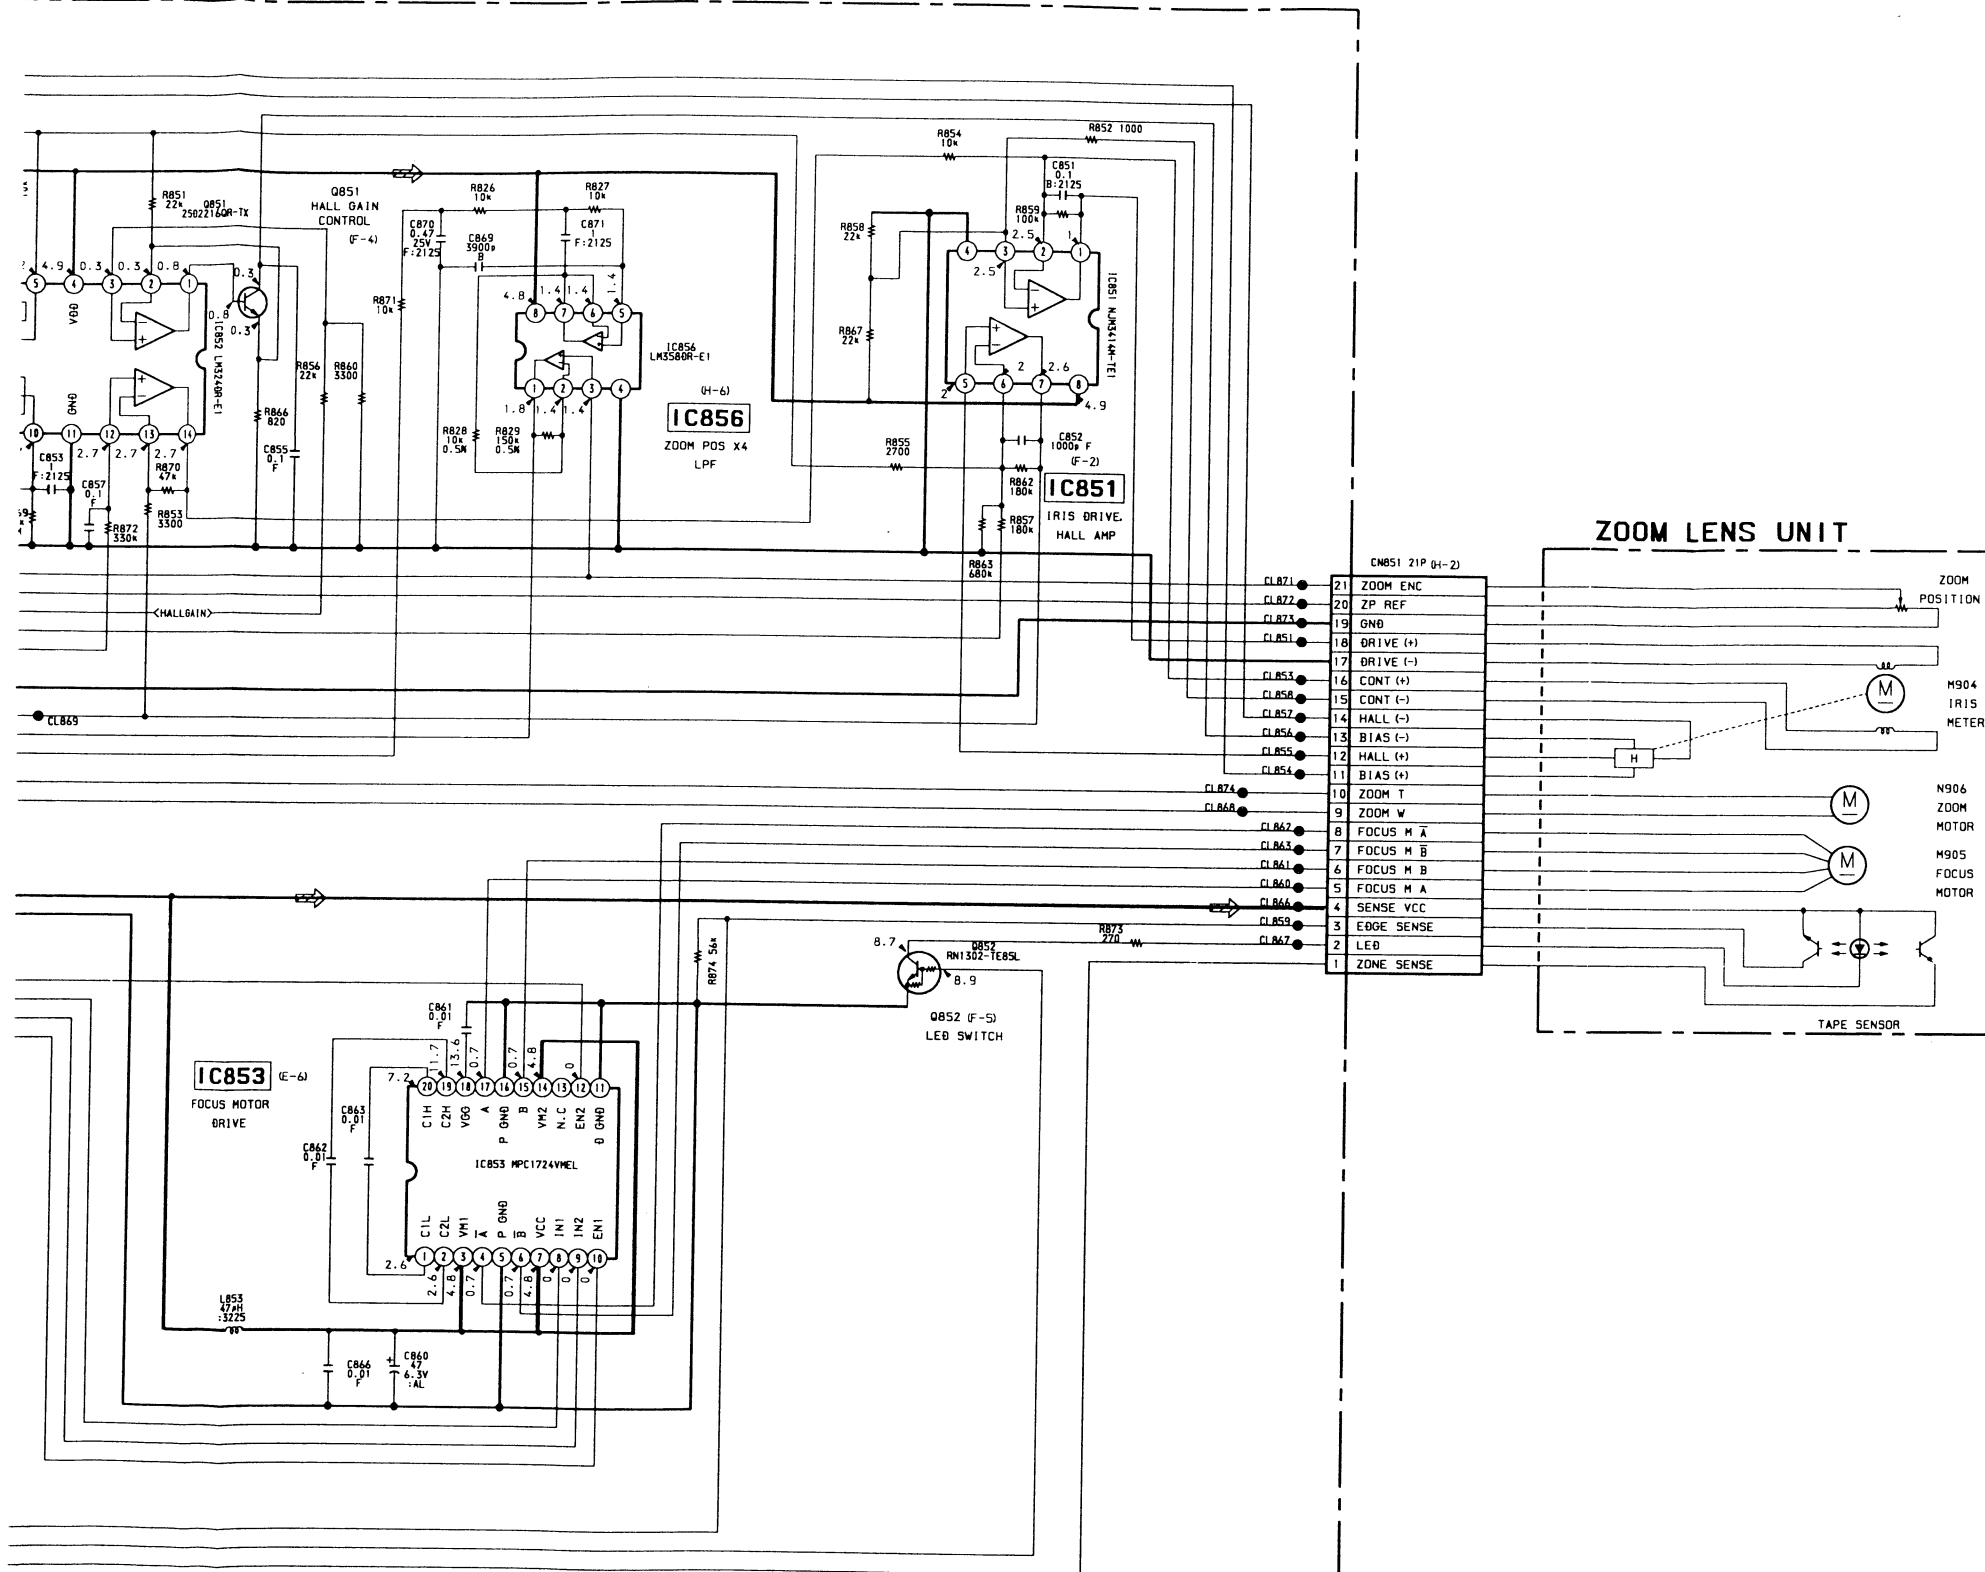


no mark CAMERA REC mode

VC-133 BOARD (3/3)

- For printed wiring boards.
- VS-100 board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:


VS-100BOARD(COMPONENT SIDE)


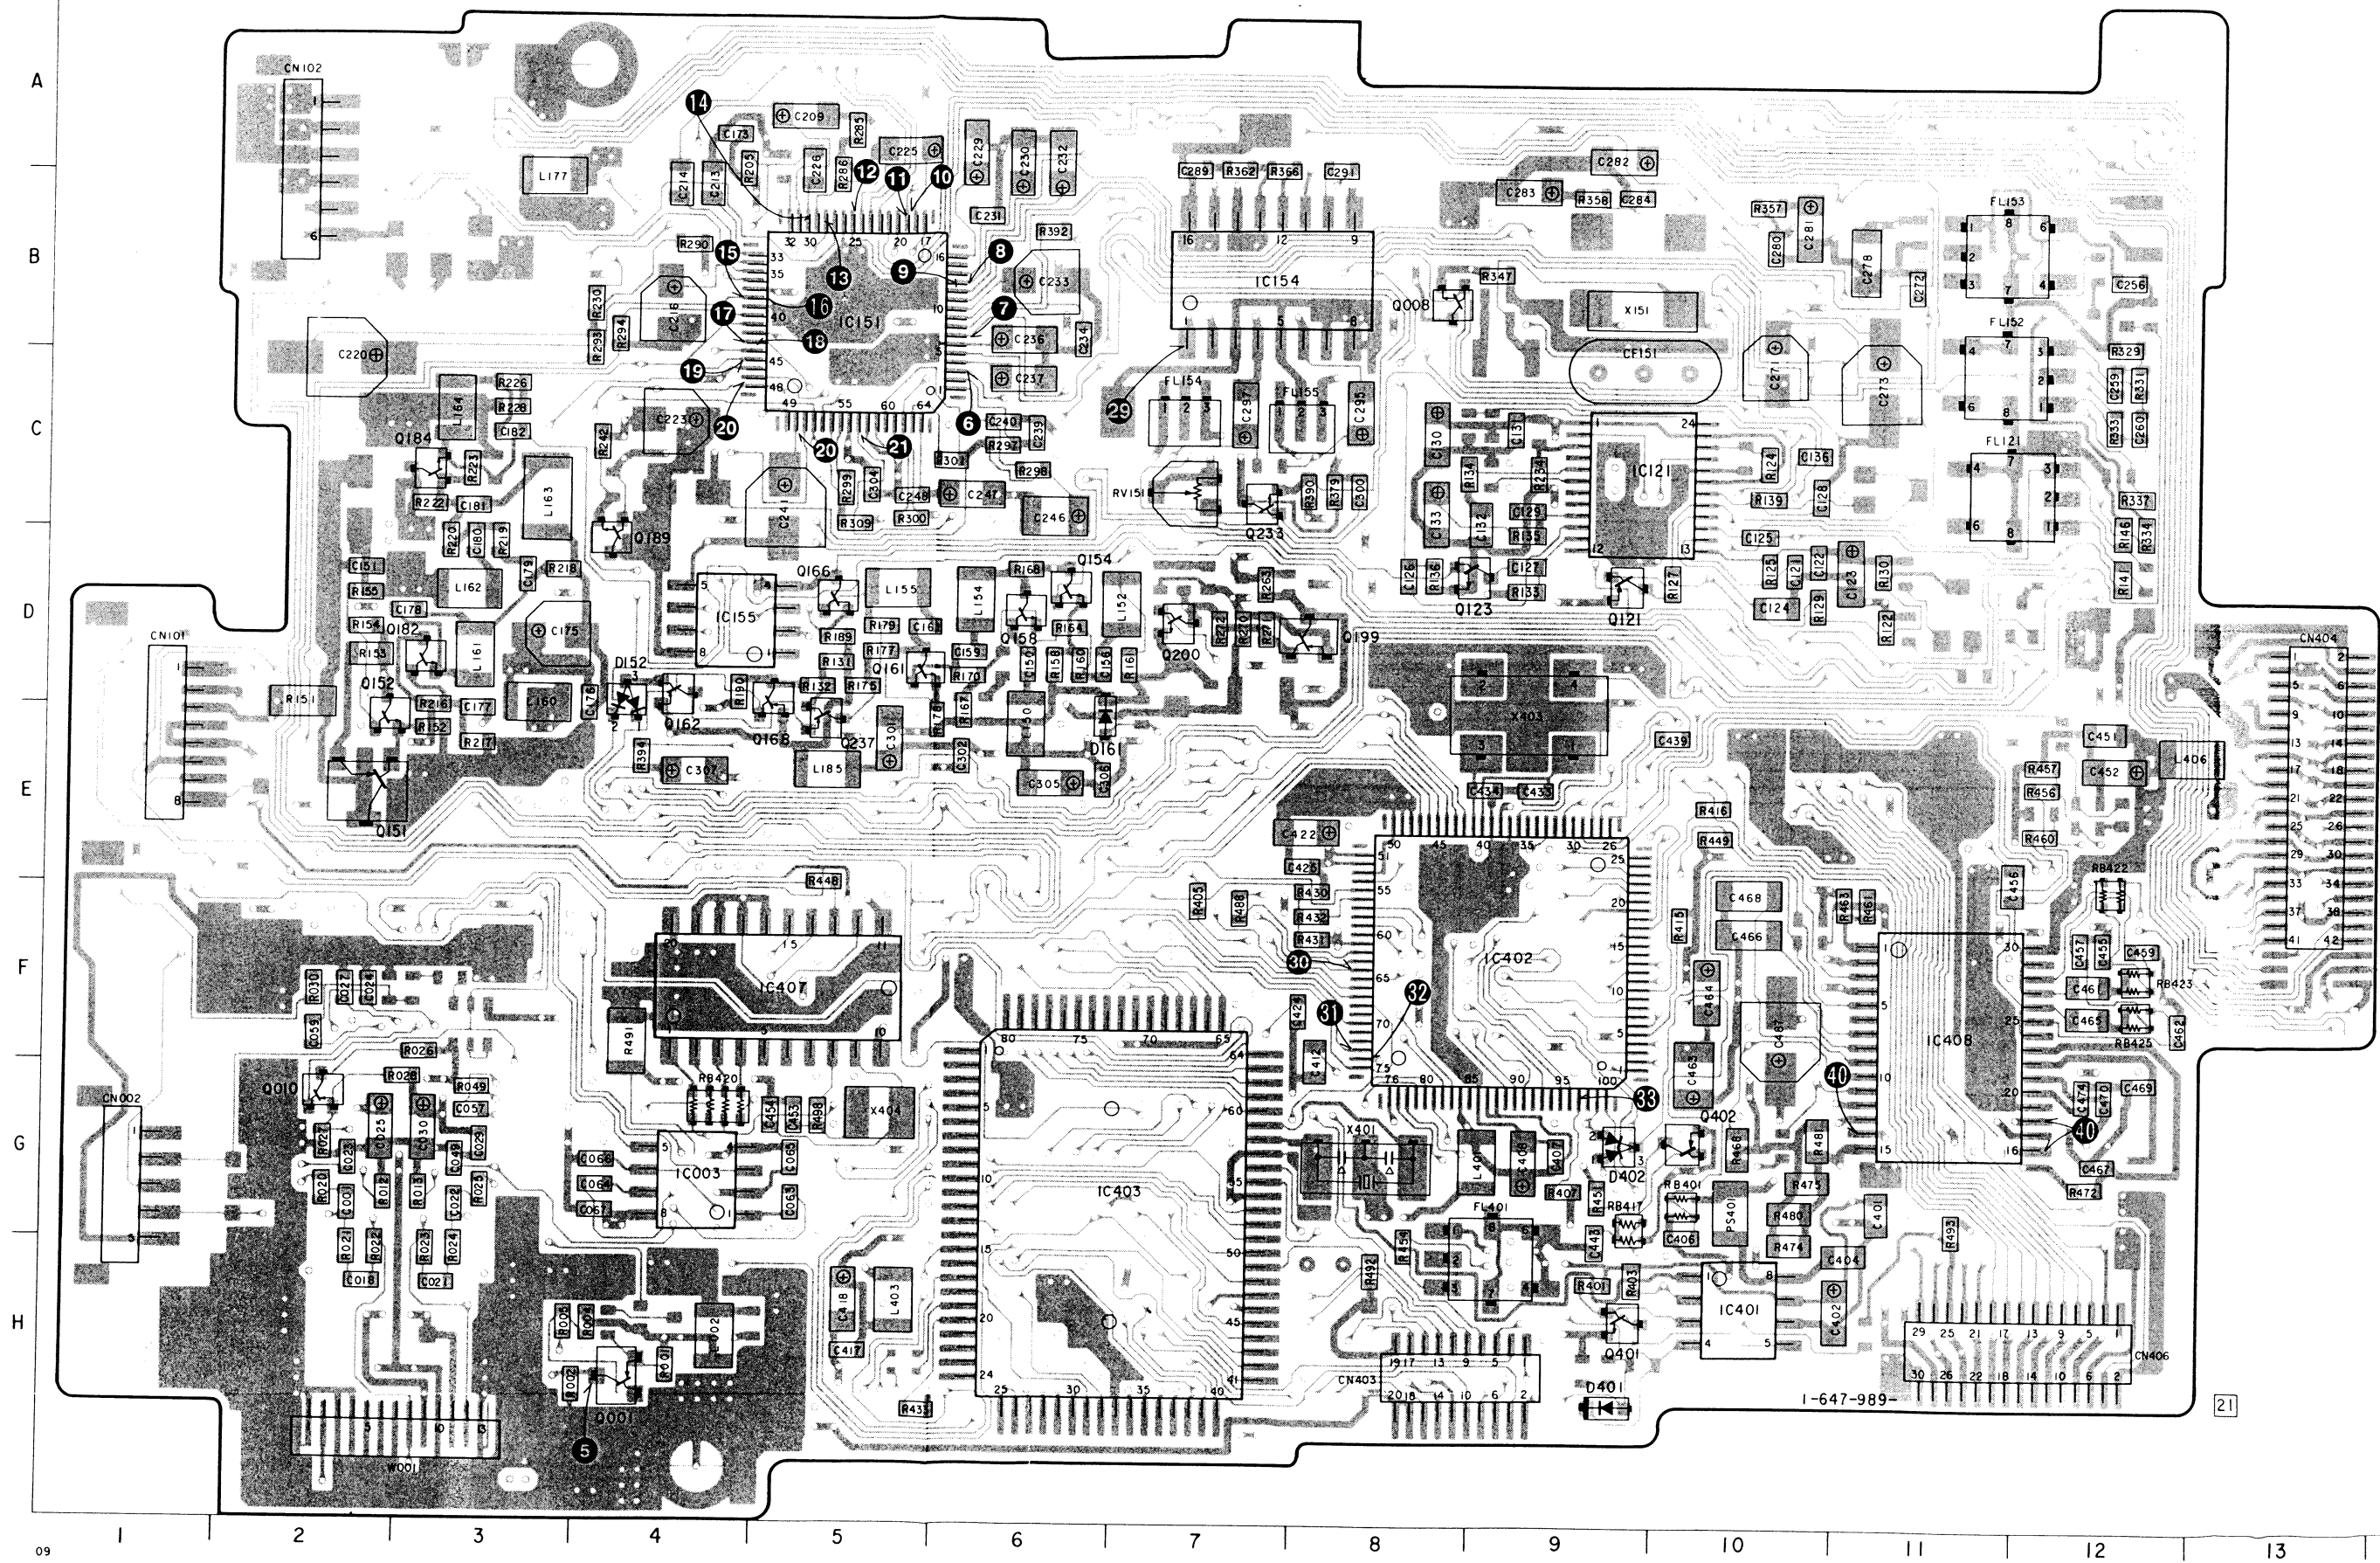


h has four layers
ted.

Caution:	Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
	Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

VS-100 BOARD (CONDUCTOR SIDE)

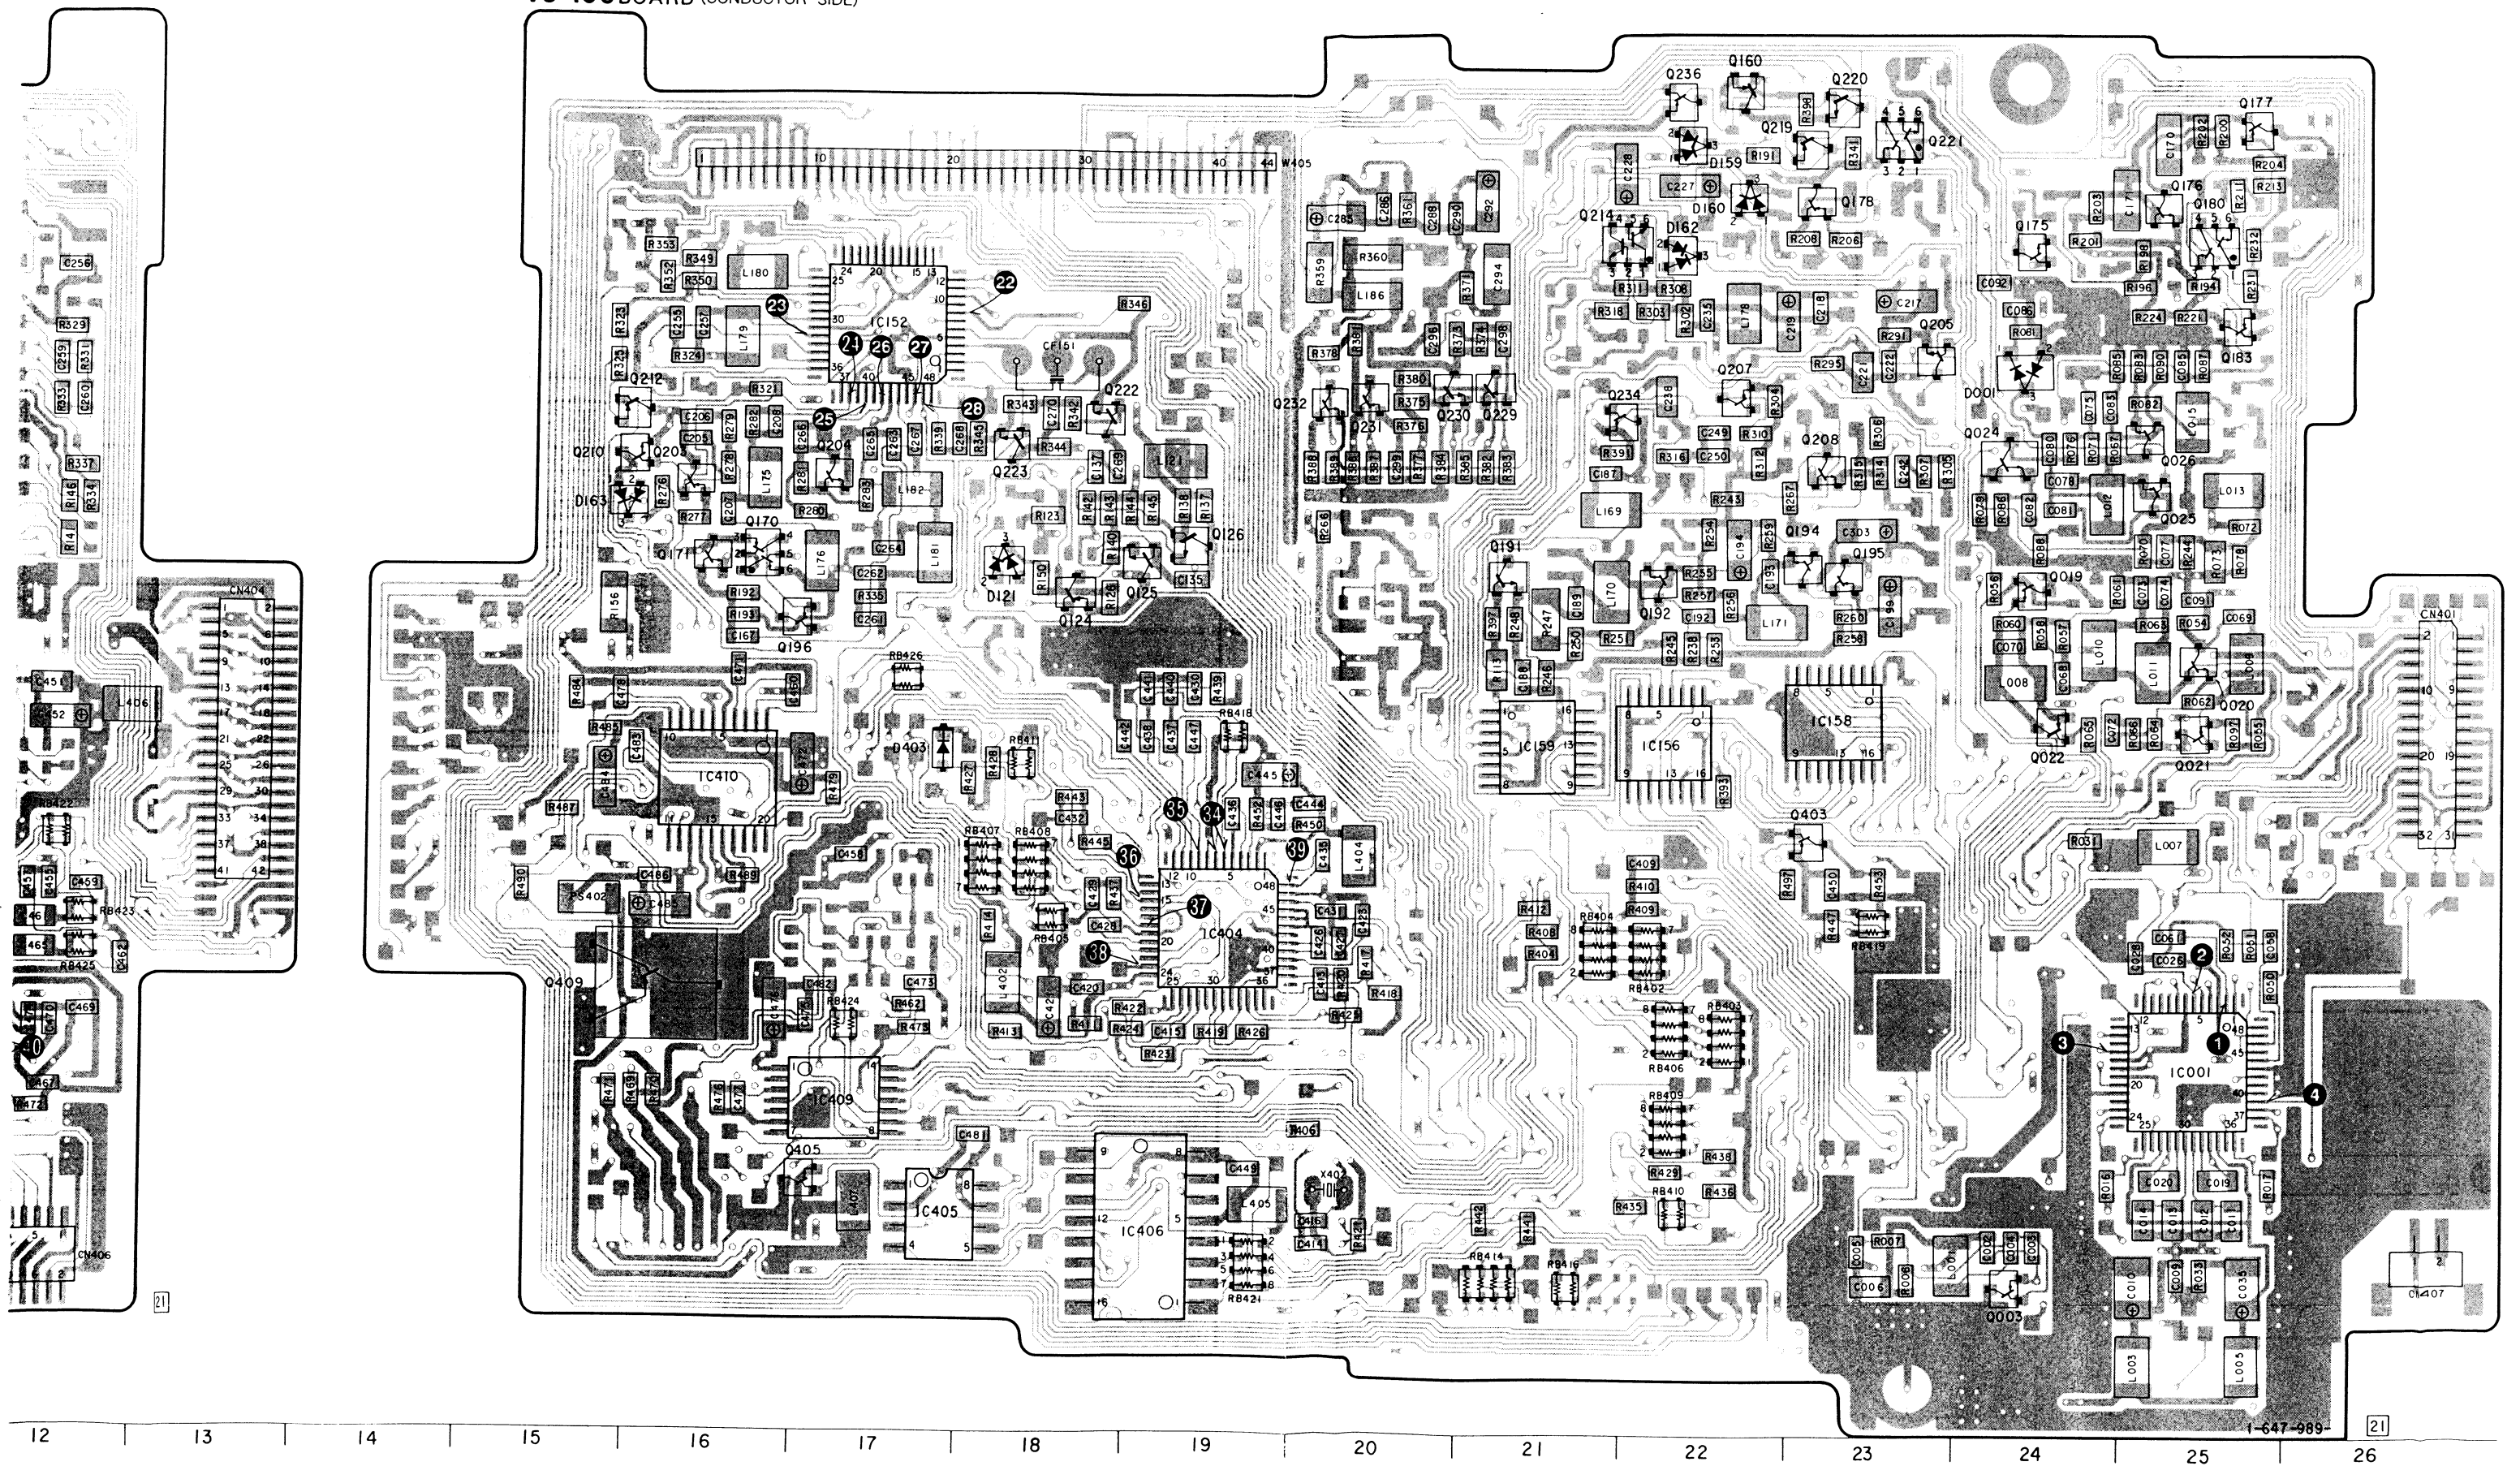

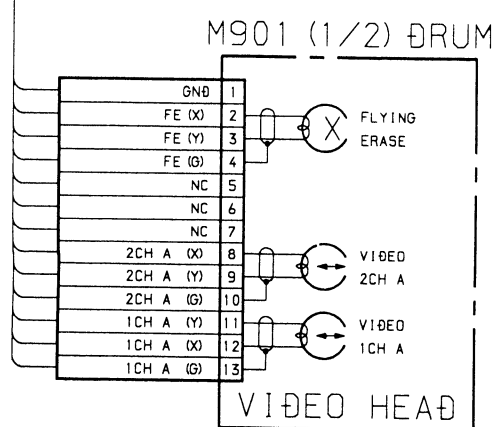


	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC	➡	➡➤	➡➤➤➤	➡
PB		➡➤	➡➤➤➤	➡


	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)			
Ref. signal	➡		➡

Figure 1 displays five oscilloscope waveforms, labeled 1 through 5, showing various signals from IC001 and IC002.

- Waveform 1:** A complex, noisy signal. The vertical scale is 0.12 V p-p . The horizontal scale is marked with H . The signal is identified as IC001 (2) REC.
- Waveform 2:** A complex, noisy signal. The vertical scale is 0.22 V p-p . The horizontal scale is marked with $0.22 \mu\text{sec}$. The signal is identified as IC001 (6) REC.
- Waveform 3:** A complex, noisy signal. The vertical scale is 0.6 V p-p . The horizontal scale is marked with $0.22 \mu\text{sec}$. The signal is identified as IC001 (16) PB.
- Waveform 4:** A square wave signal. The vertical scale is 5 V p-p . The horizontal scale is marked with 2 V . The signal is identified as IC001 (39) REC/PB.
- Waveform 5:** A periodic, noisy signal. The vertical scale is 7.5 V p-p . The horizontal scale is marked with 7.53 MHz . The signal is identified as Q001 (C) REC.


5	6	7	8	9	10	11	12	13	14	15	16
---	---	---	---	---	----	----	----	----	----	----	----





- Refer to page 87 for Printed

— Ref. No. VS-100 BOARD: 4000 series —




(See Page 101)

CCD-TR323E/TR323EP

VS-100 (VIDEO) SCHEMATIC DIAGRAM

- Refer to page 87 for Printed Wiring Board.

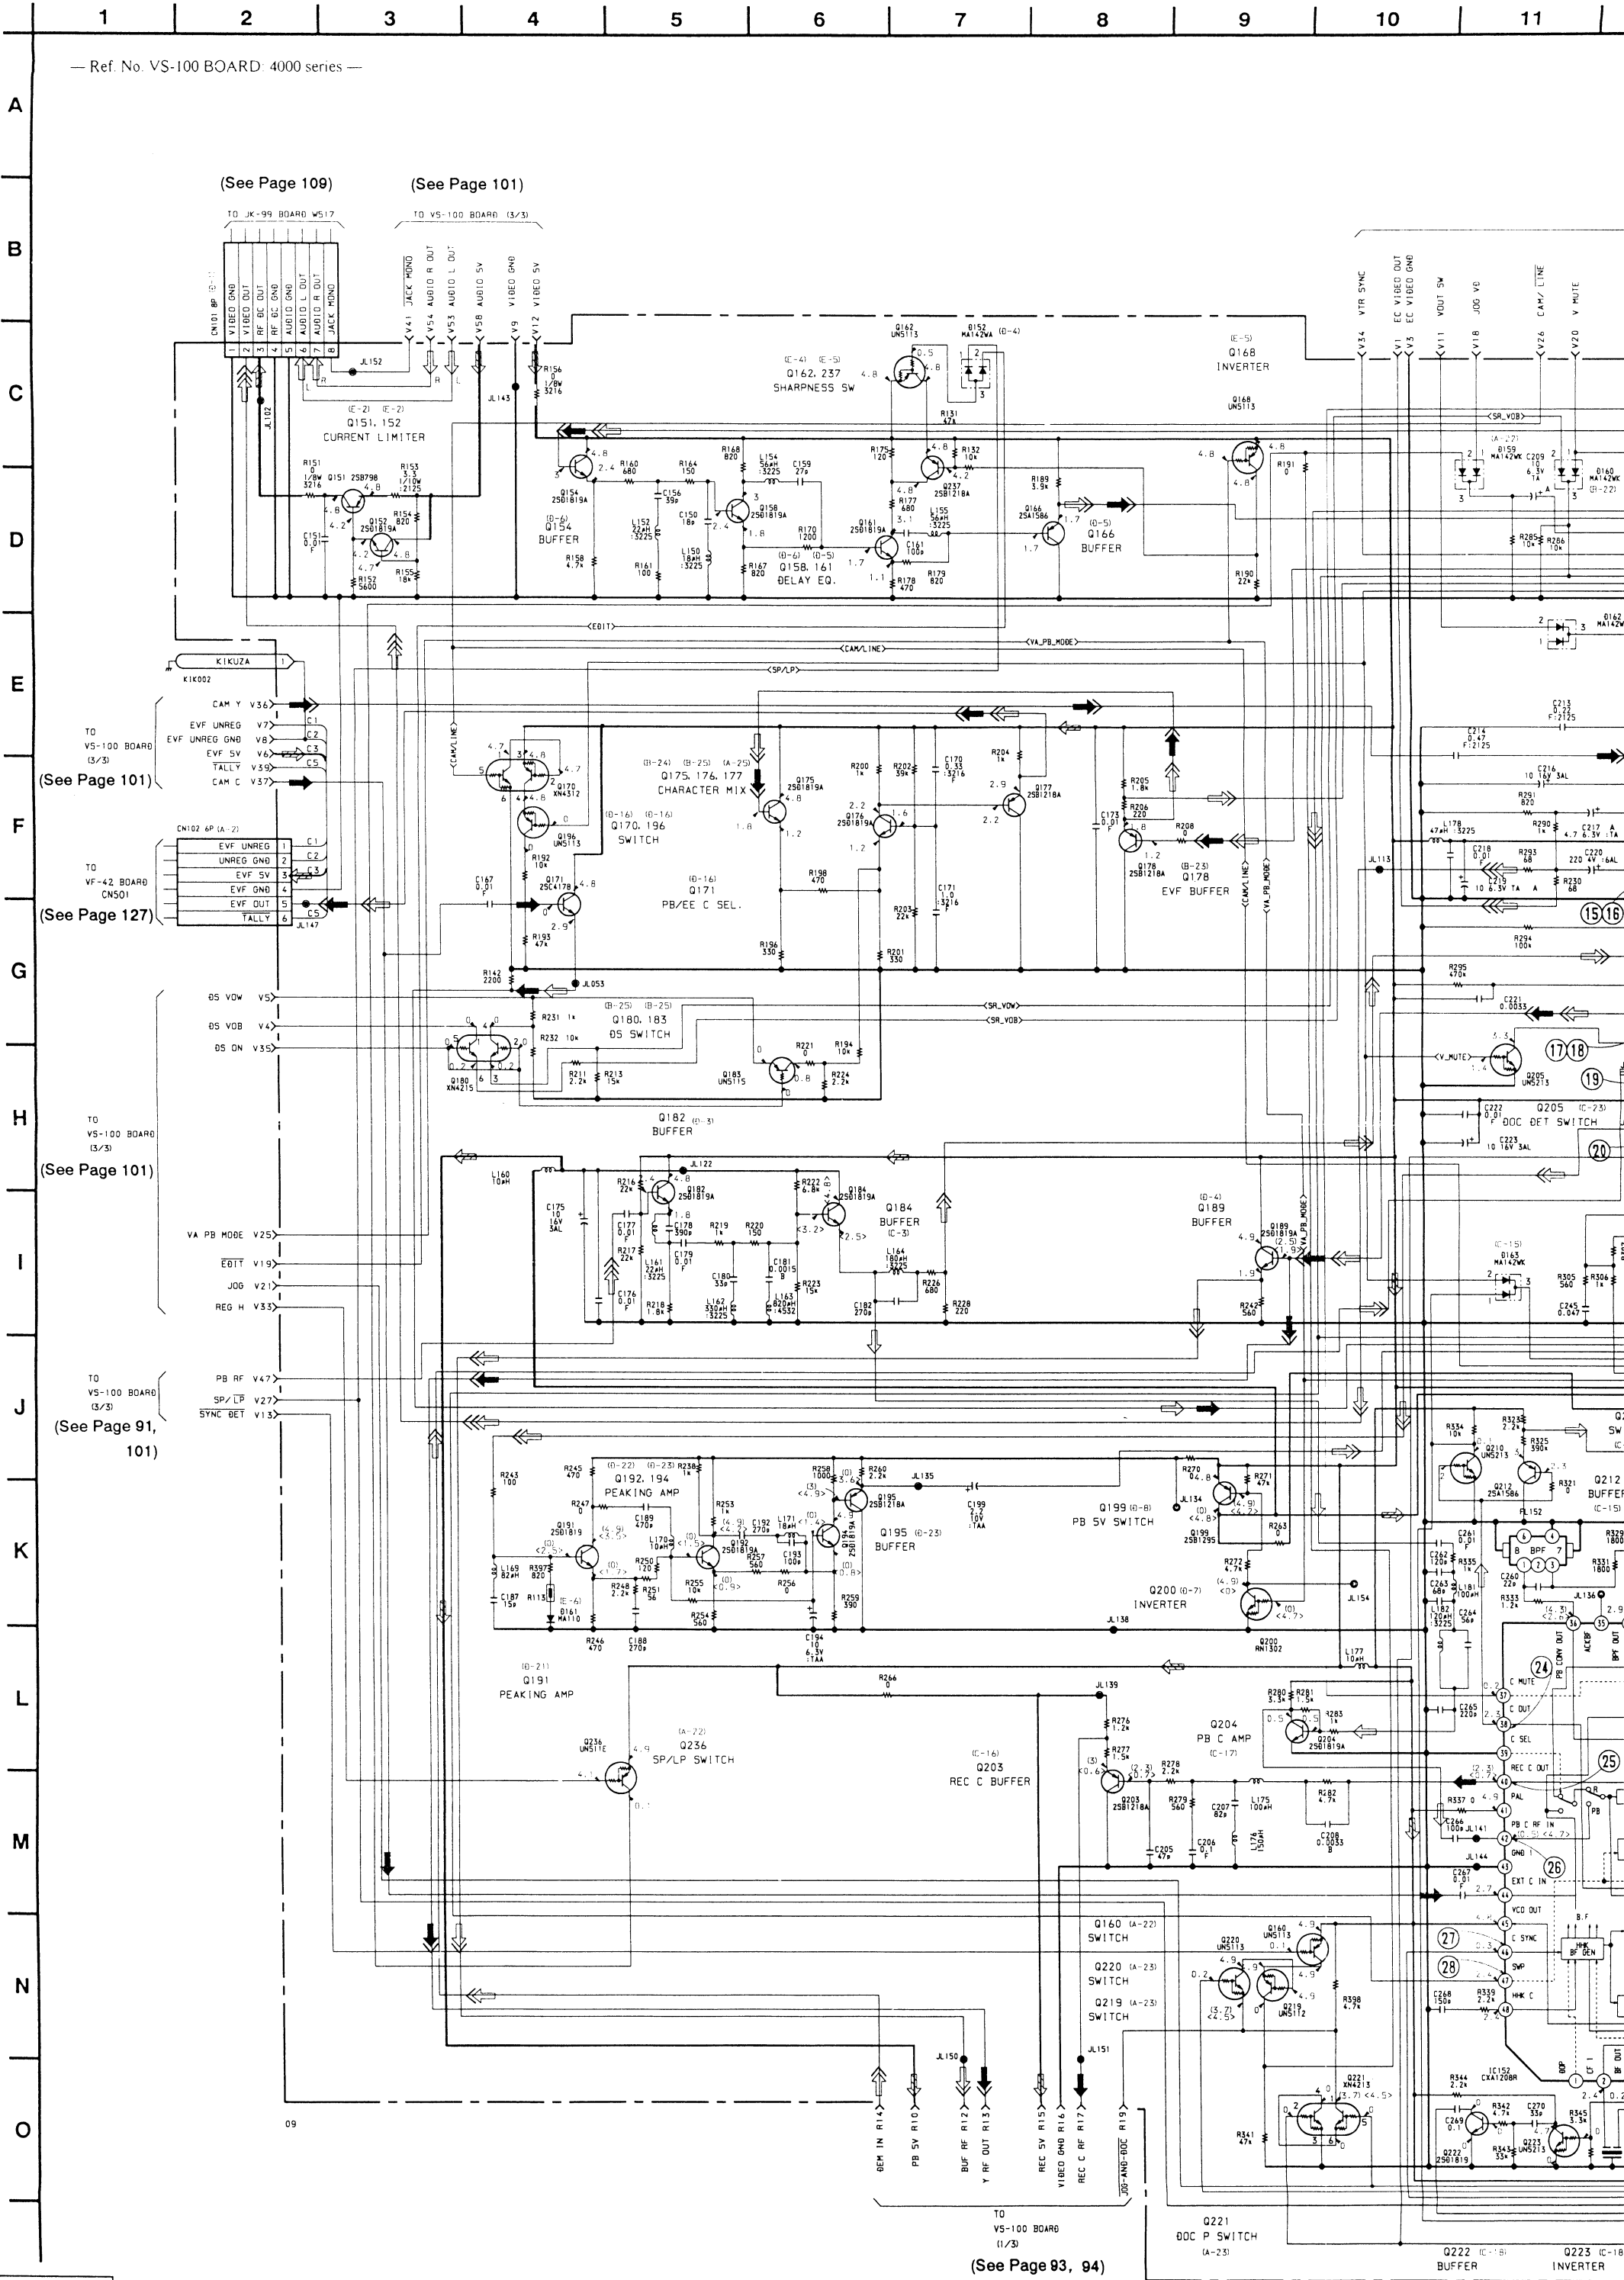


(See Page 101)

TO V5-100 BOARD (3/3)

• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC	→	→	→
PB	→	→	→

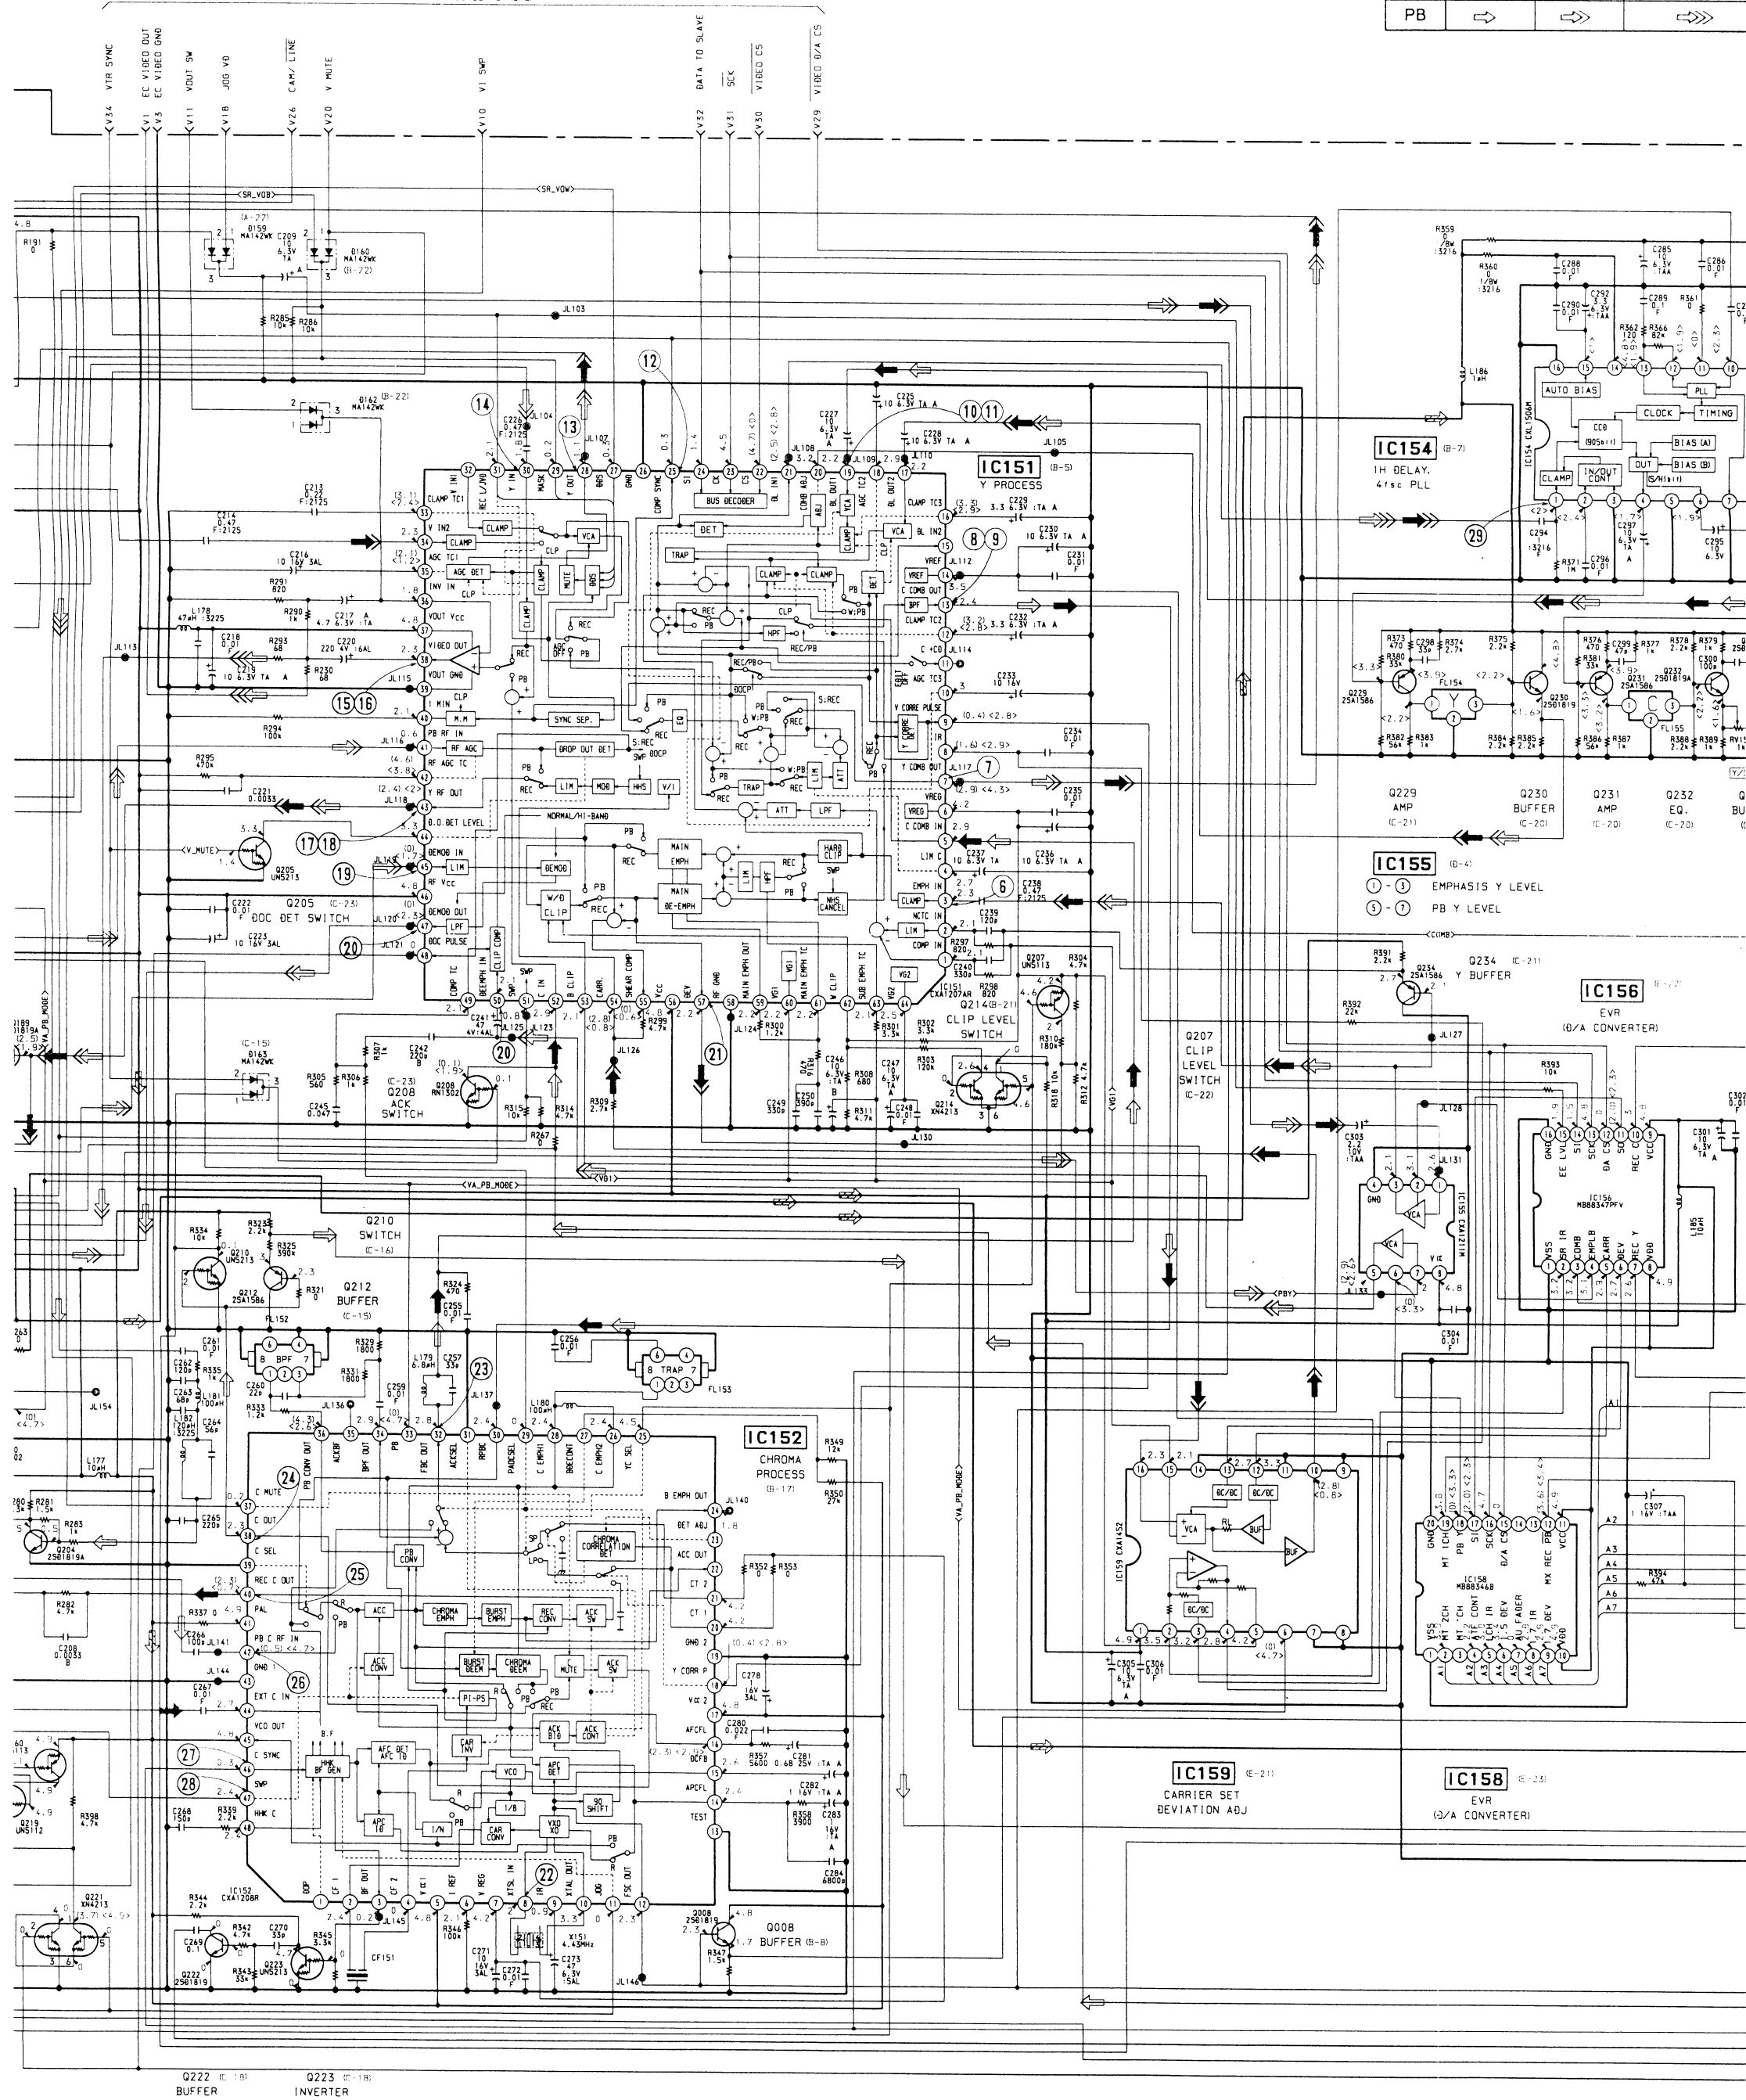


- Refer to page 87 for Printed Wiring Board.

See Page 1:



(See Page 112)

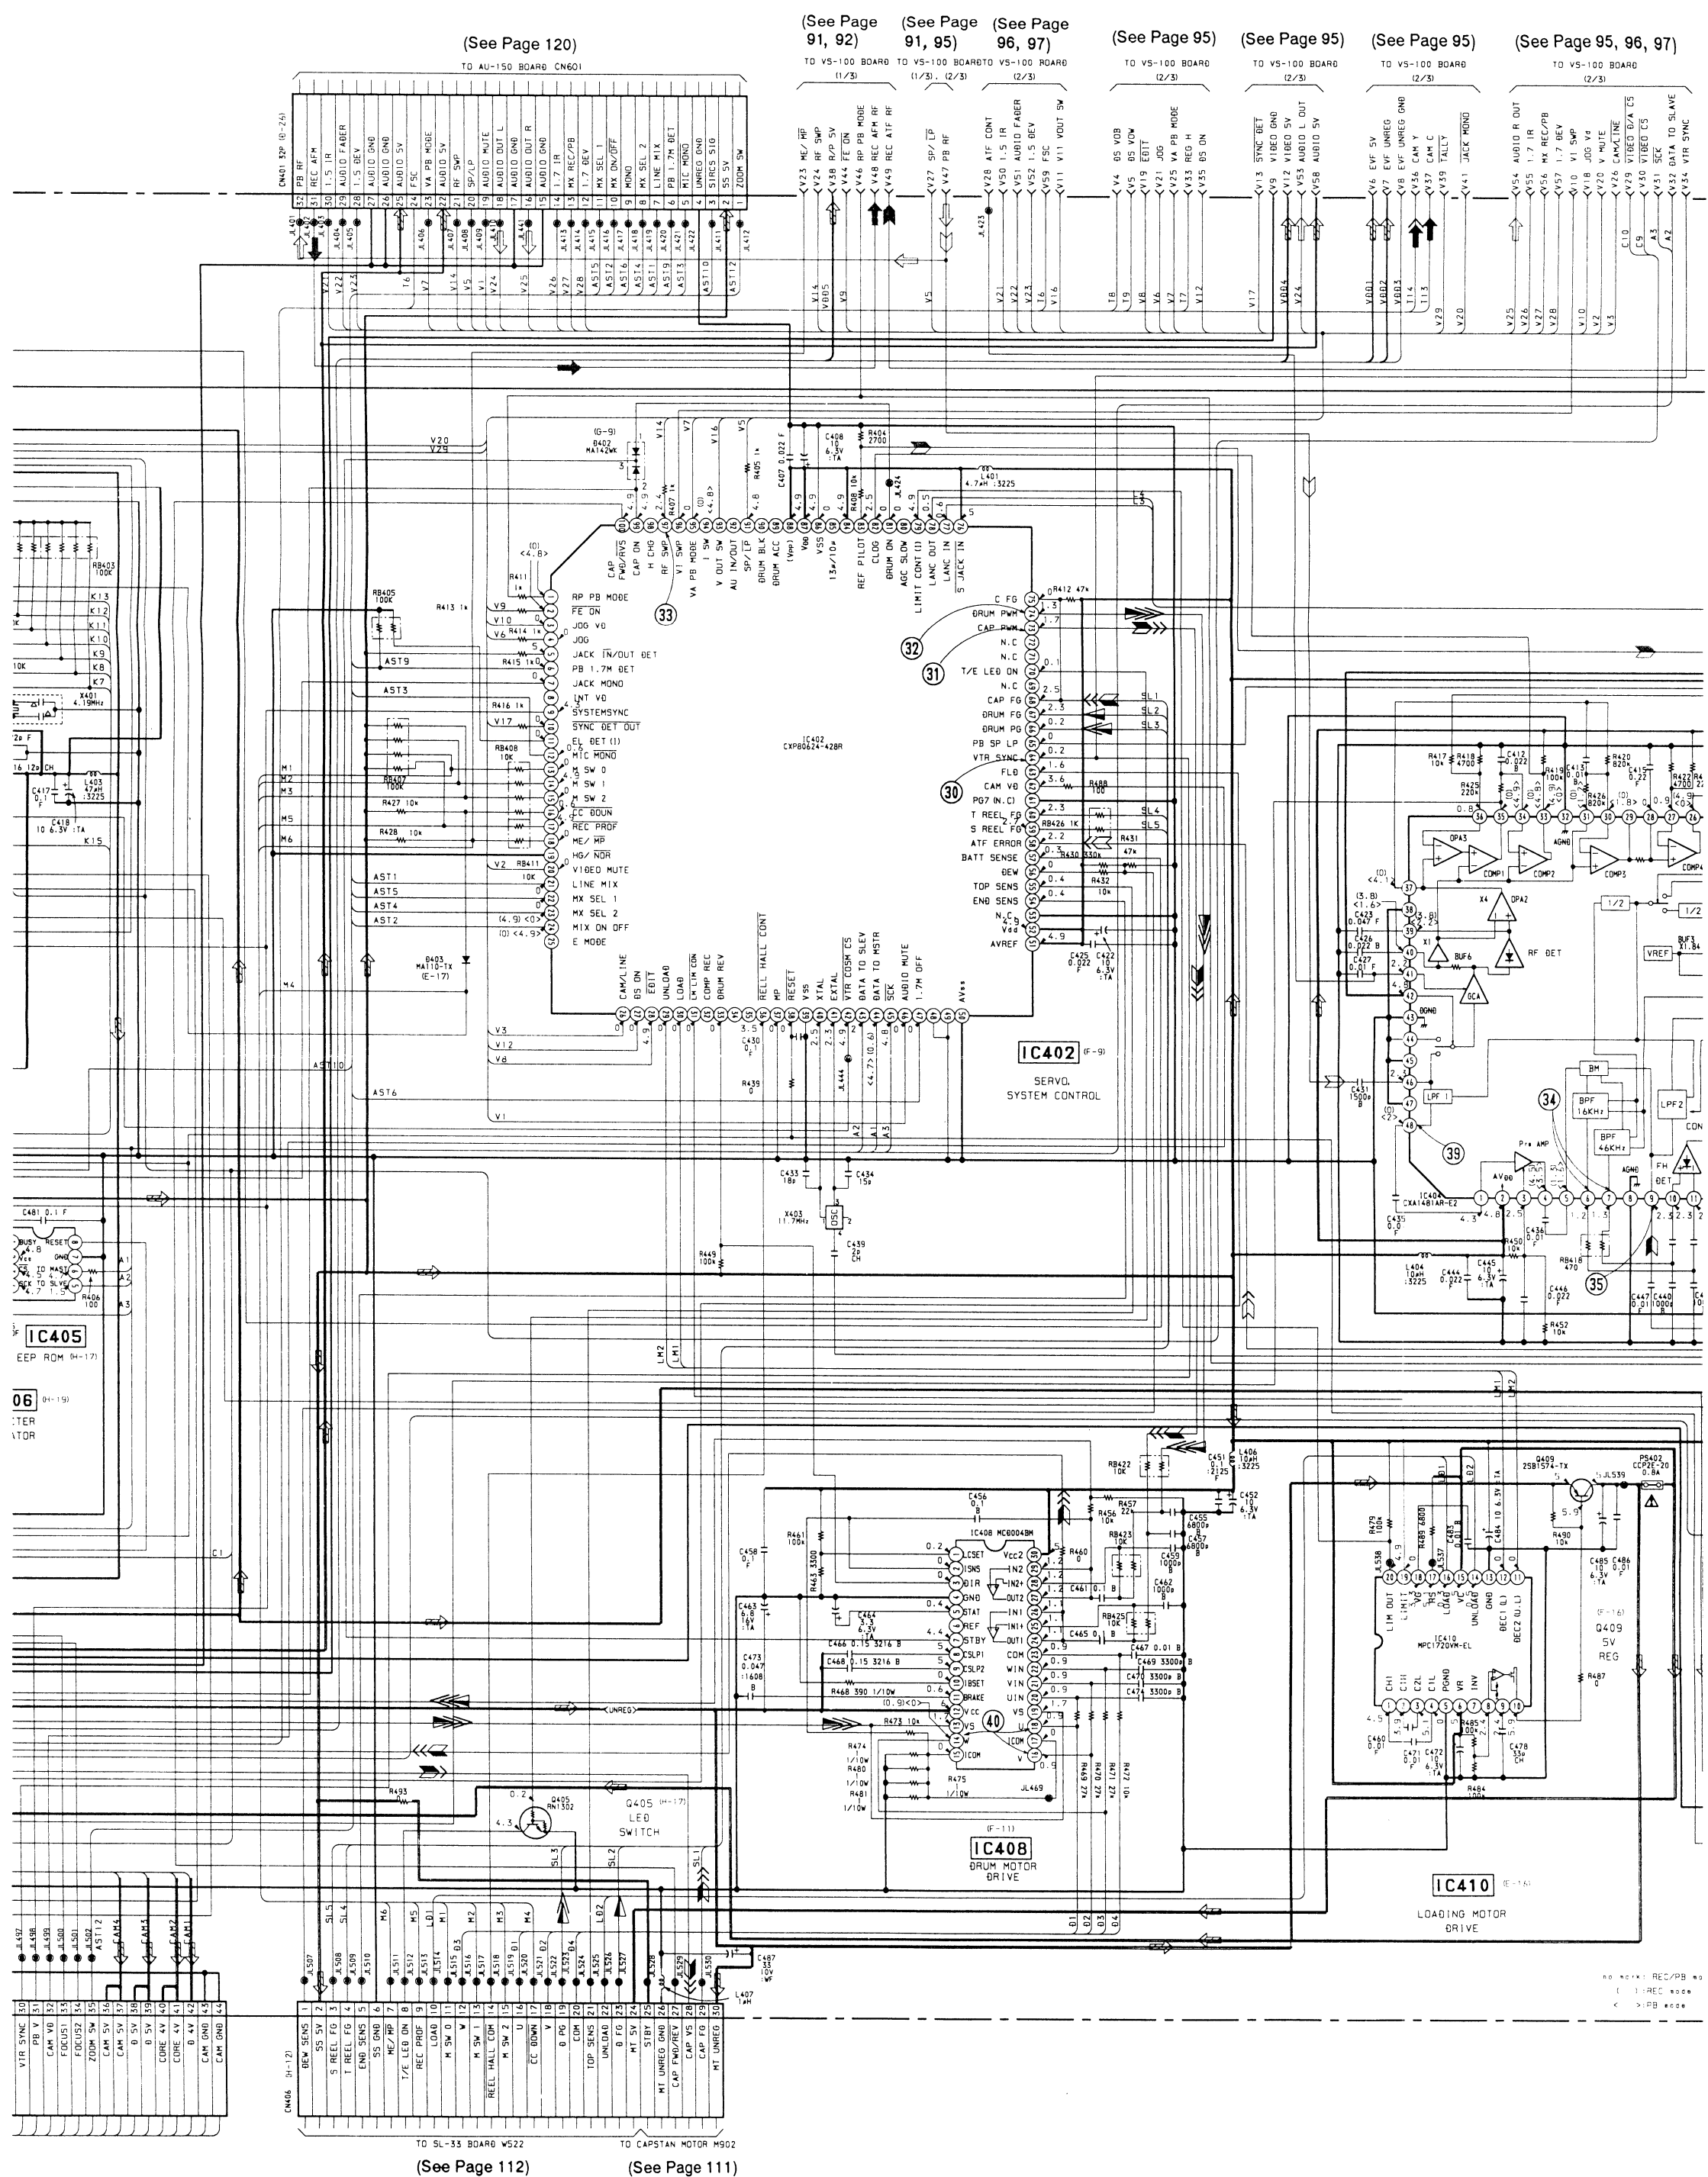

TO VS-100 BOARD (2/3) TO VS-100 BOARD (2/3) TO VS-100 BOARD (2/3)



- **SIGNAL PATH**

	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)			
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)			
Ref. signal			

30 2.5Vp-p H IC402 (64) REC/PB	35 3.8Vp-p 2V IC404 (15) PB
31 5Vp-p 22μsec IC402 (73,74) REC/PB	36 0.76Vp-p 6μsec IC404 (18) REC
32 5Vp-p 2V IC402 (97) REC/PB	37 0.45Vp-p 11.718MHz IC404 (23) REC/PB
33 0.9Vp-p 2V IC404 (6) (7) PB	38 2mVp-p 6μsec IC404 (48) PB
34 0.8Vp-p 6μsec IC404 (9) REC/PB	39 1.5Vp-p 10msec IC408 (14),(16),(18) REC/PB



CF-34 (CAMERA FUNCTION SWITCH), CN-73 (BOARD LINK), ED-37 (CAMERA FUNCTION SWITCH), MF-214 (MANUAL FOCUS SWITCH)

— Ref. No. JK-99 BOARD: 3000 series, LI-46 BOARD: 4000 series, MF-214 BOARD: 5000 series, CN-73 BOARD: 6000 series, CF-34 BOARD: 7000 series, ED-37 BOARD: 8000 series


- For printed wiring boards.
- CF-34, ED-37, MF-214, VK-32 boards are the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:	
Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.


CF-34 BOARD (COMPONENT SIDE)

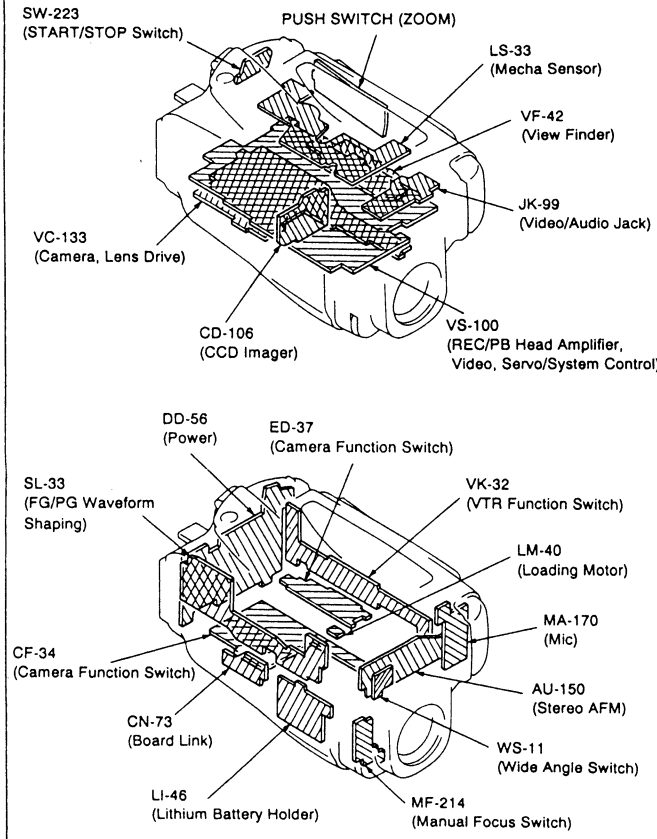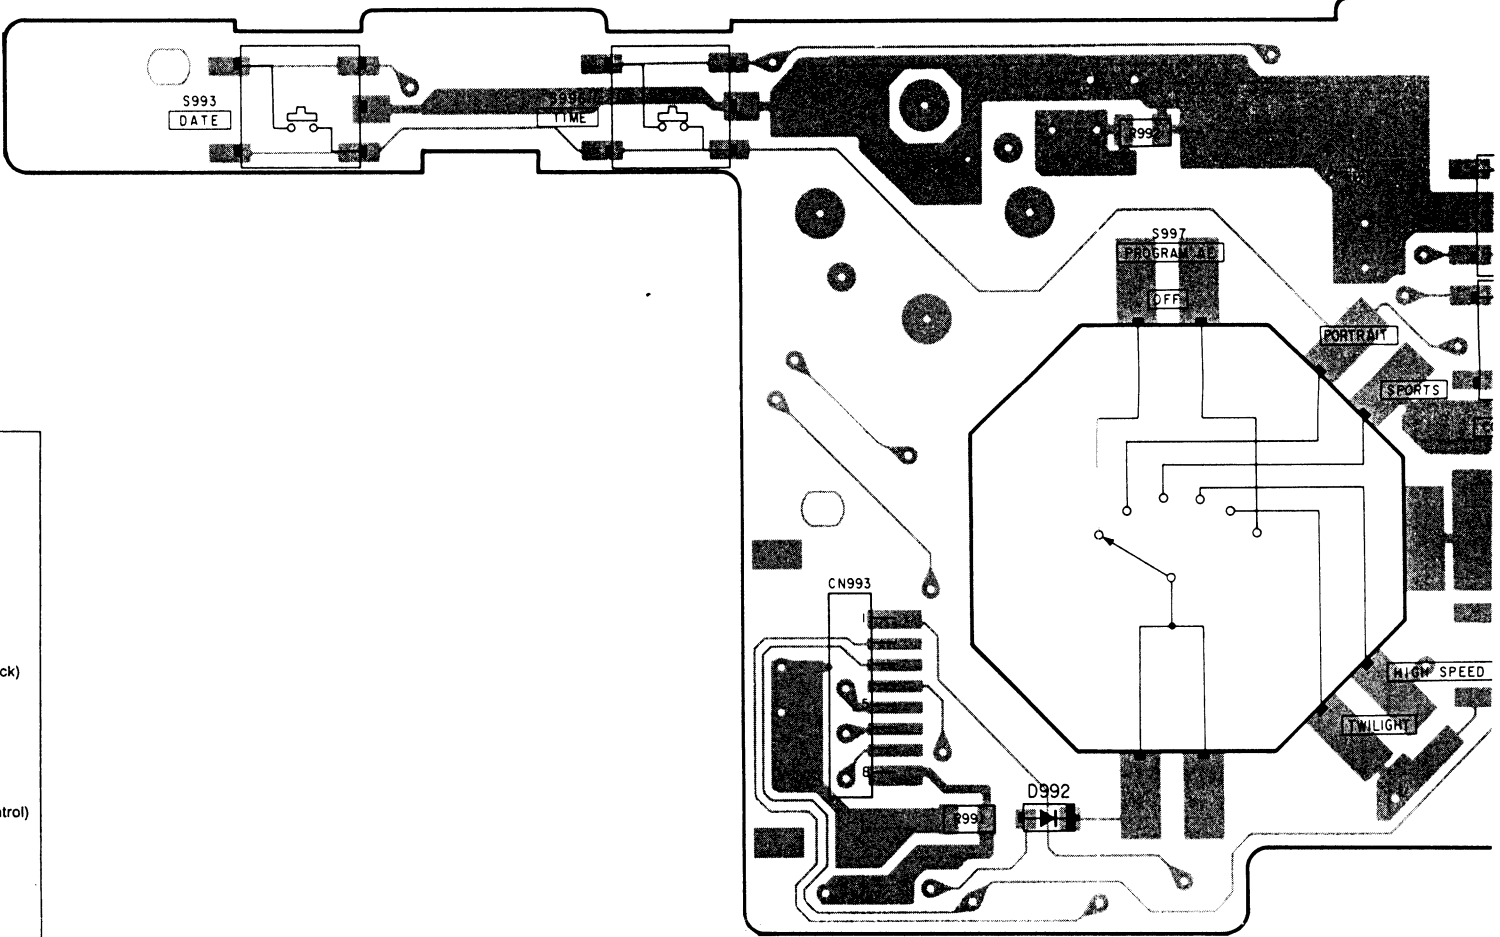


CN-73 BOARD (CONDUCTOR SIDE)

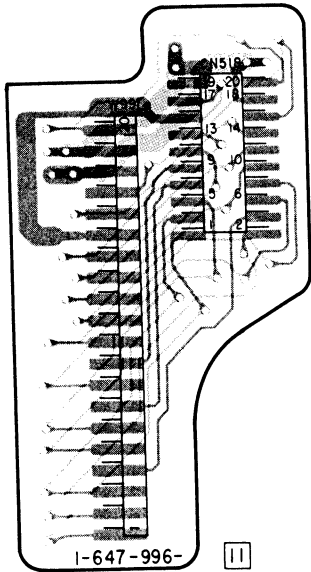

VK-32 BOARD (COMPONENT SIDE)

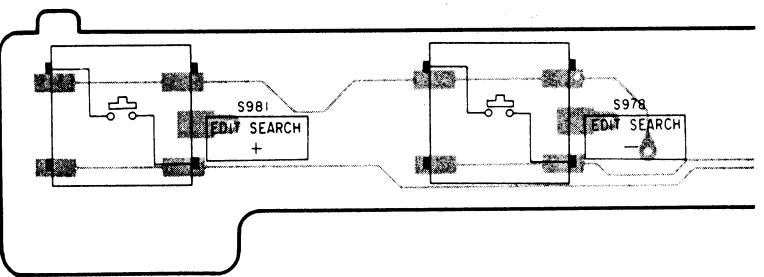

VK-32 BOARD (CONDUCTOR SIDE)

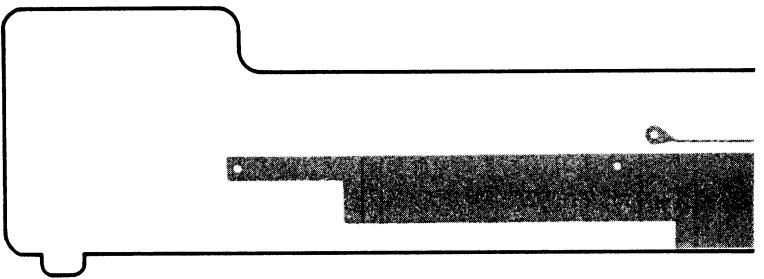




- For printed wiring board of CN-73, LI-46 and JK-99 boards.
 - ■■■ : Pattern from the side which enables seeing.
 - ■■■ : Pattern of the rear side.
- (The other layer's patterns are not indicated.)

ies, CF-34 BOARD: 7000 series, ED-37 BOARD: 8000 series, VK-32 BOARD: 9000 series —


ie pattern face side seen from
face are indicated.




ie parts face side seen from the
are indicated.

CF-34BOARD (CONDUCTOR SIDE)

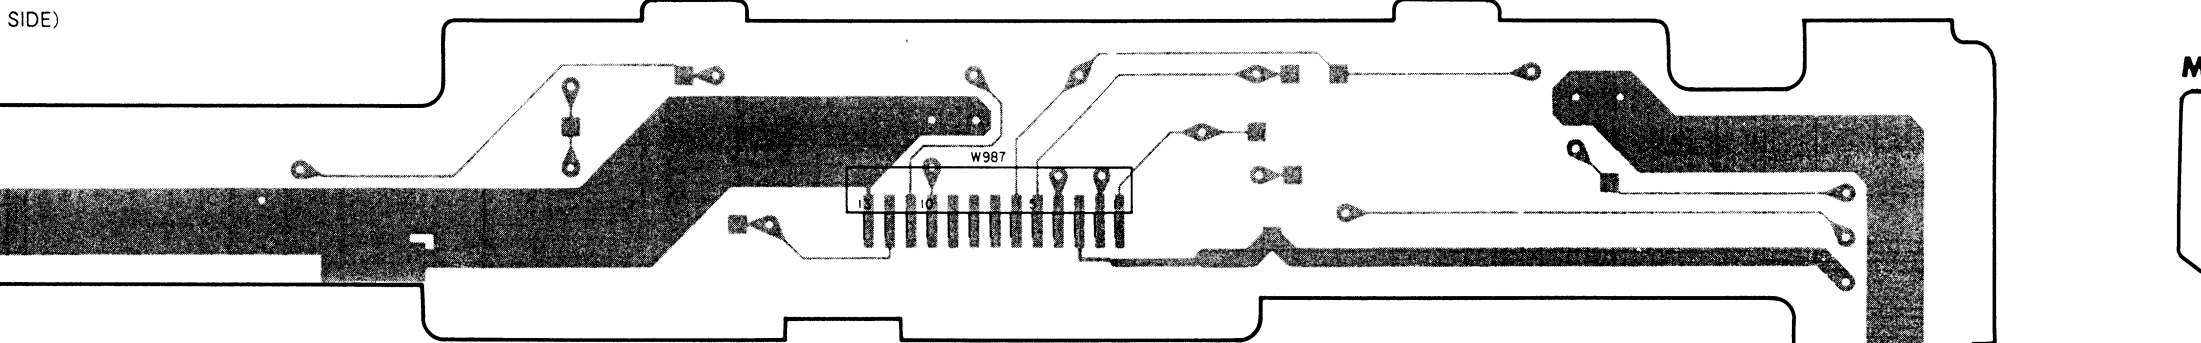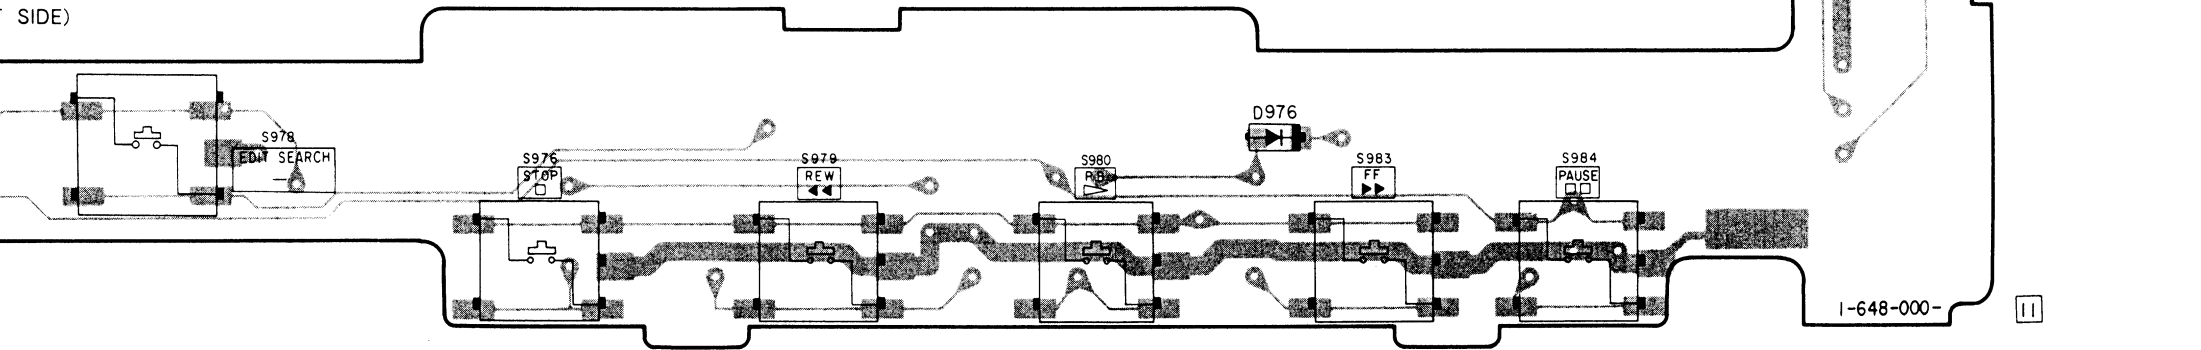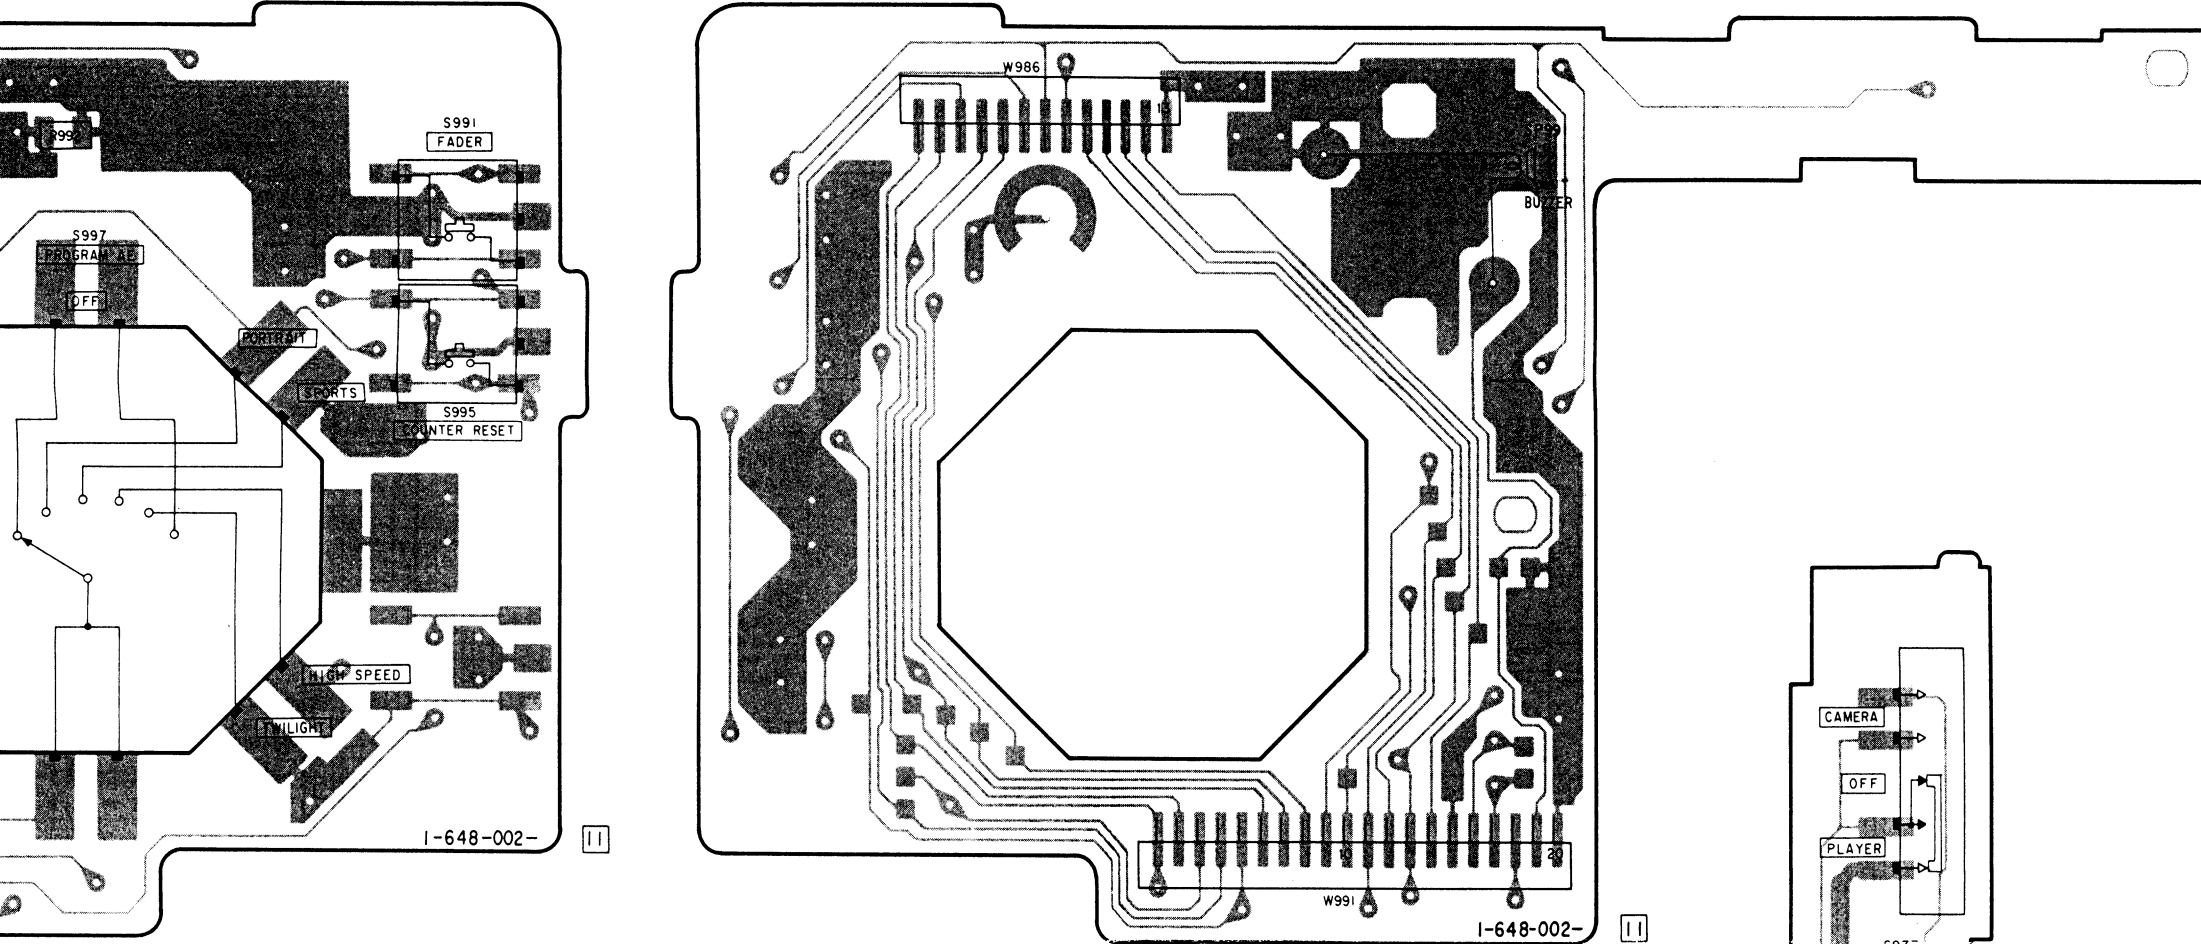


JK-99 BOARD

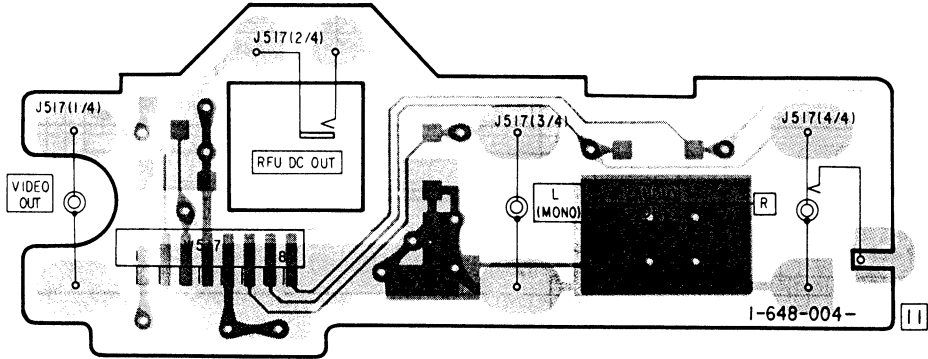


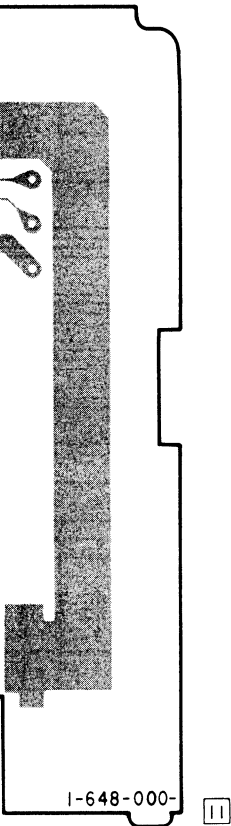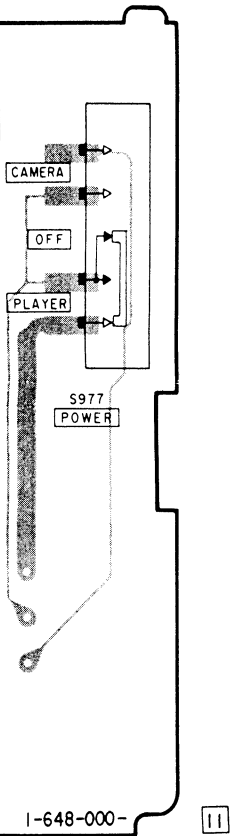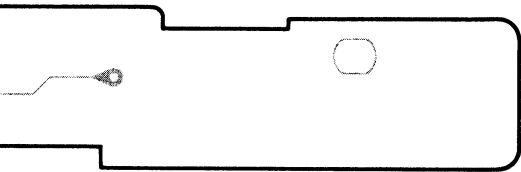


ED-37 BOARD (COMPONENT SIDE)

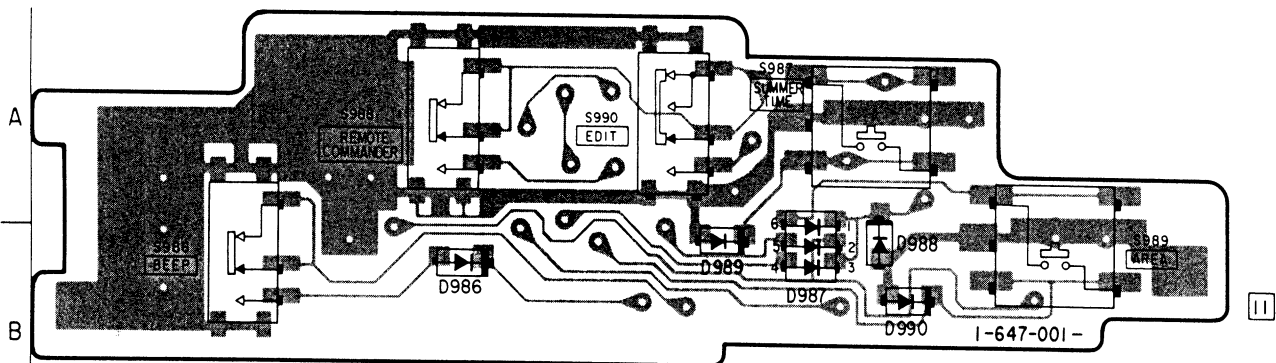


ED-37 BOARD (CONDUCTOR SIDE)

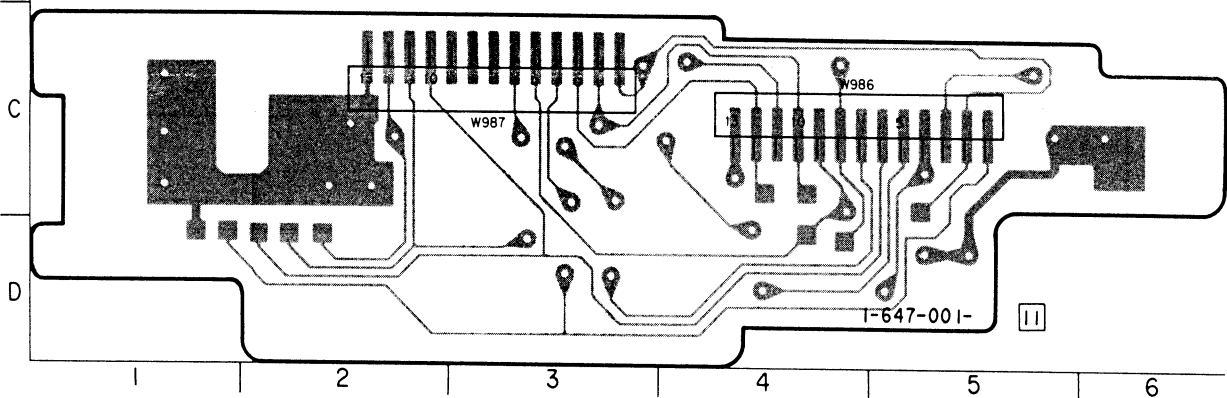


MF-214 BOARD (COMPONENT SIDE)

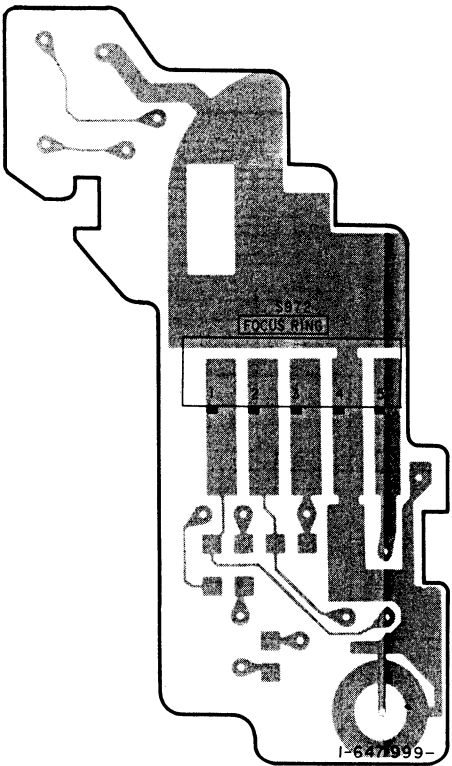

MF-214 BOARD (CONDUCTOR SIDE)

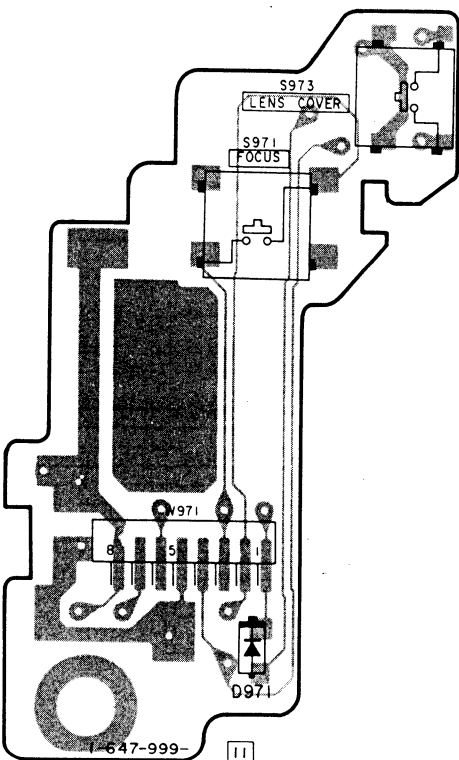


LI-46 BOARD (CONDUCTOR SIDE)

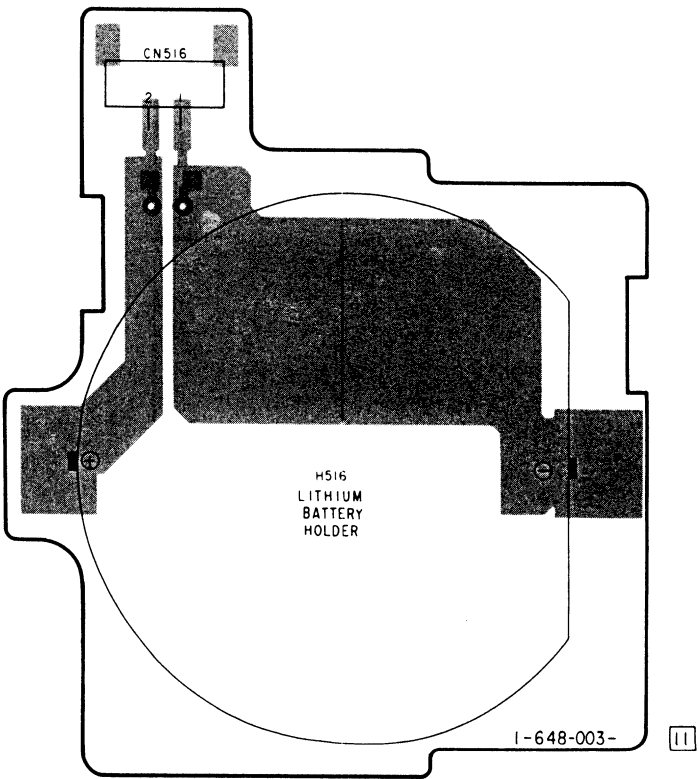

— Ref. No. JK-99 BOARD: 3000 series, LI-46 BOARD: 4000 series, MF-214 BOARD: 5000 series, CN-73 BOARD: 6000 series, CF-34 BOARD: 7000 series, ED-37 BOARD: 8000 series, VK-32 BOARD: 9000 series —


A
B
C
D
E
F
G
H
I
J

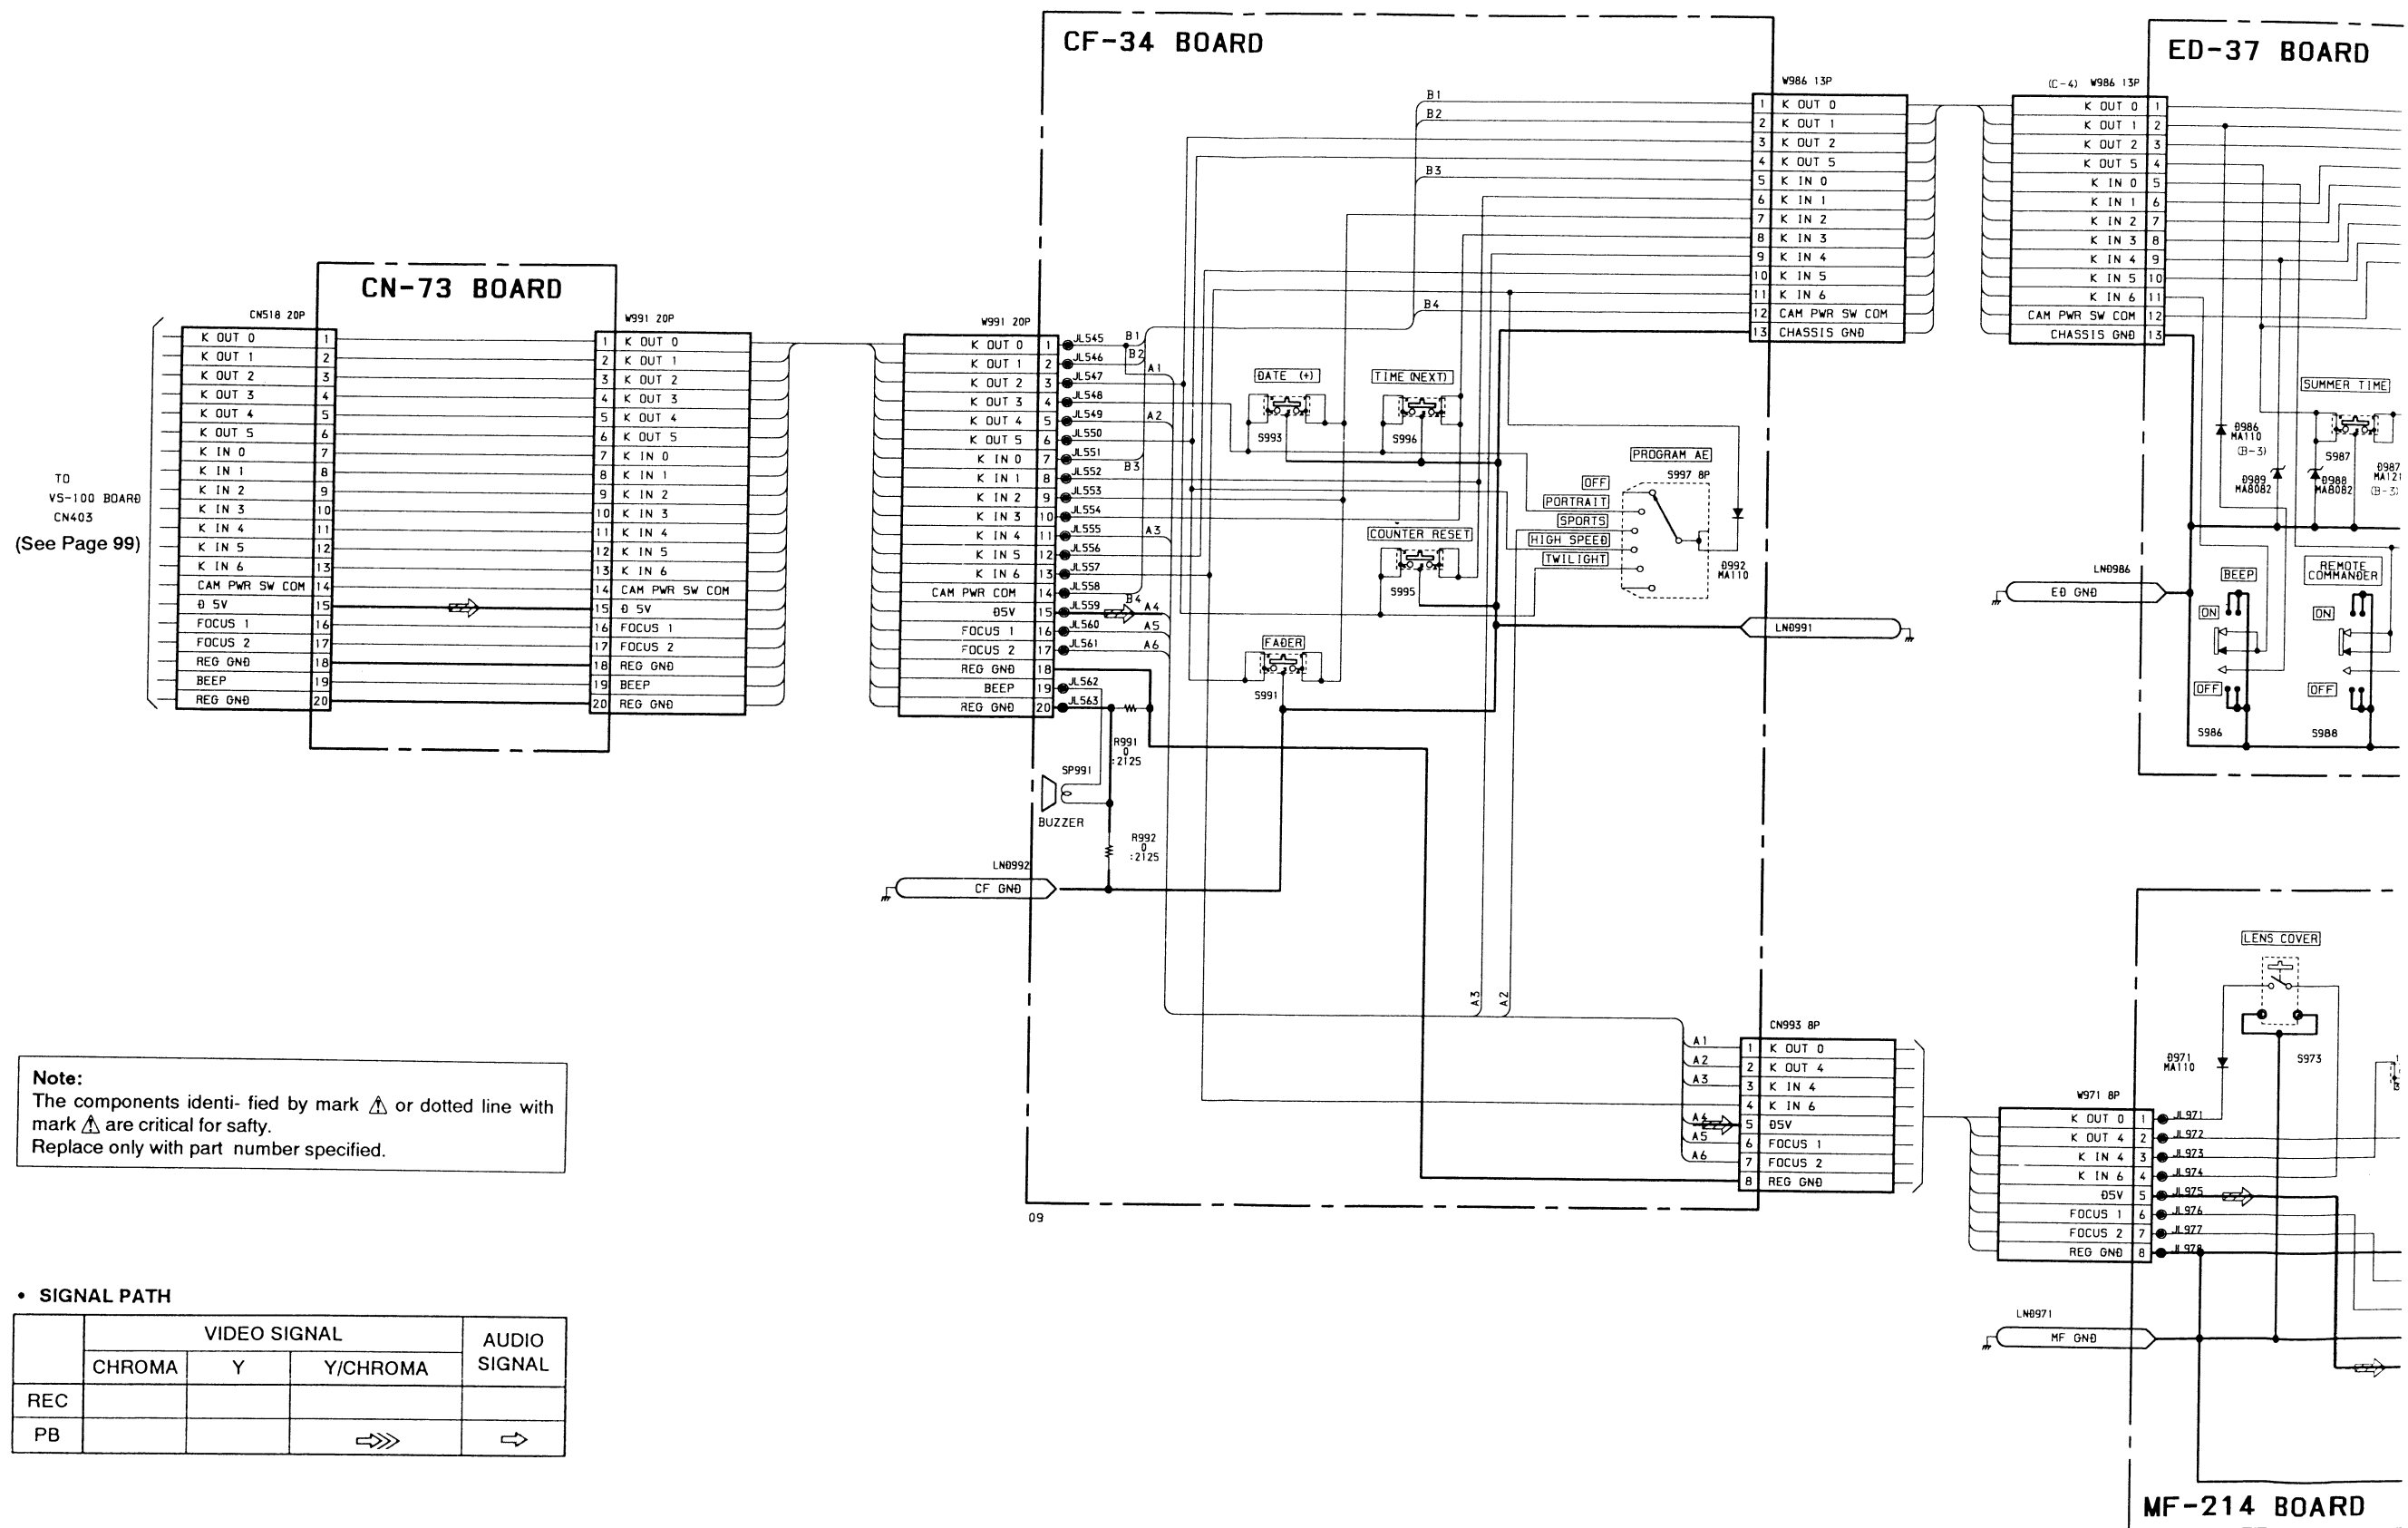

MANUAL FOCUS SWITCH), VK-32 (VTR FUNCTION SWITCH), JK-99 (VIDEO/AUDIO JACK), LI-46 (LITHIUM BATTERY HOLDER) SCHEMATIC DIAGRAMS

8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
---	---	----	----	----	----	----	----	----	----	----	----	----	----	----

ies, ED-37 BOARD: 8000 series, VK-32 BOARD: 9000 series —

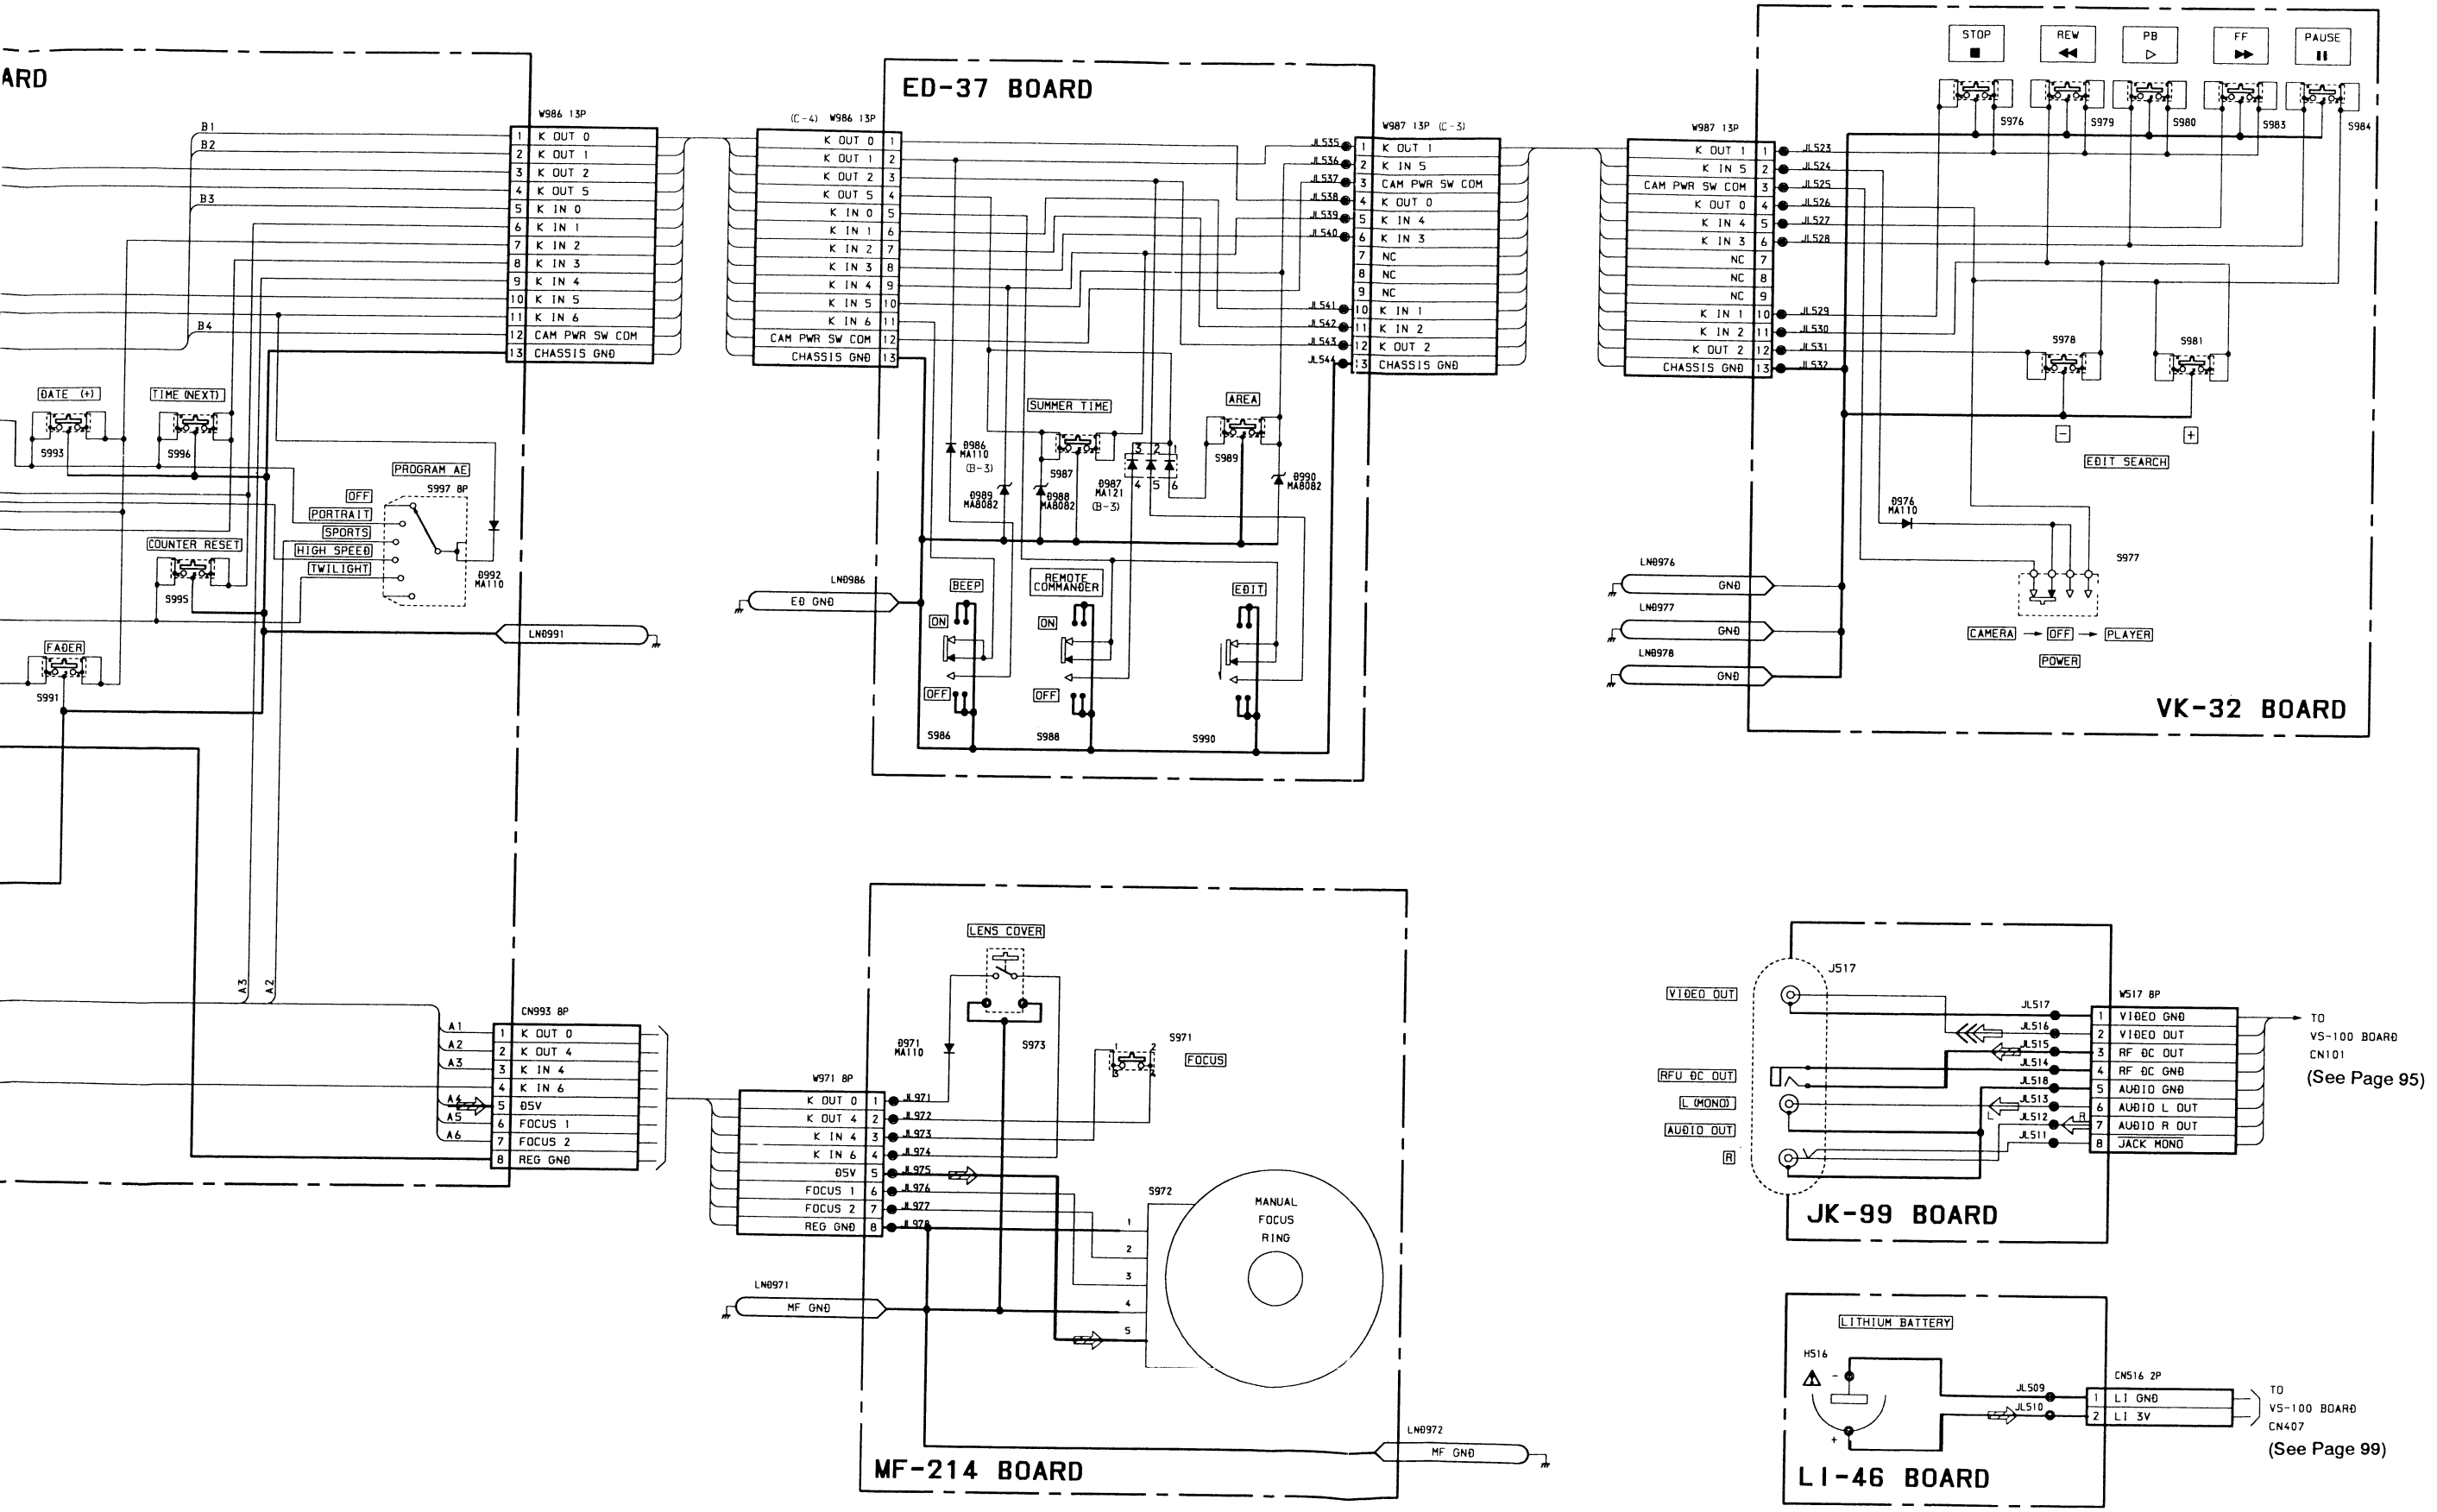

SL-33 (FG/PG WAVEFORM SHAPING), FP-442 (MODE SWITCH), LM-40 (LOADING MOTOR), LS-33 (MECHA SENSOR) SCHEMATIC DIAGRAMS


— Ref. No. SL-33 BOARD: 5000 series, LS-33 BOARD: 9000 series —

A
B
C
D
E
F
G
H
I
J

• SIGNAL PATH

	REC	REC/PB	PB
Drum speed servo		▶	
Drum phase servo		▶▶	
Drum servo (speed and phase)		▶▶▶	

A-MECHA

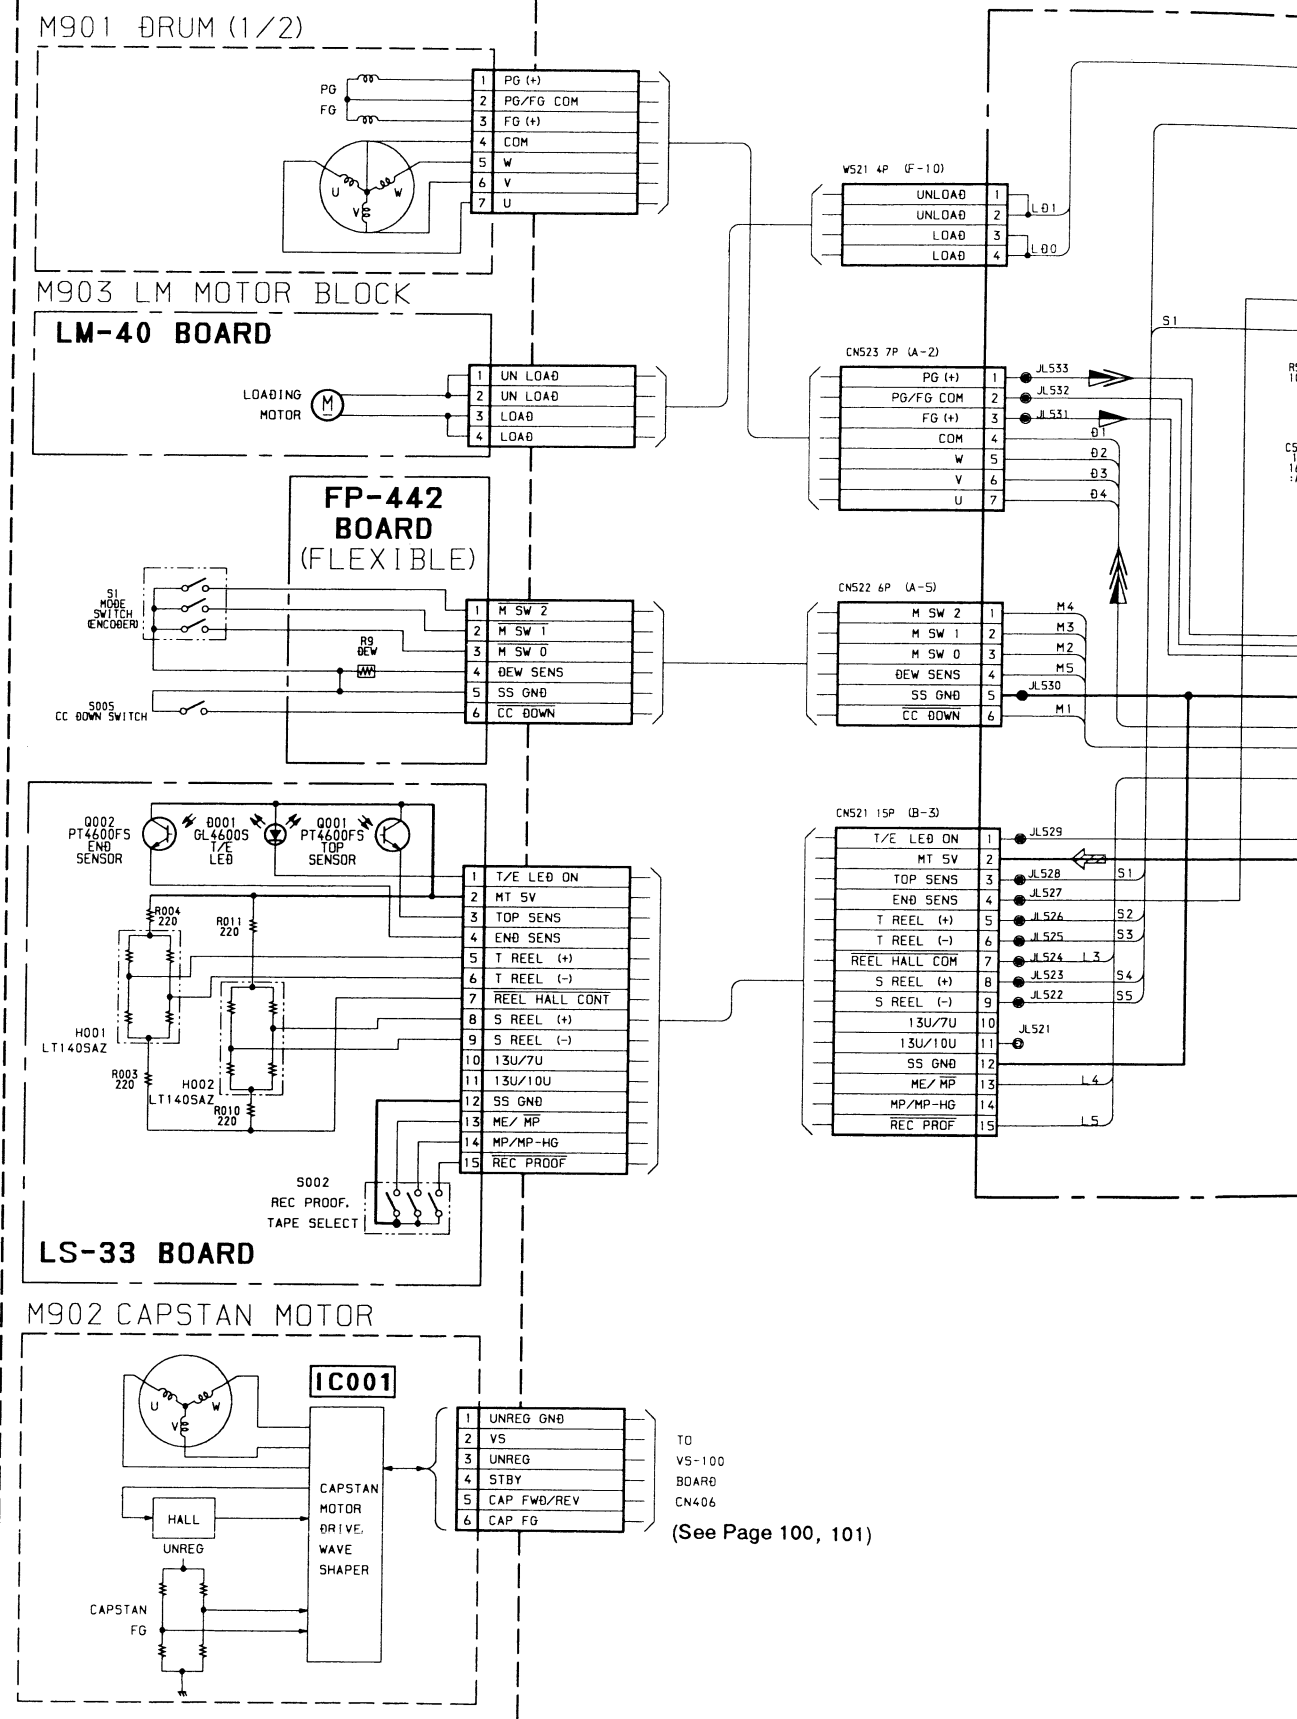

(See Page 100, 101)

(LOADING MOTOR), LS-33 (MECHA SENSOR) SCHEMATIC DIAGRAMS

6	7	8	9	10	11	12	13	14	15	16	17	18	19
---	---	---	---	----	----	----	----	----	----	----	----	----	----

1A

DRUM (1/2)

LM MOTOR BLOCK
0 BOARD

FP-442
BOARD
(FLEXIBLE)

3 BOARD


CAPSTAN MOTOR

IC001

1 UNREG GND
2 VS
3 UNREG
4 STBY
5 CAP FWD/REV
6 CAP FG

TO
VS-100
BOARD
CN406

(See Page 100, 101)

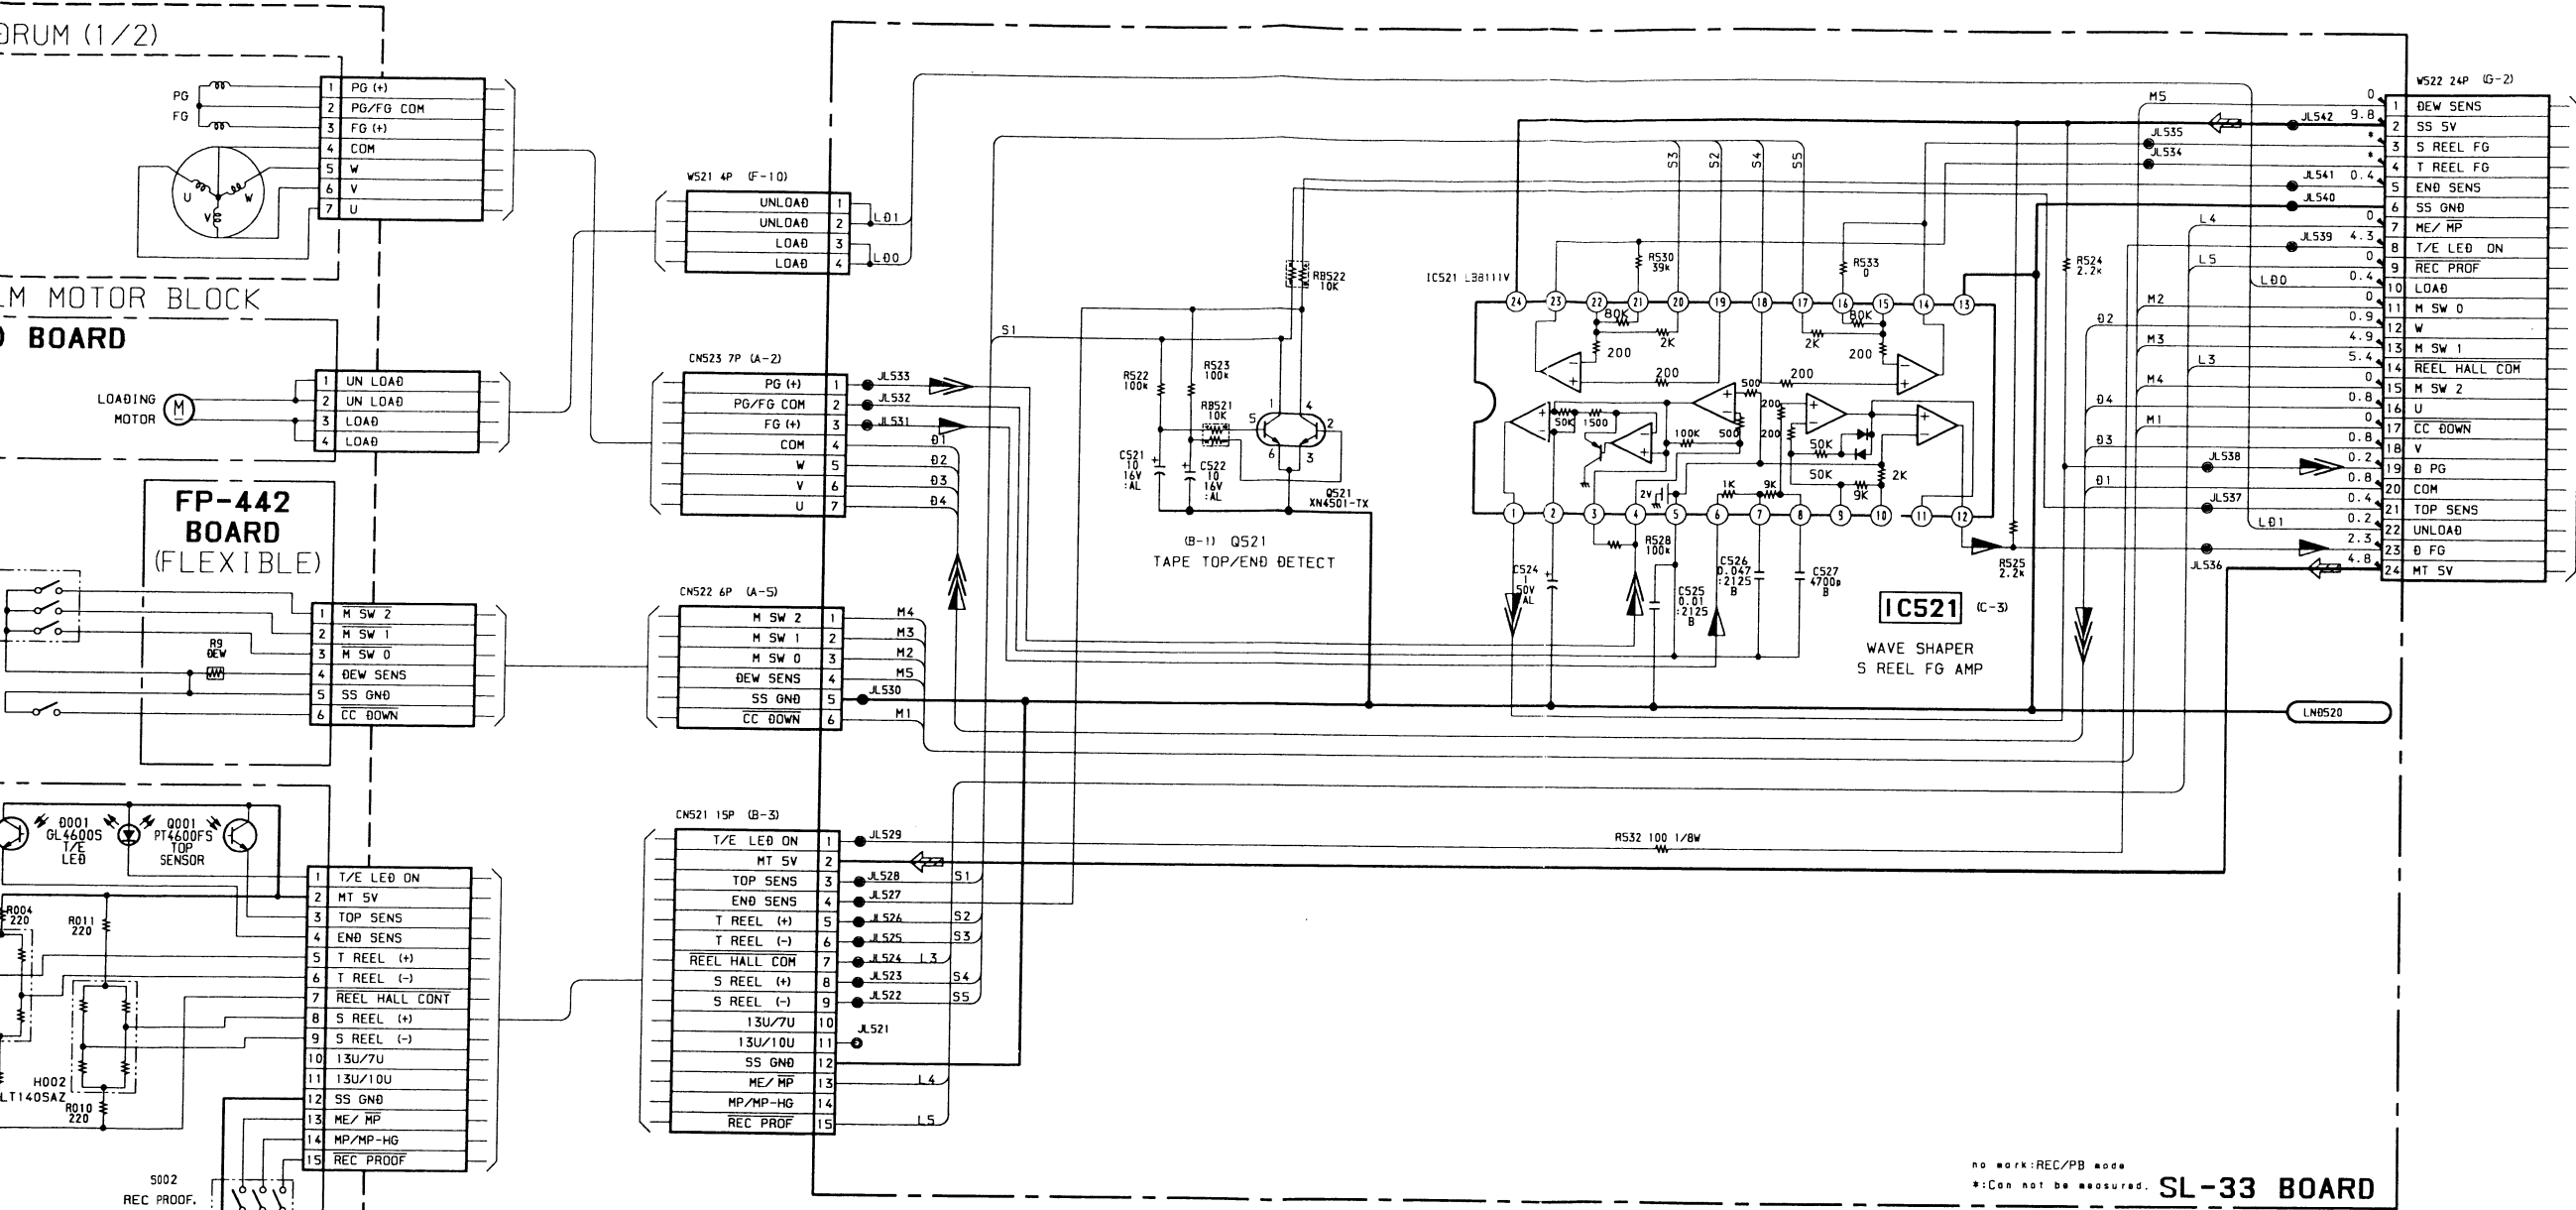

no mark: REC/PB mode
*: Can not be measured. SL-33 BOARD

TO
VS-100
BOARD
CN406
(See Page
100)


— Ref. No. SL-33 BOARD: 5000 series, LS-33 BOARD: 0000 series —

- FP-442, LM-40 boards are replaced as blocks, so that there PRINTED WIRING BOARDS are omitted.


- For printed wiring boards.
- SL-33 board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:
Pattern fa
(Conduct
Parts fac
(Compon


LS-33 BOARD

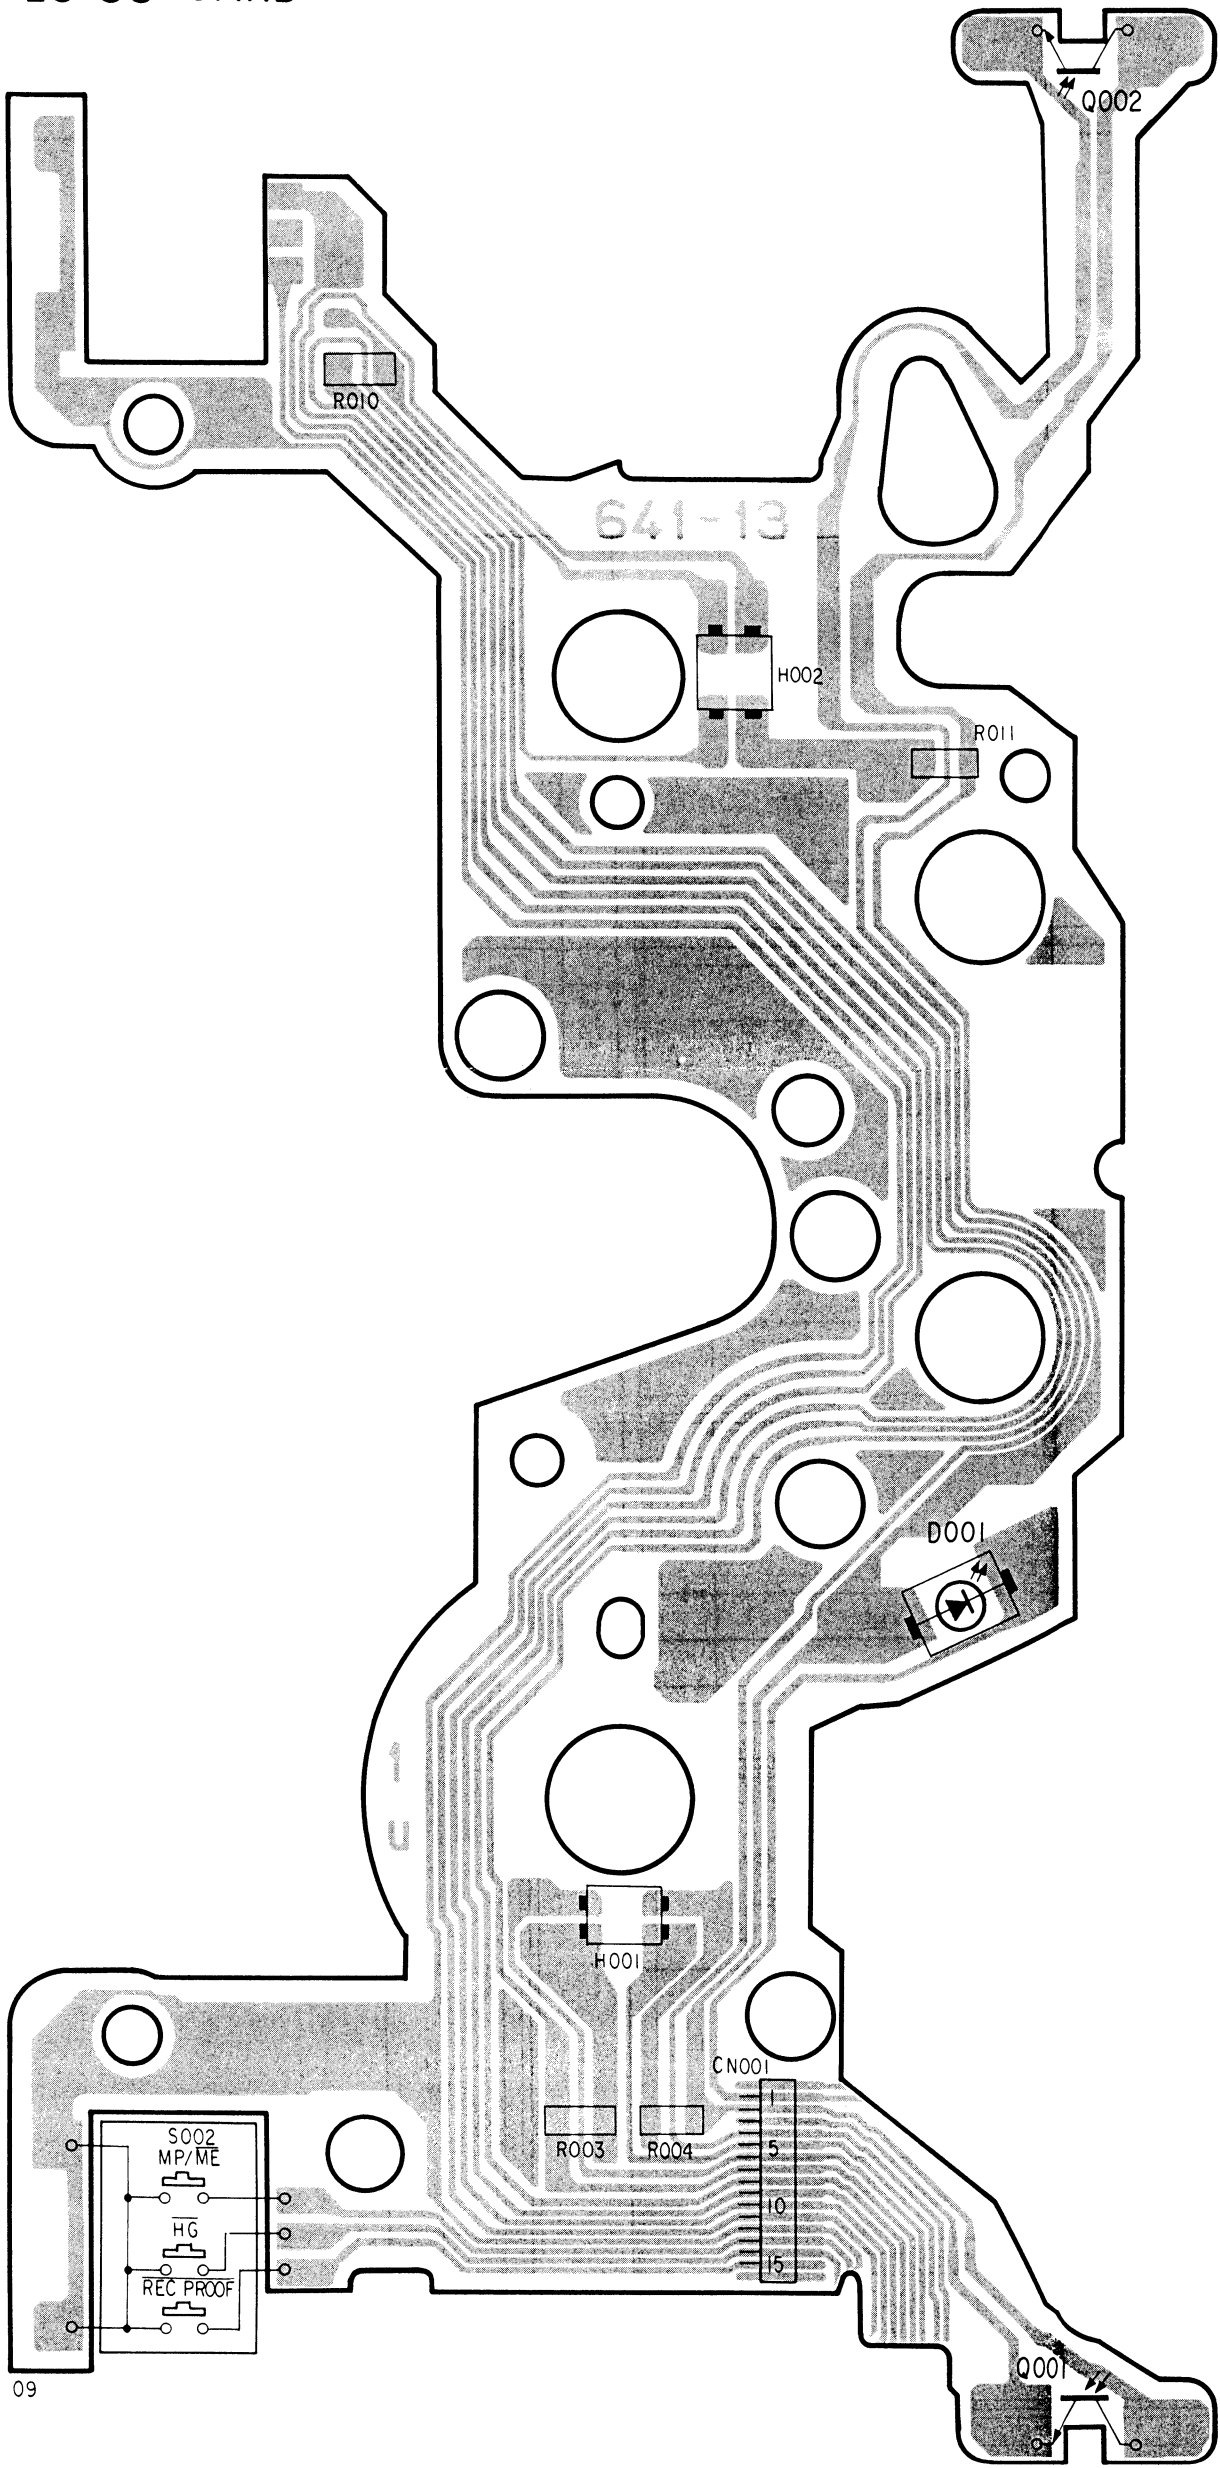

SL-33 BOARD (COMPONENT SIDE)

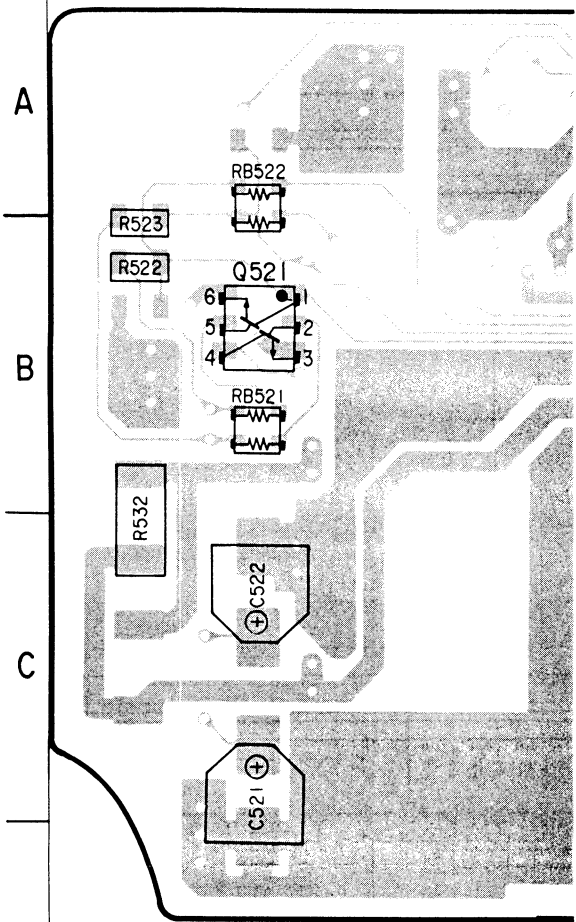

SL-33 BOARD (CONDUCTOR SIDE)

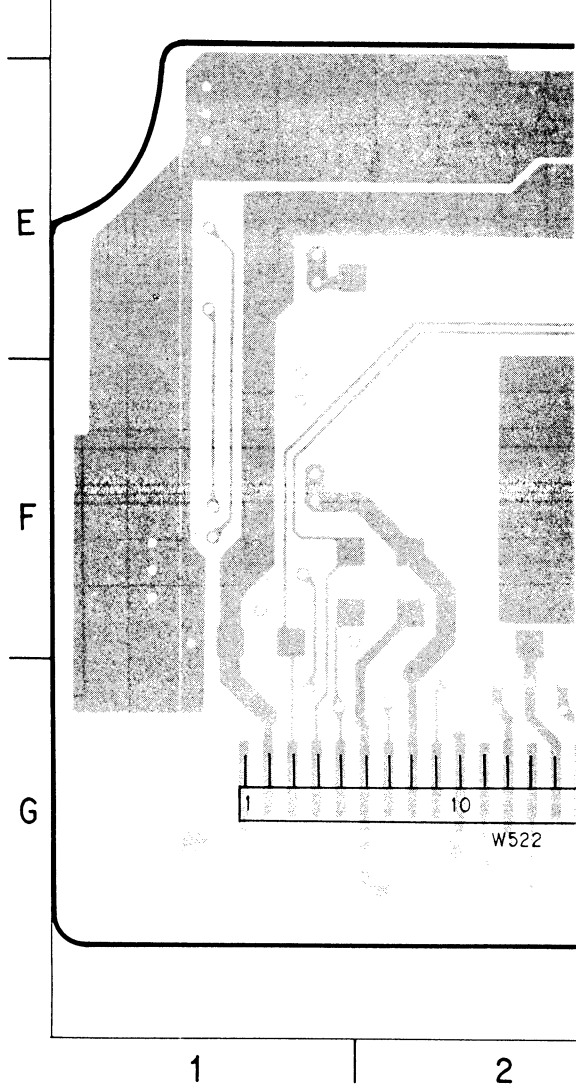

LS-33 (MECHA SENSOR) PRINTED WIRING BOARDS


3.
iring board which has four layers
patterns are omitted.

Caution:


Pattern face side: Parts on the pattern face side seen from
(Conductor Side) the pattern face are indicated.




Parts face side: Parts on the parts face side seen from the
(Component side) parts face are indicated.

PL-33 BOARD (COMPONENT SIDE)

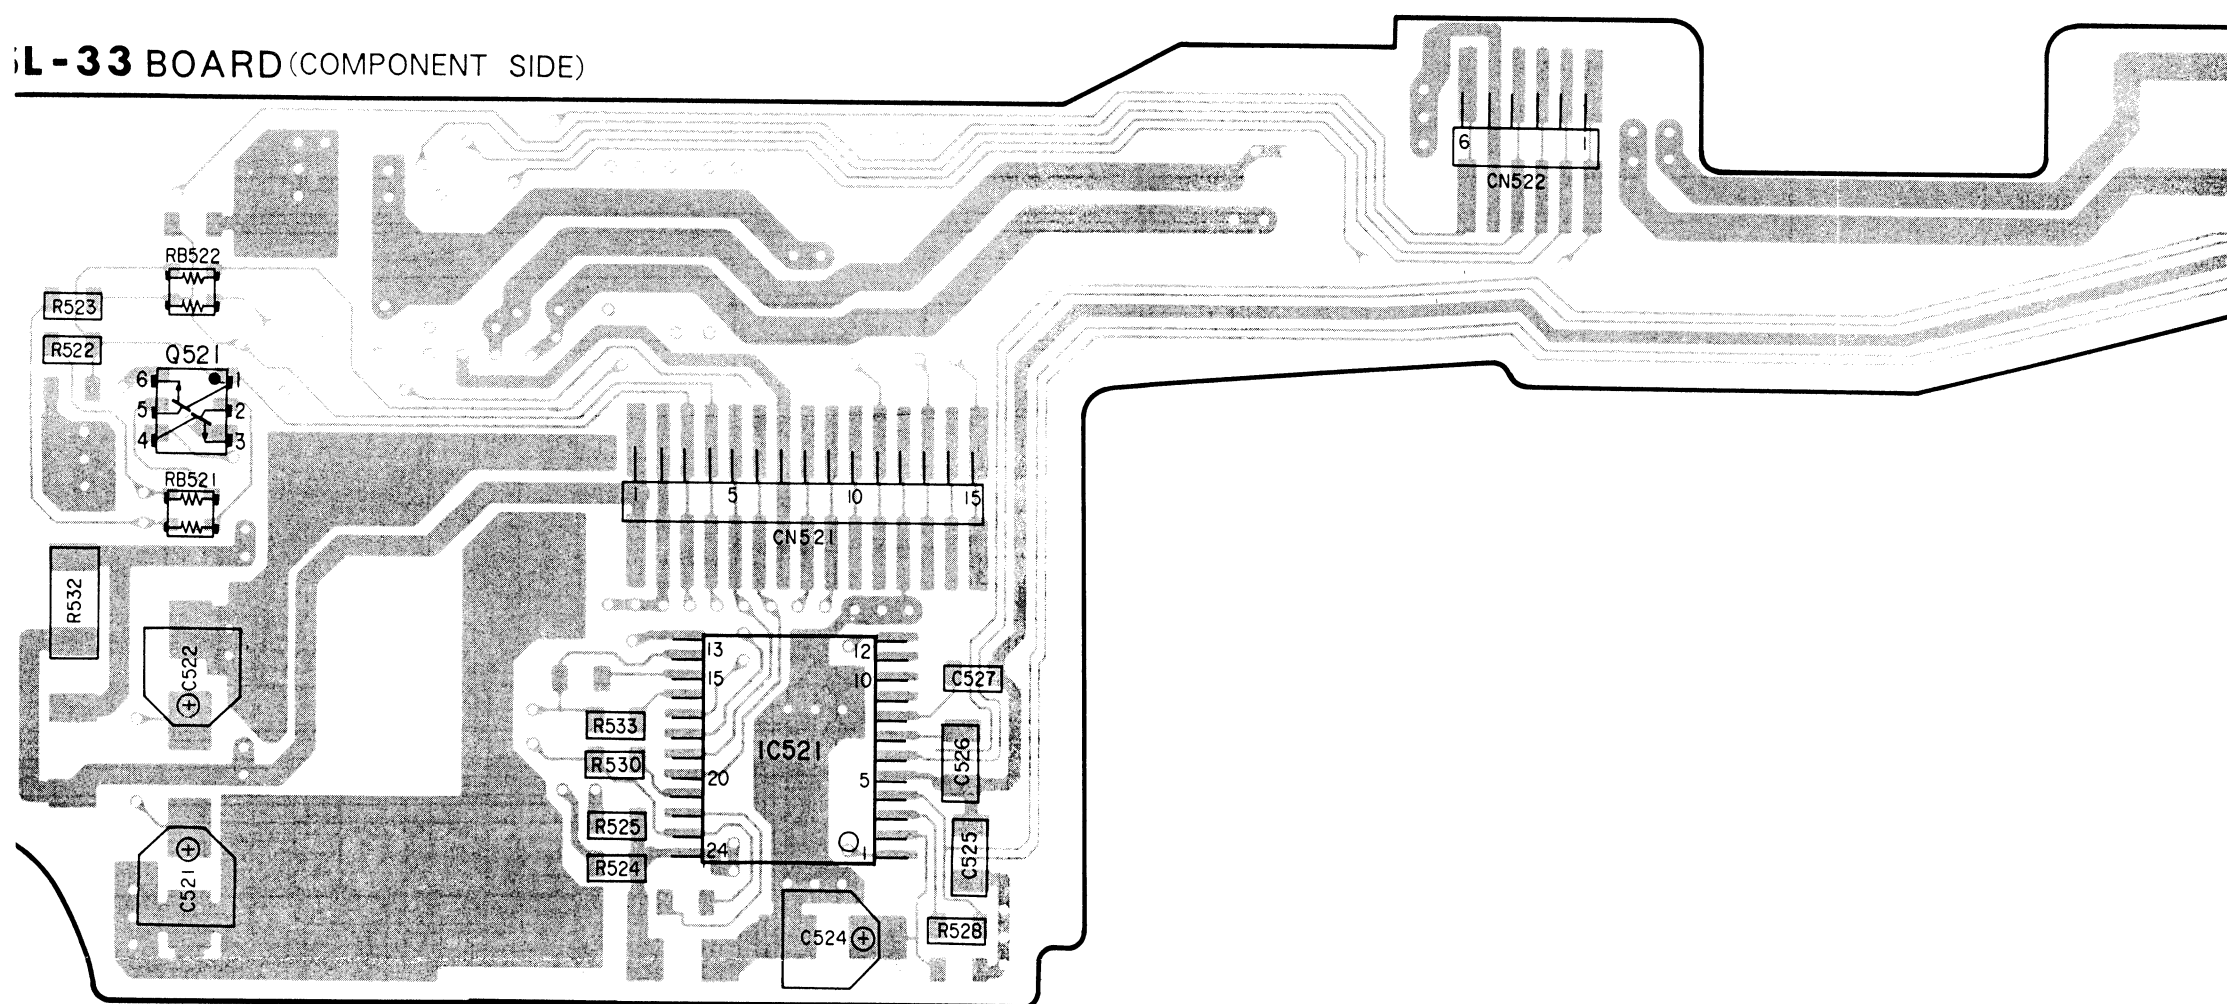

L-33 BOARD (CONDUCTOR SIDE)

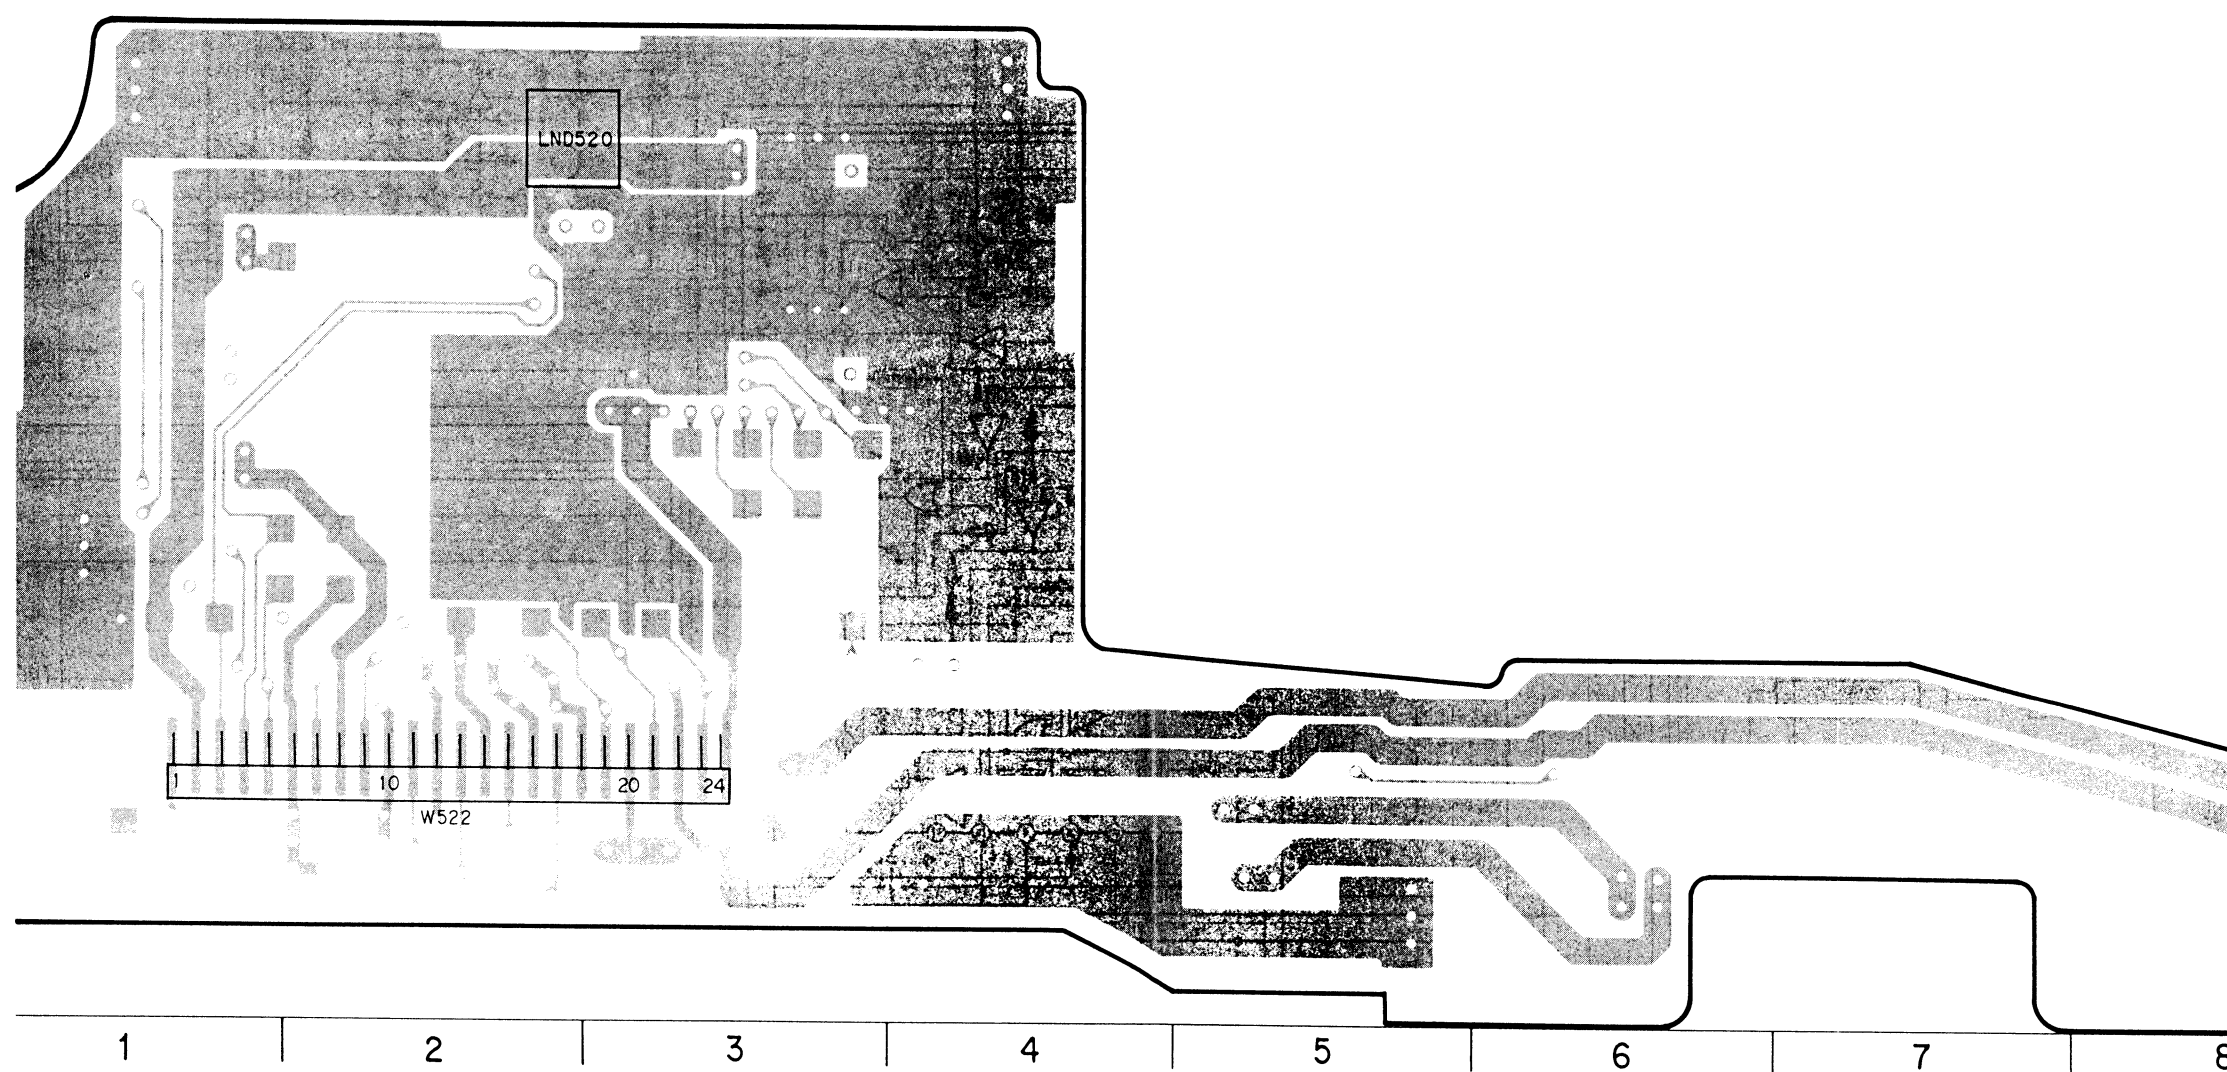

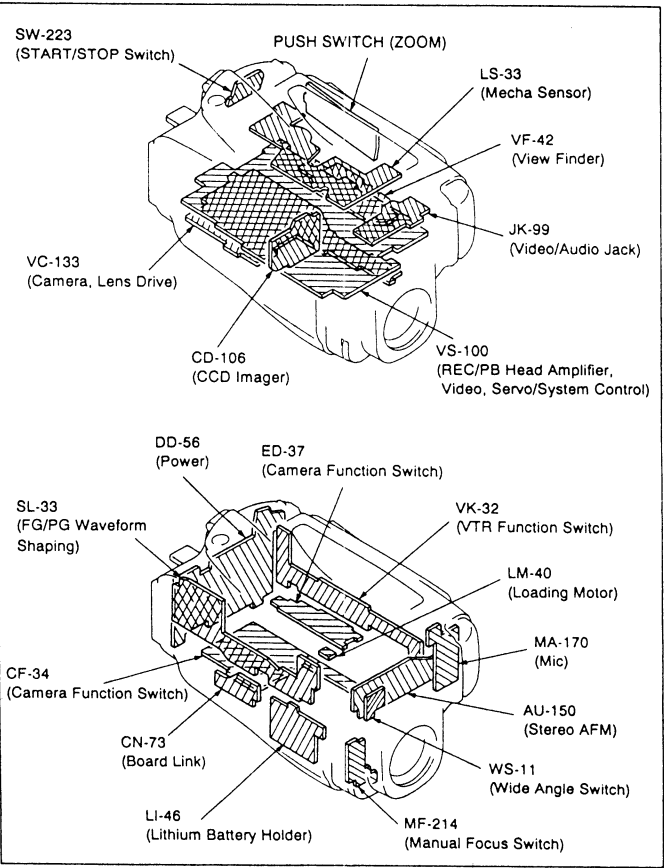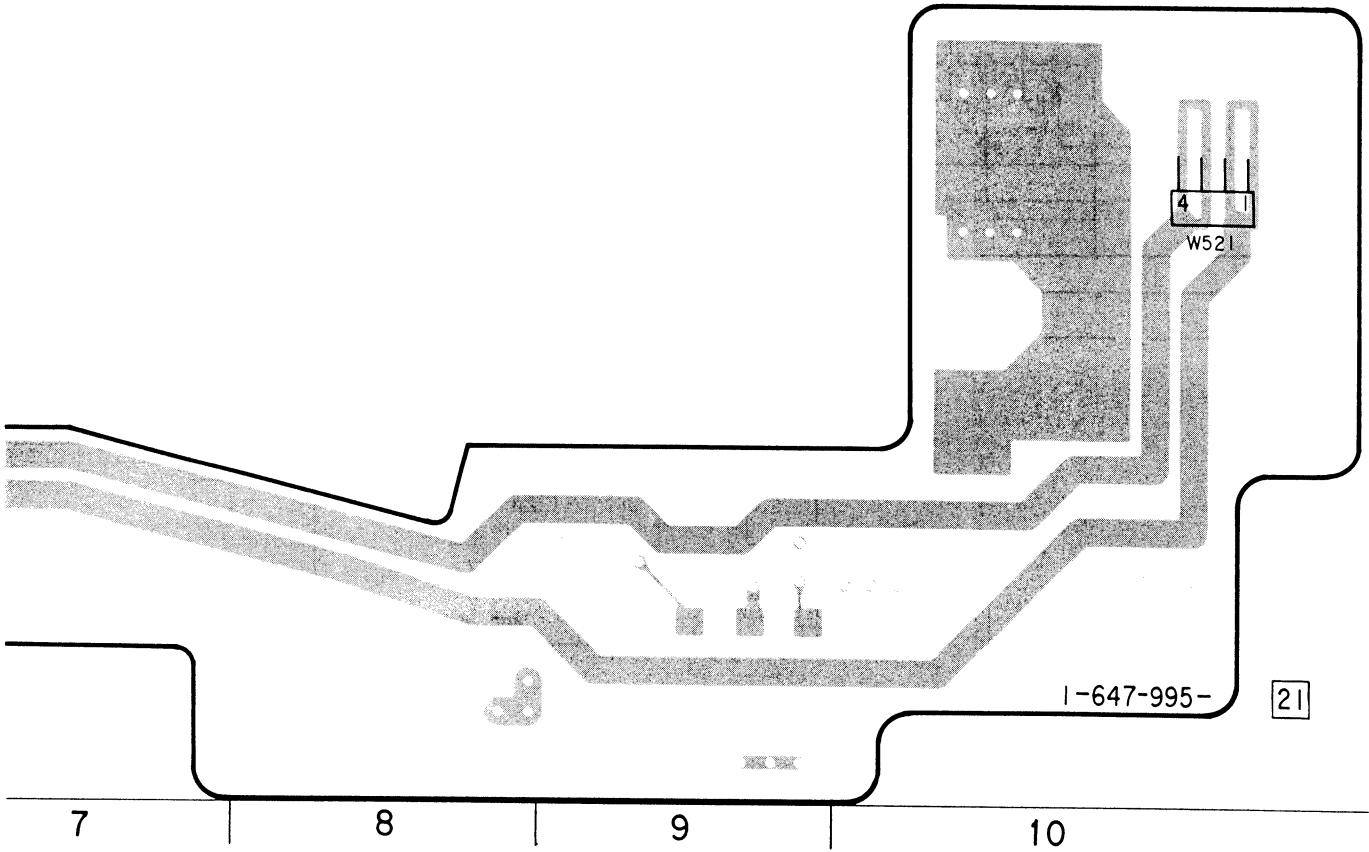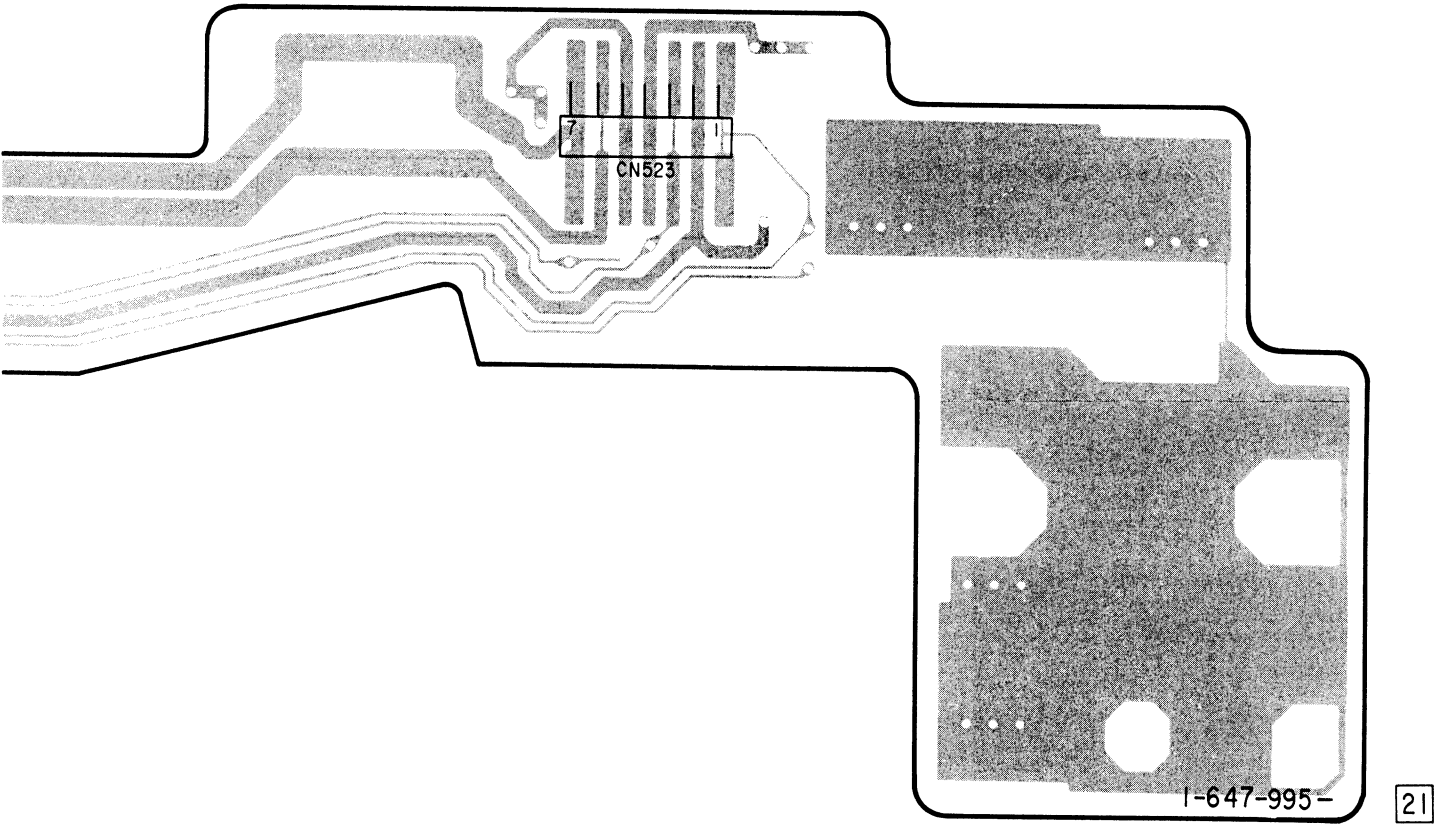


AU-150 (STEREO AFM), MA-170 (MIC), WS-11 (WIDE ANGLE SWITCH) SCHEMATIC DIAGRAMS

— Ref. No. AU-150, MA-170, WS-11 BOARDS: 2000 series —

• SIGNAL PATH

	VIDEO SIGNAL			AUDIO SIGNAL
	CHROMA	Y	Y/CHROMA	
REC				➡
PB				➡

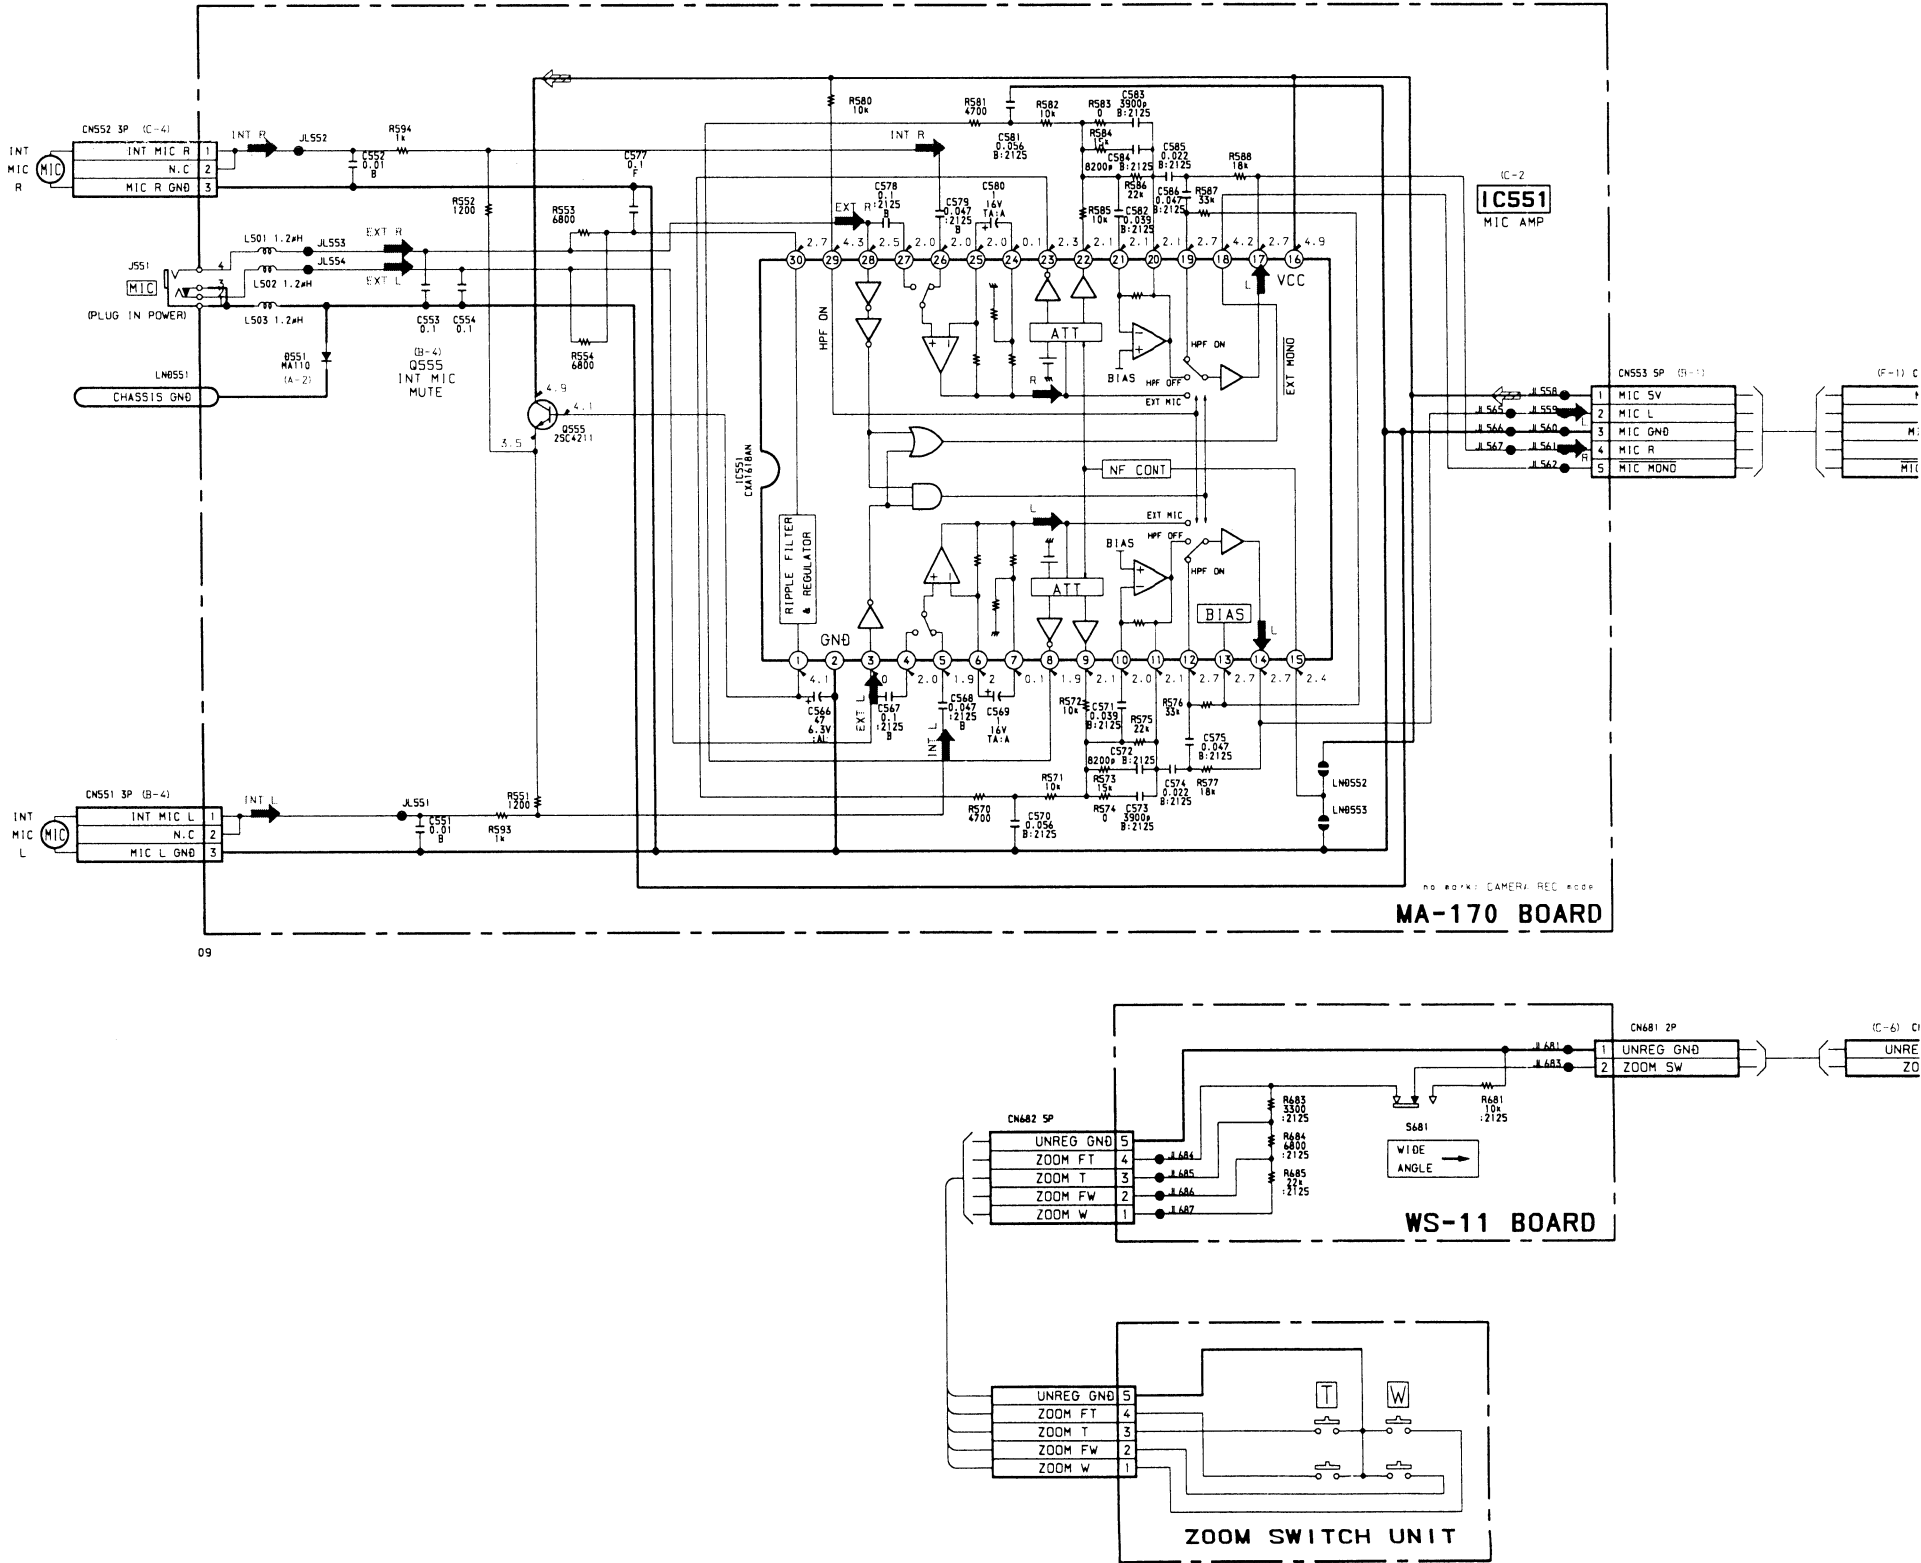

19

20

21

22

23

24


25

26

27

28

29

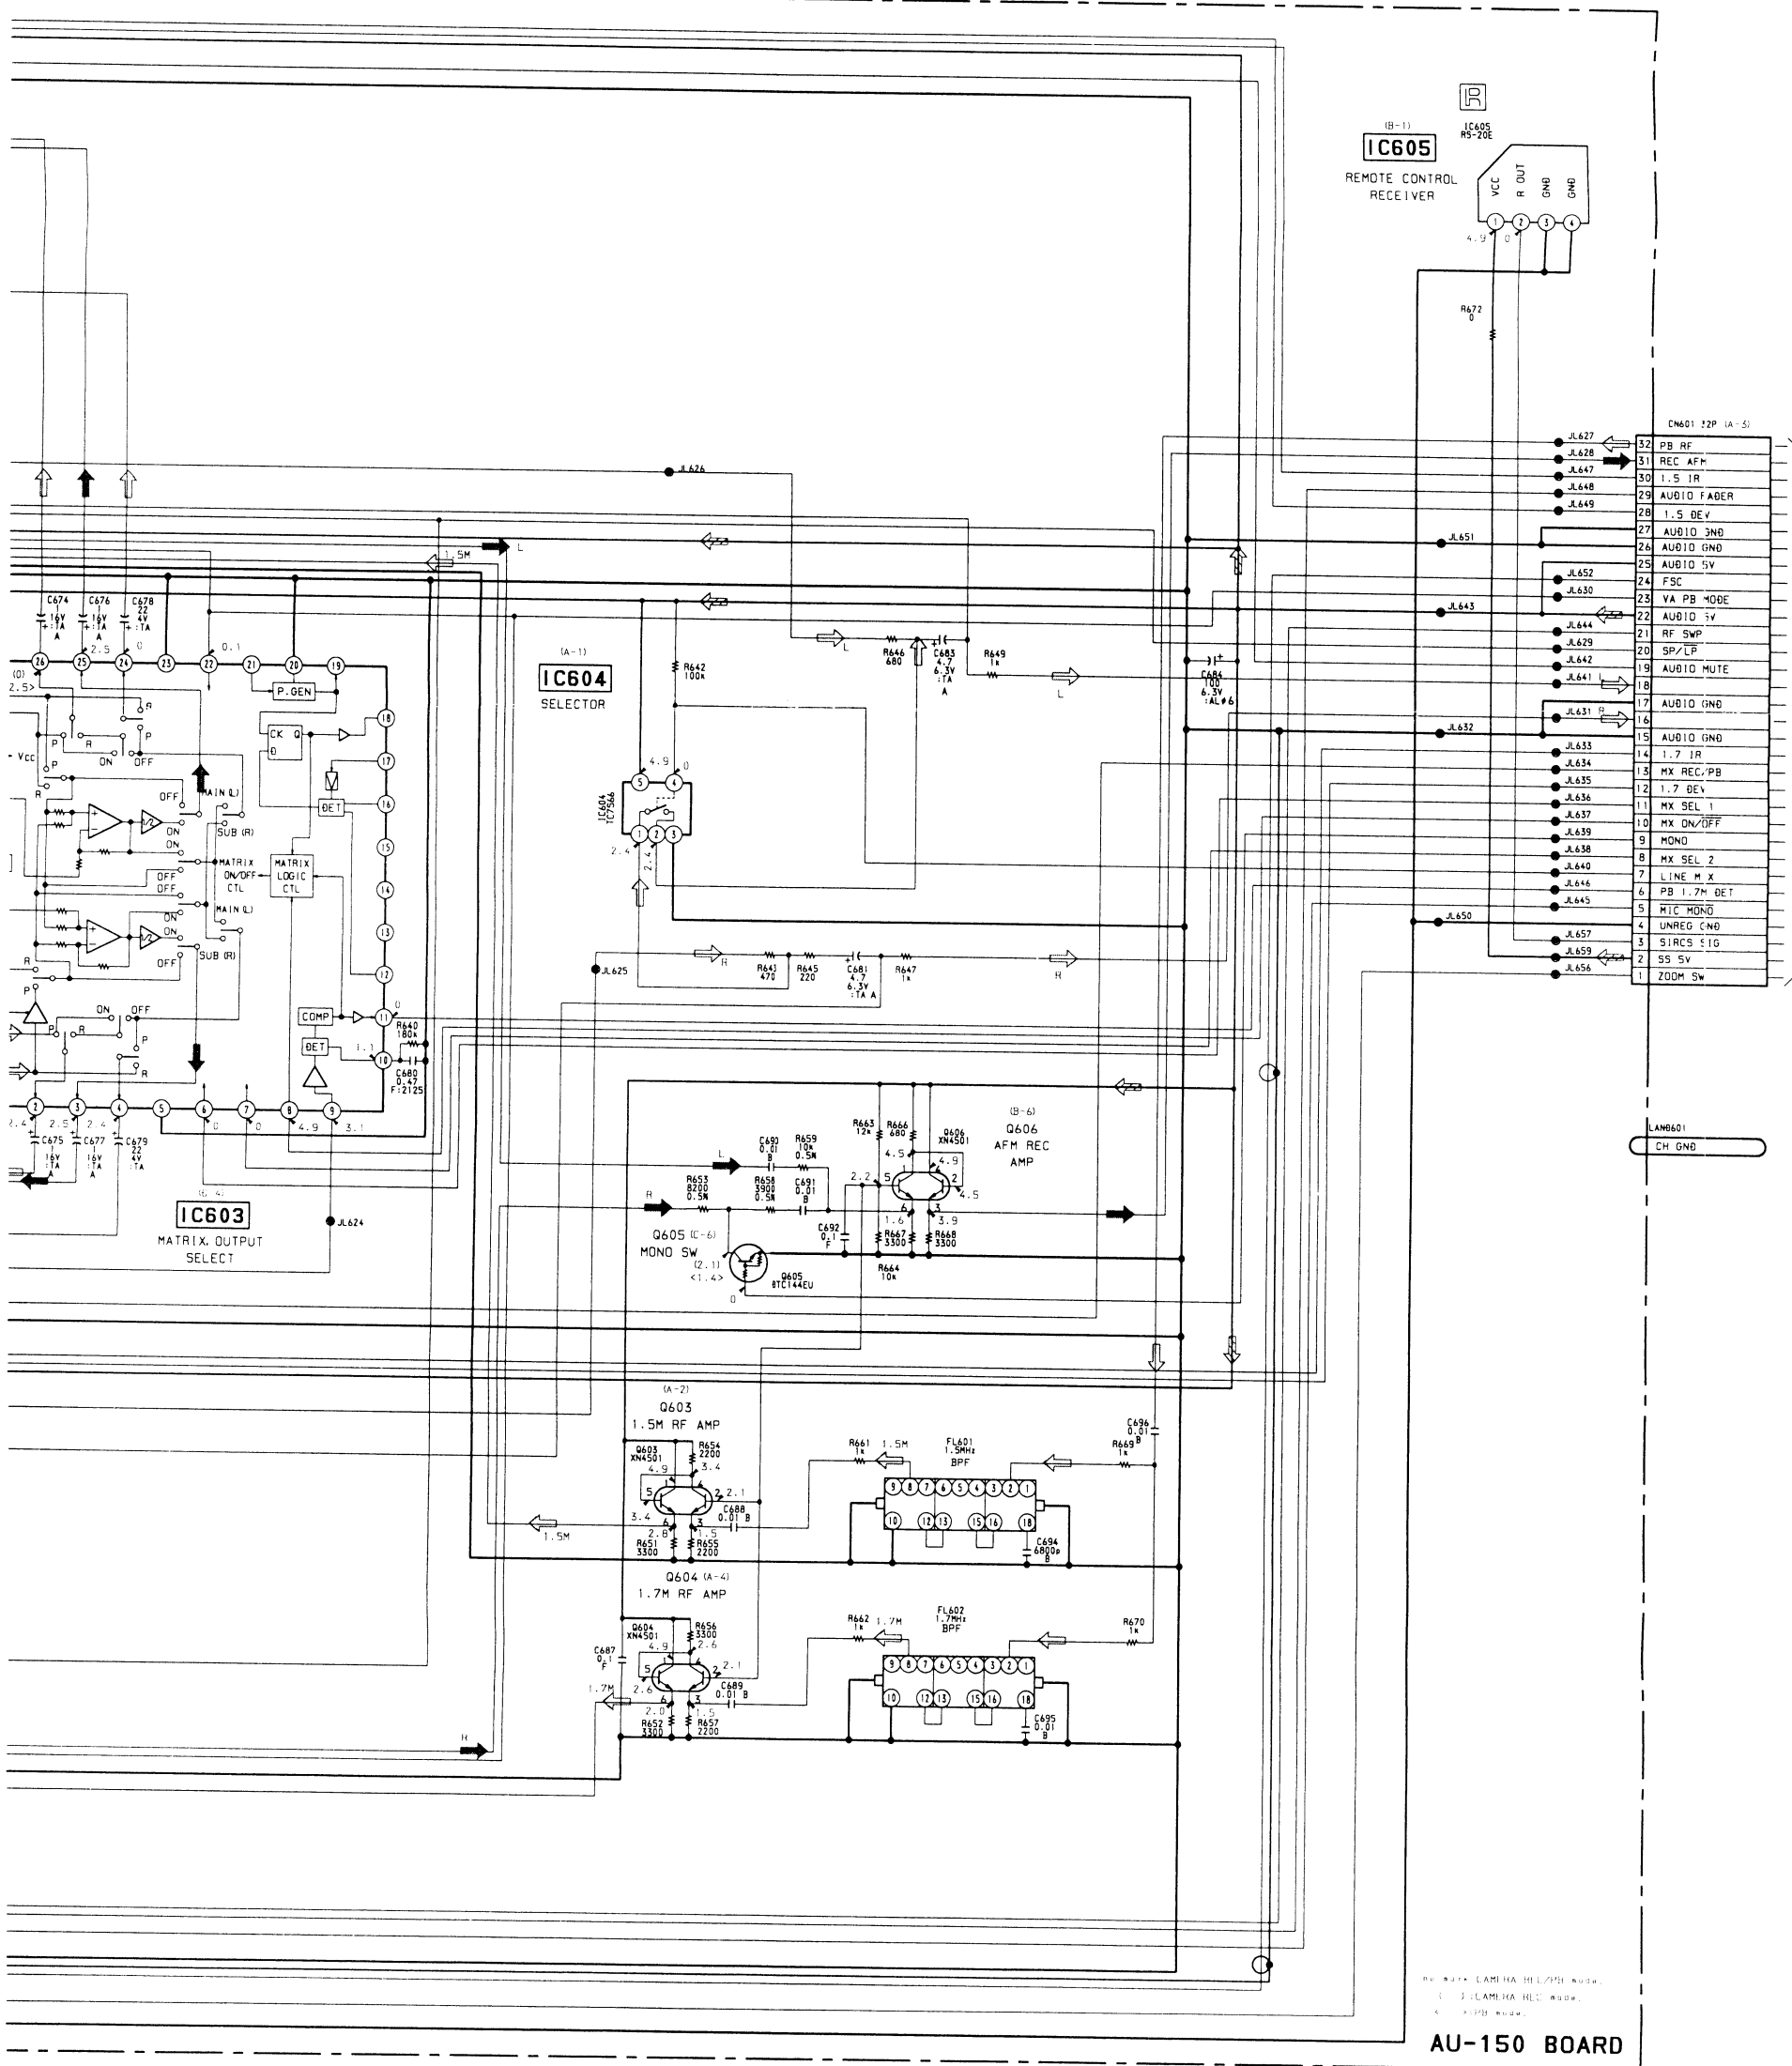

TO
VS-100 BOARD
CN401
(See Page 100, 101)

— Ref. No. AU-150, MA-170, WS-11 BOARDS: 2000 series —

The image shows a detailed circuit board layout for a radio receiver. The board is populated with several integrated circuits (ICs) and numerous passive components (resistors and capacitors). The components are labeled with their respective part numbers and values.

Integrated Circuits (ICs):

- IC601:** A central IC, likely a tuner or amplifier, with pins 1 through 48.
- IC602:** Another central IC, likely a tuner or amplifier, with pins 1 through 48.
- IC603:** A smaller IC, likely a detector or amplifier, with pins 1 through 36.

Resistors (R):

- R601, R602, R603, R604, R605, R606, R607, R608, R609, R610, R611, R612, R613, R614, R615, R616, R617, R618, R619, R620, R621, R622, R623, R624, R625, R626, R627, R628, R629, R630, R631, R632, R633, R634, R635, R636, R637, R638, R639, R640, R641, R642, R643, R644, R645, R646, R647, R648, R649, R650, R651, R652, R653, R654, R655, R656, R657, R658, R659, R660, R661, R662, R663, R664, R665, R666, R667, R668, R669, R670, R671, R672, R673, R674, R675, R676, R677, R678, R679, R680, R681, R682, R683, R684, R685, R686, R687, R688, R689, R690, R691, R692, R693, R694, R695, R696, R697, R698, R699, R700, R701, R702, R703, R704, R705, R706, R707, R708, R709, R710, R711, R712, R713, R714, R715, R716, R717, R718, R719, R720, R721, R722, R723, R724, R725, R726, R727, R728, R729, R730, R731, R732, R733, R734, R735, R736, R737, R738, R739, R740, R741, R742, R743, R744, R745, R746, R747, R748, R749, R750, R751, R752, R753, R754, R755, R756, R757, R758, R759, R760, R761, R762, R763, R764, R765, R766, R767, R768, R769, R770, R771, R772, R773, R774, R775, R776, R777, R778, R779, R780, R781, R782, R783, R784, R785, R786, R787, R788, R789, R790, R791, R792, R793, R794, R795, R796, R797, R798, R799, R800, R801, R802, R803, R804, R805, R806, R807, R808, R809, R810, R811, R812, R813, R814, R815, R816, R817, R818, R819, R820, R821, R822, R823, R824, R825, R826, R827, R828, R829, R830, R831, R832, R833, R834, R835, R836, R837, R838, R839, R840, R841, R842, R843, R844, R845, R846, R847, R848, R849, R850, R851, R852, R853, R854, R855, R856, R857, R858, R859, R860, R861, R862, R863, R864, R865, R866, R867, R868, R869, R870, R871, R872, R873, R874, R875, R876, R877, R878, R879, R880, R881, R882, R883, R884, R885, R886, R887, R888, R889, R890, R891, R892, R893, R894, R895, R896, R897, R898, R899, R900, R901, R902, R903, R904, R905, R906, R907, R908, R909, R910, R911, R912, R913, R914, R915, R916, R917, R918, R919, R920, R921, R922, R923, R924, R925, R926, R927, R928, R929, R930, R931, R932, R933, R934, R935, R936, R937, R938, R939, R940, R941, R942, R943, R944, R945, R946, R947, R948, R949, R950, R951, R952, R953, R954, R955, R956, R957, R958, R959, R960, R961, R962, R963, R964, R965, R966, R967, R968, R969, R970, R971, R972, R973, R974, R975, R976, R977, R978, R979, R980, R981, R982, R983, R984, R985, R986, R987, R988, R989, R990, R991, R992, R993, R994, R995, R996, R997, R998, R999, R1000.

Capacitors (C):

- C601, C602, C603, C604, C605, C606, C607, C608, C609, C610, C611, C612, C613, C614, C615, C616, C617, C618, C619, C620, C621, C622, C623, C624, C625, C626, C627, C628, C629, C630, C631, C632, C633, C634, C635, C636, C637, C638, C639, C640, C641, C642, C643, C644, C645, C646, C647, C648, C649, C650, C651, C652, C653, C654, C655, C656, C657, C658, C659, C660, C661, C662, C663, C664, C665, C666, C667, C668, C669, C670, C671, C672, C673, C674, C675, C676, C677, C678, C679, C680, C681, C682, C683, C684, C685, C686, C687, C688, C689, C690, C691, C692, C693, C694, C695, C696, C697, C698, C699, C700, C701, C702, C703, C704, C705, C706, C707, C708, C709, C710, C711, C712, C713, C714, C715, C716, C717, C718, C719, C720, C721, C722, C723, C724, C725, C726, C727, C728, C729, C730, C731, C732, C733, C734, C735, C736, C737, C738, C739, C740, C741, C742, C743, C744, C745, C746, C747, C748, C749, C750, C751, C752, C753, C754, C755, C756, C757, C758, C759, C760, C761, C762, C763, C764, C765, C766, C767, C768, C769, C770, C771, C772, C773, C774, C775, C776, C777, C778, C779, C780, C781, C782, C783, C784, C785, C786, C787, C788, C789, C790, C791, C792, C793, C794, C795, C796, C797, C798, C799, C800, C801, C802, C803, C804, C805, C806, C807, C808, C809, C810, C811, C812, C813, C814, C815, C816, C817, C818, C819, C820, C821, C822, C823, C824, C825, C826, C827, C828, C829, C830, C831, C832, C833, C834, C835, C836, C837, C838, C839, C840, C841, C842, C843, C844, C845, C846, C847, C848, C849, C850, C851, C852, C853, C854, C855, C856, C857, C858, C859, C860, C861, C862, C863, C864, C865, C866, C867, C868, C869, C870, C871, C872, C873, C874, C875, C876, C877, C878, C879, C880, C881, C882, C883, C884, C885, C886, C887, C888, C889, C890, C891, C892, C893, C894, C895, C896, C897, C898, C899, C900, C901, C902, C903, C904, C905, C906, C907, C908, C909, C910, C911, C912, C913, C914, C915, C916, C917, C918, C919, C920, C921, C922, C923, C924, C925, C926, C927, C928, C929, C930, C931, C932, C933, C934, C935, C936, C937, C938, C939, C940, C941, C942, C943, C944, C945, C946, C947, C948, C949, C950, C951, C952, C953, C954, C955, C956, C957, C958, C959,



- | | |
|--|--|
| Caution: | |
| Pattern face side:
(Conductor Side) | Parts on the pattern face side seen from the pattern face are indicated. |
| Parts face side:
(Component side) | Parts on the parts face side seen from the parts face are indicated. |

- For printed wiring boards.
- AU-150, MA-170 boards are the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:


Pattern face side: Parts on the pattern face side seen from the pattern face are indicated.
(Conductor Side)

Parts face side: Parts on the parts face side seen from the parts face are indicated.
(Component side)

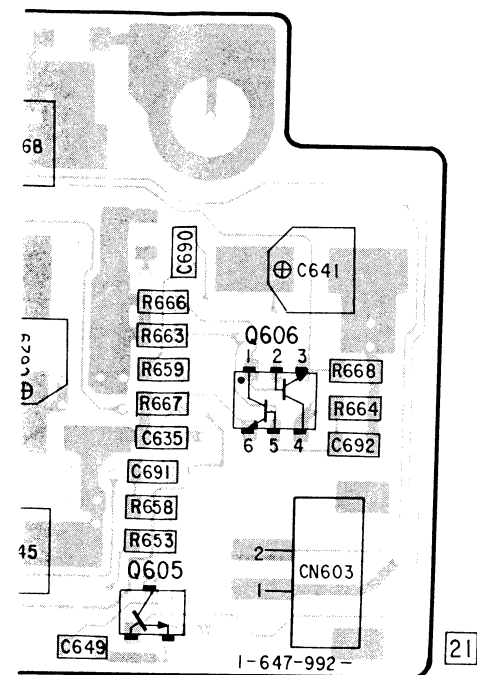
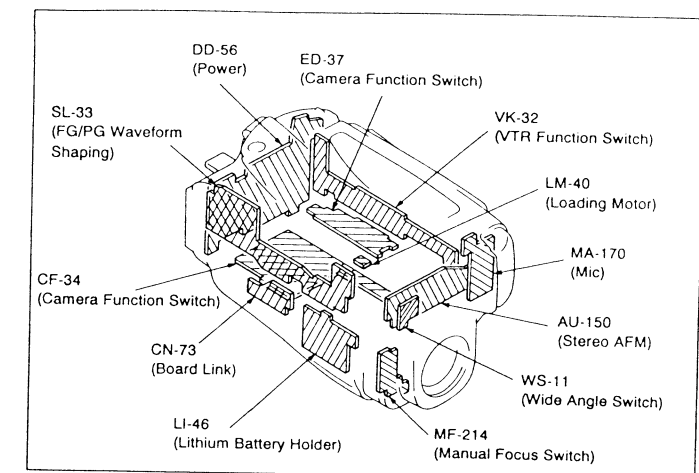


MA-170 BOARD (COMPONENT SIDE)

MA-170 BOARD (CONDUCTOR SIDE)

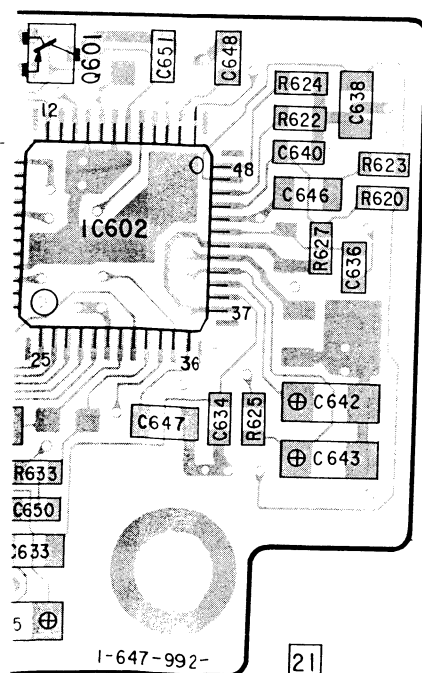


J551
MIC
(PLUG IN POWER)

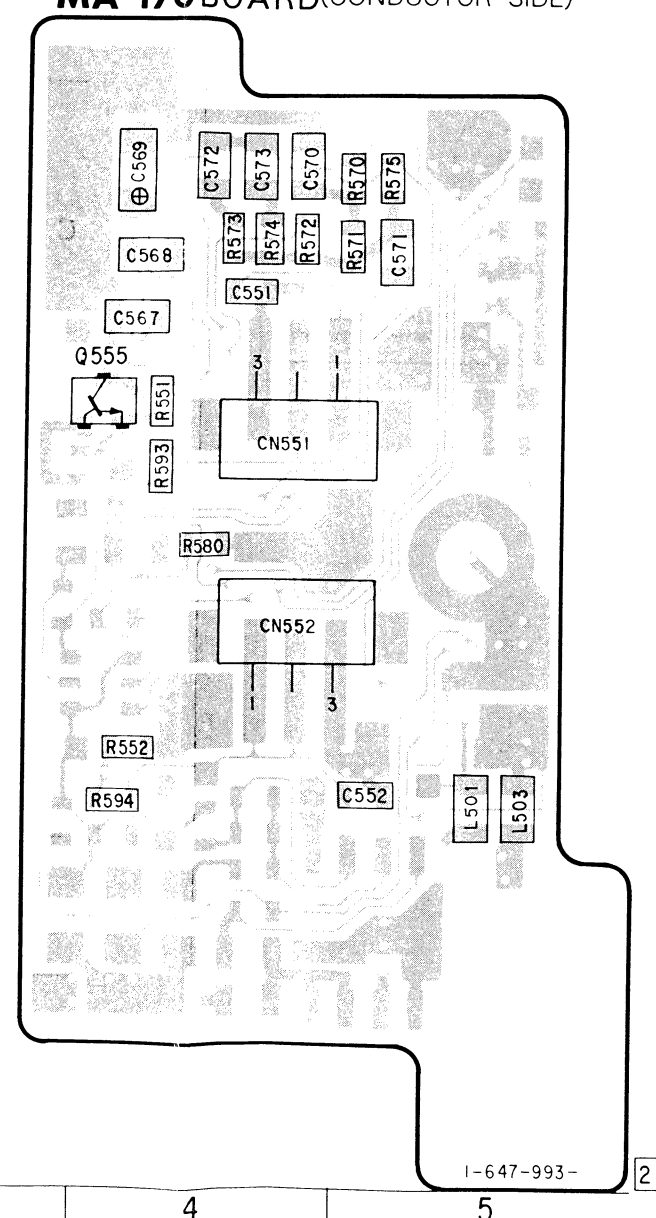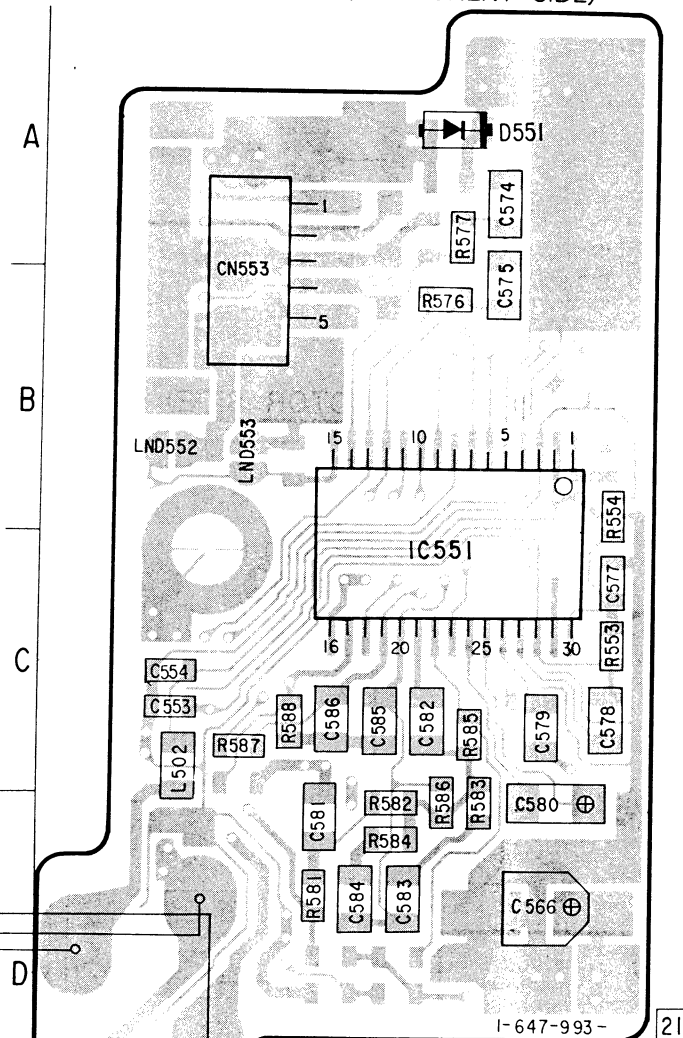

- For printed wiring board of WS-11 board.
- : Pattern from the side which enables seeing.
- : Pattern of the rear side.
(The other layer's patterns are not indicated.)


WS-11 BOARD

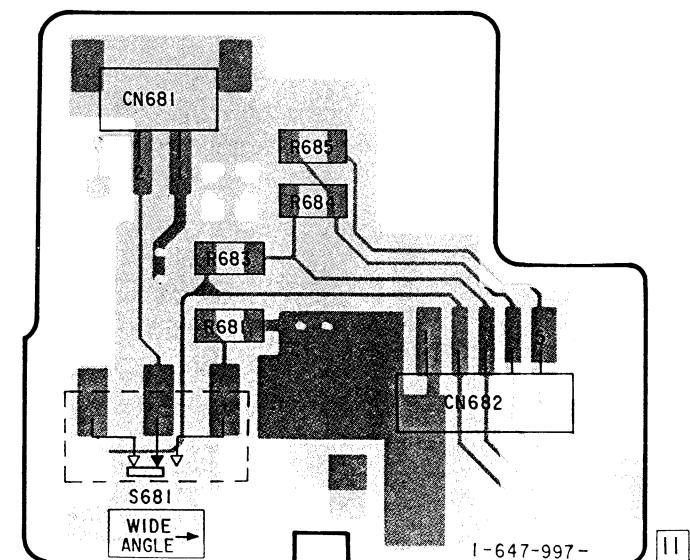

- For printed wiring boards.
- ● : Through hole.

Caution:


Pattern face side: (Conductor Side)	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side: (Component side)	Parts on the parts face side seen from the parts face are indicated.

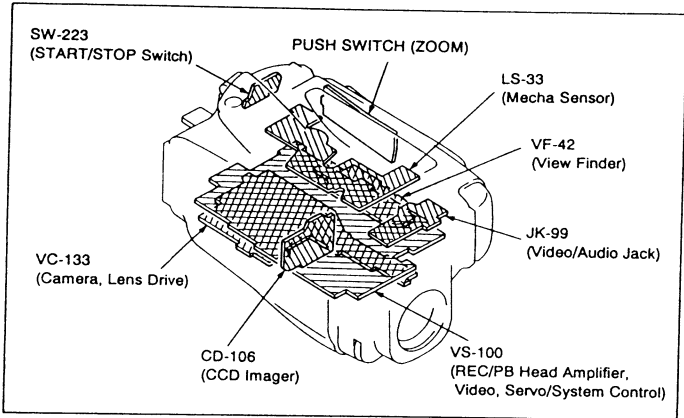


VF-42 (VIEW FINDER) PRINTED WIRING BOARD

— Ref. No. VF-42 BOARD: 1000 series —



VF-42 BOARD (COMPONENT SIDE)

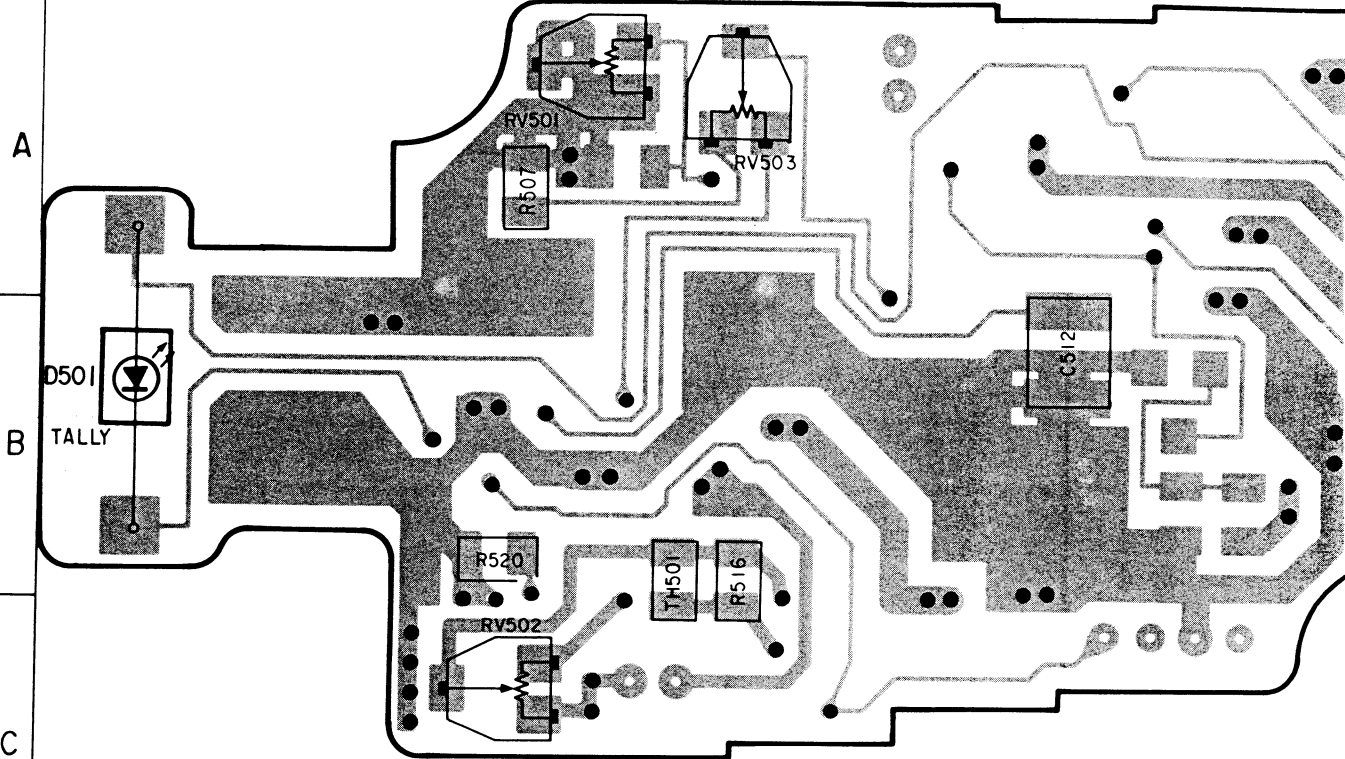


VF-42 BOARD (CONDUCTOR SIDE)

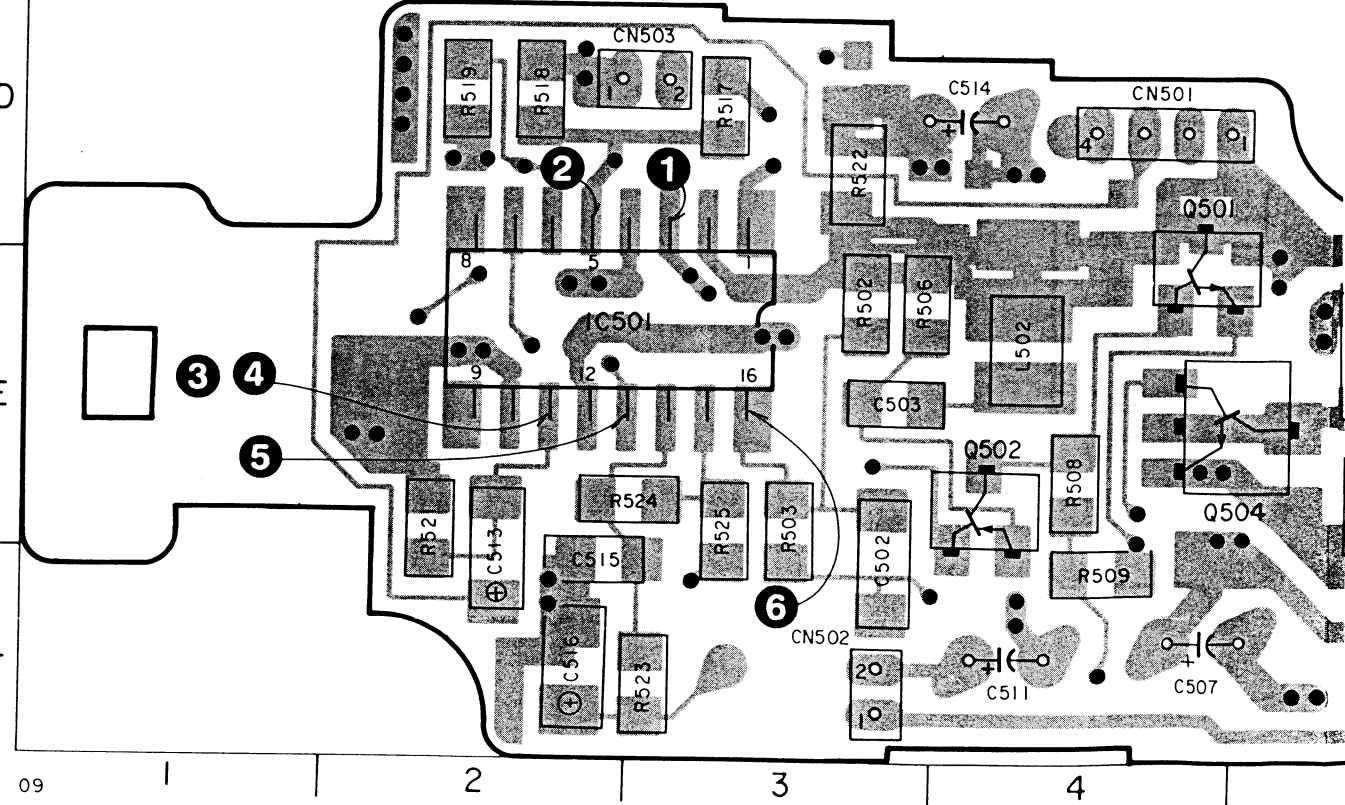

VF-42 BOARD (COMPONENT SIDE)

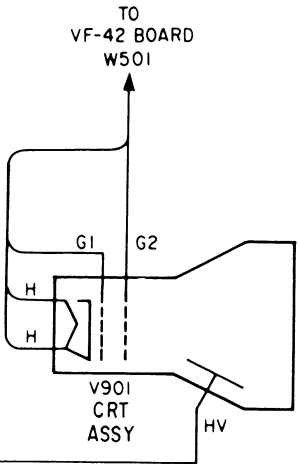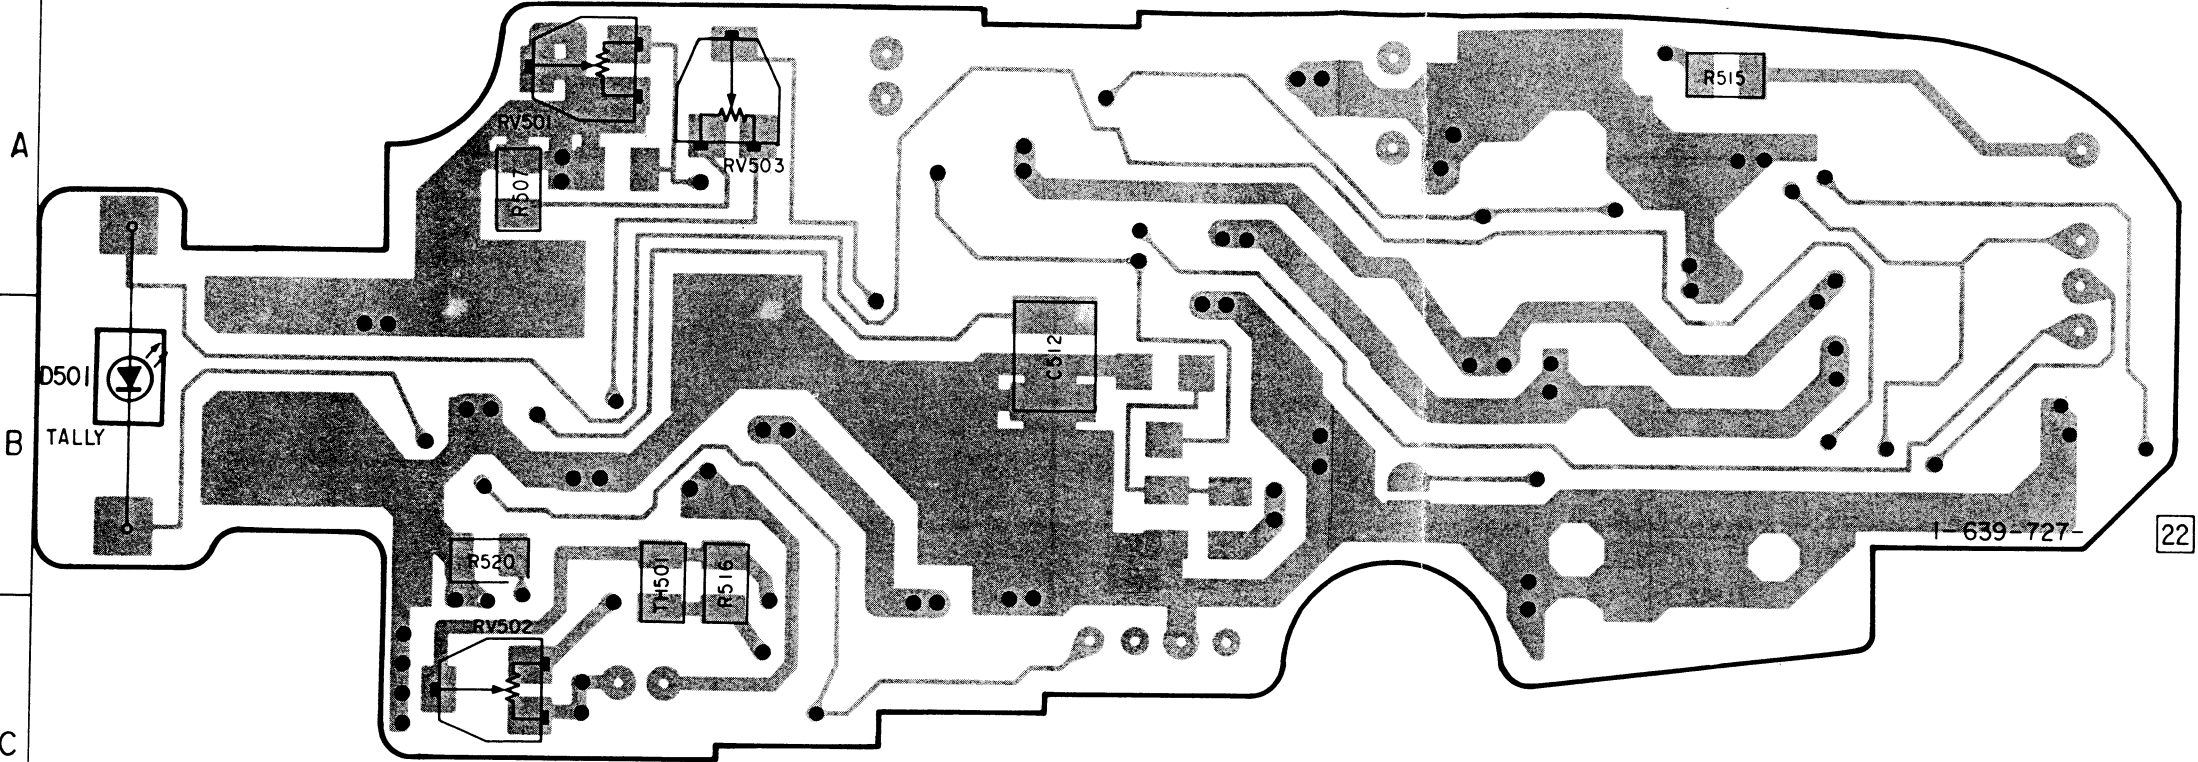


VF-42 BOARD (CONDUCTOR SIDE)

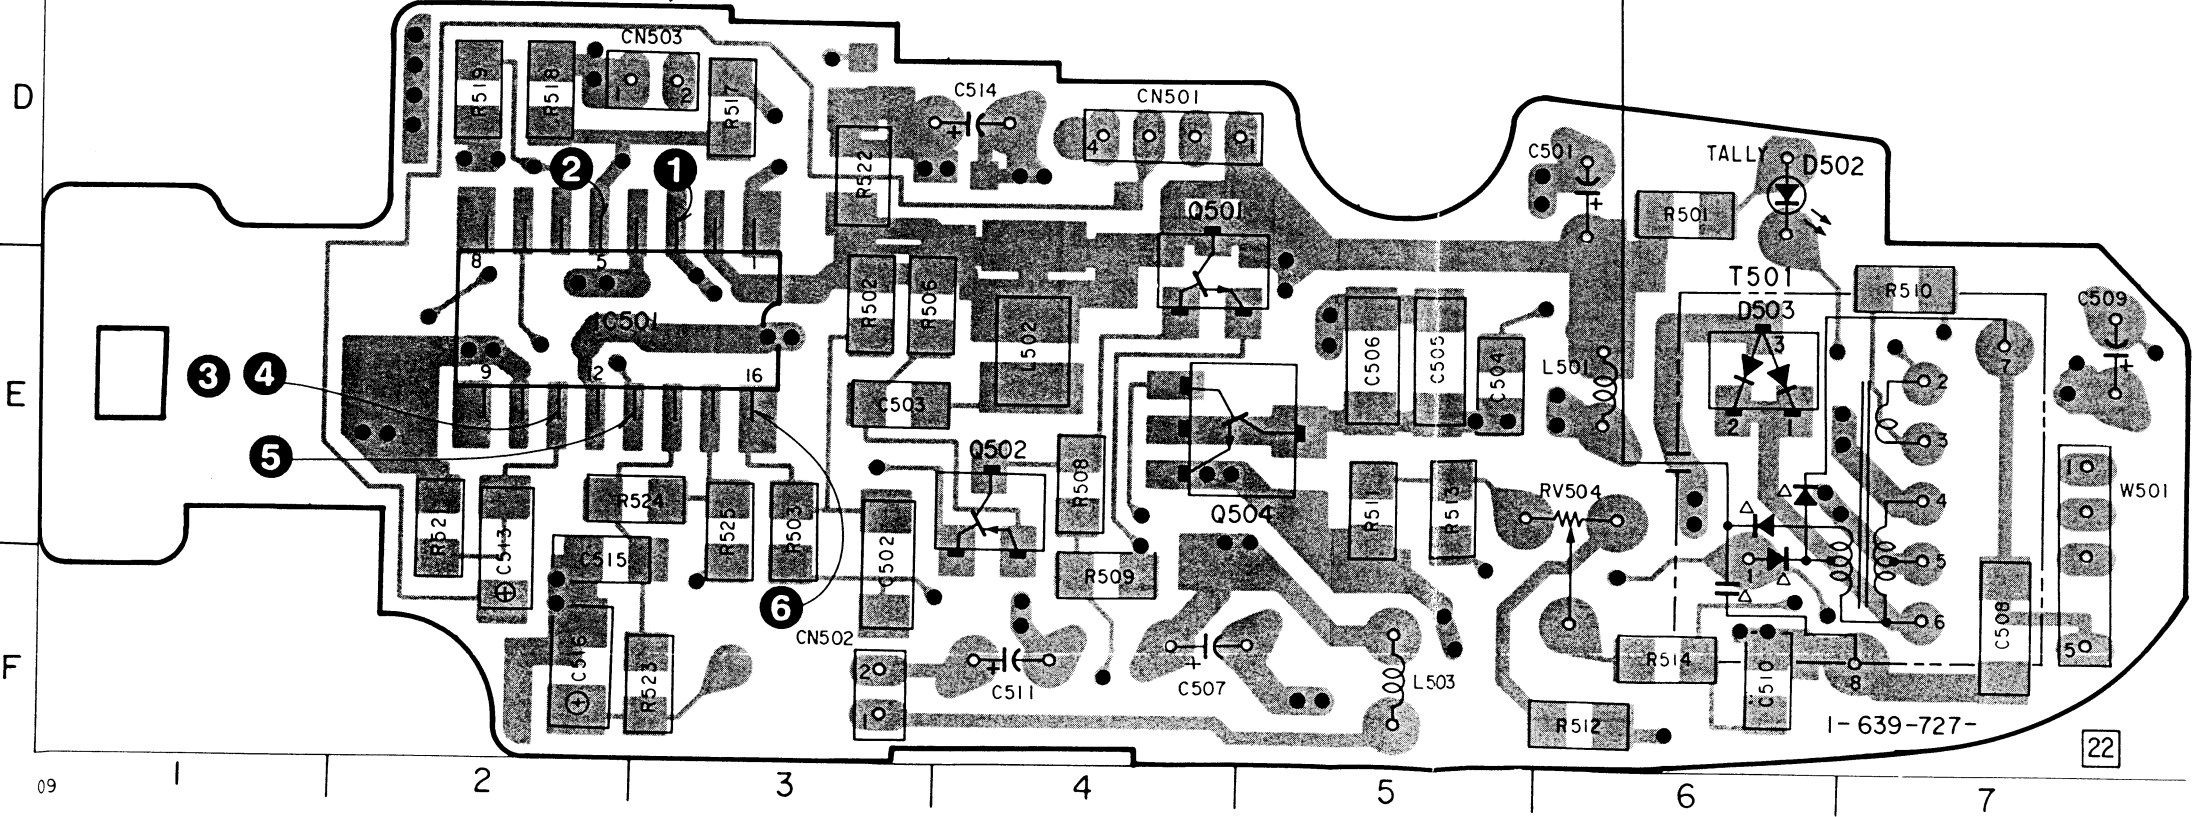

VF-42 (VIEW FINDER) SCHEMATIC DIAGRAM

— Ref. No. VF-42 BOARD: 1000 series —

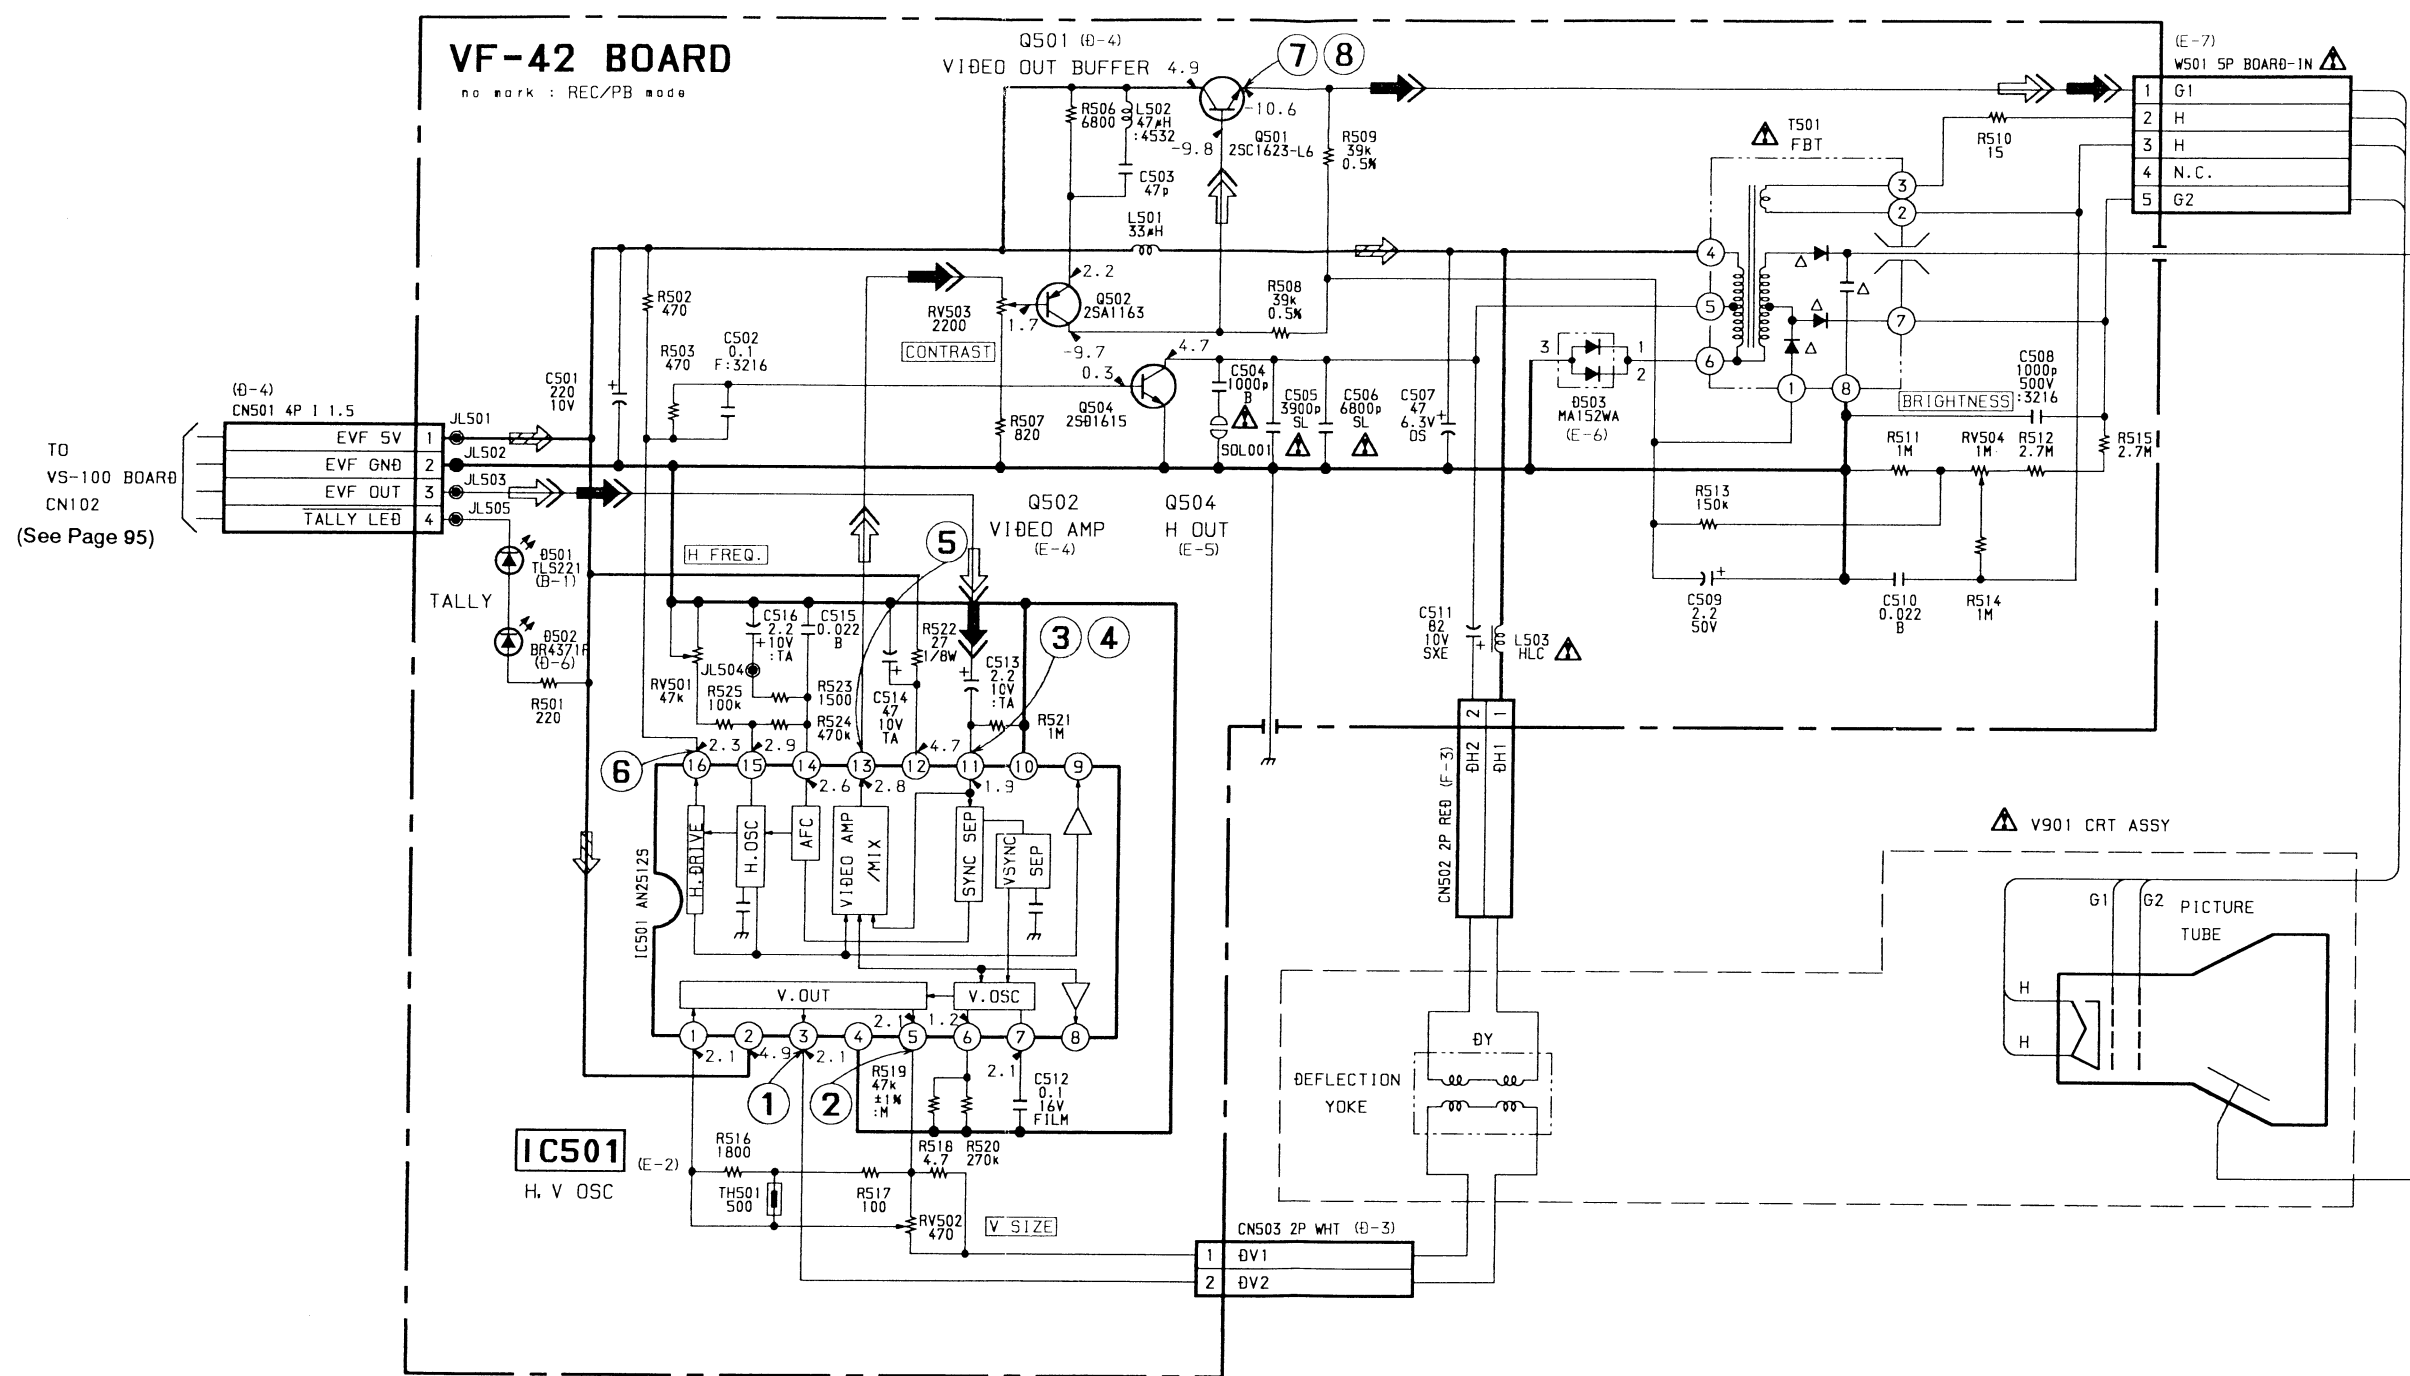


09

Note:
The components identified by mark Δ or dotted line with mark Δ are critical for safety.
Replace only with part number specified.

• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC		➡	
PB		➡	


8	9	10	11	12	13	14	15	16	17	18	19	20
---	---	----	----	----	----	----	----	----	----	----	----	----

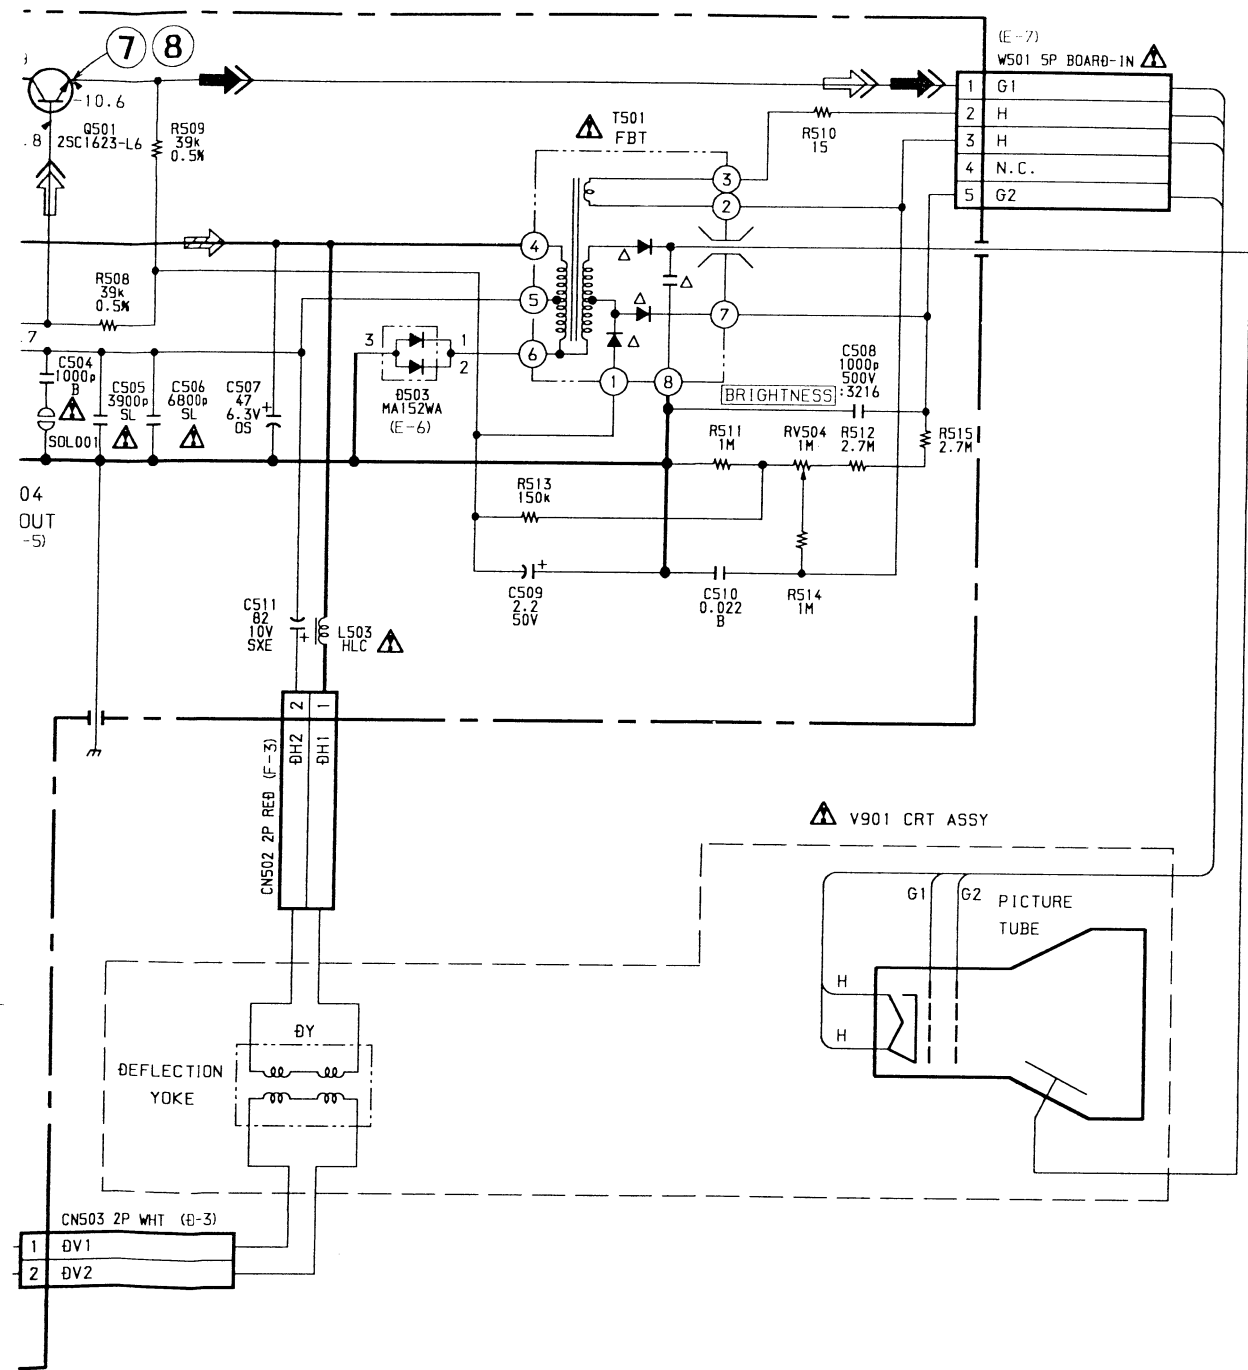

• SIGNAL PATH

	VIDEO SIGNAL		
	CHROMA	Y	Y/CHROMA
REC		➡	
PB		➡	

VF-42 BOARD

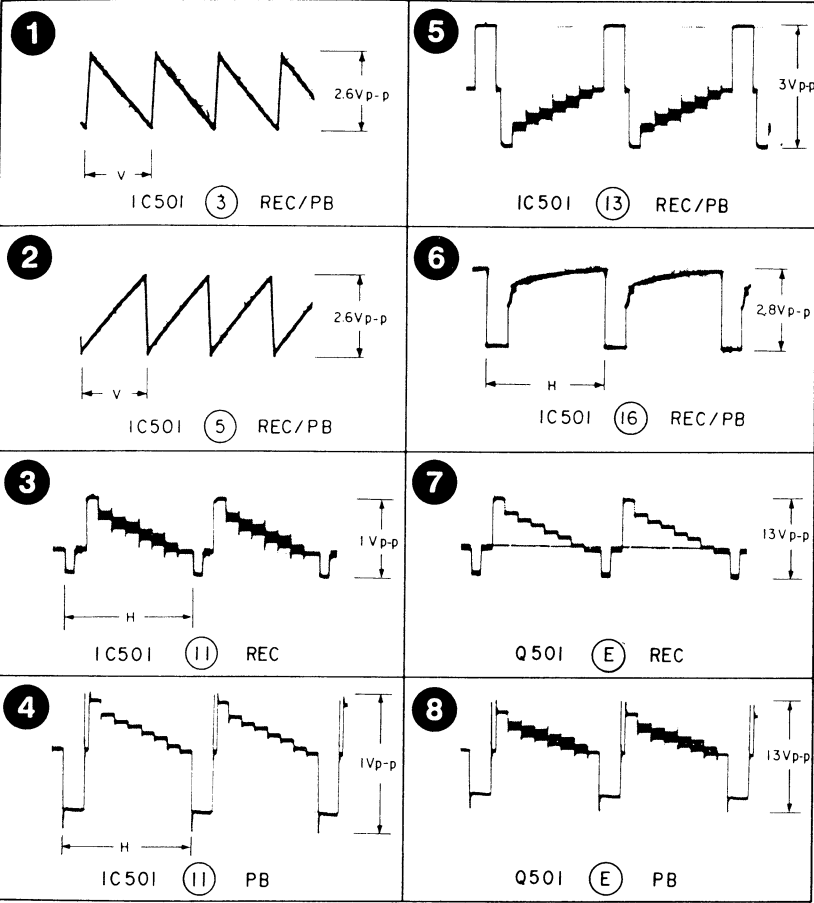


DD-56 (POWER), SW-223 (START/STOP SWITCH) PRINTED WIRING BOARDS

— Ref. No. DD-56 BOARD: 1000 series, SW-223 BOARD: 7000 series —


- For printed wiring boards.
- DD-56 board is the printed wiring board which has four layers structure but inner two layers' patterns are omitted.
- ● : Through hole is omitted.

Caution:


Pattern face side:	Parts on the pattern face side seen from the pattern face are indicated.
Parts face side:	Parts on the parts face side seen from the parts face are indicated.

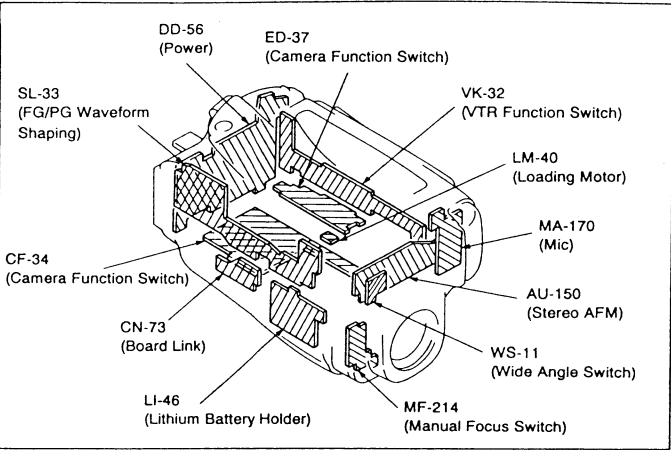


DD-56 BOARD (COMPONENT SIDE)

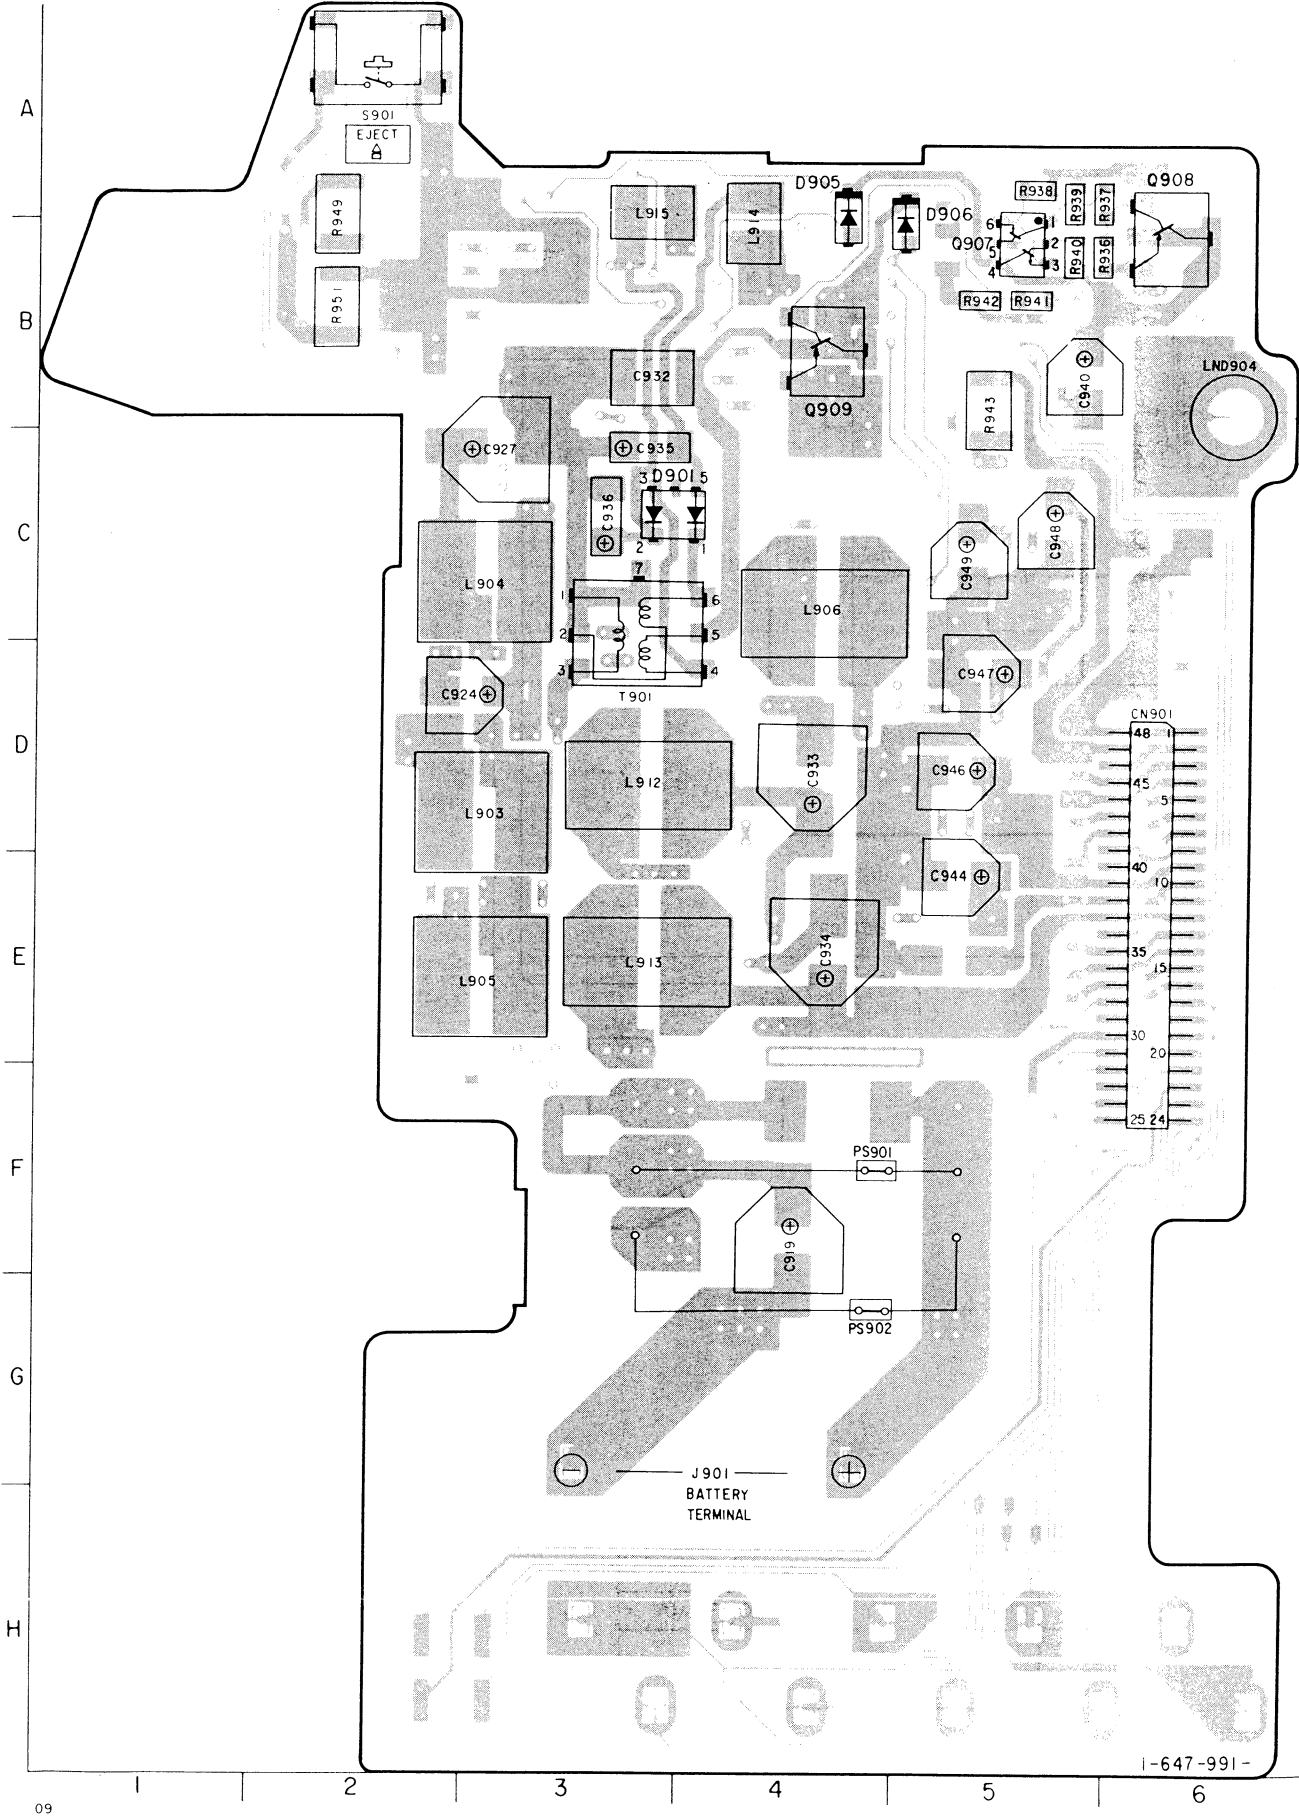


5 BOARD (COMPONENT SIDE)

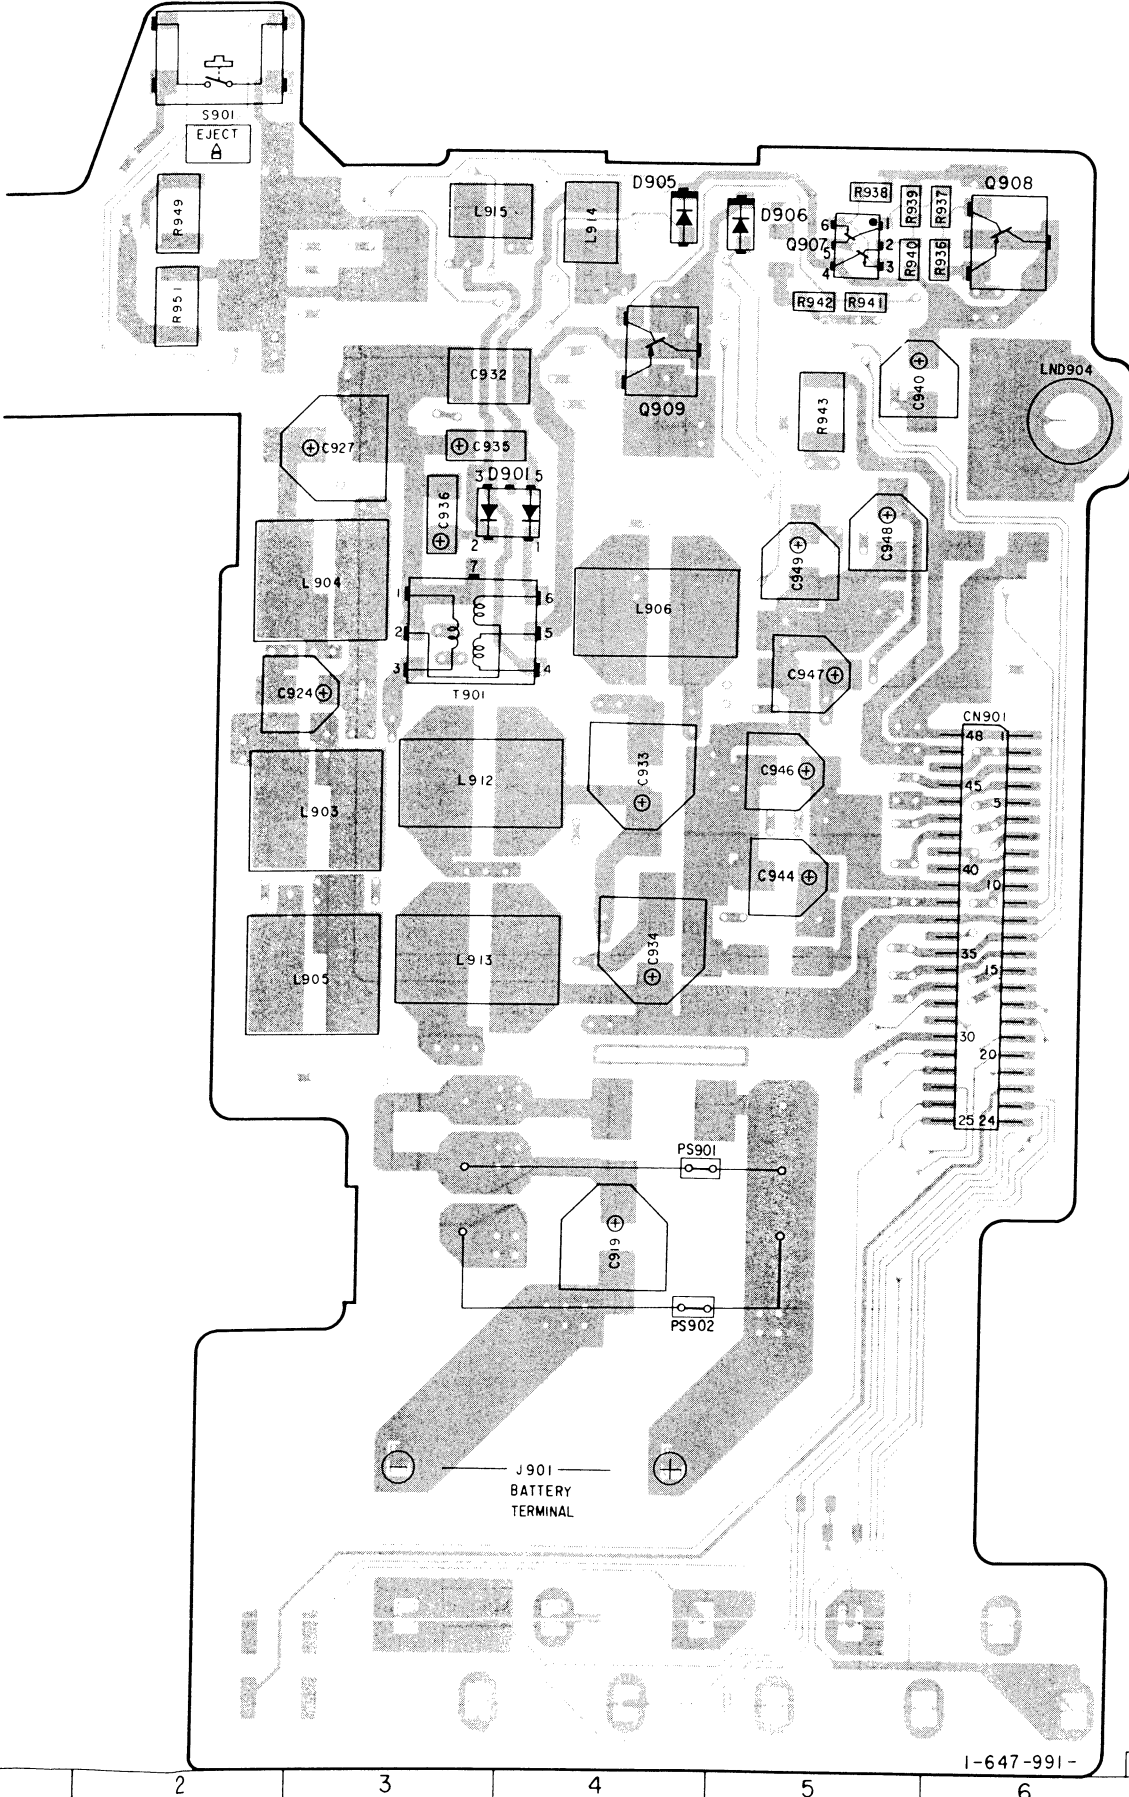

DD-56 BOARD (CONDUCTOR SIDE)

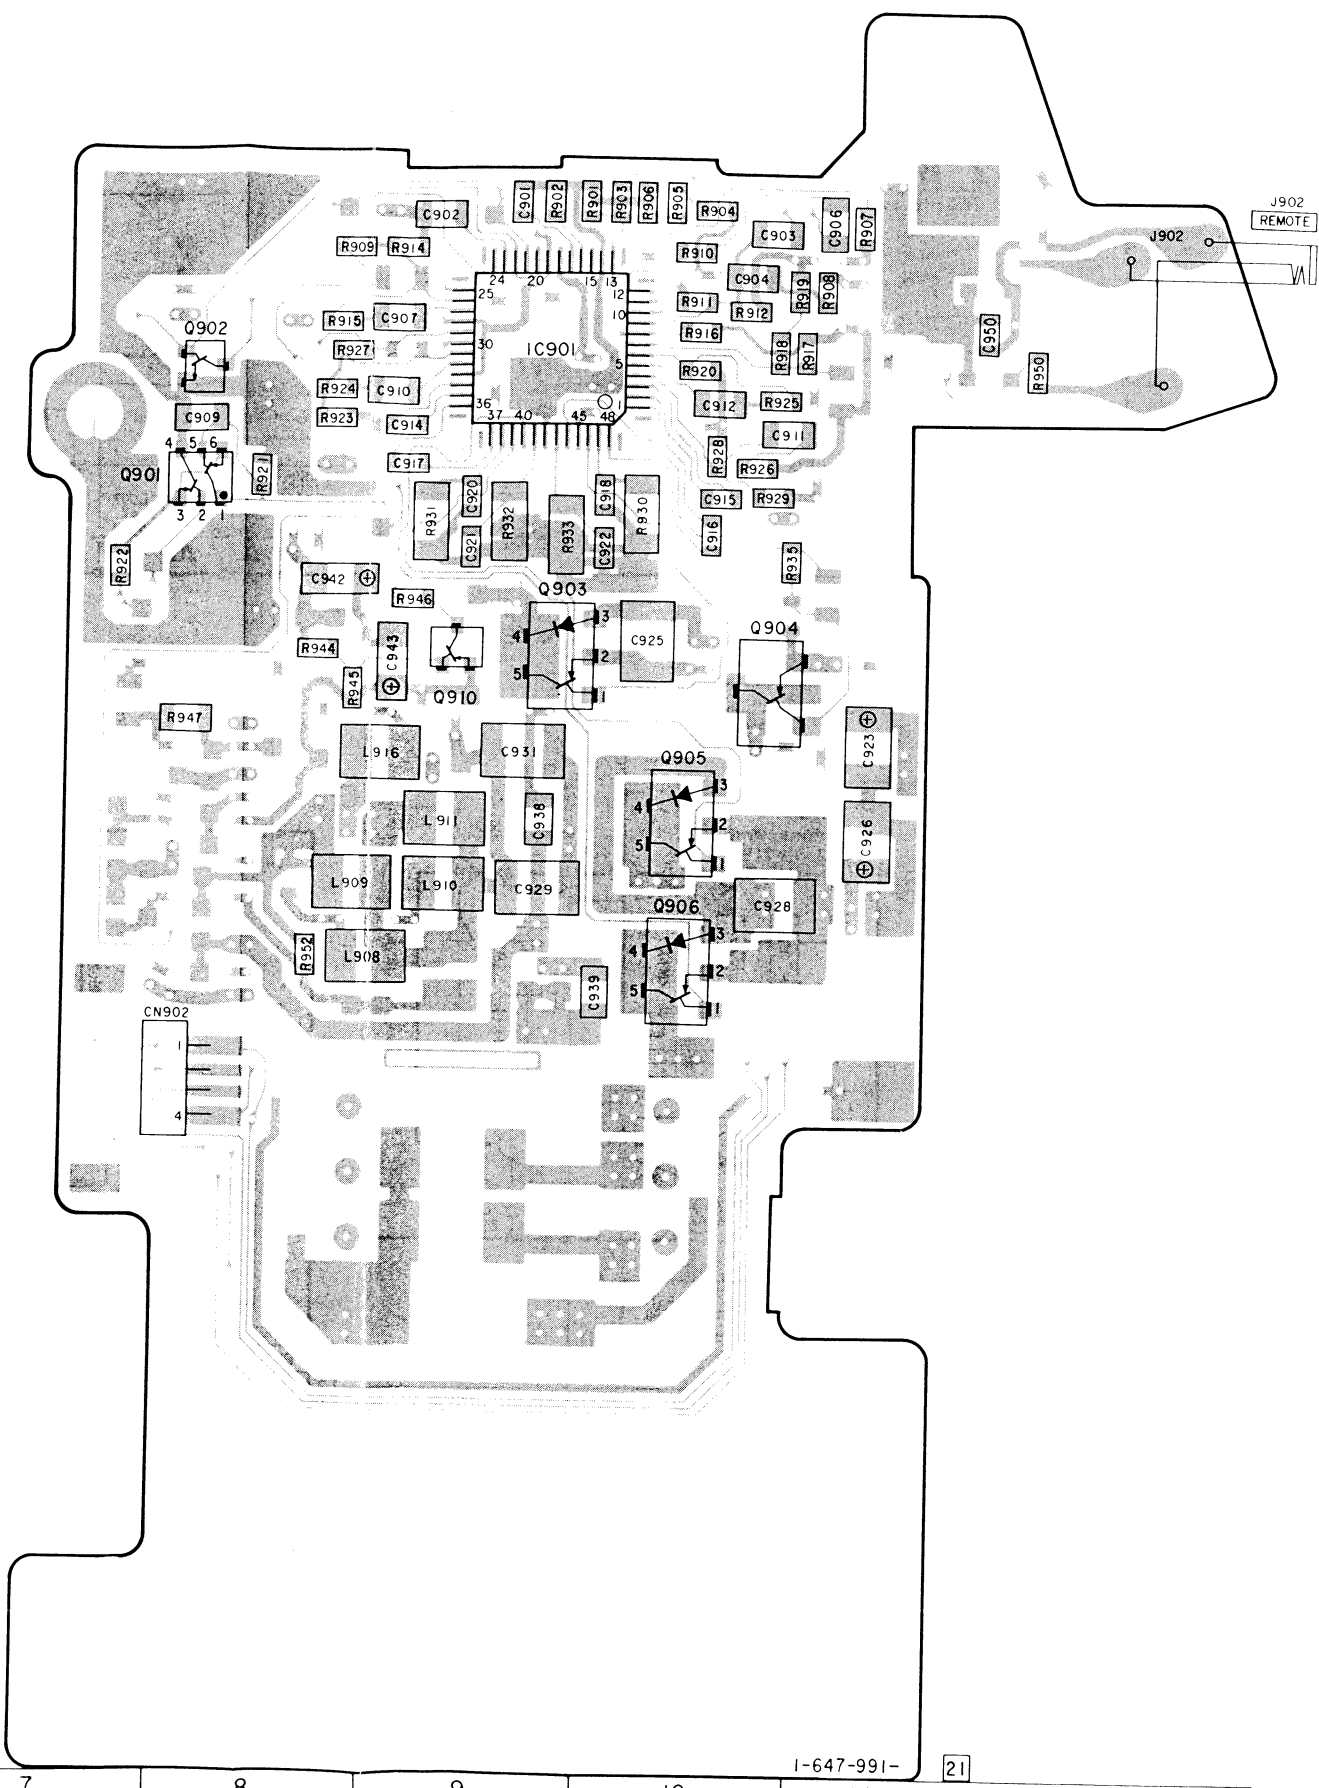



SW-223 BOARD (CONDUCTOR SIDE)

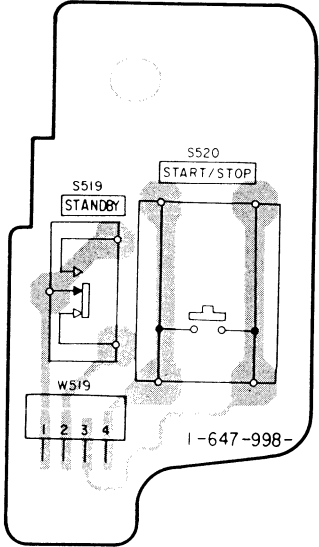

DD-56 (POWER), SW-223 (START/STOP SWITCH) SCHEMATIC DIAGRAMS

— Ref. No. DD-56 BOARD: 1000 series, SW-223 BOARD: 7000 series —

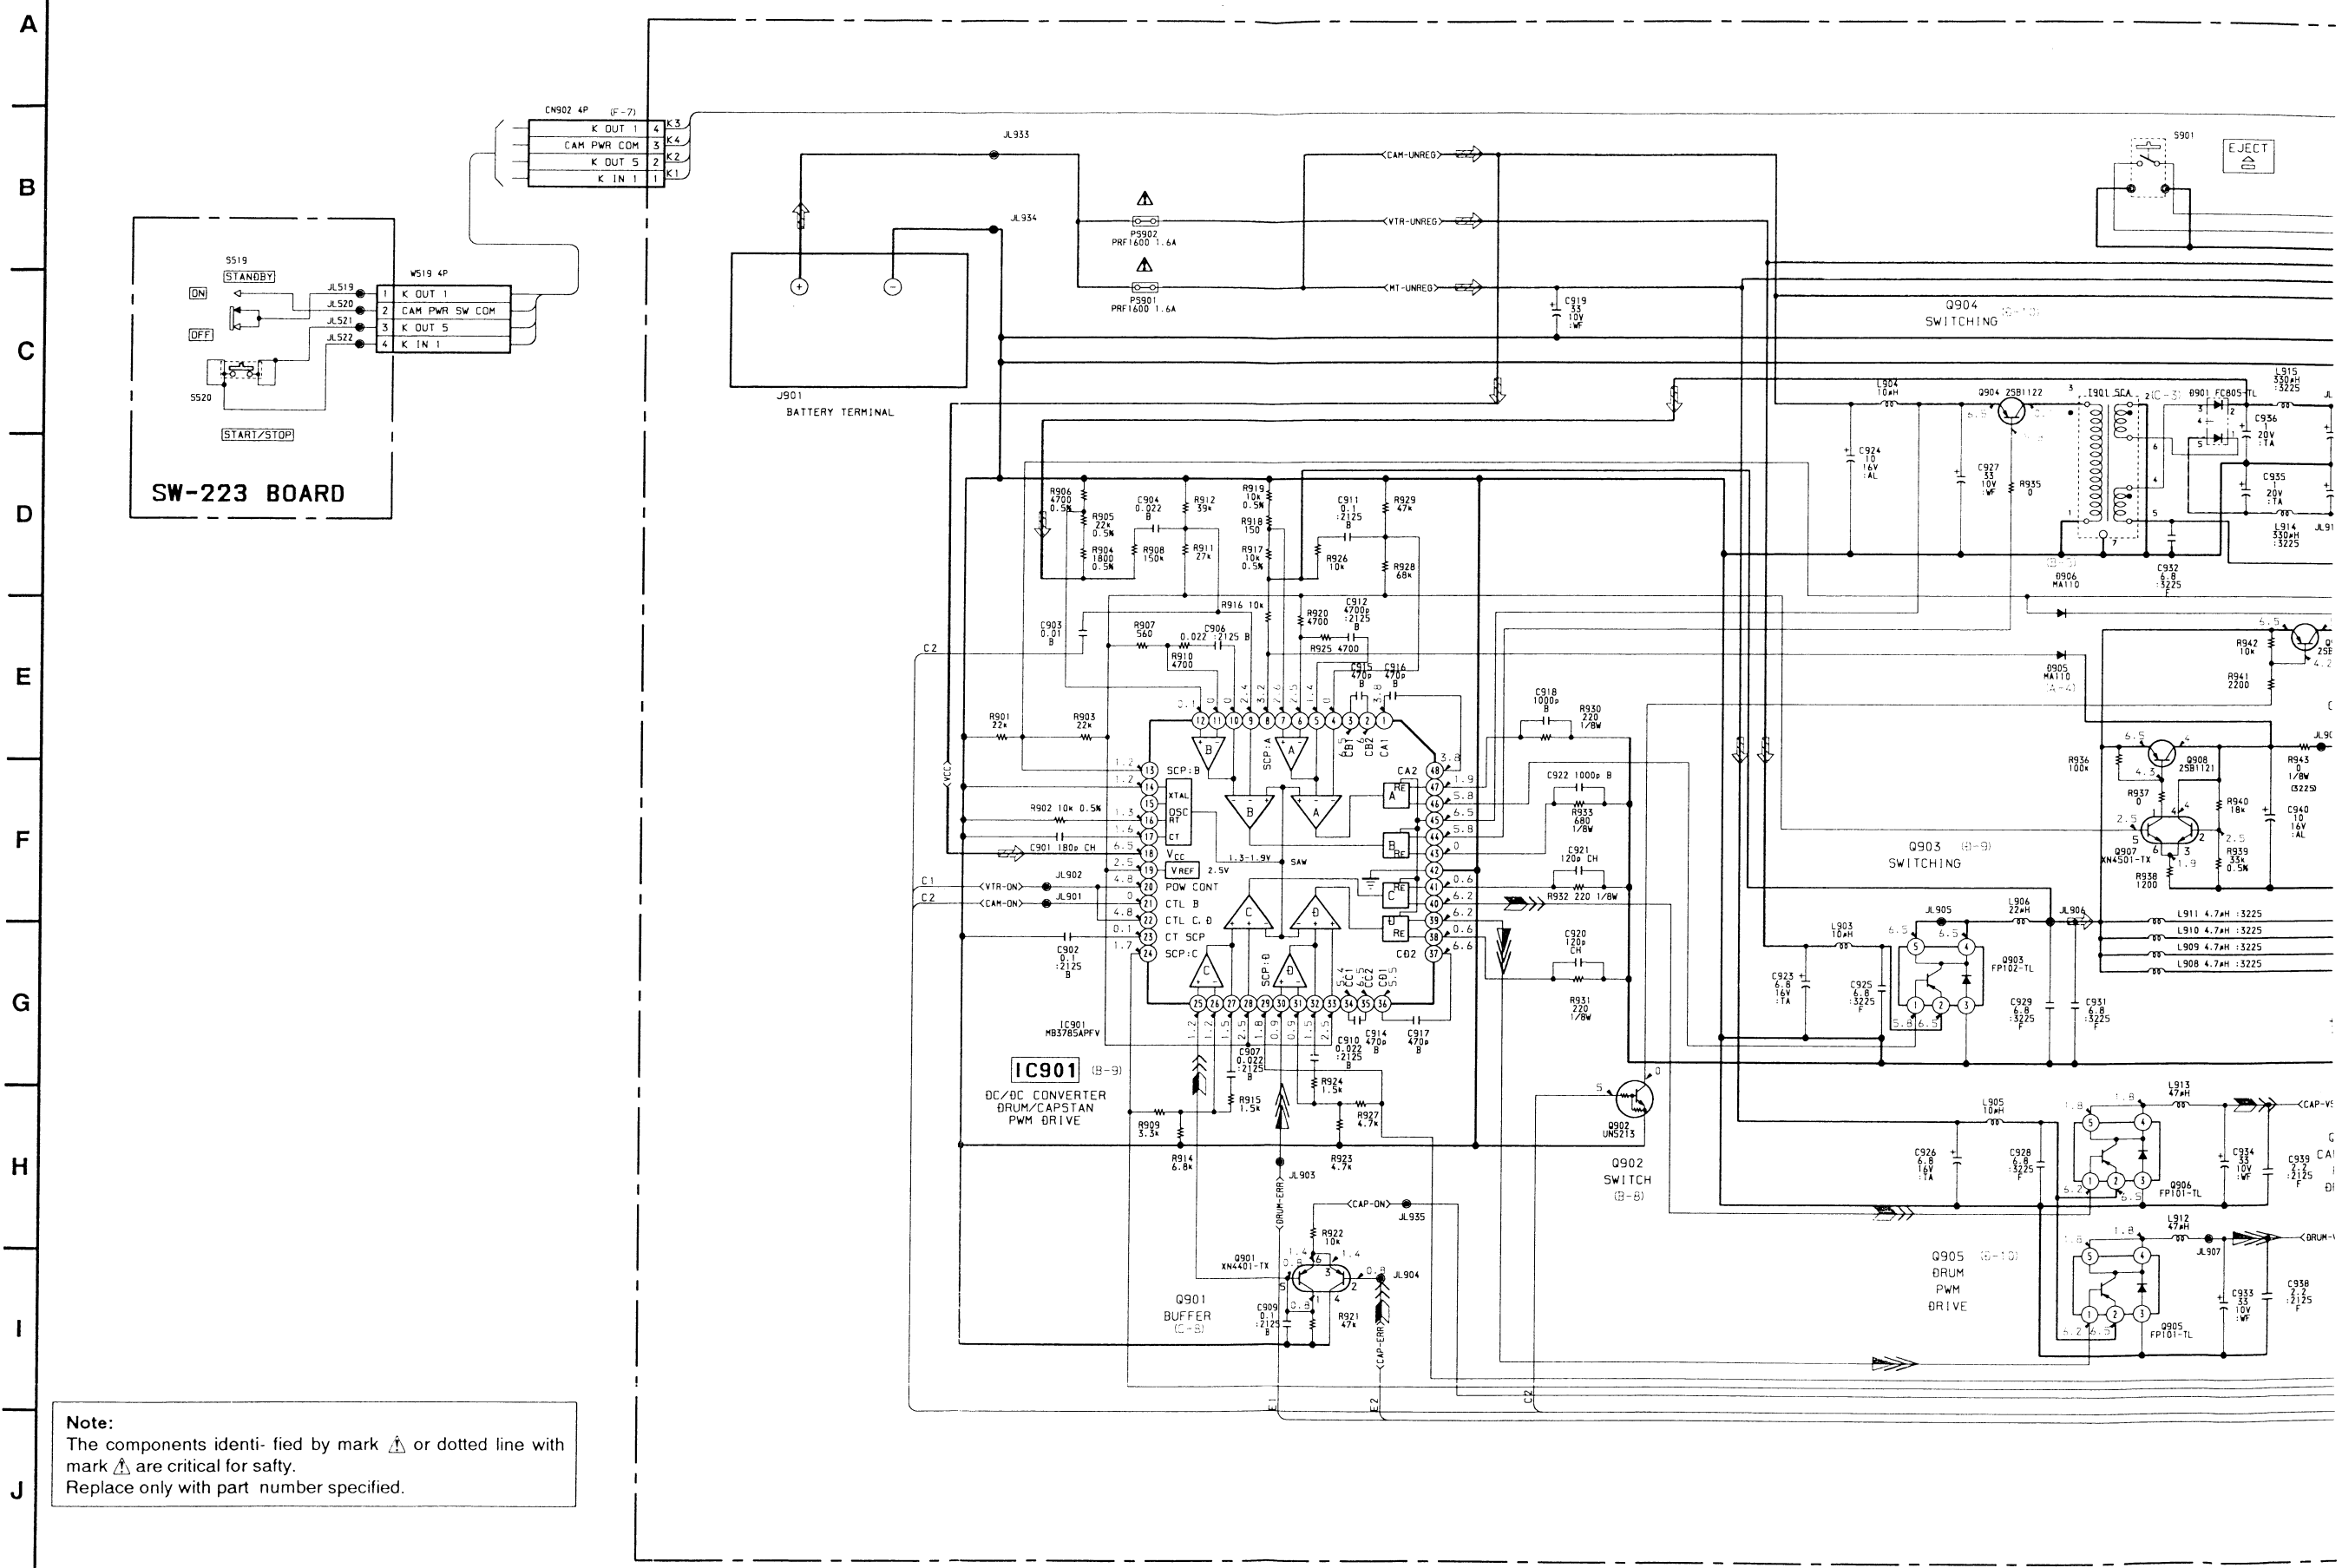

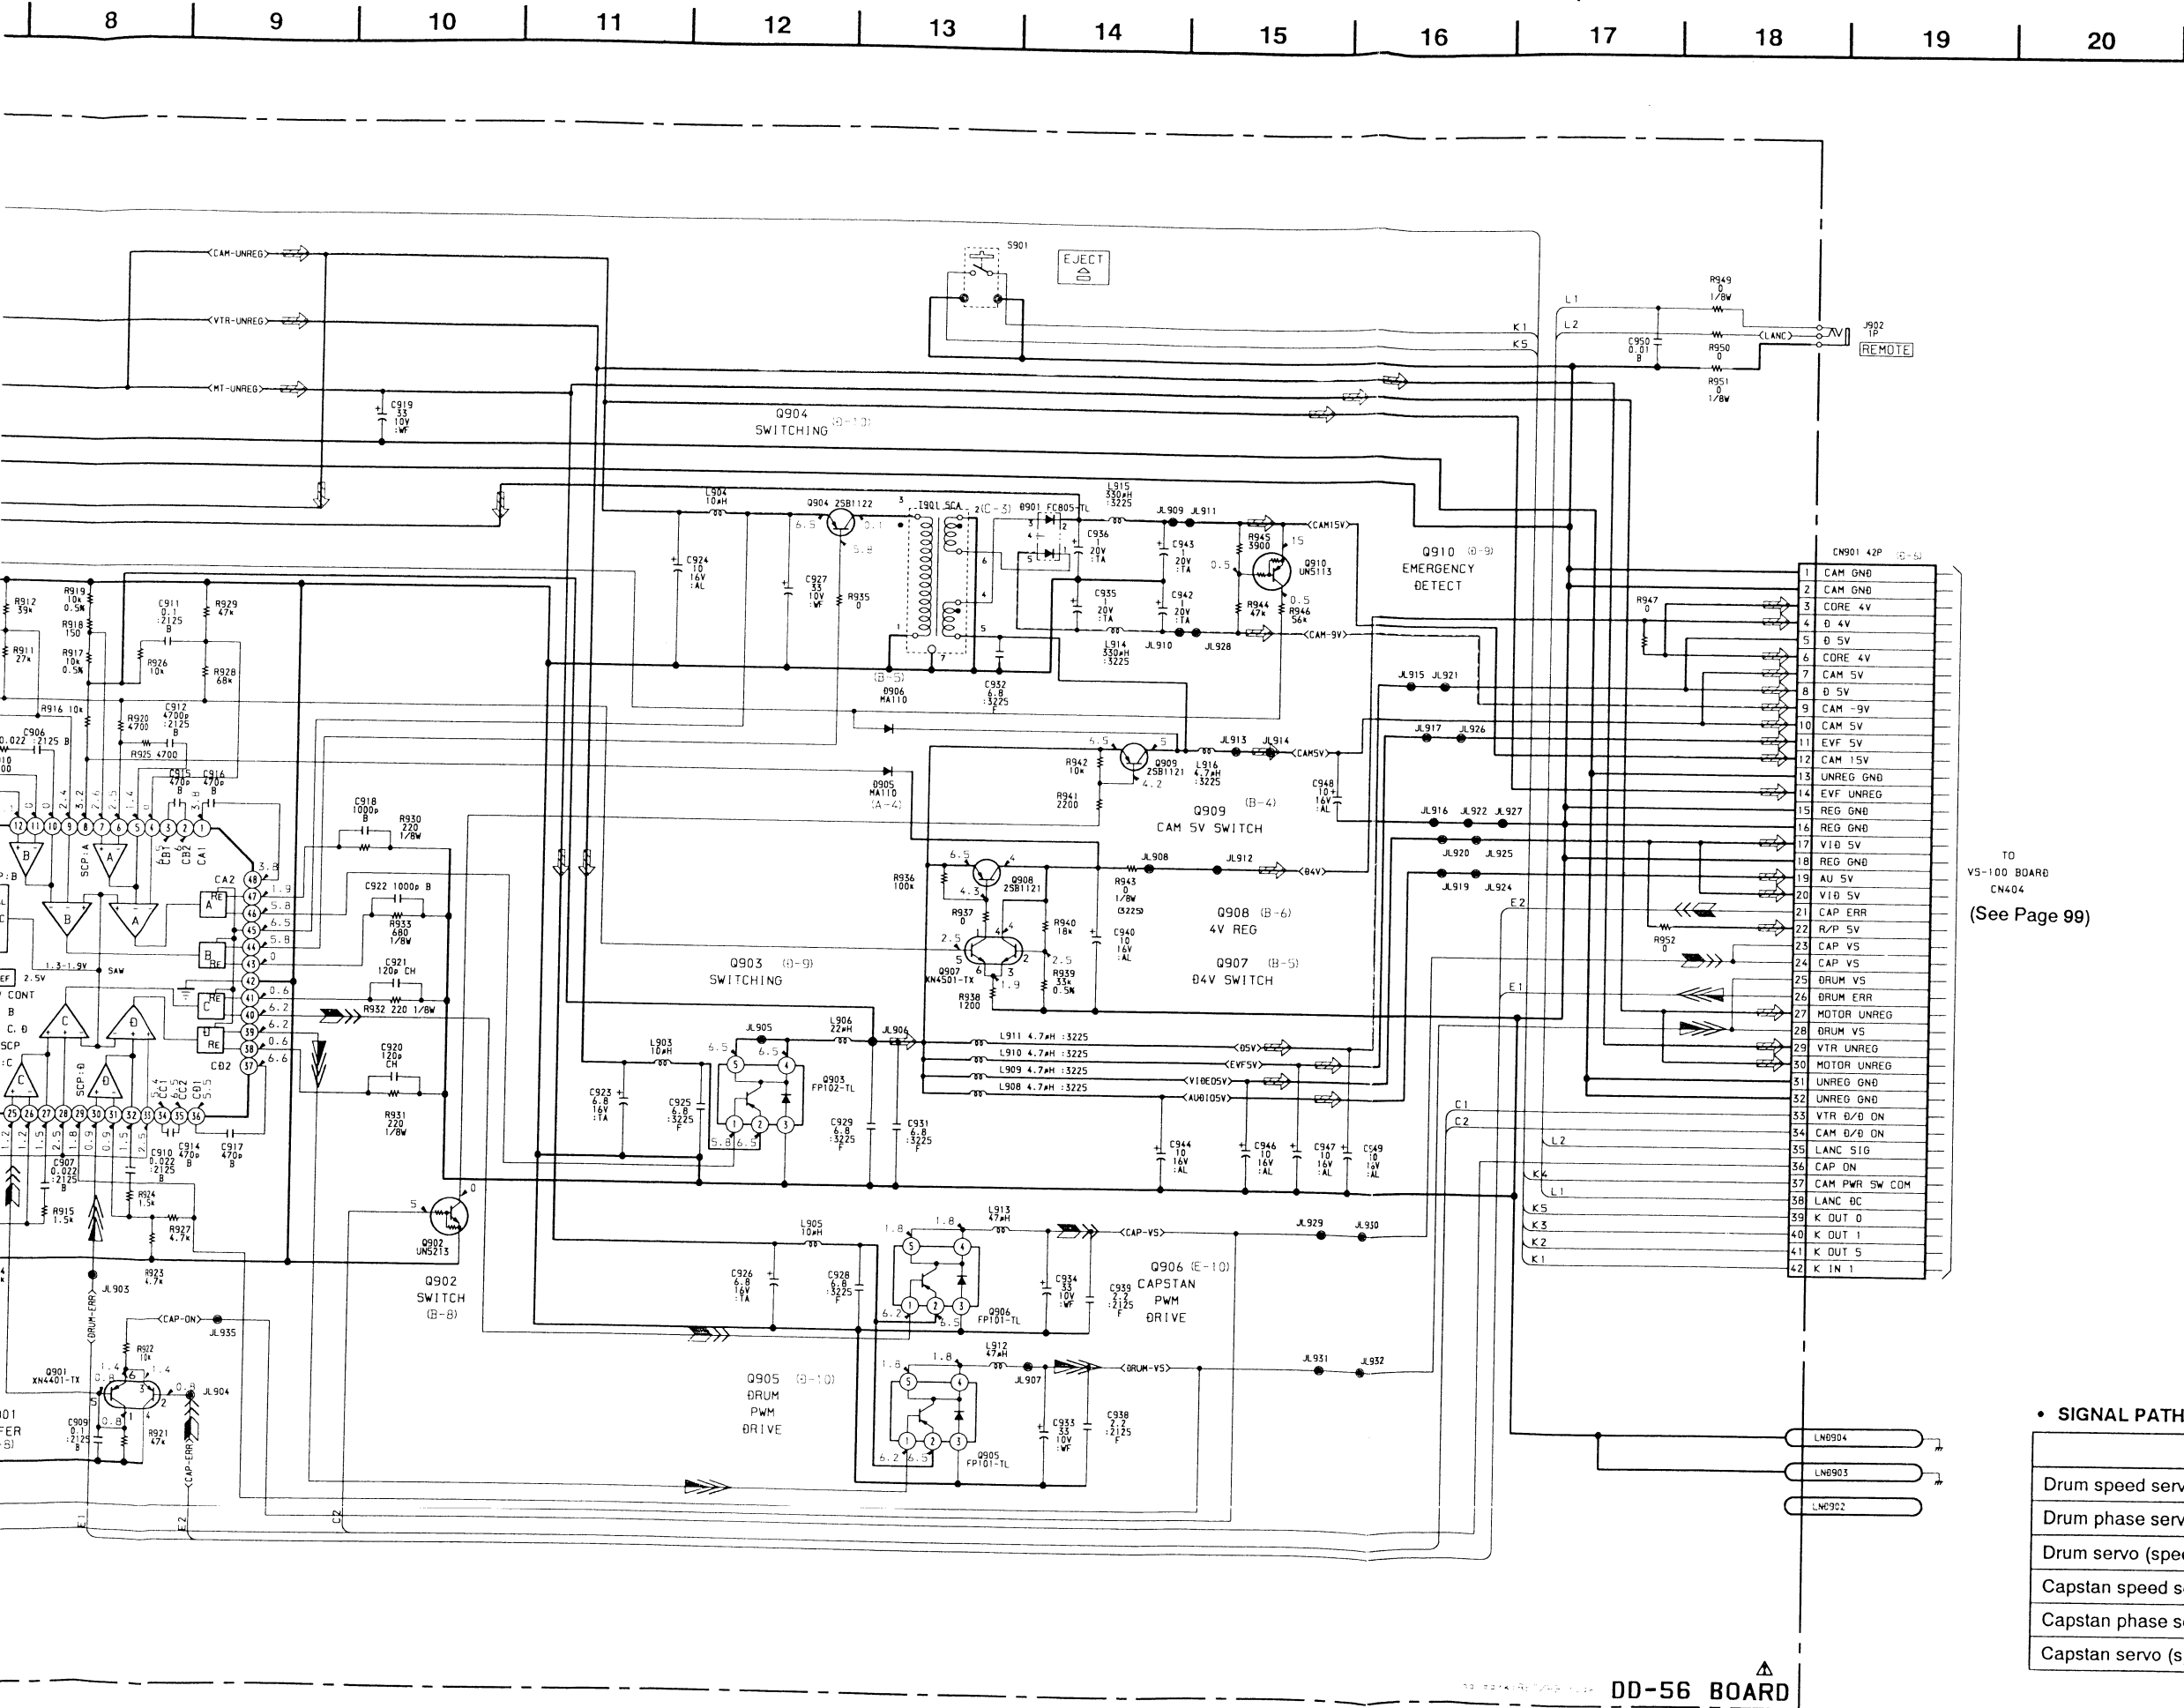

TO
VS-100 BOARD
CN404
(See Page 99)

• SIGNAL PATH


	REC	REC/PB	PB
Drum speed servo			
Drum phase servo			
Drum servo (speed and phase)		▶▶	
Capstan speed servo			
Capstan phase servo			
Capstan servo (speed and phase)		▶▶▶	

4-3. SEMICONDUCTORS


DTA114EE
DTC124EE
DTC144EU
RN1302
RN2302
UN511E
UN5112
UN5113
UN5115
UN521E
UN5212
UN5213
UN9111
2SA1162
2SA1163-G
2SA1576-R
2SA1586-YG
2SA1622-5.6.7
2SA1774R
2SB1202FAST
2SB1295-UL6
2SB1462Q
2SB1574
2SC1623-L5L6
2SC2223-F13
2SC4178-F14
2SC4211-5.6.7
2SC4617TL-QR
2SD1819A-R
2SD2216Q




FP101
FP102

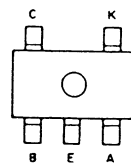


UMT1
XP4401




UMX1
XP4501

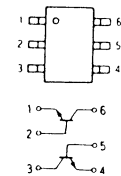


UMZ1
XN4312

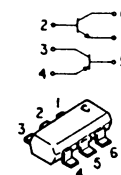


XN4213
XN4215
XN4501

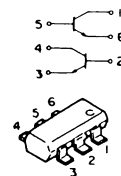


XN4401




XP4601




2SB1121
2SB1122-S
2SB798-DL
2SD1615A-GP




2SK1875-BL/V




FC805



MA110
1SS332




MA121

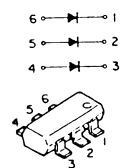

MA142WA
MA152WA
1SS181




MA728
MA8082-M




1SS226



TLS221



BR4371F



SECTION 5


EXPLODED VIEWS

NOTE:
• -XX, -X mean standardized parts, so they may have some difference from the original one.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• The mechanical parts with no reference number in the exploded views are supplied.
• Hardware (# mark) list is given in the of this parts list.

5-1. CABINET (L) AND F PANEL ASSEMBLIES

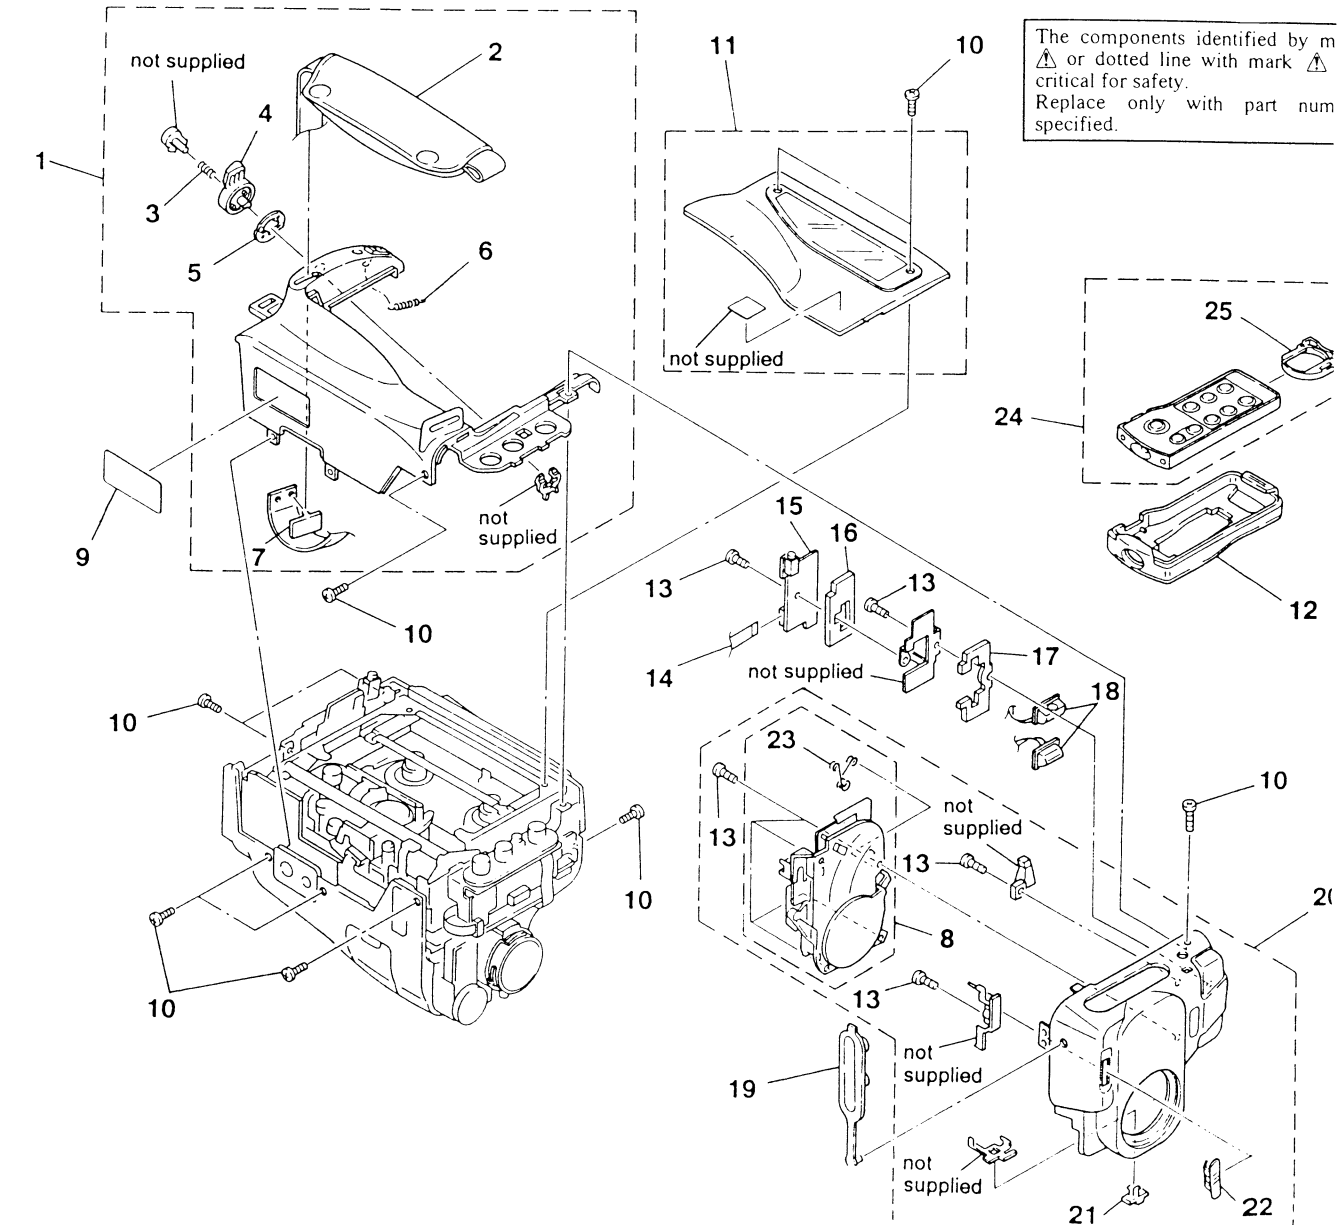

Ref. No.	Part No.	Description	Remark
1	X-3942-969-1	CABINET (L) ASSY	
2	3-736-807-01	BELT, GRIP	
3	3-578-221-00	SPRING, COMPRESSION	
4	3-942-985-01	KNOB, STAND-BY	
5	3-736-364-01	SPRING	
6	4-602-490-00	SPRING, TENSION	
7	3-942-895-01	STOPPER, BELT	
8	X-3942-991-1	SHUTTER ASSY, WIDE	
* 9	3-954-709-01	LABEL, MODEL NUMBER (AEP) (TR323E:AEP)	
* 9	3-954-710-01	LABEL, MODEL NUMBER (UK) (TR323E:UK, E, AUS/323EP)	
10	3-719-381-01	SCREW (M2X4)	
11	X-3943-113-1	LID ASSY, CASSETTE	
12	3-947-664-11	HOLDER (B), REMOTE CONTROL	

Ref. No.	Part No.	Description	Remark
13	3-719-601-01	SCREW (B2X5), TAPPING	
14	1-696-487-11	CABLE, FLAT (FFC-90)	
* 15	A-7063-674-A	MA-170P BOARD, COMPLETE	
* 16	3-953-646-01	URETHANE (MIC)	
* 17	3-953-645-01	CUSHION (MIC)	
18	A-7091-800-A	MICROPHONE UNIT	
19	3-953-652-01	COVER, JACK	
20	X-3942-857-1	PANEL ASSY, FRONT	
21	3-945-269-01	KNOB, S	
22	3-953-655-01	KNOB (LENS)	
23	3-947-357-01	SPRING, TORSION	
24	1-465-807-91	REMOTE COMMANDER (CAM CORDER) (RMT-507)	
25	3-708-412-01	LID, REMOTE COMMANDER	

SECTION 5 EXPLODED VIEWS


NOTE:

• -XX, -X mean standardized parts, so they may have some difference from the original one.

• Items marked " * " are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.

• The mechanical parts with no reference number in the exploded views are not supplied.
• Hardware (# mark) list is given in the last of this parts list.

5-1. CABINET (L) AND F PANEL ASSEMBLIES

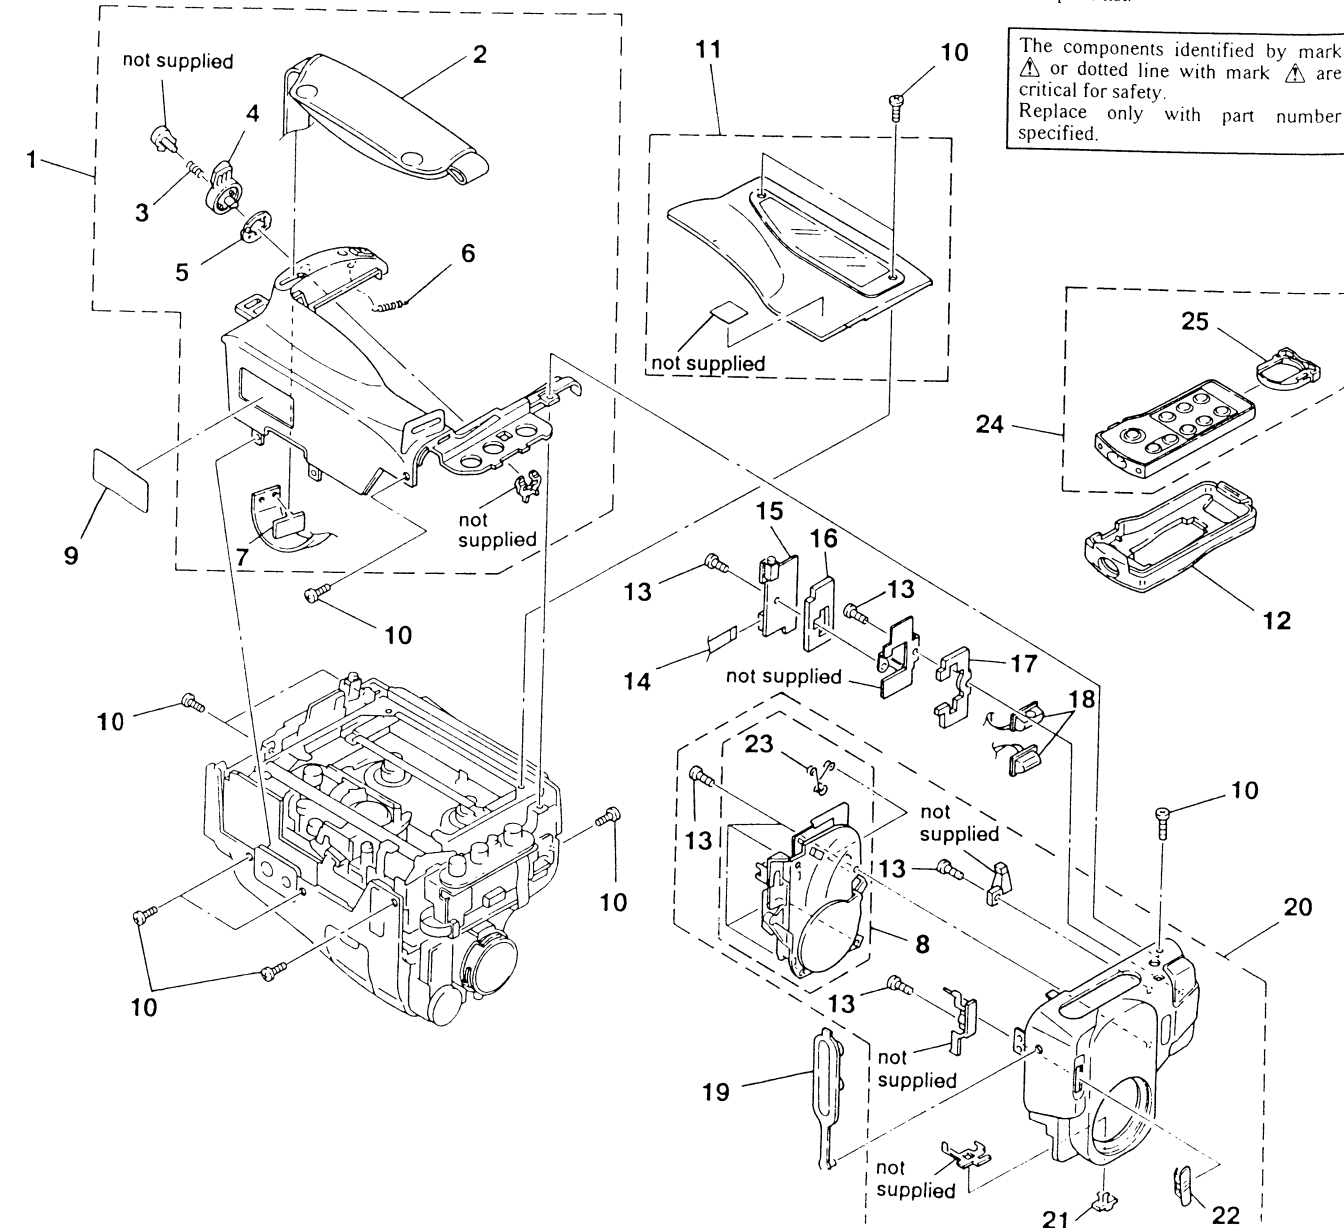


Ref. No.	Part No.	Description	Remark
1	X-3942-969-1	CABINET (L) ASSY	
2	3-736-807-01	BELT, GRIP	
3	3-578-221-00	SPRING, COMPRESSION	
4	3-942-985-01	KNOB, STAND-BY	
5	3-736-364-01	SPRING	
6	4-602-490-00	SPRING, TENSION	
7	3-942-895-01	STOPPER, BELT	
8	X-3942-991-1	SHUTTER ASSY, WIDE	
* 9	3-954-709-01	LABEL, MODEL NUMBER (AEP) (TR323E:AEP)	
* 9	3-954-710-01	LABEL, MODEL NUMBER (UK) (TR323E:UK, E, AUS/323EP)	
10	3-719-381-01	SCREW (M2X4)	
11	X-3943-113-1	LID ASSY, CASSETTE	
12	3-947-664-11	HOLDER (B), REMOTE CONTROL	

Ref. No.	Part No.	Description	Remark
13	3-719-601-01	SCREW (B2X5), TAPPING	
14	1-696-487-11	CABLE, FLAT (FFC-90)	
* 15	A-7063-674-A	MA-170P BOARD, COMPLETE	
* 16	3-953-646-01	URETHANE (MIC)	
* 17	3-953-645-01	CUSHION (MIC)	
18	A-7091-800-A	MICROPHONE UNIT	
19	3-953-652-01	COVER, JACK	
20	X-3942-857-1	PANEL ASSY, FRONT	
21	3-945-269-01	KNOB, S	
22	3-953-655-01	KNOB (LENS)	
23	3-947-357-01	SPRING, TORSION	
24	1-465-807-91	REMOTE COMMANDER (CAM CORDER) (RMT-507)	
25	3-708-412-01	LID, REMOTE COMMANDER	

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

5-2. CABINET (R) AND EVF ASSEMBLIES

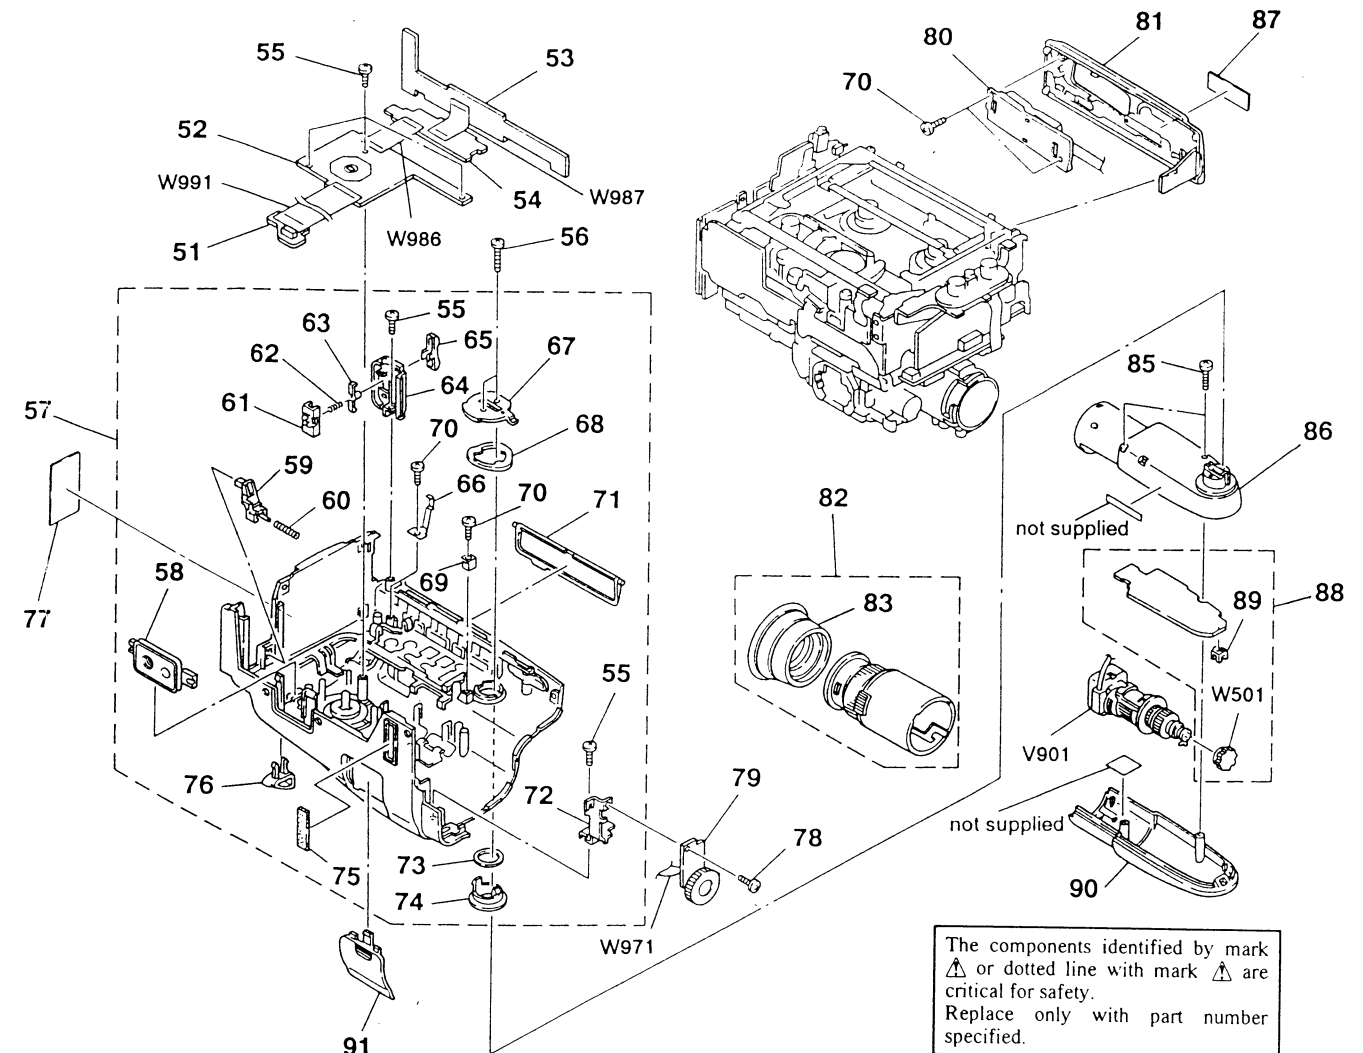


Ref. No.	Part No.	Description	Remark
* 51	A-7071-882-A	CN-73P BOARD, COMPLETE	
* 52	A-7071-831-A	CF-34 BOARD, COMPLETE	
* 53	A-7071-833-A	VK-32 BOARD, COMPLETE	
* 54	A-7071-832-A	ED-37 BOARD, COMPLETE	
55	3-713-790-21	SCREW (M2X6), TAPPING, P3	
56	3-740-546-41	SCREW (M2X10)	
57	X-3943-112-1	CABINET (R) ASSY	
58	3-942-911-01	SCREW, TRIPOD	
59	3-948-990-01	LOCK, BATTERY	
60	3-426-508-00	SPRING, COMPRESSION	
61	3-948-839-01	BLIND, POWER	
62	3-303-973-01	SPRING, COMPRESSION	
63	3-946-186-01	PUSH BUTTON, POWER	
64	3-948-975-01	BASE, POWER	
65	3-946-248-01	BUTTON, POWER	
66	3-948-988-01	SPRING, LEAF, VK	
67	3-747-111-01	PLATE, LOCK, TILT	
68	3-747-110-01	SPRING, LEAF, TILT	
69	3-747-178-01	REINFORCEMENT, TILT LOCK	
70	3-719-601-01	SCREW (B2X5), TAPPING	
71	3-948-976-01	DOOR, CONTROL	
* 72	3-948-987-01	FRAME, MF	
73	3-747-112-01	RING, TILT	

Ref. No.	Part No.	Description	Remark
74	3-747-109-01	SLEEVE, EVF	
75	3-949-008-01	SHEET, FOOT	
76	3-948-989-01	KNOB, BATTERY	
* 77	3-704-235-01	LABEL, CAUTION (TR323E:UK)	
78	3-713-786-51	SCREW (M2X3)	
* 79	A-7071-834-A	MF-214 BOARD, COMPLETE	
80	1-692-257-31	SWITCH, PUSH (ZOOM)	
81	X-3941-894-1	LID ASSY, LS	
82	X-3941-603-1	HOLDER ASSY, FINDER	
83	3-946-426-01	EYE CUP	
85	3-713-790-31	SCREW (M2X8), TAPPING, P3	
86	X-3940-706-1	CABINET (L) ASSY, EVF	
* 87	3-953-585-01	SEAL (T/W), CAUTION	
* 88	A-7063-220-A	VF-42P BOARD, COMPLETE	
89	3-942-888-01	HOLDER, LED	
90	3-943-077-01	CABINET (R), EVF	
91	3-948-843-01	LID, BATTERY CASE, LITHIUM	
△V901	1-452-565-11	CRT ASSY (M01KKD70WB)	
△W501	1-540-019-21	SOCKET ASSY, CRT	
W971	1-696-484-11	CABLE, FLAT (FFC-87)	
W986	1-696-621-11	FP-590 FLEXIBLE BOARD	
W987	1-696-622-11	FP-591 FLEXIBLE BOARD	
W991	1-696-483-11	CABLE, FLAT (FFC-86)	

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

5-3. MAIN BOARDS ASSEMBLY

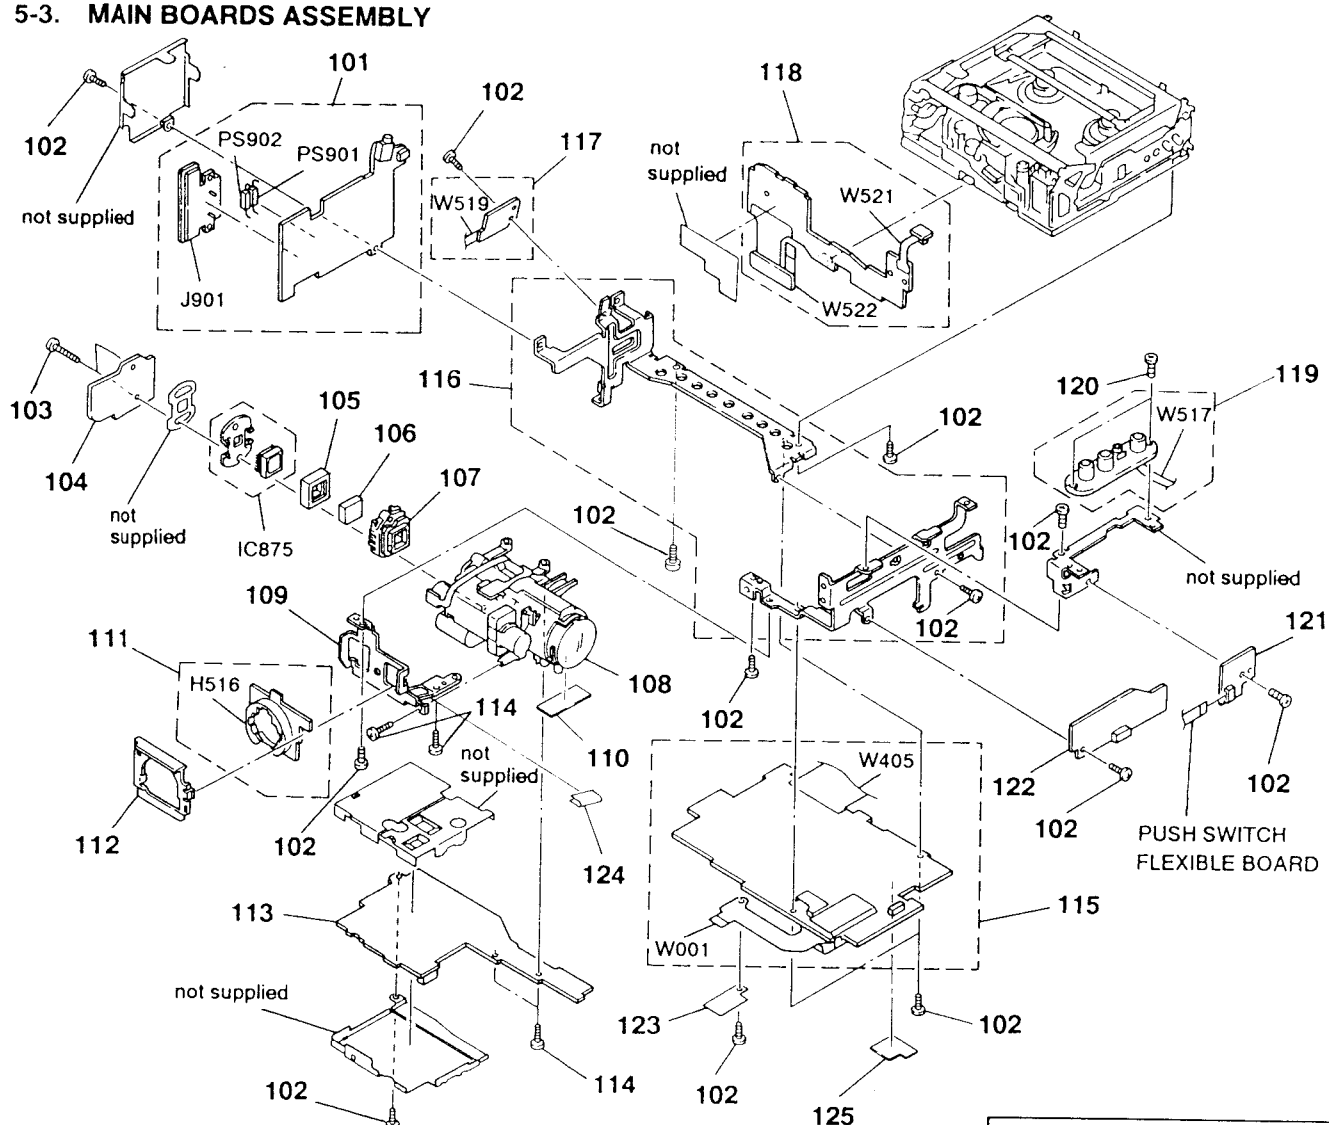


Be sure to read "Precautions for Replacement of CCD Imager" on page 73 when changing the CCD imager.

The components identified by mark  or dotted line with mark  are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
 101	* A-7063-672-A	DD-56P BOARD, COMPLETE	
102	3-713-786-51	SCREW (M2X3)	
103	3-947-268-01	SCREW (B TIGHT) (2), TAPPING	
* 104	A-7063-668-A	CD-106P BOARD, COMPLETE	
105	3-946-857-01	RUBBER (S), SEAL	
106	1-547-558-21	FILTER BLOCK, OPTICAL	
107	3-946-856-01	ADAPTOR (H), CCD FITTING	
108	1-547-548-11	LENS, ZOOM (VCL-6210WC) (TYPE A)	
108	1-547-630-11	LENS, ZOOM (VCL-6210WF) (TYPE B)	
* 109	3-949-001-01	FRAME, LENS	
110	3-954-580-01	CUSHION, LENS	
* 111	A-7071-829-A	LI-46 BOARD, COMPLETE	
112	3-948-842-01	HOLDER, LI	
* 113	A-7063-670-A	VC-133P BOARD, COMPLETE	
114	3-719-601-01	SCREW (B2X5), TAPPING	
* 115	A-7063-669-A	VS-100P BOARD, COMPLETE	
* 116	X-3942-209-1	FRAME (UPPER LOWER) ASSY	
* 117	A-7071-828-A	SW-223 BOARD, COMPLETE	
* 118	A-7063-671-A	SL-33P BOARD, COMPLETE	

Ref. No.	Part No.	Description	Remark
* 119	A-7063-581-A	JK-99 BOARD, COMPLETE	
120	3-719-381-01	SCREW (M2X4)	
* 121	A-7071-881-A	WS-11P BOARD, COMPLETE	
* 122	A-7063-673-A	AU-150P BOARD, COMPLETE	
123	3-951-136-02	SHIELD, DRUM	
124	3-846-312-01	SPACER	
* 125	3-954-411-01	SHEET (VS/LE), INSULATING	
H516	1-550-104-32	HOLDER, BATTERY	
IC875	A-7030-369-A	CCD BLOCK ASSY (ICX055AK-1) (CCD IMAGER)	
J901	1-537-281-41	TERMINAL BOARD	
 PS901	1-532-841-21	LINK, IC PRF 1600 (1.6A)	
 PS902	1-532-841-21	LINK, IC PRF 1600 (1.6A)	
W001	1-696-489-11	FP-588 FLEXIBLE BOARD	
W405	1-644-285-11	FP-572 FLEXIBLE BOARD	
W517	1-751-165-11	CABLE, FLAT (FFC-100)	
W519	1-696-488-11	CABLE, FLAT (FFC-92)	
W521	1-642-186-11	FP-437 FLEXIBLE BOARD	
W522	1-696-490-11	FP-589 FLEXIBLE BOARD	


5-4. CASSETTE COMPARTMENT HOLDER ASSEMBLY

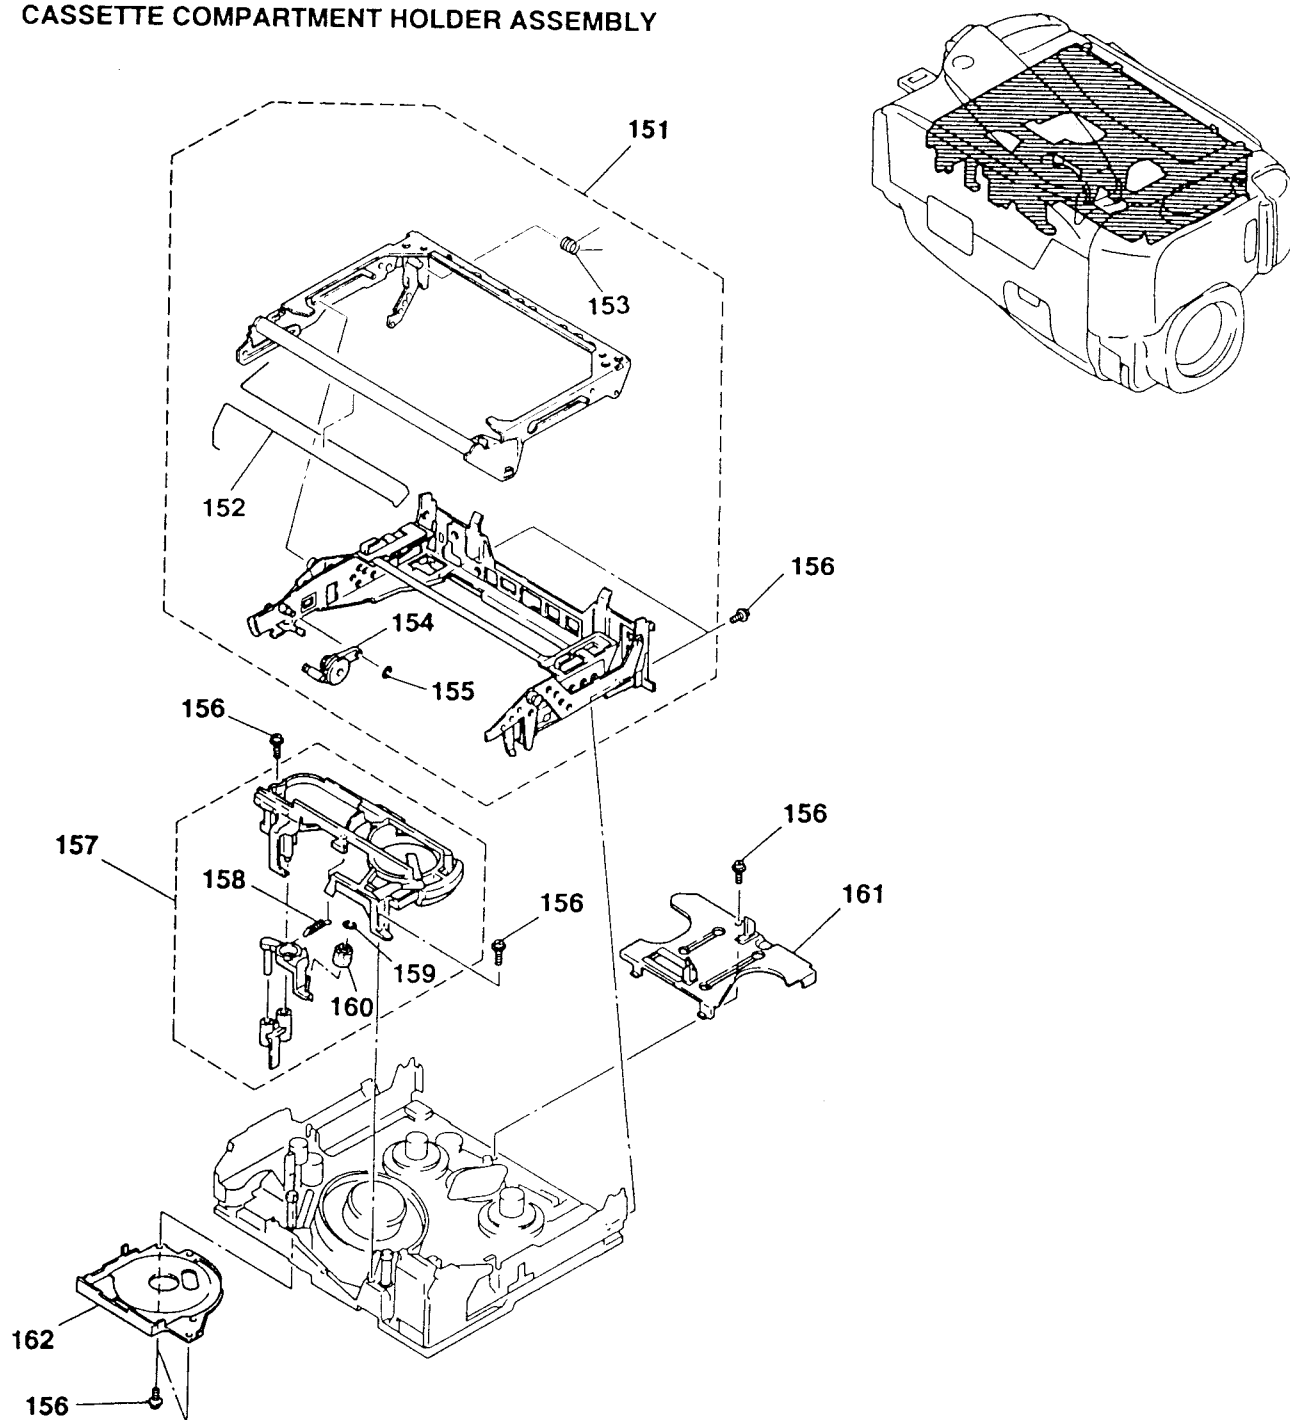

Ref. No.	Part No.	Description	Remark
151	A-7040-312-K	CASSETTE COMPARTMENT BLOCK ASSY	
152	3-945-773-01	BAR, TORSION	
153	3-945-771-01	SPRING, TORSION	
154	X-3941-287-2	DAMPER ASSY	
155	3-315-384-31	WASHER, STOPPER	
156	3-947-503-01	SCREW (M1.4X2.5)	

Ref. No.	Part No.	Description	Remark
157	A-7040-309-A	PROTECT (BASE) BLOCK ASSY	
158	3-945-760-01	SPRING, TENSION	
159	3-321-393-01	WASHER, STOPPER	
160	X-3166-813-1	ROLLER ASSY, HC	
161	X-3941-280-1	RETAINER ASSY, GOOSENECK	
162	3-945-733-01	COVER, CAPSTAN	

5-5. LS CHASSIS ASSEMBLY

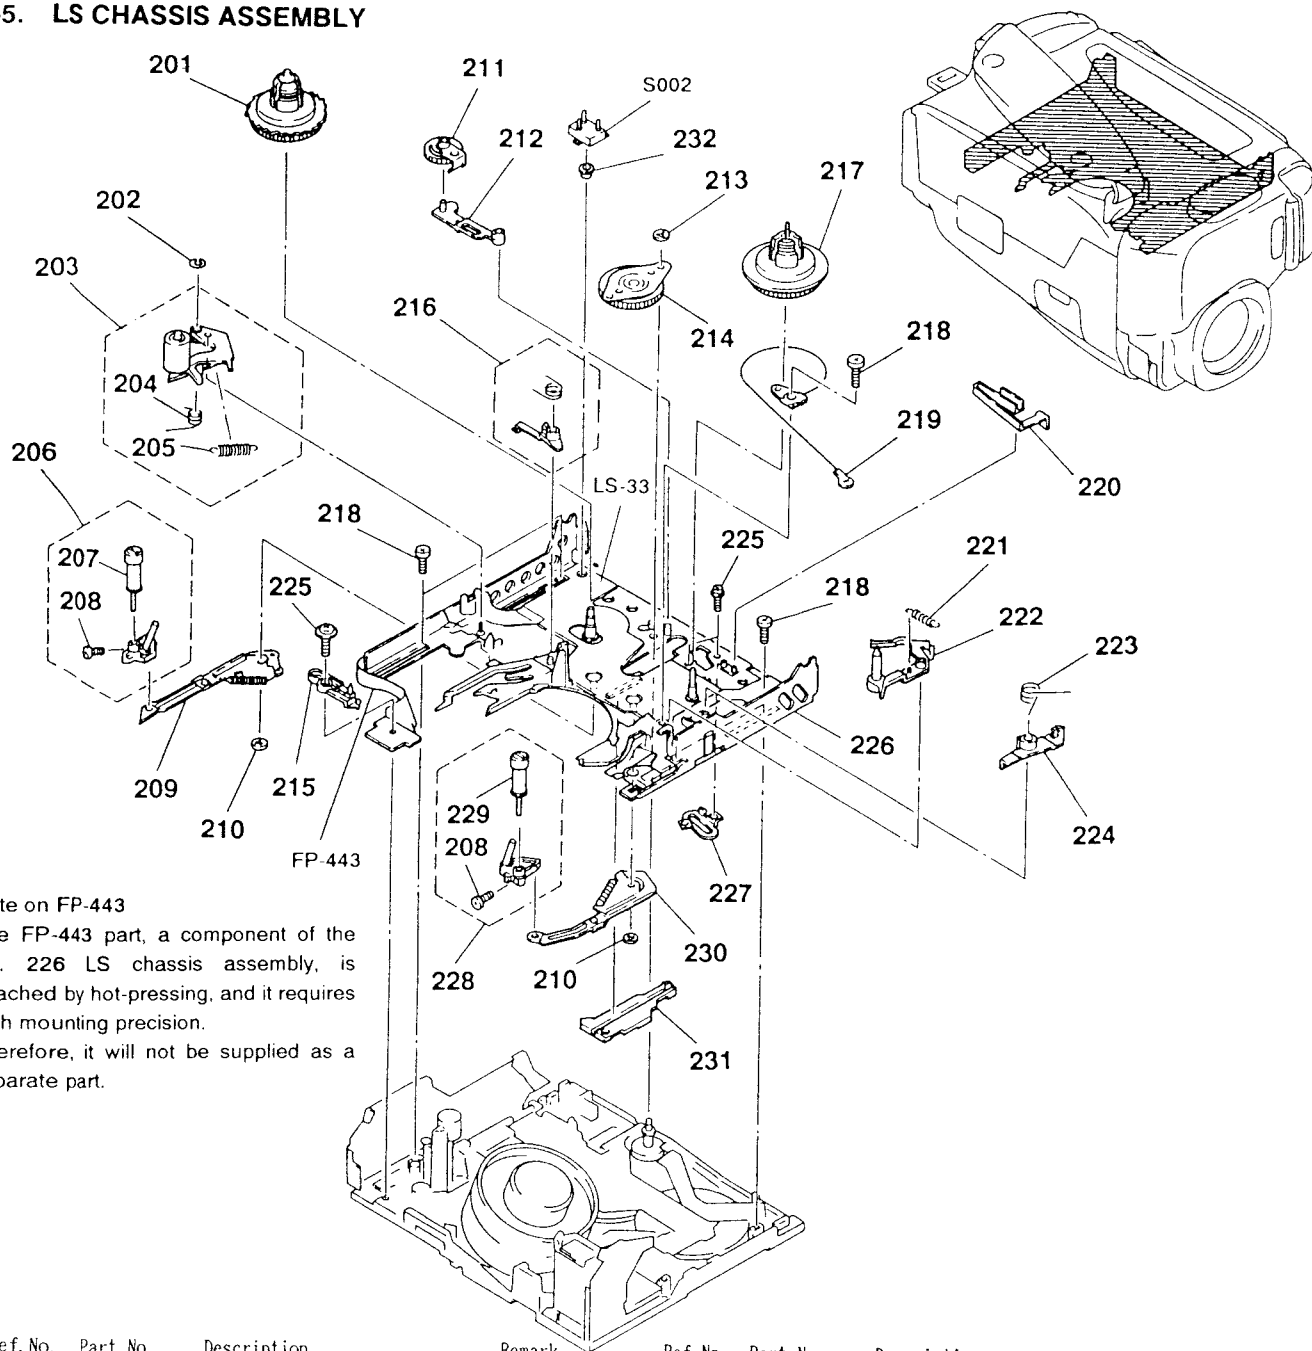


Note on FP-443

The FP-443 part, a component of the No. 226 LS chassis assembly, is attached by hot-pressing, and it requires high mounting precision.

Therefore, it will not be supplied as a separate part.

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
201	X-3941-274-1	TABLE ASSY, REEL, T		218	3-945-756-01	SCREW (M1.4X3)	
202	3-331-007-21	WASHER		219	X-3941-277-1	STRING BLOCK ASSY	
203	X-3941-271-5	ARM ASSY, PINCH		220	3-945-801-01	BRAKE, S SOFT	
204	3-945-743-01	SPRING, TORSION		221	3-954-327-01	SPRING, TENSION	
205	3-945-783-01	SPRING, TENSION		222	X-3941-276-1	TG1 ASSY	
206	A-7040-307-A	GUIDE (BASE) (T) BLOCK ASSY		223	3-945-752-01	SPRING, TORSION	
207	X-3941-424-1	ROLLER ASSY, TG6		224	3-945-799-01	BRAKE, S HARD	
208	3-947-504-01	SCREW (M1.2X2)		225	3-947-503-01	SCREW (M1.4X2.5)	
209	X-3941-267-1	ARM (T) ASSY, GUIDE		226	X-3943-307-1	CHASSIS ASSY, LS	
210	3-669-465-00	WASHER (1.5), STOPPER		227	3-945-784-01	PLATE, CAM, LS	
211	X-3941-273-1	SOFT ASSY, T		228	A-7040-306-A	GUIDE (BASE) (S) BLOCK ASSY	
212	3-945-753-01	ARM, T SOFT		229	X-3941-269-1	ROLLER ASSY, TG3	
213	3-726-829-01	WASHER, STOPPER		230	X-3941-266-1	ARM (S) ASSY, GUIDE	
214	X-3941-279-5	GEAR ASSY, GOOSENECK		231	3-945-837-01	SLIDER, GL	
215	3-947-644-01	RETAINER, TG5 (BASE)		232	3-949-881-01	SLEEVE	
216	A-7040-321-A	CLAW BLOCK ASSY, T HARD		S002	1-572-987-11	SWITCH, PUSH (3 KEY) (REC PROOF, ME/MP, MP/MP-1HG)	
217	X-3941-275-6	TABLE ASSY, REEL, S					


5-6. MECHANISM CHASSIS ASSEMBLY (1)

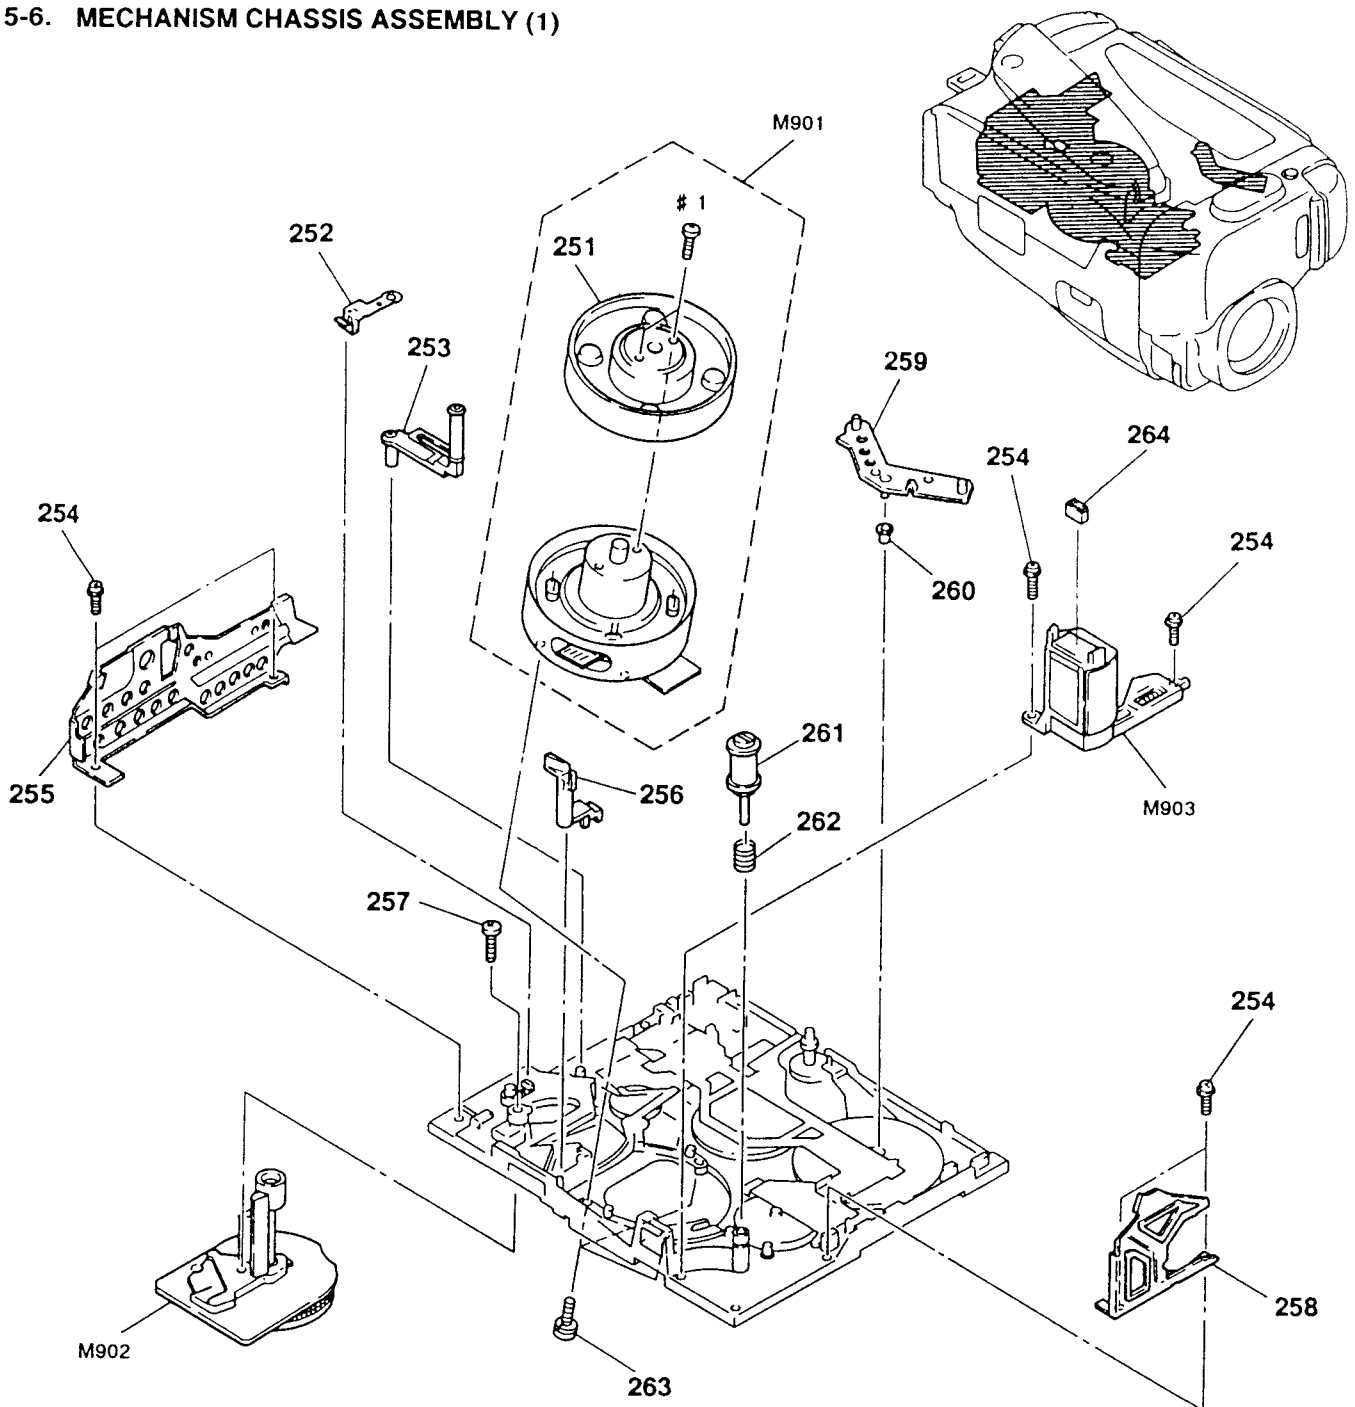

Ref. No.	Part No.	Description	Remark
251	A-7049-521-A	DRUM ASSY, UPPER (DGR-90-R)	
252	3-945-822-01	SPRING, LEAF, TG7 ARM	
253	A-7040-305-A	ARM BLOCK ASSY, TG7	
254	3-947-503-01	SCREW (M1.4X2.5)	
255	X-3941-255-1	PLATE (T) ASSY, SIDE	
256	3-945-735-01	ARM, HC CONVERSION	
257	3-713-786-71	SCREW (M2X5)	
258	3-945-691-01	PLATE (S), SIDE	
259	3-945-701-01	ARM, LS	

Ref. No.	Part No.	Description	Remark
260	3-945-702-01	ROLLER, LS	
261	X-3941-262-1	ROLLER ASSY, TG2	
262	3-945-774-01	SPRING, COMPRESSION	
263	3-686-493-01	SCREW (M2X5), P1	
264	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P	
M901	A-7048-585-A	DRUM ASSY (DGH-90A-R)	
M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)	
M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)	


5-7. MECHANISM CHASSIS ASSEMBLY (2)

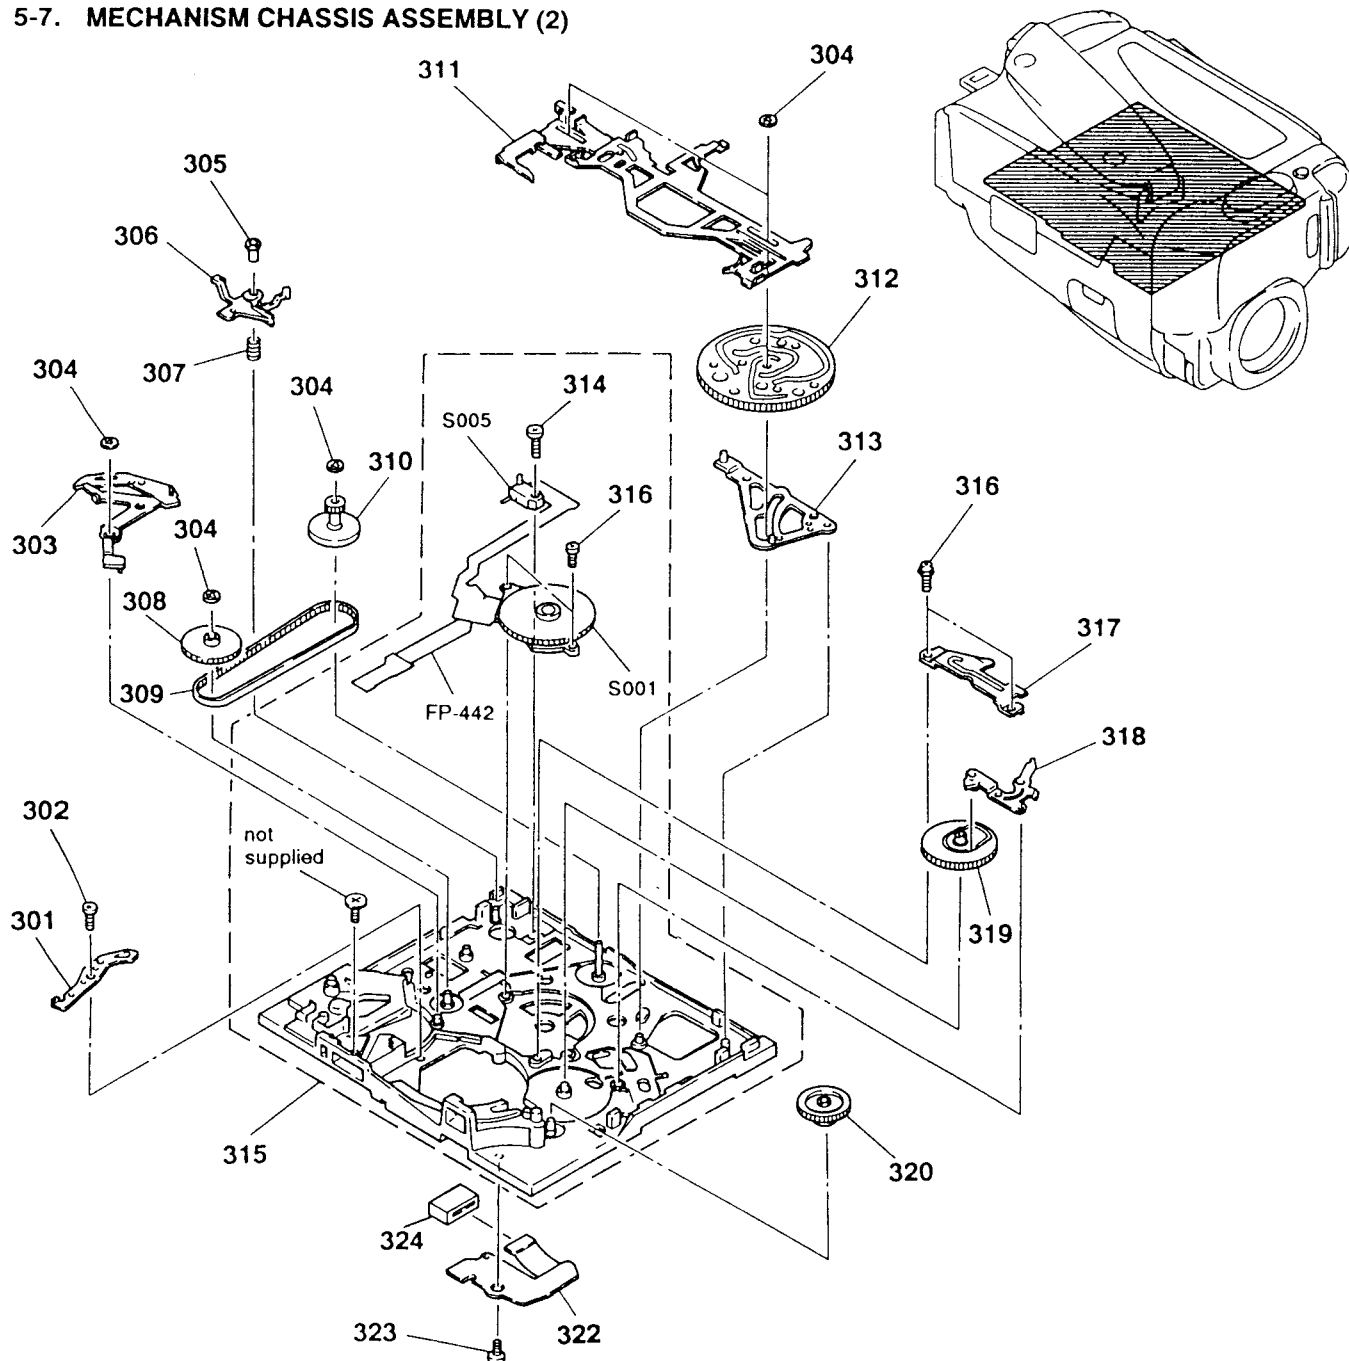

Ref.No.	Part No.	Description	Remark
301	3-945-734-01	ARM, HC DRIVING	
302	3-728-103-11	SCREW (M1.4X1.6), SPECIAL HEAD	
303	X-3941-259-1	ARM ASSY, PINCH PRESS	
304	3-726-829-01	WASHER, STOPPER	
305	3-945-730-01	SLEEVE, EJECT	
306	3-945-706-01	LEVER, EJECT	
307	3-945-729-01	SPRING, COMPRESSION	
308	X-3941-256-1	GEAR ASSY, CHANGE	
309	3-944-539-01	BELT, RELAY	
310	3-945-695-01	PULLEY, RELAY	
311	X-3941-260-1	SLIDER ASSY. M	
312	3-945-696-02	CAM	
313	X-3941-258-1	ARM ASSY, GL	

Ref.No.	Part No.	Description	Remark
314	3-713-786-71	SCREW (M2X5)	
315	A-7040-303-A	CHASSIS ASSY, MECHANICAL	
316	3-947-503-01	SCREW (M1.4X2.5)	
317	3-945-722-01	RETAINER, GEAR	
318	X-3941-257-1	ARM ASSY, FF	
319	3-945-697-01	GEAR (B), L	
320	3-945-700-01	GEAR (A), L	
322	1-641-643-12	FP-444 FLEXIBLE BOARD	
323	3-945-756-01	SCREW (M1.4X3)	
324	1-691-254-13	CONNECTOR, TRANSLATION 10P	
S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
S005	1-570-771-21	SWITCH (C DOWN)	


5-8. ZOOM LENS ASSEMBLY (VCL-6210WC) (TYPE A)

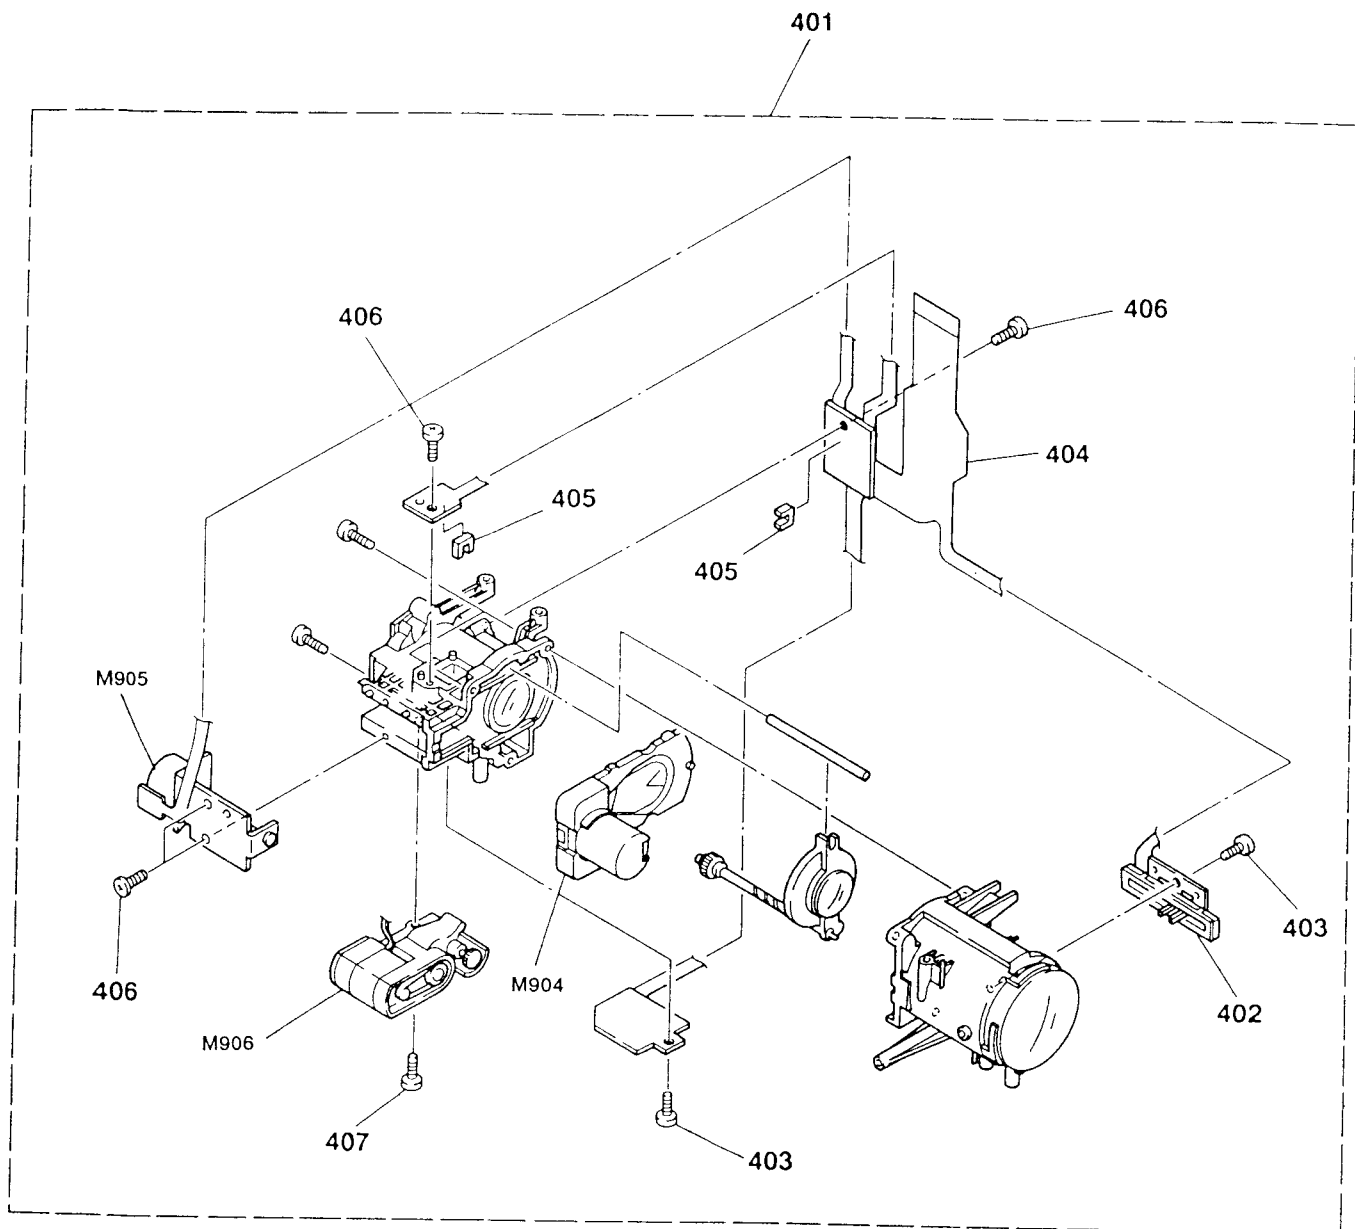

Ref. No.	Part No.	Description	Remark
401	1-547-548-11	LENS, ZOOM (VCL-6210WC) (TYPE A)	
402	3-708-446-01	METER, POTENTIO	
403	3-708-053-01	SCREW, FB FITTING	
404	3-708-493-01	FIEXIBLE	
405	3-708-435-01	PHOTO INTERRUPTER	

Ref. No.	Part No.	Description	Remark
406	3-707-946-01	SCREW	
407	3-708-450-01	SCREW, PZ	
M904	3-708-494-01	METER ASSY, 1G (IRIS) (TYPE A)	
M905	3-708-491-01	MOTOR ASSY, STEPPING (FOCUS) (TYPE A)	
M906	3-708-492-01	MOTOR ASSY, PZ (ZOOM) (TYPE A)	

5-9. ZOOM LENS ASSEMBLY (VCL-6210WF) (TYPE B)

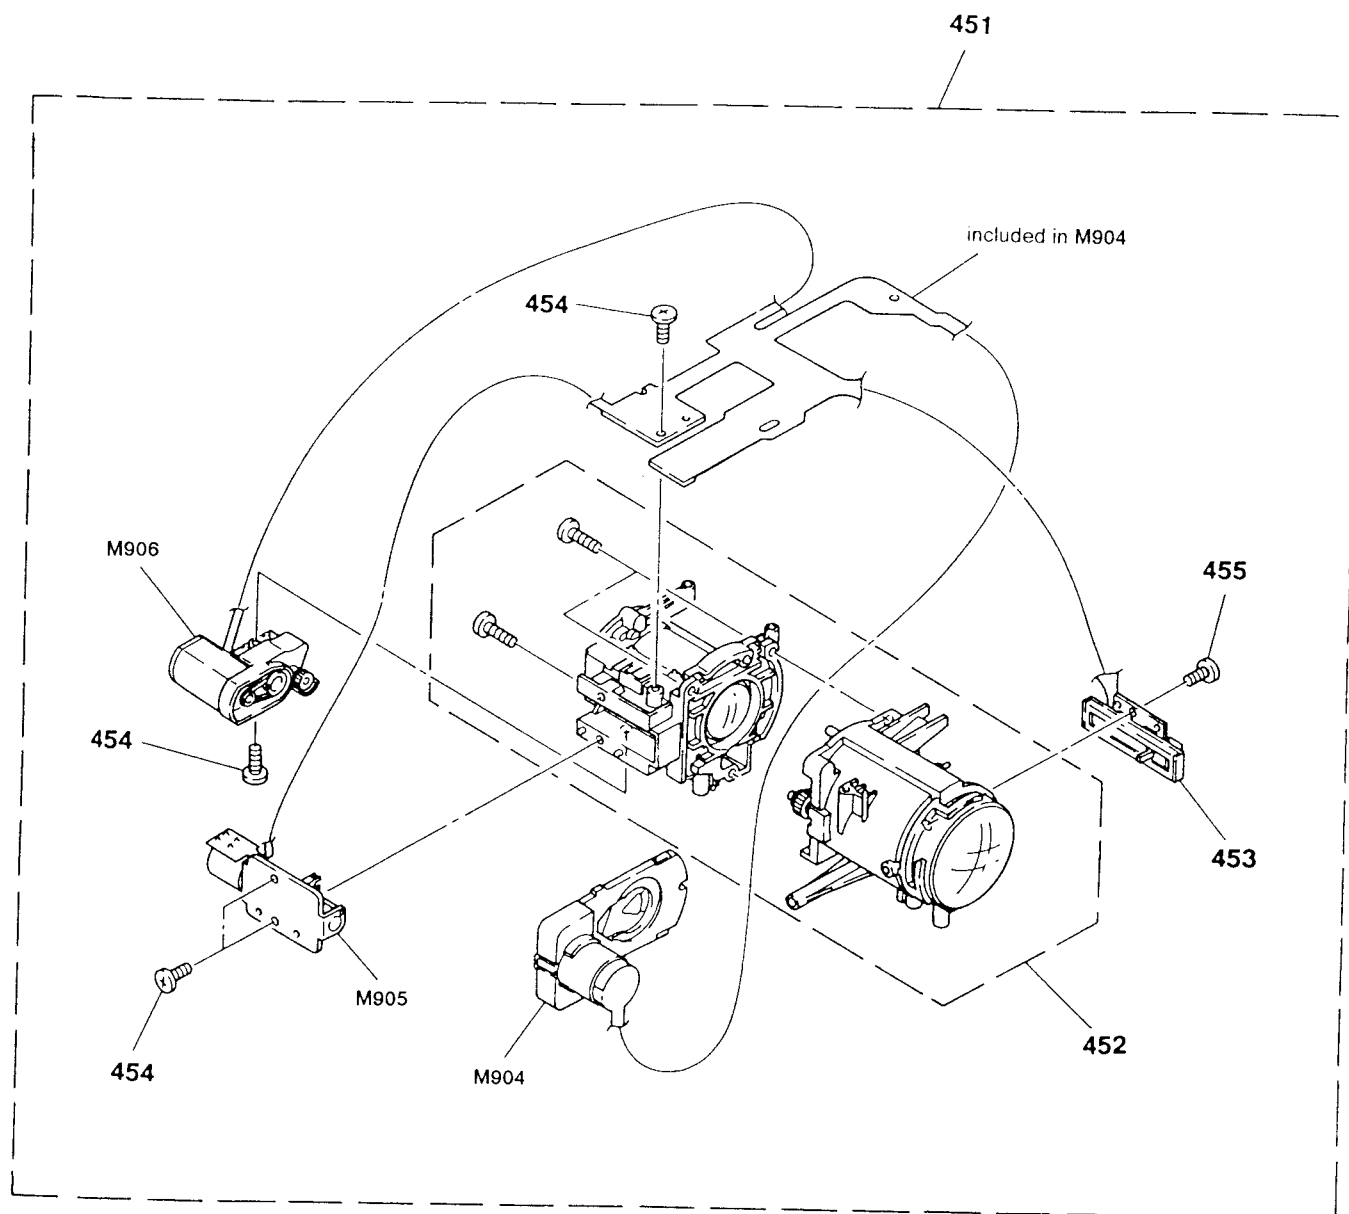

Ref. No.	Part No.	Description	Remark
451	1-547-630-11	LENS, ZOOM (VCL-6210WF) (TYPE B)	
452	3-708-652-01	LENS ASSY	
453	3-708-655-01	POTENTIO, ZOOM	
454	3-708-302-01	SCREW, FITTING M.E	

Ref. No.	Part No.	Description	Remark
455	3-708-657-01	SCREW, POTENTIOMETER FITTING	
M904	3-708-653-01	IRIS UNIT (TYPE B)	
M905	3-708-656-01	MOTOR UNIT, FOCUS (TYPE B)	
M906	3-708-654-01	MOTOR UNIT, ZOOM (TYPE B)	

AU-150P

SECTION 6 ELECTRICAL PARTS LIST

NOTE:

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX and -X mean standardized parts, so they may have some difference from the original one.
- RESISTORS
All resistors are in ohms.
METAL: Metal-film resistor.
METAL OXIDE: Metal oxide-film resistor.
F: nonflammable

- Items marked "*" are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A... uPA...: μ PA...
uPB...: μ PB... uPC...: μ PC... uPD...: μ PD...
- CAPACITORS
uF: μ F
- COILS
uH: μ H

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board.

Ref. No.	Part No.	Description	Remark
*	A-7063-673-A	AU-150P BOARD, COMPLETE ***** (Ref. No. 2,000 Series)	
		< CAPACITOR >	
C605	1-164-634-11	CERAMIC CHIP 1uF	16V
C606	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C607	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C608	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C609	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
C611	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C612	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C613	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C615	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V
C616	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C617	1-164-634-11	CERAMIC CHIP 1uF	16V
C618	1-162-965-11	CERAMIC CHIP 0.0015uF	10% 50V
C619	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C620	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C621	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C623	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C624	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C625	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C626	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C627	1-162-969-11	CERAMIC CHIP 0.0068uF	10% 25V
C629	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C630	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C631	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C633	1-164-634-11	CERAMIC CHIP 1uF	16V
C634	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C635	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C636	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C637	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C638	1-163-989-11	CERAMIC CHIP 0.033uF	10% 25V
C640	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C641	1-126-209-11	ELECT 100uF	20% 4V
C642	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C643	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C645	1-126-209-11	ELECT 100uF	20% 4V
C646	1-163-809-11	CERAMIC CHIP 0.047uF	10% 25V

Ref. No.	Part No.	Description	Remark
C647	1-164-634-11	CERAMIC CHIP 1uF	16V
C648	1-162-965-11	CERAMIC CHIP 0.0015uF	10% 50V
C649	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C650	1-162-968-11	CERAMIC CHIP 0.0047uF	10% 50V
C651	1-162-949-11	CERAMIC CHIP 47PF	5% 50V
C653	1-162-957-11	CERAMIC CHIP 220PF	5% 50V
C654	1-162-952-11	CERAMIC CHIP 82PF	5% 50V
C655	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C656	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C657	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C658	1-162-969-11	CERAMIC CHIP 0.0068uF	10% 25V
C661	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C662	1-162-966-11	CERAMIC CHIP 0.0022uF	10% 50V
C663	1-164-634-11	CERAMIC CHIP 1uF	16V
C664	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C666	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C668	1-126-209-11	ELECT 100uF	20% 4V
C670	1-164-634-11	CERAMIC CHIP 1uF	16V
C672	1-162-638-11	CERAMIC CHIP 1uF	16V
C673	1-162-638-11	CERAMIC CHIP 1uF	16V
C674	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C675	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C676	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C677	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C678	1-135-202-21	TANTAL. CHIP 22uF	20% 4V
C679	1-135-202-21	TANTAL. CHIP 22uF	20% 4V
C680	1-164-005-11	CERAMIC CHIP 0.47uF	25V
C681	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C683	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C684	1-126-206-11	ELECT CHIP 100uF	20% 6.3V
C687	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C688	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C689	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C690	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C691	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C692	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C694	1-162-969-11	CERAMIC CHIP 0.0068uF	10% 25V
C695	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V
C696	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< CONNECTOR >

CN601	1-695-883-12	CONNECTOR, BOARD TO BOARD 32P	
CN602	1-566-537-11	CONNECTOR, FPC (NON ZIF) 5P	
* CN603	1-580-055-21	PIN, CONNECTOR 2P	

< FILTER >

FL601	1-236-837-21	FILTER, BAND PASS (1.5MHz)	
FL602	1-236-838-21	FILTER, BAND PASS (1.7MHz)	

< IC >

IC601	8-759-823-19	IC CXA1488R	
IC602	8-759-823-19	IC CXA1488R	
IC603	8-759-823-21	IC CXA1536Q	
IC604	8-759-062-66	IC TC7S66F	
IC605	8-749-923-29	IC RS-20E-T	

< TRANSISTOR >

Q601	8-729-823-00	TRANSISTOR 2SA1622-5.6.7	
Q603	8-729-402-81	TRANSISTOR XN4501	
Q604	8-729-402-81	TRANSISTOR XN4501	
Q605	8-729-905-18	TRANSISTOR DTC144EU	
Q606	8-729-402-81	TRANSISTOR XN4501	

< RESISTOR >

R601	1-216-849-11	METAL CHIP	220K	5%	1/16W
R603	1-216-837-11	METAL CHIP	22K	5%	1/16W
R604	1-216-801-11	METAL CHIP	22	5%	1/16W
R605	1-216-859-11	METAL GLAZE	1.5M	5%	1/16W
R607	1-216-855-11	METAL CHIP	680K	5%	1/16W
R609	1-216-851-11	METAL CHIP	330K	5%	1/16W
R611	1-216-845-11	METAL CHIP	100K	5%	1/16W
R613	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R614	1-216-821-11	METAL CHIP	1K	5%	1/16W
R617	1-216-839-11	METAL CHIP	33K	5%	1/16W
R619	1-216-833-11	METAL CHIP	10K	5%	1/16W
R620	1-216-849-11	METAL CHIP	220K	5%	1/16W
R622	1-216-837-11	METAL CHIP	22K	5%	1/16W
R623	1-216-859-11	METAL GLAZE	1.5M	5%	1/16W
R624	1-216-855-11	METAL CHIP	680K	5%	1/16W
R625	1-216-835-11	METAL CHIP	15K	5%	1/16W
R627	1-216-851-11	METAL CHIP	330K	5%	1/16W
R632	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R633	1-216-821-11	METAL CHIP	1K	5%	1/16W
R634	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R635	1-216-817-11	METAL CHIP	470	5%	1/16W
R637	1-216-839-11	METAL CHIP	33K	5%	1/16W
R639	1-216-833-11	METAL CHIP	10K	5%	1/16W
R640	1-216-848-11	METAL CHIP	180K	5%	1/16W
R642	1-216-845-11	METAL CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

R643	1-216-817-11	METAL CHIP	470 5% 1/16W
R645	1-216-813-11	METAL CHIP	220 5% 1/16W
R646	1-216-819-11	METAL CHIP	680 5% 1/16W
R647	1-216-821-11	METAL CHIP	1K 5% 1/16W
R649	1-216-821-11	METAL CHIP	1K 5% 1/16W

R651	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R652	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R653	1-218-714-11	METAL CHIP	8.2K 0.50% 1/16W
R654	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R655	1-216-825-11	METAL CHIP	2.2K 5% 1/16W

R656	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R657	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R658	1-218-706-11	METAL CHIP	3.9K 0.50% 1/16W
R659	1-218-716-11	METAL CHIP	10K 0.50% 1/16W
R661	1-216-821-11	METAL CHIP	1K 5% 1/16W

R662	1-216-821-11	METAL CHIP	1K 5% 1/16W
R663	1-216-834-11	METAL CHIP	12K 5% 1/16W
R664	1-216-833-11	METAL CHIP	10K 5% 1/16W
R666	1-216-819-11	METAL CHIP	680 5% 1/16W
R667	1-216-827-11	METAL CHIP	3.3K 5% 1/16W

R668	1-216-827-11	METAL CHIP	3.3K 5% 1/16W
R669	1-216-821-11	METAL CHIP	1K 5% 1/16W
R670	1-216-821-11	METAL CHIP	1K 5% 1/16W
R672	1-216-864-11	METAL CHIP	0 5% 1/16W

* A-7063-668-A CD-106P BOARD, COMPLETE

(Ref.No. 1,000 Series)

< CAPACITOR >

C875	1-135-214-21	TANTAL. CHIP	4.7uF	20%	20V
C876	1-128-013-11	ELECT CHIP	1uF	20%	50V
C877	1-128-008-11	ELECT CHIP	3.3uF	20%	35V
C879	1-162-637-11	CERAMIC CHIP	0.47uF		16V
C880	1-135-091-91	TANTAL. CHIP	1uF	20%	16V
C881	1-128-004-11	ELECT CHIP	10uF	20%	16V
C882	1-126-607-11	ELECT CHIP	47uF	20%	4V
C883	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C884	1-164-156-11	CERAMIC CHIP	0.1uF		25V
C888	1-135-210-11	TANTALUM CHIP	4.7uF	20%	10V

< CONNECTOR >

CN875	1-573-308-21	CONNECTOR, BOARD TO BOARD 16P	
-------	--------------	-------------------------------	--

< DIODE >

D875	8-719-800-76	DIODE 1SS226	
D876	8-719-404-46	DIODE MA110	
D877	8-719-820-05	DIODE 1SS181	
D878	8-719-404-46	DIODE MA110	

CD-106P**CF-34****CN-73****DD-56P**

Ref. No.	Part No.	Description	Remark
< COIL >			
L875	1-412-064-11	INDUCTOR CHIP 100uH	
< TRANSISTOR >			
Q875	8-729-425-64	TRANSISTOR 2SD2216Q	
Q876	8-729-427-72	TRANSISTOR XP4501	
Q877	8-729-232-86	TRANSISTOR 2SK1875	
< RESISTOR >			
R877	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R878	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R879	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R880	1-216-843-11	METAL CHIP 68K 5% 1/16W	
R881	1-216-819-11	METAL CHIP 680 5% 1/16W	
R882	1-216-849-11	METAL CHIP 220K 5% 1/16W	
R883	1-216-835-11	METAL CHIP 15K 5% 1/16W	
R884	1-216-850-11	METAL CHIP 270K 5% 1/16W	
R885	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R886	1-216-809-11	METAL CHIP 100 5% 1/16W	
R887	1-216-828-11	METAL CHIP 3.9K 5% 1/16W	

*	A-7071-831-A	CF-34 BOARD, COMPLETE	

(Ref. No. 7,000 Series)			
< CONNECTOR >			
CN993	1-566-540-11	CONNECTOR, FPC (NON ZIF) 8P	
< DIODE >			
D992	8-719-404-46	DIODE MA110	
< RESISTOR >			
R991	1-216-295-00	METAL CHIP 0 5% 1/10W	
R992	1-216-295-00	METAL CHIP 0 5% 1/10W	
< SWITCH >			
S991	1-692-111-11	SWITCH, KEY BOARD (FADER)	
S993	1-692-111-11	SWITCH, KEY BOARD (DATE(+))	
S995	1-692-111-11	SWITCH, KEY BOARD (COUNTER RESET)	
S996	1-692-111-11	SWITCH, KEY BOARD (TIME(NEXT))	
S997	1-692-024-21	SWITCH, ROTARY (PROGRAM AE)	
< SPEAKER >			
SP991	1-529-107-11	BUZZER, PIEZOELECTRIC	

Ref. No.	Part No.	Description	Remark
< FLAT CABLE >			
W991	1-696-483-11	CABLE, FLAT (FFC-86)	

*	A-7071-835-A	CN-73 BOARD, COMPLETE	

(Ref. No. 6,000 Series)			
< CONNECTOR >			
CN518	1-573-310-21	CONNECTOR, BOARD TO BOARD 20P	

△	A-7063-672-A	DD-56P BOARD, COMPLETE	

(Ref. No. 1,000 Series)			
< CAPACITOR >			
C901	1-164-218-11	CERAMIC CHIP 180PF 0.25PF 50V	
C902	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C903	1-164-232-11	CERAMIC CHIP 0.01uF 50V	
C904	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C906	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C907	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C909	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C910	1-163-037-11	CERAMIC CHIP 0.022uF 10% 25V	
C911	1-164-633-11	CERAMIC CHIP 0.1uF 10% 25V	
C912	1-163-017-00	CERAMIC CHIP 0.0047uF 5% 50V	
C914	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C915	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C916	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C917	1-162-962-11	CERAMIC CHIP 470PF 10% 50V	
C918	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C919	1-128-530-11	ELECT CHIP 33uF 20% 10V	
C920	1-162-928-11	CERAMIC CHIP 120PF 5% 50V	
C921	1-162-928-11	CERAMIC CHIP 120PF 5% 50V	
C922	1-162-964-11	CERAMIC CHIP 0.001uF 10% 50V	
C923	1-135-215-21	TANTAL. CHIP 6.8uF 20% 16V	
C924	1-128-004-11	ELECT CHIP 10uF 20% 16V	
C925	1-164-836-11	CERAMIC CHIP 6.8uF 16V	
C926	1-135-215-21	TANTAL. CHIP 6.8uF 20% 16V	
C927	1-128-530-11	ELECT CHIP 33uF 20% 10V	
C928	1-164-836-11	CERAMIC CHIP 6.8uF 16V	
C929	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C931	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C932	1-165-178-11	CERAMIC CHIP 6.8uF 16V	
C933	1-128-530-11	ELECT CHIP 33uF 20% 10V	
C934	1-128-530-11	ELECT CHIP 33uF 20% 10V	
C935	1-135-177-21	TANTALUM CHIP 1uF 20% 20V	
C936	1-135-177-21	TANTALUM CHIP 1uF 20% 20V	

The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.

Ref. No.	Part No.	Description	Remark
C938	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C939	1-164-505-11	CERAMIC CHIP 2.2uF	16V
C940	1-128-004-11	ELECT CHIP 10uF	20% 16V
C942	1-135-177-21	TANTALUM CHIP 1uF	20% 20V
C943	1-135-177-21	TANTALUM CHIP 1uF	20% 20V
C944	1-128-004-11	ELECT CHIP 10uF	20% 16V
C946	1-128-004-11	ELECT CHIP 10uF	20% 16V
C947	1-128-004-11	ELECT CHIP 10uF	20% 16V
C948	1-128-004-11	ELECT CHIP 10uF	20% 16V
C949	1-128-004-11	ELECT CHIP 10uF	20% 16V
C950	1-162-970-11	CERAMIC CHIP 0.01uF	10% 25V

< CONNECTOR >

CN901	1-695-324-21	CONNECTOR, BOARD TO BOARD 42P
CN902	1-573-506-41	CONNECTOR, FPC (NON ZIF) 4P

< DIODE >

D901	8-719-981-59	DIODE FC805
D905	8-719-404-46	DIODE MA110
D906	8-719-404-46	DIODE MA110

< IC >

IC901	8-759-060-94	IC MB3785APFV-G-BND-ER
-------	--------------	------------------------

< JACK >

J901	1-537-281-41	TERMINAL BOARD (BATTERY TERMINAL)
J902	1-565-276-21	JACK, ULTRA SMALL 1P (REMOTE)

< COIL >

L903	1-424-522-21	COIL, CHOKE 10uH
L904	1-424-522-21	COIL, CHOKE 10uH
L905	1-424-522-21	COIL, CHOKE 10uH
L906	1-424-523-21	COIL, CHOKE 22uH
L908	1-412-028-11	INDUCTOR CHIP 4.7uH
L909	1-412-028-11	INDUCTOR CHIP 4.7uH
L910	1-412-028-11	INDUCTOR CHIP 4.7uH
L911	1-412-028-11	INDUCTOR CHIP 4.7uH
L912	1-424-524-21	COIL, CHOKE 47uH
L913	1-424-524-21	COIL, CHOKE 47uH
L914	1-412-034-11	INDUCTOR CHIP 330uH
L915	1-412-034-11	INDUCTOR CHIP 330uH
L916	1-412-028-11	INDUCTOR CHIP 4.7uH

< IC LINK >

△PS901	1-532-841-21	LINK, IC PRF1600(1.6A)
△PS902	1-532-841-21	LINK, IC PRF1600(1.6A)

Ref. No.	Part No.	Description	Remark
< TRANSISTOR >			
Q901	8-729-403-27	TRANSISTOR XN4401	
Q902	8-729-402-42	TRANSISTOR UN5213	
Q903	8-729-823-84	TRANSISTOR FP102	
Q904	8-729-804-41	TRANSISTOR 2SB1122 S	
Q905	8-729-823-82	TRANSISTOR FP101	
Q906	8-729-823-82	TRANSISTOR FP101	
Q907	8-729-402-81	TRANSISTOR XN4501	
Q908	8-729-805-25	TRANSISTOR 2SB1121-S	
Q909	8-729-805-25	TRANSISTOR 2SB1121-S	
Q910	8-729-403-35	TRANSISTOR UN5113	

< RESISTOR >

R901	1-216-837-11	METAL CHIP 22K 5% 1/16W
R902	1-218-716-11	METAL CHIP 10K 0.50% 1/16W
R903	1-216-837-11	METAL CHIP 22K 5% 1/16W
R904	1-218-698-11	METAL CHIP 1.8K 0.50% 1/16W
R905	1-218-724-11	METAL CHIP 22K 0.50% 1/16W
R906	1-218-708-11	METAL CHIP 4.7K 0.50% 1/16W
R907	1-216-818-11	METAL CHIP 560 5% 1/16W
R908	1-216-847-11	METAL CHIP 150K 5% 1/16W
R909	1-216-827-11	METAL CHIP 3.3K 5% 1/16W
R910	1-216-829-11	METAL CHIP 4.7K 5% 1/16W
R911	1-216-838-11	METAL CHIP 27K 5% 1/16W
R912	1-216-840-11	METAL CHIP 39K 5% 1/16W
R914	1-216-831-11	METAL CHIP 6.8K 5% 1/16W
R915	1-216-823-11	METAL CHIP 1.5K 5% 1/16W
R916	1-216-833-11	METAL CHIP 10K 5% 1/16W
R917	1-218-716-11	METAL CHIP 10K 0.50% 1/16W
R918	1-216-811-11	METAL CHIP 150 5% 1/16W
R919	1-218-716-11	METAL CHIP 10K 0.50% 1/16W
R920	1-216-829-11	METAL CHIP 4.7K 5% 1/16W
R921	1-216-841-11	METAL CHIP 47K 5% 1/16W
R922	1-216-833-11	METAL CHIP 10K 5% 1/16W
R923	1-216-829-11	METAL CHIP 4.7K 5% 1/16W
R924	1-216-823-11	METAL CHIP 1.5K 5% 1/16W
R925	1-216-829-11	METAL CHIP 4.7K 5% 1/16W
R926	1-216-833-11	METAL CHIP 10K 5% 1/16W
R927	1-216-829-11	METAL CHIP 4.7K 5% 1/16W
R928	1-216-843-11	METAL CHIP 68K 5% 1/16W
R929	1-216-841-11	METAL CHIP 47K 5% 1/16W
R930	1-216-182-91	METAL GLAZE 220 5% 1/8W
R931	1-216-182-91	METAL GLAZE 220 5% 1/8W
R932	1-216-182-91	METAL GLAZE 220 5% 1/8W
R933	1-216-194-00	METAL CHIP 680 5% 1/8W
R935	1-216-864-11	METAL CHIP 0 5% 1/16W
R936	1-216-845-11	METAL CHIP 100K 5% 1/16W
R937	1-216-864-11	METAL CHIP 0 5% 1/16W

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

DD-56P

ED-37

JK-99

LI-46

LS-33

Ref. No.	Part No.	Description	Remark
R938	1-216-822-11	METAL CHIP	1.2K 5% 1/16W
R939	1-218-883-11	METAL CHIP	33K 0.50% 1/16W
R940	1-216-836-11	METAL CHIP	18K 5% 1/16W
R941	1-216-825-11	METAL CHIP	2.2K 5% 1/16W
R942	1-216-833-11	METAL CHIP	10K 5% 1/16W
R943	1-216-296-91	METAL GLAZE	0 5% 1/8W
R944	1-216-841-11	METAL CHIP	47K 5% 1/16W
R945	1-216-828-11	METAL CHIP	3.9K 5% 1/16W
R946	1-216-842-11	METAL CHIP	56K 5% 1/16W
R947	1-216-295-00	METAL CHIP	0 5% 1/10W
R949	1-216-296-91	METAL GLAZE	0 5% 1/8W
R950	1-216-864-11	METAL CHIP	0 5% 1/16W
R951	1-216-296-91	METAL GLAZE	0 5% 1/8W
R952	1-216-864-11	METAL CHIP	0 5% 1/16W
< SWITCH >			
S901	1-572-467-11	SWITCH, PUSH (1 KEY) (EJECT)	
< TRANSFORMER >			
T901	1-450-874-21	TRANSFORMER, DC-DC CONVERTER	

*	A-7071-832-A	ED-37 BOARD, COMPLETE	

(Ref. No. 8,000 Series)			
< DIODE >			
D986	8-719-404-46	DIODE MA110	
D987	8-719-404-40	DIODE MA121	
D988	8-719-420-14	DIODE MA8082-M	
D989	8-719-420-14	DIODE MA8082-M	
D990	8-719-420-14	DIODE MA8082-M	
< SWITCH >			
S986	1-571-275-31	SWITCH, SLIDE (BEEP)	
S987	1-692-111-11	SWITCH, KEY BOARD (SUMMER TIME)	
S988	1-571-275-31	SWITCH, SLIDE (REMOTE COMMANDER)	
S989	1-692-111-11	SWITCH, KEY BOARD (AREA)	
S990	1-571-275-31	SWITCH, SLIDE (EDIT)	
< FLAT CABLE >			
W986	1-696-621-11	FP-590 FLEXIBLE BOARD	

Ref. No.	Part No.	Description	Remark
*	A-7063-581-A	JK-99 BOARD, COMPLETE	

(Ref. No. 3,000 Series)			
< JACK >			
J517	1-569-556-11	JACK (VIDEO/AUDIO OUT)	
< FLAT CABLE >			
W517	1-751-165-11	CABLE, FLAT (FFC-100)	

*	A-7071-829-A	LI-46 BOARD, COMPLETE	

(Ref. No. 4,000 Series)			
< CONNECTOR >			
* CN516	1-580-055-21	PIN, CONNECTOR 2P	
< HOLE ELEMENT >			
H516	1-550-104-32	HOLDER, BATTERY (LITHIUM)	

LS-33 BOARD, COMPLETE			

(Ref. No. 9,000 Series)			
< DIODE >			
D001	8-719-989-52	DIODE GL4600S	
< HOLE ELEMENT >			
H001	8-719-987-62	DIODE LT140SAZ	
H002	8-719-987-62	DIODE LT140SAZ	
< TRANSISTOR >			
Q001	8-729-012-46	TRANSISTOR PT4600FS	
Q002	8-729-012-46	TRANSISTOR PT4600FS	
< RESISTOR >			
R003	1-216-033-00	METAL CHIP	220 5% 1/10W
R004	1-216-033-00	METAL CHIP	220 5% 1/10W
R010	1-216-033-00	METAL CHIP	220 5% 1/10W
R011	1-216-033-00	METAL CHIP	220 5% 1/10W
< SWITCH >			
S002	1-572-987-11	SWITCH, PUSH (3 KEY)	
(REC PROOF, ME/MP, MPHG)			

Ref. No.	Part No.	Description	Remark
*	A-7063-674-A	MA-170P BOARD, COMPLETE ***** (Ref. No. 2,000 Series)	

< CAPACITOR >

C551	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C552	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C553	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C554	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C566	1-126-205-11	ELECT CHIP	47uF	20%	6.3V
C567	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C568	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C569	1-135-091-91	TANTAL. CHIP	1uF	20%	16V
C570	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V
C571	1-162-587-11	CERAMIC CHIP	0.039uF	10%	25V
C572	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
C573	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C574	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C575	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C577	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C578	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C579	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C580	1-135-091-91	TANTAL. CHIP	1uF	20%	16V
C581	1-164-343-11	CERAMIC CHIP	0.056uF	10%	25V
C582	1-162-587-11	CERAMIC CHIP	0.039uF	10%	25V
C583	1-163-016-00	CERAMIC CHIP	0.0039uF	10%	50V
C584	1-163-020-00	CERAMIC CHIP	0.0082uF	10%	50V
C585	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C586	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V

< CONNECTOR >

CN551	1-691-550-11	PIN, CONNECTOR (1.5MM) (SMD) 3P
CN552	1-691-550-11	PIN, CONNECTOR (1.5MM) (SMD) 3P
CN553	1-566-537-11	CONNECTOR, FPC (NON ZIF) 5P

< DIODE >

D551	8-719-404-46	DIODE MA110
------	--------------	-------------

< IC >

IC551	8-759-084-53	IC CXA1618AN
-------	--------------	--------------

< JACK >

J551	1-691-737-11	JACK (SMALL TYPE) (MIC)
------	--------------	-------------------------

< COIL >

L501	1-410-994-11	INDUCTOR CHIP 1.2uH
L502	1-410-994-11	INDUCTOR CHIP 1.2uH
L503	1-410-994-11	INDUCTOR CHIP 1.2uH

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

< TRANSISTOR >

Q555	8-729-822-97	TRANSISTOR	2SC4211-5.6.7
------	--------------	------------	---------------

< RESISTOR >

R551	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R552	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R553	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R554	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R570	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R571	1-216-833-11	METAL CHIP	10K	5%	1/16W
R572	1-216-833-11	METAL CHIP	10K	5%	1/16W
R573	1-216-835-11	METAL CHIP	15K	5%	1/16W
R574	1-216-864-11	METAL CHIP	0	5%	1/16W
R575	1-216-837-11	METAL CHIP	22K	5%	1/16W
R576	1-216-839-11	METAL CHIP	33K	5%	1/16W
R577	1-216-836-11	METAL CHIP	18K	5%	1/16W
R580	1-216-833-11	METAL CHIP	10K	5%	1/16W
R581	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R582	1-216-833-11	METAL CHIP	10K	5%	1/16W
R583	1-216-864-11	METAL CHIP	0	5%	1/16W
R584	1-216-835-11	METAL CHIP	15K	5%	1/16W
R585	1-216-833-11	METAL CHIP	10K	5%	1/16W
R586	1-216-837-11	METAL CHIP	22K	5%	1/16W
R587	1-216-839-11	METAL CHIP	33K	5%	1/16W
R588	1-216-836-11	METAL CHIP	18K	5%	1/16W
R593	1-216-821-11	METAL CHIP	1K	5%	1/16W
R594	1-216-821-11	METAL CHIP	1K	5%	1/16W

*	A-7071-834-A	MF-214 BOARD, COMPLETE ***** (Ref. No. 5,000 Series)	
---	--------------	--	--

< DIODE >

D971	8-719-404-46	DIODE MA110
------	--------------	-------------

< SWITCH >

S971	1-692-088-41	SWITHC, TACTILE (FOCUS)
S972	1-241-865-11	RES. VAR, CARBON 10K/10K (MANUAL FOCUS RING)
S973	1-572-467-11	SWITCH, PUSH (1 KEY) (LENS COVER)

< FLAT CABLE >

W971	1-696-484-11	CABLE, FLAT (FFC-87)
------	--------------	----------------------

SL-33P**SW-223****VC-133P**

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

*	A-7063-671-A	SL-33P BOARD, COMPLETE ***** (Ref. No. 5,000 Series)	
---	--------------	--	--

< CAPACITOR >

C521	1-128-004-11	ELECT CHIP	10uF	20%	16V
C522	1-128-004-11	ELECT CHIP	10uF	20%	16V
C524	1-128-013-11	ELECT CHIP	1uF	20%	50V
C525	1-164-232-11	CERAMIC CHIP	0.01uF		50V
C526	1-163-809-11	CERAMIC CHIP	0.047uF	10%	25V
C527	1-162-968-11	CERAMIC CHIP	0.0047uF	10%	50V

< CONNECTOR >

CN521	1-691-482-21	CONNECTOR, FFC/FPC 15P
CN522	1-691-472-21	CONNECTOR, FFC/FPC 6P
CN523	1-691-473-21	CONNECTOR, FFC/FPC 7P

< IC >

IC521	8-759-059-09	IC LB8111V
-------	--------------	------------

< TRANSISTOR >

Q521	8-729-402-81	TRANSISTOR XN4501
------	--------------	-------------------

< RESISTOR >

R522	1-216-845-11	METAL CHIP	100K	5%	1/16W
R523	1-216-845-11	METAL CHIP	100K	5%	1/16W
R524	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R525	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R528	1-216-845-11	METAL CHIP	100K	5%	1/16W
R530	1-216-840-11	METAL CHIP	39K	5%	1/16W
R532	1-216-174-00	METAL GLAZE	100	5%	1/8W
R533	1-216-864-11	METAL CHIP	0	5%	1/16W

< NETWORK RESISTOR >

RB521	1-236-424-11	NETWORK, RES 10K
RB522	1-236-424-11	NETWORK, RES 10K

< FLAT CABLE >

W521	1-642-186-11	FP-437 FLEXIBLE BOARD
W522	1-696-490-11	FP-589 FLEXIBLE BOARD

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

*	A-7071-828-A	SW-223 BOARD, COMPLETE ***** (Ref. No. 7,000 Series)	
---	--------------	--	--

< SWITCH >

S519	1-553-977-00	SWITCH, SLIDE (STANDBY)
S520	1-571-315-11	SWITCH, KEY BOARD (START/STOP)

< FLAT CABLE >

W519	1-696-488-11	CABLE, FLAT (FFC-92)
------	--------------	----------------------

*	A-7063-670-A	VC-133P BOARD, COMPLETE ***** (Ref. No. 3,000 Series)	
---	--------------	---	--

< CAPACITOR >

C701	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C702	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C703	1-164-361-11	CERAMIC CHIP	0.047uF		16V
C705	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C706	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C707	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C708	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C709	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C710	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C711	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C712	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C713	1-162-947-11	CERAMIC CHIP	33PF	5%	50V
C714	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C716	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C717	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C718	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C719	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C721	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C722	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C723	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C724	1-164-634-11	CERAMIC CHIP	1uF		16V
C725	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C726	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C727	1-135-181-21	TANTALUM CHIP	4.7uF	20%	6.3V
C728	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C729	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C730	1-162-971-11	CERAMIC CHIP	0.001uF		50V
C731	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C733	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C734	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C735	1-162-971-11	CERAMIC CHIP	0.001uF		50V
C736	1-164-360-11	CERAMIC CHIP	0.1uF		16V

Ref. No.	Part No.	Description	Remark
C737	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C738	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C739	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C741	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C742	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C745	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C749	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C750	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C751	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C752	1-162-943-11	CERAMIC CHIP 15PF	5% 50V
C801	1-135-259-11	TANTAL. CHIP 10uF	20% 6.3V
C802	1-162-920-11	CERAMIC CHIP 27PF	5% 50V
C803	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C804	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C805	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C806	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C807	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C808	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C809	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C810	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C811	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C813	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C814	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C815	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C816	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C817	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C818	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C819	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C820	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C821	1-162-947-11	CERAMIC CHIP 33PF	5% 50V
C823	1-135-091-91	TANTAL. CHIP 1uF	20% 16V
C824	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C826	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C827	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C830	1-164-156-11	CERAMIC CHIP 0.1uF	25V
C832	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C833	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C834	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C835	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C836	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C837	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C838	1-135-145-11	TANTALUM CHIP 0.47uF	10% 35V
C839	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C841	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C851	1-164-633-11	CERAMIC CHIP 0.1uF	10% 25V
C852	1-162-971-11	CERAMIC CHIP 0.001uF	50V
C853	1-164-634-11	CERAMIC CHIP 1uF	16V
C854	1-162-974-11	CERAMIC CHIP 0.01uF	50V

Ref. No.	Part No.	Description	Remark
C855	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C856	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C857	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C858	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C859	1-135-181-21	TANTALUM CHIP 4.7uF	20% 6.3V
C860	1-126-205-11	ELECT CHIP 47uF	20% 6.3V
C861	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C862	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C863	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C864	1-162-638-11	CERAMIC CHIP 1uF	16V
C866	1-162-974-11	CERAMIC CHIP 0.01uF	50V
C868	1-164-360-11	CERAMIC CHIP 0.1uF	16V
C869	1-164-173-11	CERAMIC CHIP 0.0039uF	10% 50V
C870	1-164-005-11	CERAMIC CHIP 0.47uF	25V
C871	1-164-634-11	CERAMIC CHIP 1uF	16V

< CONNECTOR >

CN701	1-573-372-21	CONNECTOR, BOARD TO BOARD 18P
CN801	1-573-336-11	CONNECTOR, BOARD TO BOARD 16P
CN851	1-573-361-11	CONNECTOR, FFC/EPC 21P

< TRIMMER >

CT801	1-141-356-11	CAP. ADJ
-------	--------------	----------

< FILTER >

FL701	1-236-834-21	FILTER, LOW PASS
FL702	1-415-751-21	DELAY LINE, LC (YH)

< IC >

IC701	8-759-243-19	IC TC7SU04F
IC702	8-759-064-36	IC MB88346BPEV
IC703	8-759-710-07	IC NJM2234M
IC704	8-752-348-92	IC CXD2101AR
IC705	8-759-069-18	IC CXD2103AR
IC706	8-752-355-56	IC CXD2104BN
IC707	8-752-347-93	IC CXD2100AQ
IC709	8-752-840-64	IC CXP80624-434R
IC712	8-759-073-67	IC BR9021AF
IC801	8-752-350-16	IC CXD1257AR
IC802	8-752-056-39	IC CXA1507BR
IC803	8-752-053-26	IC CXA1399Q
IC804	8-752-327-48	IC CXD1250N
IC805	8-752-054-61	IC CXA1390AR
IC851	8-759-701-24	IC NJM3414M
IC852	8-759-998-96	IC LM324D
IC853	8-759-058-47	IC MPC1724VM
IC854	8-759-823-51	IC LB1830M
IC856	8-759-998-98	IC LM358D

VC-133P

Ref. No.	Part No.	Description	Remark
< COIL >			
L701	1-412-006-31	INDUCTOR CHIP 10uH	
L703	1-412-052-21	INDUCTOR CHIP 1uH	
L704	1-412-006-31	INDUCTOR CHIP 10uH	
L705	1-412-979-21	INDUCTOR 1uH	
L706	1-412-062-11	INDUCTOR CHIP 47uH	
L708	1-412-979-21	INDUCTOR 1uH	
L710	1-412-052-21	INDUCTOR CHIP 1uH	
L711	1-412-058-11	INDUCTOR CHIP 10uH	
L712	1-412-052-21	INDUCTOR CHIP 1uH	
L714	1-412-006-31	INDUCTOR CHIP 10uH	
L715	1-412-058-11	INDUCTOR CHIP 10uH	
L717	1-412-058-11	INDUCTOR CHIP 10uH	
L720	1-412-006-31	INDUCTOR CHIP 10uH	
L721	1-410-392-11	INDUCTOR CHIP 82uH	
L801	1-412-029-11	INDUCTOR CHIP 10uH	
L802	1-412-006-31	INDUCTOR CHIP 10uH	
L803	1-412-058-11	INDUCTOR CHIP 10uH	
L804	1-412-058-11	INDUCTOR CHIP 10uH	
L851	1-412-058-11	INDUCTOR CHIP 10uH	
L853	1-412-031-11	INDUCTOR CHIP 47uH	
< TRANSISTOR >			
Q701	8-729-928-87	TRANSISTOR DTC124EE	
Q702	8-729-427-74	TRANSISTOR XP4601	
Q703	8-729-427-74	TRANSISTOR XP4601	
Q704	8-729-425-50	TRANSISTOR 2SB1462Q	
Q706	8-729-425-64	TRANSISTOR 2SD2216Q	
Q707	8-729-428-84	TRANSISTOR UN9111	
Q708	8-729-425-64	TRANSISTOR 2SD2216Q	
Q709	8-729-427-72	TRANSISTOR XP4501	
Q801	8-729-425-64	TRANSISTOR 2SD2216Q	
Q802	8-729-427-70	TRANSISTOR XP4401	
Q851	8-729-425-64	TRANSISTOR 2SD2216Q	
Q852	8-729-013-88	TRANSISTOR RN1302-TE85L	
Q853	8-729-427-70	TRANSISTOR XP4401	
< RESISTOR >			
R701	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R702	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R703	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R704	1-216-815-11	METAL CHIP 330 5% 1/16W	
R705	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R706	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R707	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R708	1-216-845-11	METAL CHIP 100K 5% 1/16W	
R709	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R710	1-216-857-11	METAL CHIP 1M 5% 1/16W	

Ref. No.	Part No.	Description	Remark
R711	1-216-864-11	METAL CHIP 0 5% 1/16W	
R712	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R713	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R714	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R715	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R716	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R718	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R719	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R721	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R722	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R723	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R724	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R725	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R727	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R728	1-216-813-11	METAL CHIP 220 5% 1/16W	
R729	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R730	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	
R731	1-216-295-00	METAL CHIP 0 5% 1/10W	
R732	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R733	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R734	1-216-817-11	METAL CHIP 470 5% 1/16W	
R735	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R736	1-216-864-11	METAL CHIP 0 5% 1/16W	
R738	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R739	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R742	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R744	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R745	1-216-827-11	METAL CHIP 3.3K 5% 1/16W	
R748	1-216-864-11	METAL CHIP 0 5% 1/16W	
R749	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R750	1-216-842-11	METAL CHIP 56K 5% 1/16W	
R751	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R752	1-216-817-11	METAL CHIP 470 5% 1/16W	
R753	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R754	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R755	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R756	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R757	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R758	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R759	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R760	1-216-857-11	METAL CHIP 1M 5% 1/16W	
R761	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R762	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R769	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R770	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R771	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R775	1-216-833-11	METAL CHIP 10K 5% 1/16W	
R776	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R777	1-216-825-11	METAL CHIP 2.2K 5% 1/16W	

Ref. No.	Part No.	Description	Remark		
R778	1-216-839-11	METAL CHIP	33K	5%	1/16W
R779	1-216-833-11	METAL CHIP	10K	5%	1/16W
R781	1-216-833-11	METAL CHIP	10K	5%	1/16W
R782	1-216-813-11	METAL CHIP	220	5%	1/16W
R783	1-216-863-11	METAL GLAZE	3.3M	5%	1/16W
R784	1-216-817-11	METAL CHIP	470	5%	1/16W
R785	1-216-841-11	METAL CHIP	47K	5%	1/16W
R787	1-216-821-11	METAL CHIP	1K	5%	1/16W
R791	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R792	1-216-833-11	METAL CHIP	10K	5%	1/16W
R793	1-216-821-11	METAL CHIP	1K	5%	1/16W
R794	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R795	1-216-815-11	METAL CHIP	330	5%	1/16W
R796	1-216-817-11	METAL CHIP	470	5%	1/16W
R797	1-216-818-11	METAL CHIP	560	5%	1/16W
R800	1-216-017-00	METAL CHIP	47	5%	1/10W
R801	1-216-864-11	METAL CHIP	0	5%	1/16W
R802	1-216-835-11	METAL CHIP	15K	5%	1/16W
R803	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R804	1-216-833-11	METAL CHIP	10K	5%	1/16W
R805	1-216-845-11	METAL CHIP	100K	5%	1/16W
R806	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R807	1-216-817-11	METAL CHIP	470	5%	1/16W
R808	1-216-801-11	METAL CHIP	22	5%	1/16W
R809	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R810	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R812	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R813	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R816	1-216-833-11	METAL CHIP	10K	5%	1/16W
R819	1-216-805-11	METAL CHIP	47	5%	1/16W
R821	1-216-863-11	METAL GLAZE	3.3M	5%	1/16W
R823	1-218-721-11	METAL CHIP	16K	0.50%	1/16W
R825	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R826	1-216-833-11	METAL CHIP	10K	5%	1/16W
R827	1-216-833-11	METAL CHIP	10K	5%	1/16W
R828	1-218-716-11	METAL CHIP	10K	0.50%	1/16W
R829	1-218-744-11	METAL CHIP	150K	0.50%	1/16W
R830	1-216-821-11	METAL CHIP	1K	5%	1/16W
R851	1-216-837-11	METAL CHIP	22K	5%	1/16W
R852	1-216-821-11	METAL CHIP	1K	5%	1/16W
R853	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R854	1-216-833-11	METAL CHIP	10K	5%	1/16W
R855	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R856	1-216-837-11	METAL CHIP	22K	5%	1/16W
R857	1-216-848-11	METAL CHIP	180K	5%	1/16W
R858	1-216-837-11	METAL CHIP	22K	5%	1/16W
R859	1-216-845-11	METAL CHIP	100K	5%	1/16W
R860	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R861	1-218-724-11	METAL CHIP	22K	0.50%	1/16W

Ref. No.	Part No.	Description	Remark		
R862	1-216-848-11	METAL CHIP	180K	5%	1/16W
R863	1-216-855-11	METAL CHIP	680K	5%	1/16W
R864	1-216-134-00	METAL CHIP	2.2	5%	1/8W
R865	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R866	1-216-820-11	METAL CHIP	820	5%	1/16W
R867	1-216-837-11	METAL CHIP	22K	5%	1/16W
R868	1-216-833-11	METAL CHIP	10K	5%	1/16W
R869	1-216-838-11	METAL CHIP	27K	5%	1/16W
R870	1-216-841-11	METAL CHIP	47K	5%	1/16W
R871	1-216-833-11	METAL CHIP	10K	5%	1/16W
R872	1-216-851-11	METAL CHIP	330K	5%	1/16W
R873	1-216-814-11	METAL CHIP	270	5%	1/16W
R874	1-216-842-11	METAL CHIP	56K	5%	1/16W

< NETWORK RESISTOR >

RB701	1-236-420-11	NETWORK, RES 4.7K
RB702	1-236-432-11	NETWORK, RES 47K
RB703	1-236-412-11	NETWORK, RES 1.0K
RB704	1-236-416-11	NETWORK, RES 2.2K
RB705	1-236-416-11	NETWORK, RES 2.2K
RB706	1-236-412-11	NETWORK, RES 1.0K
RB707	1-236-412-11	NETWORK, RES 1.0K
RB708	1-236-412-11	NETWORK, RES 1.0K

< VIBRATOR >

X701	1-579-553-11	VIBRATOR (12MHz)
X801	1-579-621-11	VIBRATOR, CRYSTAL (28.375MHz)

* A-7063-220-A VF-42P BOARD, COMPLETE

(Ref. No. 1,000 Series)

3-942-888-01 HOLDER, LED

< CAPACITOR >

C501	1-126-176-11	ELECT	220uF	20%	10V
C502	1-163-077-00	CERAMIC CHIP	0.1uF	10%	25V
C503	1-163-109-00	CERAMIC CHIP	47PF	5%	50V
△C504	1-163-009-11	CERAMIC CHIP	0.001uF	10%	50V
△C505	1-164-758-11	CERAMIC CHIP	0.0039uF	5%	50V
△C506	1-164-715-11	CERAMIC CHIP	0.0068uF	5%	50V
C507	1-127-515-11	ELECT(SOLID)	47uF	20%	6.3V
C508	1-164-611-11	CERAMIC CHIP	0.001uF	10%	500V
C509	1-124-257-00	ELECT	2.2uF	20%	50V
C510	1-163-037-11	CERAMIC CHIP	0.022uF	10%	25V
C511	1-126-090-11	ELECT	82uF	20%	10V
C512	1-137-306-11	FILM CHIP	0.1uF	5%	16V
C513	1-135-149-21	TANTALUM CHIP	2.2uF	20%	10V
C514	1-131-381-00	TANTALUM	47uF	10%	10V

The components identified by
mark △ or dotted line with mark
△ are critical for safety.
Replace only with part number
specified.

VF-42P**VK-32**

Ref. No.	Part No.	Description	Remark	
C515	1-163-037-11	CERAMIC CHIP 0.022uF	10%	25V
C516	1-135-149-21	TANTALUM CHIP 2.2uF	20%	10V

< CONNECTOR >

* CN501	1-566-759-11	PIN, CONNECTOR (PC BOARD) 4P
* CN502	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P
* CN503	1-566-195-11	PIN, CONNECTOR (PC BOARD) 2P

< DIODE >

D501	8-719-820-65	DIODE TLS221
D502	8-719-984-02	LED BR4371F
D503	8-719-400-20	DIODE MA152WA

< IC >

IC501	8-759-420-01	IC AN2512S
-------	--------------	------------

< COIL >

L501	1-408-976-21	INDUCTOR 33uH
L502	1-408-785-21	INDUCTOR CHIP 47uH
△L503	1-459-876-41	COIL, FERRITE (HLC)

< TRANSISTOR >

Q501	8-729-120-28	TRANSISTOR 2SC1623-L5L6
Q502	8-729-216-31	TRANSISTOR 2SA1163-G
Q504	8-729-106-68	TRANSISTOR 2SD1615A-GP

< RESISTOR >

R501	1-216-033-00	METAL CHIP 220 5%	1/10W
R502	1-216-041-00	METAL CHIP 470 5%	1/10W
R503	1-216-041-00	METAL CHIP 470 5%	1/10W
R506	1-216-069-00	METAL CHIP 6.8K 5%	1/10W
R507	1-216-047-00	METAL CHIP 820 5%	1/10W
R508	1-216-689-11	METAL CHIP 39K 0.5%	1/10W
R509	1-216-689-11	METAL CHIP 39K 0.5%	1/10W
R510	1-216-005-00	METAL CHIP 15 5%	1/10W
R511	1-216-121-00	METAL CHIP 1M 5%	1/10W
R512	1-216-131-11	METAL CHIP 2.7M 5%	1/10W
R513	1-216-101-00	METAL CHIP 150K 5%	1/10W
R514	1-216-121-00	METAL CHIP 1M 5%	1/10W
R515	1-216-131-11	METAL CHIP 2.7M 5%	1/10W
R516	1-216-055-00	METAL CHIP 1.8K 5%	1/10W
R517	1-216-025-00	METAL CHIP 100 5%	1/10W
R518	1-216-308-00	METAL CHIP 4.7 5%	1/10W
R519	1-216-336-11	METAL CHIP 47K 1%	1/10W
R520	1-216-107-00	METAL CHIP 270K 5%	1/10W
R521	1-216-121-00	METAL CHIP 1M 5%	1/10W
R522	1-216-160-00	METAL GLAZE 27 5%	1/8W
R523	1-216-053-00	METAL CHIP 1.5K 5%	1/10W

Ref. No.	Part No.	Description	Remark	
R524	1-216-113-00	METAL CHIP 470K 5%	1/10W	
R525	1-216-097-00	METAL CHIP 100K 5%	1/10W	

< VARIABLE RESISTOR >

RV501	1-241-596-11	RES, ADJ, METAL GRAZE 47K
RV502	1-241-590-11	RES, ADJ, METAL GRAZE 470
RV503	1-241-592-11	RES, ADJ, METAL GRAZE 2.2K
RV504	1-228-762-00	RES, ADJ, METAL GLAZE 1M

< TRANSFORMER >

△T501	1-439-486-11	TRANSFORMER ASSY. FLYBACK
-------	--------------	---------------------------

< THERMISTOR >

TH501	1-809-350-21	THERMISTOR, NTC (2125)
-------	--------------	------------------------

< FLAT CABLE >

△W501	1-540-019-21	SOCKET ASSY, CRT
-------	--------------	------------------

*	A-7071-833-A	VK-32 BOARD, COMPLETE

(Ref.No. 9,000 Series)		

< DIODE >

D976	8-719-404-46	DIODE MA110
------	--------------	-------------

< SWITCH >

S976	1-572-921-31	SWITCH, KEY BOARD (STOP)
S977	1-692-260-21	SWITCH, SLIDE (POWER)
S978	1-572-921-31	SWITCH, KEY BOARD (EDIT SEARCH -)
S979	1-572-921-31	SWITCH, KEY BOARD (REW)
S980	1-572-921-31	SWITCH, KEY BOARD (PB)
S981	1-572-921-31	SWITCH, KEY BOARD (EDIT SEARCH +)
S983	1-572-921-31	SWITCH, KEY BOARD (FF)
S984	1-572-921-31	SWITCH, KEY BOARD (PAUSE)

< FLAT CABLE >

W987	1-696-622-11	PF-591 FLEXIBLE BOARD
------	--------------	-----------------------

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark		
*	A-7063-669-A	VS-100P BOARD, COMPLETE			

		(Ref. No. 4,000 Series)			
	1-691-471-11	CONNECTOR, TRANSLATION 11P			
		< CAPACITOR >			
C001	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C002	1-162-953-11	CERAMIC CHIP 100PF	5%	50V	
C003	1-162-955-11	CERAMIC CHIP 150PF	5%	50V	
C004	1-162-953-11	CERAMIC CHIP 100PF	5%	50V	
C005	1-162-953-11	CERAMIC CHIP 100PF	5%	50V	
C006	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C009	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C010	1-135-157-21	TANTALUM CHIP 10uF	20%	6.3V	
C011	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C012	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C013	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C014	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C018	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C019	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C020	1-164-633-11	CERAMIC CHIP 0.1uF	10%	25V	
C021	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C022	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C023	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C024	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C025	1-135-259-11	TANTAL. CHIP 10uF	20%	6.3V	
C026	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C027	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C028	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C029	1-164-360-11	CERAMIC CHIP 0.1uF		16V	
C030	1-135-259-11	TANTAL. CHIP 10uF	20%	6.3V	
C035	1-135-157-21	TANTALUM CHIP 10uF	20%	6.3V	
C049	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C057	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C058	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C059	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C061	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C063	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C064	1-162-995-11	CERAMIC CHIP 0.022uF		50V	
C065	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C066	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C067	1-165-128-11	CERAMIC CHIP 0.22uF		16V	
C068	1-162-949-11	CERAMIC CHIP 47PF	5%	50V	
C069	1-162-948-11	CERAMIC CHIP 39PF	5%	50V	
C070	1-162-953-11	CERAMIC CHIP 100PF	5%	50V	
C072	1-162-943-11	CERAMIC CHIP 15PF	5%	50V	
C073	1-162-951-11	CERAMIC CHIP 68PF	5%	50V	
C074	1-162-956-11	CERAMIC CHIP 180PF	5%	50V	

Ref. No.	Part No.	Description	Remark		
C075	1-162-942-11	CERAMIC CHIP 12PF	5%	50V	
C077	1-164-227-11	CERAMIC CHIP 0.022uF	10%	25V	
C078	1-162-934-11	CERAMIC CHIP 3PF	0.25PF	50V	
C080	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V	
C081	1-162-944-11	CERAMIC CHIP 18PF	5%	50V	
C082	1-164-227-11	CERAMIC CHIP 0.022uF	10%	25V	
C083	1-164-227-11	CERAMIC CHIP 0.022uF	10%	25V	
C085	1-162-947-11	CERAMIC CHIP 33PF	5%	50V	
C086	1-162-970-11	CERAMIC CHIP 0.01uF	10%	25V	
C091	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C092	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C121	1-162-971-11	CERAMIC CHIP 0.001uF		50V	
C122	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C123	1-135-181-21	TANTALUM CHIP 4.7uF	20%	6.3V	
C124	1-164-346-11	CERAMIC CHIP 1uF		16V	
C125	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C126	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
C127	1-164-145-11	CERAMIC CHIP 390PF	5%	50V	
C128	1-162-943-11	CERAMIC CHIP 15PF	5%	50V	
C129	1-162-964-11	CERAMIC CHIP 0.001uF	10%	50V	
C130	1-135-259-11	TANTAL. CHIP 10uF	20%	6.3V	
C131	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C132	1-163-118-00	CERAMIC CHIP 110PF	5%	50V	
C133	1-135-149-21	TANTALUM CHIP 2.2uF	20%	10V	
C135	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C136	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C137	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C150	1-162-944-11	CERAMIC CHIP 18PF	5%	50V	
C151	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C156	1-162-948-11	CERAMIC CHIP 39PF	5%	50V	
C159	1-162-946-11	CERAMIC CHIP 27PF	5%	50V	
C161	1-162-953-11	CERAMIC CHIP 100PF	5%	50V	
C167	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C170	1-162-568-11	CERAMIC CHIP 0.33uF		25V	
C171	1-162-638-11	CERAMIC CHIP 1uF		16V	
C173	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C175	1-128-004-11	ELECT CHIP 10uF	20%	16V	
C176	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C177	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C178	1-164-145-11	CERAMIC CHIP 390PF	5%	50V	
C179	1-162-974-11	CERAMIC CHIP 0.01uF		50V	
C180	1-162-947-11	CERAMIC CHIP 33PF	5%	50V	
C181	1-162-965-11	CERAMIC CHIP 0.0015uF	10%	50V	
C182	1-162-958-11	CERAMIC CHIP 270PF	5%	50V	
C187	1-162-943-11	CERAMIC CHIP 15PF	5%	50V	
C188	1-162-958-11	CERAMIC CHIP 270PF	5%	50V	
C189	1-164-362-11	CERAMIC CHIP 470PF	5%	50V	
C192	1-162-958-11	CERAMIC CHIP 270PF	5%	50V	

VS-100P

Ref. No.	Part No.	Description	Remark
C193	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C194	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C199	1-135-149-21	TANTALUM CHIP	2.2uF 20% 10V
C205	1-162-949-11	CERAMIC CHIP	47PF 5% 50V
C206	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C207	1-162-952-11	CERAMIC CHIP	82PF 5% 50V
C208	1-162-967-11	CERAMIC CHIP	0.0033uF 10% 50V
C209	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C213	1-164-222-11	CERAMIC CHIP	0.22uF 25V
C214	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C216	1-128-004-11	ELECT CHIP	10uF 20% 16V
C217	1-135-181-21	TANTALUM CHIP	4.7uF 20% 6.3V
C218	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C219	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C220	1-126-246-11	ELECT CHIP	220uF 20% 4V
C221	1-164-182-11	CERAMIC CHIP	0.0033uF 10% 50V
C222	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C223	1-128-004-11	ELECT CHIP	10uF 20% 16V
C225	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C226	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C227	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C228	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C229	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V
C230	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C231	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C232	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V
C233	1-128-004-11	ELECT CHIP	10uF 20% 16V
C234	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C235	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C236	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C237	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C238	1-164-005-11	CERAMIC CHIP	0.47uF 25V
C239	1-162-954-11	CERAMIC CHIP	120PF 5% 50V
C240	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
C241	1-126-607-11	ELECT CHIP	47uF 20% 4V
C242	1-162-960-11	CERAMIC CHIP	220PF 10% 50V
C245	1-163-035-00	CERAMIC CHIP	0.047uF 50V
C246	1-135-157-21	TANTALUM CHIP	10uF 20% 6.3V
C247	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C248	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C249	1-162-959-11	CERAMIC CHIP	330PF 5% 50V
C250	1-164-145-11	CERAMIC CHIP	390PF 5% 50V
C255	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C256	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C257	1-162-949-11	CERAMIC CHIP	47PF 5% 50V
C259	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C260	1-162-945-11	CERAMIC CHIP	22PF 5% 50V
C261	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C262	1-162-954-11	CERAMIC CHIP	120PF 5% 50V

Ref. No.	Part No.	Description	Remark
C263	1-162-951-11	CERAMIC CHIP	68PF 5% 50V
C264	1-162-950-11	CERAMIC CHIP	56PF 5% 50V
C265	1-162-957-11	CERAMIC CHIP	220PF 5% 50V
C266	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C267	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C268	1-162-955-11	CERAMIC CHIP	150PF 5% 50V
C269	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C270	1-162-947-11	CERAMIC CHIP	33PF 5% 50V
C271	1-128-004-11	ELECT CHIP	10uF 20% 16V
C272	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C273	1-126-205-11	ELECT CHIP	47uF 20% 6.3V
C278	1-162-638-11	CERAMIC CHIP	1uF 16V
C280	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C281	1-135-146-21	TANTALUM CHIP	0.68uF 20% 25V
C282	1-135-091-91	TANTAL. CHIP	1uF 20% 16V
C283	1-135-091-91	TANTAL. CHIP	1uF 20% 16V
C284	1-162-969-11	CERAMIC CHIP	0.0068uF 10% 25V
C285	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C286	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C288	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C289	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C290	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C291	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C292	1-135-180-21	TANTALUM CHIP	3.3uF 20% 6.3V
C294	1-162-638-11	CERAMIC CHIP	1uF 16V
C295	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C296	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C297	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C298	1-162-947-11	CERAMIC CHIP	33PF 5% 50V
C299	1-162-949-11	CERAMIC CHIP	47PF 5% 50V
C300	1-162-953-11	CERAMIC CHIP	100PF 5% 50V
C301	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C302	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C303	1-135-149-21	TANTALUM CHIP	2.2uF 20% 10V
C304	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C305	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C306	1-162-974-11	CERAMIC CHIP	0.01uF 50V
C307	1-135-091-91	TANTAL. CHIP	1uF 20% 16V
C401	1-164-346-11	CERAMIC CHIP	1uF 16V
C402	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C404	1-164-346-11	CERAMIC CHIP	1uF 16V
C406	1-164-360-11	CERAMIC CHIP	0.1uF 16V
C407	1-162-995-11	CERAMIC CHIP	0.022uF 50V
C408	1-135-259-11	TANTAL. CHIP	10uF 20% 6.3V
C409	1-162-966-11	CERAMIC CHIP	0.0022uF 10% 50V
C412	1-163-037-11	CERAMIC CHIP	0.022uF 10% 25V
C413	1-162-970-11	CERAMIC CHIP	0.01uF 10% 25V
C414	1-162-919-11	CERAMIC CHIP	22PF 5% 50V
C415	1-165-128-11	CERAMIC CHIP	0.22uF 16V

Ref. No.	Part No.	Description	Remark		
C416	1-162-916-11	CERAMIC CHIP	12PF	5%	50V
C417	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C418	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C420	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C421	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C422	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C423	1-164-361-11	CERAMIC CHIP	0.047uF		16V
C424	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C425	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C426	1-164-227-11	CERAMIC CHIP	0.022uF	10%	25V
C427	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C428	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C429	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C430	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C431	1-162-965-11	CERAMIC CHIP	0.0015uF	10%	50V
C432	1-164-173-11	CERAMIC CHIP	0.0039uF	10%	50V
C433	1-162-918-11	CERAMIC CHIP	18PF	5%	50V
C434	1-162-917-11	CERAMIC CHIP	15PF	5%	50V
C435	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C436	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C437	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C438	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C439	1-162-907-11	CERAMIC CHIP	2PF	0.25PF	50V
C440	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C441	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C442	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C443	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C444	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C445	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C446	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C447	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C449	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C450	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C451	1-163-038-00	CERAMIC CHIP	0.1uF		25V
C452	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C453	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C454	1-162-927-11	CERAMIC CHIP	100PF	5%	50V
C455	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C456	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C457	1-162-969-11	CERAMIC CHIP	0.0068uF	10%	25V
C458	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C459	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C460	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C461	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V
C462	1-162-964-11	CERAMIC CHIP	0.001uF	10%	50V
C463	1-135-215-21	TANTAL. CHIP	6.8uF	20%	16V
C464	1-135-180-21	TANTALUM CHIP	3.3uF	20%	6.3V
C465	1-164-633-11	CERAMIC CHIP	0.1uF	10%	25V

Ref. No.	Part No.	Description	Remark		
C466	1-164-298-11	CERAMIC CHIP	0.15uF	10%	25V
C467	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C468	1-164-298-11	CERAMIC CHIP	0.15uF	10%	25V
C469	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C470	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C471	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C472	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C473	1-165-176-11	CERAMIC CHIP	0.047uF	10%	16V
C474	1-162-967-11	CERAMIC CHIP	0.0033uF	10%	50V
C475	1-162-995-11	CERAMIC CHIP	0.022uF		50V
C476	1-135-179-21	TANTAL. CHIP	2.2uF	20%	16V
C477	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C478	1-162-921-11	CERAMIC CHIP	33PF	5%	50V
C481	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C482	1-164-360-11	CERAMIC CHIP	0.1uF		16V
C483	1-162-970-11	CERAMIC CHIP	0.01uF	10%	25V
C484	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C485	1-135-259-11	TANTAL. CHIP	10uF	20%	6.3V
C486	1-162-974-11	CERAMIC CHIP	0.01uF		50V
C487	1-128-530-11	ELECT CHIP	33uF	20%	10V

< FILTER >

CF151 1-579-371-11 FILTER, CERAMIC

< CONNECTOR >

CN002	1-569-775-21	PIN, CONNECTOR 5P
CN101	1-566-540-11	CONNECTOR, FPC (NON ZIF) 8P
CN102	1-580-789-21	PIN, CONNECTOR (SMD) 6P
CN401	1-695-880-11	CONNECTOR, BOARD TO BOARD 32P
CN403	1-573-338-21	CONNECTOR, BOARD TO BOARD 20P
CN404	1-695-325-21	CONNECTOR, BOARD TO BOARD 42P
CN406	1-573-343-21	CONNECTOR, BOARD TO BOARD 30P
* CN407	1-580-055-21	PIN, CONNECTOR 2P

< DIODE >

D001	8-719-800-76	DIODE 1SS226
D121	8-719-027-50	DIODE MA142WK
D152	8-719-027-48	DIODE MA142WA
D159	8-719-027-50	DIODE MA142WK
D160	8-719-027-50	DIODE MA142WK
D161	8-719-404-46	DIODE MA110
D162	8-719-027-50	DIODE MA142WK
D163	8-719-027-50	DIODE MA142WK
D401	8-719-421-27	DIODE MA728
D402	8-719-027-50	DIODE MA142WK
D403	8-719-404-46	DIODE MA110

VS-100P

Ref. No.	Part No.	Description	Remark
< FILTER >			
FL121	1-236-188-11	FILTER, BAND PASS	
FL152	1-236-849-21	FILTER, BAND PASS	
FL153	1-236-186-11	FILTER, BAND PASS	
FL154	1-239-055-21	FILTER, LOW PASS (CCD, PAL, Y)	
FL155	1-236-848-21	FILTER, LOW PASS	
FL401	1-406-452-11	COIL, OSC	
< IC >			
IC001	8-752-033-38	IC CXA1202R	
IC003	8-752-053-21	IC CXA1211M	
IC121	8-759-605-61	IC CXA1203N	
IC151	8-752-065-54	IC CXA1207AR	
IC152	8-752-051-40	IC CXA1208R	
IC154	8-752-333-24	IC CXL1506M	
IC155	8-752-053-21	IC CXA1211M	
IC156	8-759-067-52	IC MB88347PFV-G-BND-ER	
IC158	8-759-064-36	IC MB88346BPFV	
IC159	8-759-636-33	IC CXA1452N	
IC401	8-759-056-84	IC S-8420AF	
IC402	8-752-838-20	IC CXP80624-428R	
IC403	8-759-096-79	IC uPD75316GF 318-3B9	
IC404	8-759-059-42	IC CXA1481AR	
IC405	8-759-044-78	IC AK6420F	
IC406	8-759-081-96	IC uPD6456GS-620	
IC407	8-759-145-63	IC uPD7564G-540	
IC408	8-759-057-60	IC MCD004BM	
IC409	8-759-999-02	IC TL1596CDB	
IC410	8-759-062-02	IC MPC1720VM	
< COIL >			
L001	1-410-381-11	INDUCTOR CHIP 10uH	
L002	1-412-066-21	INDUCTOR CHIP 220uH	
L003	1-412-066-21	INDUCTOR CHIP 220uH	
L005	1-412-060-11	INDUCTOR CHIP 22uH	
L007	1-412-058-11	INDUCTOR CHIP 10uH	
L008	1-410-658-31	INDUCTOR CHIP 220uH	
L009	1-410-380-31	INDUCTOR CHIP 8.2uH	
L010	1-410-655-31	INDUCTOR CHIP 120uH	
L011	1-412-280-31	INDUCTOR CHIP 330uH	
L012	1-410-387-11	INDUCTOR CHIP 33uH	
L013	1-410-657-21	INDUCTOR CHIP 180uH	
L015	1-410-381-11	INDUCTOR CHIP 10uH	
L121	1-410-381-11	INDUCTOR CHIP 10uH	
L150	1-410-384-31	INDUCTOR CHIP 18uH	
L152	1-410-385-11	INDUCTOR CHIP 22uH	
L154	1-410-390-11	INDUCTOR CHIP 56uH	
L155	1-410-390-11	INDUCTOR CHIP 56uH	

Ref. No.	Part No.	Description	Remark
L160	1-412-058-11	INDUCTOR CHIP 10uH	
L161	1-410-385-11	INDUCTOR CHIP 22uH	
L162	1-412-280-31	INDUCTOR CHIP 330uH	
L163	1-410-167-41	INDUCTOR CHIP 820uH	
L164	1-410-657-21	INDUCTOR CHIP 180uH	
L169	1-410-392-11	INDUCTOR CHIP 82uH	
L170	1-410-381-11	INDUCTOR CHIP 10uH	
L171	1-410-384-31	INDUCTOR CHIP 18uH	
L175	1-410-393-11	INDUCTOR CHIP 100uH	
L176	1-410-656-11	INDUCTOR CHIP 150uH	
L177	1-412-058-11	INDUCTOR CHIP 10uH	
L178	1-412-062-11	INDUCTOR CHIP 47uH	
L179	1-410-379-31	INDUCTOR CHIP 6.8uH	
L180	1-410-393-11	INDUCTOR CHIP 100uH	
L181	1-410-393-11	INDUCTOR CHIP 100uH	
L182	1-410-655-31	INDUCTOR CHIP 120uH	
L185	1-412-058-11	INDUCTOR CHIP 10uH	
L186	1-412-052-21	INDUCTOR CHIP 1uH	
L401	1-412-056-11	INDUCTOR CHIP 4.7uH	
L402	1-412-058-11	INDUCTOR CHIP 10uH	
L403	1-412-062-11	INDUCTOR CHIP 47uH	
L404	1-412-058-11	INDUCTOR CHIP 10uH	
L405	1-412-058-11	INDUCTOR CHIP 10uH	
L406	1-412-058-11	INDUCTOR CHIP 10uH	
L407	1-412-052-21	INDUCTOR CHIP 1uH	
< IC LINK >			
△PS401	1-576-122-21	LINK, IC (CCP2E10 0.4A)	
△PS402	1-576-123-21	LINK, IC (CCP2E20 0.8A)	
< TRANSISTOR >			
Q001	8-729-216-22	TRANSISTOR 2SA1162	
Q003	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q008	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q010	8-729-403-35	TRANSISTOR UN5113	
Q019	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q020	8-729-120-28	TRANSISTOR 2SC1623-L5L6	
Q021	8-729-905-23	TRANSISTOR 2SA1576-R	
Q022	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q024	8-729-102-07	TRANSISTOR 2SC2223-F13	
Q025	8-729-014-16	TRANSISTOR RN2302-TE85L	
Q026	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q121	8-729-403-35	TRANSISTOR UN5113	
Q123	8-729-402-42	TRANSISTOR UN5213	
Q124	8-729-403-35	TRANSISTOR UN5113	
Q125	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q126	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q151	8-729-101-07	TRANSISTOR 2SB798-DL	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
Q152	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q154	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q158	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q160	8-729-403-35	TRANSISTOR UN5113	
Q161	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q162	8-729-403-35	TRANSISTOR UN5113	
Q166	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q168	8-729-403-35	TRANSISTOR UN5113	
Q170	8-729-420-20	TRANSISTOR XN4312	
Q171	8-729-117-73	TRANSISTOR 2SC4178-F14	
Q175	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q176	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q177	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q178	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q180	8-729-422-54	TRANSISTOR XN4215	
Q182	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q183	8-729-420-53	TRANSISTOR UN5115	
Q184	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q189	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q191	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q192	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q194	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q195	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q196	8-729-403-35	TRANSISTOR UN5113	
Q199	8-729-807-87	TRANSISTOR 2SB1295-UL6	
Q200	8-729-013-88	TRANSISTOR RN1302-TE85L	
Q203	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q204	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q205	8-729-402-42	TRANSISTOR UN5213	
Q207	8-729-403-35	TRANSISTOR UN5113	
Q208	8-729-013-88	TRANSISTOR RN1302-TE85L	
Q210	8-729-402-42	TRANSISTOR UN5213	
Q212	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q214	8-729-420-12	TRANSISTOR XN4213	
Q219	8-729-810-13	TRANSISTOR UN5112	
Q220	8-729-402-45	TRANSISTOR UN5212	
Q221	8-729-420-12	TRANSISTOR XN4213	
Q222	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q223	8-729-402-42	TRANSISTOR UN5213	
Q229	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q230	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q231	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q232	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q233	8-729-402-32	TRANSISTOR 2SD1819A-R	
Q234	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q236	8-729-420-56	TRANSISTOR UN511E	
Q237	8-729-230-60	TRANSISTOR 2SA1586-YG	
Q401	8-729-402-48	TRANSISTOR UN521E	

Ref. No.	Part No.	Description	Remark
Q402	8-729-905-23	TRANSISTOR 2SA1576-R	
Q403	8-729-403-35	TRANSISTOR UN5113	
Q405	8-729-013-88	TRANSISTOR RN1302-TE85L	
Q409	8-729-017-67	TRANSISTOR 2SB1574	
< RESISTOR >			
R001	1-216-801-11	METAL CHIP 22 5% 1/16W	
R002	1-216-818-11	METAL CHIP 560 5% 1/16W	
R004	1-216-815-11	METAL CHIP 330 5% 1/16W	
R005	1-216-817-11	METAL CHIP 470 5% 1/16W	
R006	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R007	1-216-839-11	METAL CHIP 33K 5% 1/16W	
R012	1-216-835-11	METAL CHIP 15K 5% 1/16W	
R013	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R016	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R017	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R020	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R021	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R022	1-216-840-11	METAL CHIP 39K 5% 1/16W	
R023	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R024	1-216-838-11	METAL CHIP 27K 5% 1/16W	
R025	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R026	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
R027	1-216-841-11	METAL CHIP 47K 5% 1/16W	
R028	1-216-837-11	METAL CHIP 22K 5% 1/16W	
R030	1-216-864-11	METAL CHIP 0 5% 1/16W	
R031	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R033	1-216-791-11	METAL CHIP 3.3 5% 1/16W	
R049	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	
R050	1-216-832-11	METAL CHIP 8.2K 5% 1/16W	
R051	1-216-831-11	METAL CHIP 6.8K 5% 1/16W	
R052	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R054	1-216-817-11	METAL CHIP 470 5% 1/16W	
R055	1-216-820-11	METAL CHIP 820 5% 1/16W	
R056	1-216-864-11	METAL CHIP 0 5% 1/16W	
R057	1-216-818-11	METAL CHIP 560 5% 1/16W	
R058	1-216-818-11	METAL CHIP 560 5% 1/16W	
R060	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R061	1-216-821-11	METAL CHIP 1K 5% 1/16W	
R062	1-216-818-11	METAL CHIP 560 5% 1/16W	
R063	1-216-830-11	METAL CHIP 5.6K 5% 1/16W	
R064	1-216-817-11	METAL CHIP 470 5% 1/16W	
R065	1-216-829-11	METAL CHIP 4.7K 5% 1/16W	
R066	1-216-809-11	METAL CHIP 100 5% 1/16W	
R067	1-216-836-11	METAL CHIP 18K 5% 1/16W	
R070	1-216-834-11	METAL CHIP 12K 5% 1/16W	
R071	1-216-823-11	METAL CHIP 1.5K 5% 1/16W	
R072	1-216-826-11	METAL CHIP 2.7K 5% 1/16W	
R076	1-216-824-11	METAL CHIP 1.8K 5% 1/16W	

VS-100P

Ref. No.	Part No.	Description	Remark		
R078	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R079	1-216-833-11	METAL CHIP	10K	5%	1/16W
R081	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R082	1-216-804-11	METAL CHIP	39	5%	1/16W
R083	1-216-821-11	METAL CHIP	1K	5%	1/16W
R085	1-216-821-11	METAL CHIP	1K	5%	1/16W
R086	1-216-817-11	METAL CHIP	470	5%	1/16W
R087	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R088	1-216-808-11	METAL CHIP	82	5%	1/16W
R090	1-216-836-11	METAL CHIP	18K	5%	1/16W
R097	1-216-821-11	METAL CHIP	1K	5%	1/16W
R122	1-216-833-11	METAL CHIP	10K	5%	1/16W
R123	1-216-845-11	METAL CHIP	100K	5%	1/16W
R124	1-216-845-11	METAL CHIP	100K	5%	1/16W
R125	1-216-845-11	METAL CHIP	100K	5%	1/16W
R126	1-216-845-11	METAL CHIP	100K	5%	1/16W
R127	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R129	1-216-845-11	METAL CHIP	100K	5%	1/16W
R130	1-216-833-11	METAL CHIP	10K	5%	1/16W
R131	1-216-841-11	METAL CHIP	47K	5%	1/16W
R132	1-216-833-11	METAL CHIP	10K	5%	1/16W
R133	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R134	1-216-833-11	METAL CHIP	10K	5%	1/16W
R135	1-216-832-11	METAL CHIP	8.2K	5%	1/16W
R136	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R137	1-216-821-11	METAL CHIP	1K	5%	1/16W
R138	1-216-839-11	METAL CHIP	33K	5%	1/16W
R139	1-216-817-11	METAL CHIP	470	5%	1/16W
R140	1-216-833-11	METAL CHIP	10K	5%	1/16W
R141	1-216-821-11	METAL CHIP	1K	5%	1/16W
R142	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R143	1-216-839-11	METAL CHIP	33K	5%	1/16W
R144	1-216-817-11	METAL CHIP	470	5%	1/16W
R145	1-216-837-11	METAL CHIP	22K	5%	1/16W
R146	1-216-821-11	METAL CHIP	1K	5%	1/16W
R150	1-216-864-11	METAL CHIP	0	5%	1/16W
R151	1-216-296-91	METAL GLAZE	0	5%	1/8W
R152	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R153	1-216-304-11	METAL CHIP	3.3	5%	1/10W
R154	1-216-820-11	METAL CHIP	820	5%	1/16W
R155	1-216-836-11	METAL CHIP	18K	5%	1/16W
R156	1-216-296-91	METAL GLAZE	0	5%	1/8W
R158	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R160	1-216-819-11	METAL CHIP	680	5%	1/16W
R161	1-216-809-11	METAL CHIP	100	5%	1/16W
R164	1-216-811-11	METAL CHIP	150	5%	1/16W
R167	1-216-820-11	METAL CHIP	820	5%	1/16W
R168	1-216-820-11	METAL CHIP	820	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R170	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R175	1-216-810-11	METAL CHIP	120	5%	1/16W
R177	1-216-819-11	METAL CHIP	680	5%	1/16W
R178	1-216-817-11	METAL CHIP	470	5%	1/16W
R179	1-216-820-11	METAL CHIP	820	5%	1/16W
R189	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R190	1-216-837-11	METAL CHIP	22K	5%	1/16W
R191	1-216-864-11	METAL CHIP	0	5%	1/16W
R192	1-216-833-11	METAL CHIP	10K	5%	1/16W
R193	1-216-841-11	METAL CHIP	47K	5%	1/16W
R194	1-216-833-11	METAL CHIP	10K	5%	1/16W
R196	1-216-815-11	METAL CHIP	330	5%	1/16W
R198	1-216-817-11	METAL CHIP	470	5%	1/16W
R200	1-216-821-11	METAL CHIP	1K	5%	1/16W
R201	1-216-815-11	METAL CHIP	330	5%	1/16W
R202	1-216-840-11	METAL CHIP	39K	5%	1/16W
R203	1-216-837-11	METAL CHIP	22K	5%	1/16W
R204	1-216-821-11	METAL CHIP	1K	5%	1/16W
R205	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R206	1-216-813-11	METAL CHIP	220	5%	1/16W
R208	1-216-864-11	METAL CHIP	0	5%	1/16W
R211	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R213	1-216-835-11	METAL CHIP	15K	5%	1/16W
R216	1-216-837-11	METAL CHIP	22K	5%	1/16W
R217	1-216-837-11	METAL CHIP	22K	5%	1/16W
R218	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R219	1-216-821-11	METAL CHIP	1K	5%	1/16W
R220	1-216-811-11	METAL CHIP	150	5%	1/16W
R221	1-216-864-11	METAL CHIP	0	5%	1/16W
R222	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R223	1-216-835-11	METAL CHIP	15K	5%	1/16W
R224	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R226	1-216-819-11	METAL CHIP	680	5%	1/16W
R228	1-216-813-11	METAL CHIP	220	5%	1/16W
R230	1-216-807-11	METAL CHIP	68	5%	1/16W
R231	1-216-821-11	METAL CHIP	1K	5%	1/16W
R232	1-216-833-11	METAL CHIP	10K	5%	1/16W
R234	1-216-864-11	METAL CHIP	0	5%	1/16W
R238	1-216-821-11	METAL CHIP	1K	5%	1/16W
R242	1-216-818-11	METAL CHIP	560	5%	1/16W
R243	1-216-809-11	METAL CHIP	100	5%	1/16W
R244	1-216-835-11	METAL CHIP	15K	5%	1/16W
R245	1-216-817-11	METAL CHIP	470	5%	1/16W
R246	1-216-817-11	METAL CHIP	470	5%	1/16W
R247	1-216-296-91	METAL GLAZE	0	5%	1/8W
R248	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R250	1-216-810-11	METAL CHIP	120	5%	1/16W
R251	1-216-806-11	METAL GLAZE	56	5%	1/16W
R253	1-216-821-11	METAL CHIP	1K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R254	1-216-818-11	METAL CHIP	560	5%	1/16W
R255	1-216-833-11	METAL CHIP	10K	5%	1/16W
R256	1-216-864-11	METAL CHIP	0	5%	1/16W
R257	1-216-818-11	METAL CHIP	560	5%	1/16W
R258	1-216-821-11	METAL CHIP	1K	5%	1/16W
R259	1-216-816-11	METAL CHIP	390	5%	1/16W
R260	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R263	1-216-864-11	METAL CHIP	0	5%	1/16W
R266	1-216-864-11	METAL CHIP	0	5%	1/16W
R267	1-216-864-11	METAL CHIP	0	5%	1/16W
R270	1-216-864-11	METAL CHIP	0	5%	1/16W
R271	1-216-841-11	METAL CHIP	47K	5%	1/16W
R272	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R276	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R277	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R278	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R279	1-216-818-11	METAL CHIP	560	5%	1/16W
R280	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R281	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R282	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R283	1-216-821-11	METAL CHIP	1K	5%	1/16W
R285	1-216-833-11	METAL CHIP	10K	5%	1/16W
R286	1-216-833-11	METAL CHIP	10K	5%	1/16W
R290	1-216-821-11	METAL CHIP	1K	5%	1/16W
R291	1-216-820-11	METAL CHIP	820	5%	1/16W
R293	1-216-807-11	METAL CHIP	68	5%	1/16W
R294	1-216-845-11	METAL CHIP	100K	5%	1/16W
R295	1-216-853-11	METAL CHIP	470K	5%	1/16W
R297	1-216-820-11	METAL CHIP	820	5%	1/16W
R298	1-216-820-11	METAL CHIP	820	5%	1/16W
R299	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R300	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R301	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R302	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R303	1-216-846-11	METAL CHIP	120K	5%	1/16W
R304	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R305	1-216-818-11	METAL CHIP	560	5%	1/16W
R306	1-216-821-11	METAL CHIP	1K	5%	1/16W
R307	1-216-821-11	METAL CHIP	1K	5%	1/16W
R308	1-216-819-11	METAL CHIP	680	5%	1/16W
R309	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R310	1-216-848-11	METAL CHIP	180K	5%	1/16W
R311	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R312	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R314	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R315	1-216-833-11	METAL CHIP	10K	5%	1/16W
R316	1-216-817-11	METAL CHIP	470	5%	1/16W
R318	1-216-833-11	METAL CHIP	10K	5%	1/16W
R321	1-216-864-11	METAL CHIP	0	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R323	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R324	1-216-817-11	METAL CHIP	470	5%	1/16W
R325	1-216-816-11	METAL CHIP	390	5%	1/16W
R329	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R331	1-216-824-11	METAL CHIP	1.8K	5%	1/16W
R333	1-216-822-11	METAL CHIP	1.2K	5%	1/16W
R334	1-216-833-11	METAL CHIP	10K	5%	1/16W
R335	1-216-821-11	METAL CHIP	1K	5%	1/16W
R337	1-216-864-11	METAL CHIP	0	5%	1/16W
R339	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R341	1-216-841-11	METAL CHIP	47K	5%	1/16W
R342	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R343	1-216-839-11	METAL CHIP	33K	5%	1/16W
R344	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R345	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R346	1-216-845-11	METAL CHIP	100K	5%	1/16W
R347	1-216-823-11	METAL CHIP	1.5K	5%	1/16W
R349	1-216-834-11	METAL CHIP	12K	5%	1/16W
R350	1-216-838-11	METAL CHIP	27K	5%	1/16W
R352	1-216-864-11	METAL CHIP	0	5%	1/16W
R353	1-216-864-11	METAL CHIP	0	5%	1/16W
R357	1-216-830-11	METAL CHIP	5.6K	5%	1/16W
R358	1-216-828-11	METAL CHIP	3.9K	5%	1/16W
R359	1-216-296-91	METAL GLAZE	0	5%	1/8W
R360	1-216-296-91	METAL GLAZE	0	5%	1/8W
R361	1-216-864-11	METAL CHIP	0	5%	1/16W
R362	1-216-810-11	METAL CHIP	120	5%	1/16W
R366	1-216-844-11	METAL CHIP	82K	5%	1/16W
R371	1-216-857-11	METAL CHIP	1M	5%	1/16W
R373	1-216-817-11	METAL CHIP	470	5%	1/16W
R374	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R375	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R376	1-216-817-11	METAL CHIP	470	5%	1/16W
R377	1-216-821-11	METAL CHIP	1K	5%	1/16W
R378	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R379	1-216-821-11	METAL CHIP	1K	5%	1/16W
R380	1-216-839-11	METAL CHIP	33K	5%	1/16W
R381	1-216-839-11	METAL CHIP	33K	5%	1/16W
R382	1-216-842-11	METAL CHIP	56K	5%	1/16W
R383	1-216-821-11	METAL CHIP	1K	5%	1/16W
R384	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R385	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R386	1-216-842-11	METAL CHIP	56K	5%	1/16W
R387	1-216-821-11	METAL CHIP	1K	5%	1/16W
R388	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R389	1-216-821-11	METAL CHIP	1K	5%	1/16W
R390	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R391	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R392	1-216-837-11	METAL CHIP	22K	5%	1/16W

VS-100P

Ref. No.	Part No.	Description	Remark		
R393	1-216-833-11	METAL CHIP	10K	5%	1/16W
R394	1-216-841-11	METAL CHIP	47K	5%	1/16W
R397	1-216-820-11	METAL CHIP	820	5%	1/16W
R398	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R401	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R403	1-216-845-11	METAL CHIP	100K	5%	1/16W
R404	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R405	1-216-821-11	METAL CHIP	1K	5%	1/16W
R406	1-216-809-11	METAL CHIP	100	5%	1/16W
R407	1-216-821-11	METAL CHIP	1K	5%	1/16W
R408	1-216-833-11	METAL CHIP	10K	5%	1/16W
R409	1-216-841-11	METAL CHIP	47K	5%	1/16W
R410	1-216-821-11	METAL CHIP	1K	5%	1/16W
R411	1-216-821-11	METAL CHIP	1K	5%	1/16W
R412	1-216-841-11	METAL CHIP	47K	5%	1/16W
R413	1-216-821-11	METAL CHIP	1K	5%	1/16W
R414	1-216-821-11	METAL CHIP	1K	5%	1/16W
R415	1-216-821-11	METAL CHIP	1K	5%	1/16W
R416	1-216-821-11	METAL CHIP	1K	5%	1/16W
R417	1-216-833-11	METAL CHIP	10K	5%	1/16W
R418	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R419	1-216-845-11	METAL CHIP	100K	5%	1/16W
R420	1-216-856-11	METAL CHIP	820K	5%	1/16W
R421	1-216-851-11	METAL CHIP	330K	5%	1/16W
R422	1-216-829-11	METAL CHIP	4.7K	5%	1/16W
R423	1-216-837-11	METAL CHIP	22K	5%	1/16W
R424	1-216-845-11	METAL CHIP	100K	5%	1/16W
R425	1-216-849-11	METAL CHIP	220K	5%	1/16W
R426	1-216-856-11	METAL CHIP	820K	5%	1/16W
R427	1-216-833-11	METAL CHIP	10K	5%	1/16W
R428	1-216-833-11	METAL CHIP	10K	5%	1/16W
R429	1-216-821-11	METAL CHIP	1K	5%	1/16W
R430	1-216-851-11	METAL CHIP	330K	5%	1/16W
R431	1-216-841-11	METAL CHIP	47K	5%	1/16W
R432	1-216-833-11	METAL CHIP	10K	5%	1/16W
R433	1-216-821-11	METAL CHIP	1K	5%	1/16W
R435	1-216-821-11	METAL CHIP	1K	5%	1/16W
R436	1-216-864-11	METAL CHIP	0	5%	1/16W
R437	1-216-817-11	METAL CHIP	470	5%	1/16W
R438	1-216-841-11	METAL CHIP	47K	5%	1/16W
R439	1-216-864-11	METAL CHIP	0	5%	1/16W
R441	1-216-864-11	METAL CHIP	0	5%	1/16W
R442	1-216-864-11	METAL CHIP	0	5%	1/16W
R443	1-216-845-11	METAL CHIP	100K	5%	1/16W
R445	1-216-837-11	METAL CHIP	22K	5%	1/16W
R447	1-216-864-11	METAL CHIP	0	5%	1/16W
R448	1-216-809-11	METAL CHIP	100	5%	1/16W
R449	1-216-845-11	METAL CHIP	100K	5%	1/16W

Ref. No.	Part No.	Description	Remark		
R450	1-216-833-11	METAL CHIP	10K	5%	1/16W
R451	1-216-841-11	METAL CHIP	47K	5%	1/16W
R452	1-216-833-11	METAL CHIP	10K	5%	1/16W
R453	1-216-841-11	METAL CHIP	47K	5%	1/16W
R454	1-216-825-11	METAL CHIP	2.2K	5%	1/16W
R456	1-216-833-11	METAL CHIP	10K	5%	1/16W
R457	1-216-837-11	METAL CHIP	22K	5%	1/16W
R460	1-216-864-11	METAL CHIP	0	5%	1/16W
R461	1-216-845-11	METAL CHIP	100K	5%	1/16W
R462	1-216-809-11	METAL CHIP	100	5%	1/16W
R463	1-216-827-11	METAL CHIP	3.3K	5%	1/16W
R468	1-216-039-00	METAL CHIP	390	5%	1/10W
R469	1-216-838-11	METAL CHIP	27K	5%	1/16W
R470	1-216-838-11	METAL CHIP	27K	5%	1/16W
R471	1-216-838-11	METAL CHIP	27K	5%	1/16W
R472	1-216-833-11	METAL CHIP	10K	5%	1/16W
R473	1-216-833-11	METAL CHIP	10K	5%	1/16W
R474	1-217-671-11	METAL CHIP	1	5%	1/10W
R475	1-217-671-11	METAL CHIP	1	5%	1/10W
R476	1-216-826-11	METAL CHIP	2.7K	5%	1/16W
R479	1-216-845-11	METAL CHIP	100K	5%	1/16W
R480	1-217-671-11	METAL CHIP	1	5%	1/10W
R481	1-217-671-11	METAL CHIP	1	5%	1/10W
R484	1-216-845-11	METAL CHIP	100K	5%	1/16W
R485	1-216-845-11	METAL CHIP	100K	5%	1/16W
R487	1-216-864-11	METAL CHIP	0	5%	1/16W
R488	1-216-809-11	METAL CHIP	100	5%	1/16W
R489	1-216-831-11	METAL CHIP	6.8K	5%	1/16W
R490	1-216-833-11	METAL CHIP	10K	5%	1/16W
R491	1-216-296-91	METAL GLAZE	0	5%	1/8W
R492	1-216-864-11	METAL CHIP	0	5%	1/16W
R493	1-216-864-11	METAL CHIP	0	5%	1/16W
R497	1-216-864-11	METAL CHIP	0	5%	1/16W
R498	1-216-831-11	METAL CHIP	6.8K	5%	1/16W

< THERMISTOR >

R073	1-809-358-11	THERMISTOR, NTC (2125)
R113	1-809-350-21	THERMISTOR, NTC (2125)

< NETWORK RESISTOR >

RB401	1-236-442-11	NETWORK, RES 330K
RB402	1-236-907-11	RESISTOR, NETWORK (CHIP TYPE)
RB403	1-236-907-11	RESISTOR, NETWORK (CHIP TYPE)
RB404	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)
RB405	1-236-436-11	NETWORK, RES 100K
RB406	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)
RB407	1-236-907-11	RESISTOR, NETWORK (CHIP TYPE)
RB408	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)
RB409	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)

VS-100P**WS-11P**

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

RB410	1-236-412-11	NETWORK, RES 1.0K	
RB411	1-236-424-11	NETWORK, RES 10K	
RB414	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB416	1-236-412-11	NETWORK, RES 1.0K	
RB417	1-236-444-11	NETWORK, RES 470K	

RB418	1-236-408-11	NETWORK, RES 470	
RB419	1-236-412-11	NETWORK, RES 10K	
RB420	1-236-904-11	RESISTOR, NETWORK (CHIP TYPE)	
RB421	1-236-908-11	RESISTOR, NETWORK (CHIP TYPE)	
RB422	1-236-424-11	NETWORK, RES 10K	

RB423	1-236-424-11	NETWORK, RES 10K	
RB424	1-236-424-11	NETWORK, RES 10K	
RB425	1-236-424-11	NETWORK, RES 10K	
RB426	1-236-412-11	NETWORK, RES 1.0K	

< VARIABLE RESISTOR >

RV151	1-238-087-11	RES, ADJ, CERMET 1K	
-------	--------------	---------------------	--

< FLAT CABLE >

W001	1-696-489-11	FP-588 FLEXIBLE BOARD	
W405	1-644-285-11	FP-572 FLEXIBLE BOARD	

< VIBRATOR >

X151	1-579-366-11	VIBRATOR, CRYSTAL (4.43MHz)	
X401	1-579-063-21	VIBRATOR, CERAMIC (4.19MHz)	
X402	1-579-049-21	VIBRATOR, CRYSTAL (32.768KHz)	
X403	1-579-368-31	VIBRATOR, CRYSTAL (11.719MHz)	
X404	1-579-551-11	VIBRATOR, CERAMIC (700KHz)	

*	A-7071-881-A	WS-11P BOARD, COMPLETE	
			(Ref. No. 2,000 Series)

< CONNECTOR >

* CN681	1-580-055-21	PIN, CONNECTOR 2P	
CN682	1-566-537-11	CONNECTOR, FPC (NON ZIF) 5P	

< RESISTOR >

R681	1-216-073-00	METAL CHIP	10K	5%	1/10W
R683	1-216-061-00	METAL CHIP	3.3K	5%	1/10W
R684	1-216-069-00	METAL CHIP	6.8K	5%	1/10W
R685	1-216-081-00	METAL CHIP	22K	5%	1/10W

< SWITCH >

S681	1-572-272-11	SWITCH, SLIDE (WIDE ANGLE)	
------	--------------	----------------------------	--

Ref. No.	Part No.	Description	Remark
----------	----------	-------------	--------

MISCELLANEOUS

14	1-696-487-11	CABLE, FLAT (FFC-90)	
18	A-7091-800-A	MICROPHONE UNIT	
80	1-692-257-31	SWITCH, PUSH (ZOOM)	
106	1-547-558-21	FILTER BLOCK, OPTICAL	
108	1-547-548-11	LENS, ZOOM (VCL-6210WC) (TYPE A)	

108	1-547-630-11	LENS, ZOOM (VCL-6210WF) (TYPE B)	
264	1-568-323-11	CONNECTOR, BOARD TO BOARD 4P	
324	1-691-254-13	CONNECTOR, TRANSLATION 10P	
401	1-547-548-11	LENS, ZOOM (VCL-6210WC) (TYPE A)	
451	1-547-630-11	LENS, ZOOM (VCL-6210WF) (TYPE B)	

IC875	A-7030-369-A	CCD BLOCK ASSY (ICX055AK-1) (CCD IMAGER)	
M901	A-7048-585-A	DRUM ASSY (DGH-90A-R)	
M902	8-835-477-01	MOTOR, DC SCE-0101A (CAPSTAN)	
M903	A-7040-304-A	MOTOR BLOCK ASSY, LM (LOADING)	
M904	3-708-494-01	METER ASSY, IG (IRIS) (TYPE A)	

M904	3-708-653-01	IRIS UNIT (TYPE B)	
M905	3-708-491-01	MOTOR ASSY, STEPPING (FOCUS) (TYPE A)	
M905	3-708-656-01	MOTOR UNIT, FOCUS (TYPE B)	
M906	3-708-492-01	MOTOR ASSY, PZ (ZOOM) (TYPE A)	
M906	3-708-654-01	MOTOR UNIT, ZOOM (TYPE B)	

S001	1-572-986-11	SWITCH, ROTARY (ENCODER)	
S005	1-570-771-21	SWITCH (C DOWN)	
△V901	1-452-565-11	CRT ASSY (M01KKD70WB)	

ACCESSORIES & PACKING MATERIALS

A-6767-706-A	RFU ADAPTOR (RFU-89EA) (TR323E:E)
A-6767-707-A	RFU ADAPTOR (RFU-89EA) (TR323E:UK)
A-6768-254-A	RFU ADAPTOR (RFU-90E) (TR323E:AEP)
A-6768-255-A	RFU ADAPTOR (RFU-90AS)
(TR323E:Australian/TR323EP)	

1-465-807-91	REMOTE COMMANDER (CAM CORDER) (RMT-507)
1-569-008-11	ADAPTER, CONVERSION 2P (TR323E:UK, E)
1-571-164-11	SWITCH, ANTENNA CHANGE (CABLE)
(TR323E:UK, E)	

1-573-291-11	CONNECTOR, CONVERSION (TR323E:AEP, UK)
1-575-334-11	CORD, CONNECTION (A/V connecting cable)
3-712-673-01	SCREWDRIVER (TR323E:UK, E)
3-738-517-01	BELT (S), SHOULDER
3-756-694-71	MANUAL, INSTRUCTION (TR323E:AEP)
(PORTUGUESE)	

3-756-694-81	MANUAL, INSTRUCTION (TR323E:AEP)
(DANISH, FINNISH)	
3-756-693-51	MANUAL, INSTRUCTION (TR323E:E)
(ENGLISH, SPANISH)	

The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

Ref. No.	Part No.	Description	Remark
	3-756-693-61	MANUAL, INSTRUCTION (TR323E:E) (FRENCH, GERMAN)	
	3-756-693-71	MANUAL, INSTRUCTION (TR323E:E) (ARABIC)	
	3-756-693-81	MANUAL, INSTRUCTION (TR323E:E) (CHINESE)	
	3-756-693-91	MANUAL, INSTRUCTION (TR323E:AUS/TR323EP) (ENGLISH)	
	3-756-694-11	MANUAL, INSTRUCTION (TR323E:AEP, UK) (ENGLISH)	
	3-756-694-41	MANUAL, INSTRUCTION (TR323E:AEP) (FRENCH, DUTCH)	
	3-756-694-51	MANUAL, INSTRUCTION (TR323E:AEP) (GERMAN, ITALIAN)	
	3-756-694-61	MANUAL, INSTRUCTION (TR323E:AEP) (SPANISH, SWEDISH)	
	3-947-664-11	HOLDER (B), REMOTE CONTROL	
	3-950-790-03	CASE (UPPER), CARRYING, SOFT (TR323EP)	
*	3-950-791-01	CUSHION (FRONT), INNER (TR323EP)	
*	3-950-792-01	CUSHION (REAR), INNER (TR323EP)	
*	3-950-793-01	SPACER (TR323EP)	
*	3-950-794-01	PLATE, INNER (TR323EP)	
	3-952-142-02	BELT, CARRYING (TR323EP)	
	3-952-143-02	CASE (LOWER) CARRYING, SOFT (TR323EP)	
*	3-953-701-01	CUSHION, ACC (TR323E)	
*	3-953-702-01	CUSHION (LOWER) (TR323E)	
*	3-954-126-01	INDIVIDUAL CARTON (TR323E)	

** AC-V25 AC POWER ADAPTOR
*** NP-55 BATTERY PACK

Note.

** MARK PARTS IS AVAILABLE FOR REPAIR SERVICE.
*** MARK PARTS IS AVAILABLE AS AN OPTIONAL ACCESSORY.

HARDWARE LIST

#1 7-627-853-57 PRECISION SCREW +P 2X5

Be sure to read "Precautions for Replacement of CCD Imager"
on page 73 when changing the CCD imager.

SECTION 7 INTERFACES • IC PIN FUNCTIONS

7-1. CAMERA MICROPROCESSOR PIN FUNCTION (IC709 ON VC-133 BOARD: CXP80624-434R)

Pin No.	Signal	I/O	Function
1	ZOOM M REV	O	Zoom motor control signal. Normally "L". 20 msec period PWM signal when rotating to WIDE "H" when rotating to TELE.
2	ZOOM M FWD	O	Zoom motor control signal. Normally "L". 20 msec period PWM signal when rotating to TELE "H" when rotating to WIDE.
3			
4			Not used.
5			
6	FOC END LED	O	Focus end sensor LED control signal. Normally "L".
7	RT05D/3		Not used.
8	CORE RESET	O	Camera core (IC707 on VC-133 board) reset signal. Normally "H". "L" when reset.
9	PDR RESET	O	Focus predriver (IC706 on VC-133 board) reset signal. Normally "H". "L" when reset.
10			Not used.
11	TC STBY0		
12	OPD RESET	O	OPD (IC705 on VC-133 board) reset signal. "H" camera mode. "L" VTR mode.
13			
14			
15			
16			Not used.
17			
18			
19			
20			
21	EPROM DO	O	Connected to +5V.
22	EPROM BUSY	I	BUSY signal from EEPROM. Normally "H". "L" pulse when data reading/writing.
23			Not used.
24			
25			Connected to GND.
26			Connected to +5V.
27	WIDE END	I	Focus Zone sensor input. Normally "L".
28	FOC END FAR	I	Focus edge sensor input. Normally "L".
29	CAM ON	O	Power supply control signal. Normally "L".
30			
31			
32			
33			Not used.
34			
35			
36			
37	MP		Connected to GND.
38	CAM RESET	I	Reset signal input. Normally "H". "L" when reset.
39	VSS		GND.
40	XTAL	O	
41	EXTAL	I	12 MHz clock oscillation circuit.

Pin No.	Signal	I/O	Function
42	CS CAM	I	Chip select signal from mode control microprocessor. (IC403 on VS-100 board)
43	VTR SI	I	Serial data input from mode control microprocessor.
44	VTR SO	O	Serial data output from mode control microprocessor.
45	VTR SCK	I	Serial data transfer clock.
46			
47			Not used.
48			
49			Not used.
50	AVSS		GND.
51	AVREF		Analog input port reference voltage (5V).
52	AVDD		Analog input port voltage (5V).
53			Connected to GND.
54			
55	MAN FOCUS (2)	I	Manual focus input. 0 to 5 Vdc.
56	MAN FOCUS (1)	I	Manual focus input. 0 to 5 Vdc.
57	ZOOM SW	I	Zoom key input. 0.4V F. TELE, 1.4V F. TELE and 3.7V F. WIDE, 2.5V WIDE and 5V. no input.
58	ZOOM POS X4	I	Zoom position voltage. approx. 0.4V (WIDE end) to approx. 2.8V (TELE end).
59	HALL A/D	I	Hall voltage. approx. 1V (ins open) to approx. 3V (ins close).
60	ZOOM POS	I	Zoom position voltage. approx. 0.2V (WIDE end) to approx. 2.4V (TELE end).
61			Connected to 5V.
62	PB V	I	VD signal input from mecha controller (IC402 on VS-100 board).
63	PG5/SYNC1		
64	VTR SYNC		
65	PB CTL		Connected to +5V.
66	DPG		
67			
68	AF BUSY	I	AF busy signal.
69			
70			
71			Not used.
72			
73	IRIS PWM	O	Ins control signal. 21 μsec period PWM signal.
74	ZM PWM	O	Zoom position detection voltage output. 21 μsec period PWM signal.
75			Not used.
76			Connected to +5V.
77	CAM SI	I	Serial data input.
78	CAM SO	O	Serial data output.
79	CAM SCK	O	Serial data transfer clock.
80	AJST	I	Adjustment timing pulse input. Normally "H".
81	PI/O		
82	PI/PWM		Not used.
83	PI/PO		
84	PI O		
85	PKO		Connected to +5V.
86	GND		GND.
87	VDD		
88	VPP		+5V power supply.

7-2. MECHANISM CONTROL MICROPROCESSOR PIN FUNCTION
(IC402 ON VS-100 BOARD: CXP80624-428R)

Pin No.	Signal	I/O	Function
89			Not used
90	CS PDR	O	Chip select signal to focus predriver (IC706 on VC-133 board)
91	CS CAM D/A	O	Chip select signal to camera EVR (IC702 on VC-133 board)
92	CS ROM	O	Chip select signal to EEPROM (IC712 on VC-133 board)
93	CS OPD	O	Chip select signal to OPD (IC705 on VC-133 board)
94	NTSC	O	NTSC: "L", PAL: "H"
95	CS CORE	O	Chip select signal to camera core (IC707 on VC-133 board)
96	CS TC	O	Chip select signal to timing generator (IC801 on VC-133 board)
97			Not used
98	CS A/D	O	Chip select signal to Zoom position A/D converter. Not used
99			Not used
100			Not used

Pin No.	Port Name	Signal	I/O	Connection	Function
1	PB3/PP011	RP PB MODE	O		REC/PB select signal of REC/PB amplifier (IC001 on VS-100 board) and A/T servo IC (IC404 on VS-100 board) "H": PB
2	PB2/PP010	FE ON	O		Flying erase oscillation ON/OFF control signal "L": oscillation
3	PB1/PP09	JOG VD	O		False VD signal to be inserted into playback video signal during variable speed playback
4	PB0/PP08	JOG	O		Variable speed/normal speed playback select signal of video circuit "H": when variable speed playback
5	PC7/RT07	JACK IN/OUT	I JK		Not used Connected to +5V
6	PC6/RT06	17M DET	I AU		Normal/stereo discrimination input "H" when AFM stereo tape playback
7	PC5/RT05	JACK MONOSTER DET	I JK		Jack monaural/stereo discrimination input "H" monaural (No jack inserted in right terminal)
8	PC4/RT04	INT VD	I		Not used
9	PC3/RT03	PB V (SYSTEM SYNC)	O	MODE CON	V sync for mode controller
10	PC2/RT02	SYNC DET OUT	O		Sync detect output "L" when Sync is detected
11	PC1/RT01	E/L DET	I		Not used
12	PC0/RT00	MIC MONOSTER DET	I AU		External microphone monaural/stereo discrimination input "L" when monaural microphone used
13	P77	M SW 0	I MD		Mode switch input
14	P76	M SW 1	I MD		Mode switch input
15	P75	M SW 2	I MD		Mode switch input
16	P74	CC DOWN	I MD		Cassette compartment down switch input "L": down
17	P73	REC PROOF	I MD		Erase protection switch input "L" when REC prohibit
18	P72	MEM/P	I MD		MEM/P switch input "L": MP "H": ME
19	P71	HO/NOR	I MD		Connected to GND
20	P70	VIDEO MUTE	O		Video output mute signal "H": mute
21	P67	LINE MIX	I AU		AUDIO OUT monaural/stereo select signal "H": monaural
22	P66	MX SEL 1	I AU		Matrix select signal
23	P65	MX SEL 2	I AU		Matrix select signal
24	P64	MX ON/OFF	O AU		Matrix ON/OFF signal "H" when matrix ON (stereo)
25	P63	E MODE	O		Not used
26	P62	CAM/LINE	O		Camera input/line input select signal "H" when camera input
27	P61	DS ON	O		Data screen ON/OFF signal "H": ON
28	P60	EDIT	O		Video circuit EDIT/NORMAL switch signal "L": EDIT
29	P77	UNLOAD	O		Loading motor control signal "H" or "H" pulse when unloading
30	PH6	LOAD	O		Loading motor control signal "H" or "H" pulse when loading
31	PH5	LM LIM COM	O		Loading motor limiter control signal Temporary "H" when loading
32	PH4	COMP REC	O		Not used
33	PH3	DRUM REV	O		Drum rotating control signal Normally "L"
34	PH2		O		N.C.
35	PH1		O		N.C.
36	PH0	REEL HALL CONT	O		Reel FO sensor (HALL element) power supply control signal
37	MP	MP			Connected to GND
38	RST	RESET	I	MODE CON	Reset signal from mode control microprocessor "L" when reset
39	VSS	VSS			GND
40	XTAL	XTAL	I		11.72 MHz clock oscillation circuit
41	EXTAL	EXTAL	O		
42	CS0	VTR COSMO/CS	I	MODE CON	Chip select signal from mode control microprocessor (VS-100 board IC403)

Pin No.	Port Name	Signal	I/O	Connection	Function
43	S10	DATA TO SLVE	I	MODE CON	Serial data input from mode control microprocessor.
44	S00	DATA TO MSTR	O	MODE CON	Serial data output to mode control microprocessor.
45	SCKO	SCK	I	MODE CON	Serial clock input from mode control microprocessor.
46	PF7/AN11	AUDIO MUTE	O	AU	Audio output mute signal "H" = mute.
47	PF6/AN10	1.7M OFF	O	AU	1.7 MHz REC AFM carrier ON/OFF signal "H" = OFF (monaural recording).
48	PF5/AN9	GND	I		GND
49	PF4/AN8	GND	I		GND
50	AVSS	AVSS	I		Analog port GND.
51	AVREF	AVREF	I		Analog port reference voltage. Connected to +5V.
52	AVDD	VDD	I		Analog port power supply (5V).
53	PF3/AN7	N.C.			Connected to GND.
54	PF2/AN6	END SENS	I	SL	Tape end detection signal. Normally "L" = "H" pulse. Tape end.
55	PF1/AN5	TOP SENS	I	SL	Tape top detection signal. Normally "L" = "H" pulse. Tape top.
56	PF0/AN4	DEV	I	MD	Dew condensation detection signal. "L" when dew condensation.
57	AN3	BATT SENSE	I		Battery voltage input for battery end detection. 1/2 divided by RB401.
58	AN2	ATF ERROR	I		ATF error. ATF lock error input.
59	AN1	S REEL FG	I	SL	S reel FG signal input.
60	AN0	T REEL FG	I	SL	T reel FG signal input.
61	PG7/EX11	PG7 (N.C.)			Connected to GND.
62	PG6/EX10	CAM VD	I	CAM SG	VD signal from camera circuit sync generator. V period pulse.
63	PG5/SYN1	FLD	I	CAM SG	FIELD signal from camera circuit sync generator. 2V period pulse.
64	PG4/SYN0	VTR SYNC	I		Composite sync signal separated from REC/PB Y signal.
65	PG3/PBCTL	PB SP/LP DET	I		Discriminates PB tape REC mode when CUE/REVIEW/FF and REW "L" = LP.
66	PG2/DPG	DRUM PG	I	SL	Drum PG signal input. For drum phase servo 40 msec period "H" pulse.
67	PG1/DFG	DRUM FG	I	SL	Drum FG signal input. For drum speed servo 3.3 msec period pulse.
68	PG0/CFG	CAP FG	I	MD	Capstan FG signal input. For capstan speed servo. Approx. 1388 Hz when REC/PB (SP).
69	PE7/DAB0	N.C.	O		N.C.
70	PE6/DAB0	T/E LED ON	O		Tape LED ON/OFF signal. 100 msec period "H" pulse when REC/PB.
71	PE5/DA1	N.C.	O		N.C.
72	PE4/DA0	N.C.	O		N.C.
73	PE3/PWM1	CAP PWM	O		Capstan error signal output 20.15 μ sec PWM signal.
74	PE2/PWM0	DRUM PWM	O		Drum error signal output 20.15 μ sec PWM signal.
75	PE1/EC/INT2	CFG	I	MD	Capstan FG signal input. For tape counter.
76	PE0/INT0	STACK IN	I		Not used, connected to +5V.
77	P17/ST1	LANC IN	I	DD	Control L serial data input.
78	P16/SO1	LANC OUT	O	DD	Control L serial data output.
79	P15/SCK1	LM LIMIT DET	I		Loading motor limiter ON detection signal. Normally "H" = "L" when limiter ON.
80	P14/INT1	AGC SLOW			Not used.
81	P13/TO	DRUM ON	O		Drum driver ON/OFF control signal. "H" when drum ON.
82	P12/PWM	CLOG	O		Head clog detection signal. "L" when no trouble.
83	P11/PO	REF PILOT	O		ATF servo reference pilot signal. Synchronized when drum rotation is output by selecting four frequencies f1=101.0 kHz, f2=117.2 kHz, f3=162.8 kHz and f4=146.5 kHz.
84	P10/PCK				Connected to +5V.

Pin No.	Port Name	Signal	I/O	Connection	Function
85	PKO	13/10 SW	I	MD	Not used.
86	VSS	VSS			GND
87	VDD	VDD			VDD
88	N.C.	(VPP)			Connected to +5V.
89	PA7/PP07	DRUM ACC	O		Drum motor acceleration signal. Not used.
90	PA6/PP06	DRUM BRK	O		Drum motor brake signal. Normally "L".
91	PA5/PP05	SP/LP	O		SP/LP select signal. "L" = LP.
92	PA4/PP04	AU IN/OUT	O		Not used.
93	PA3/PP03	VIDEO O SW	O		VIDEO OUT inhibit signal. "H" = inhibit. Not used.
94	PA2/PP02	VIDEO I SW	O		VIDEO IN/OUT select signal. Not used.
95	PA1/PP01	VA PB MODE	O	ALL	Video/audio circuit REC/PB select signal. "H" = PB.
96	PA0/PP00	VI SWP	O		RF switching pulse signal for video circuit. 25 Hz, 50% duty pulse.
97	PB7/PP15	RF SWP	O	ALL	RF switching pulse signal for REC/PB amp and Audio circuit. 25 Hz, 50% duty pulse.
98	0	H CHG	O		Not used.
99	I1	CAP ON	O	MD	Capstan driver ON/OFF control signal. "H" = when capstan ON.
100	PB4/PP12	CAP FWD/RVS	O	MD	Capstan rotating direction control signal. "H" = FWD. "L" = RVS.

7-3. MODE CONTROL MICROPROCESSOR PIN FUNCTION
(IC403 ON VS-100 BOARD: μ PD75316GF-318-3B9)

Pin No.	Port Name	Signal	I/O	Connection	Function
1	S12	S12	O		
2	S13	S13	O		
3	S14	S14	O		
4	S15	S15	O		
5	S16	S16	O		
6	S17	S17	O		
7	S18	S18	O		
8	S19	S19	O		
9	S20	S20	O		
10	S21	S21	O		
11	S22	S22	O		
12	S23	S23	O		
13	S24/BP0	EEPROM CS	O		Chip select signal to EEPROM (IC406 on VS-100 board) 1/2V period "L" pulse.
14	S25/BP1	N.C.	O		Not used.
15	S26/BP2	TO STBY 1	O	CAM	Power save control signal to timing generator (IC801 on VC-133 board) Normally "L".
16	S27/BP3		O		N.C.
17	S28/BP4	CS TITLE	O	CAM	Not used.
18	S29/BP5	REMO CS	O		Chip select signal to sync remote controller (IC907 on VS-100 board) 1V period "L" pulse.
19	S30/BP6	S RAM CS	O		Not used.
20	S31/BP7	CAM COSM CS	O	CAM	Chip select signal to camera controller (IC709 on VC-133 board) 1V period "L" pulse.
21	COM0	COM 0	O		
22	COM1	COM 1	O		
23	COM2	COM 2	O		Common terminal drive signal to LCD (Four value output of 0, 1, 7, 3, 3, 5V) Not used.
24	COM3	COM 3	O		
25	BIAS	BIAS	O		Bias voltage output for voltage dividing resistor. Not used.
26	VLC0	VCC 0	I		Power source 0 input
27	VLC1	VCC 1	I		Power source 1 input
28	VLC2	VCC 2	I		Power source 2 input
29	P40	K OUT 4	O	all	KEY matrix output. 1V period "L" pulse output when corresponding key is pressed. "L" when other cases.
30	P41	K OUT 5	O	all	
31	P42	SYS RESET	O	all	Output signal to reset each IC when power is turned on. Normally "H".
32	P43	TALLY	O	EVF	Tally LED ON/OFF signal. "L" ON
33	VSS	VSS			GND
34	P50	K OUT 0	O	all	
35	P51	K OUT 1	O	all	KEY matrix output
36	P52	K OUT 2	O	all	1V period "L" pulse output when corresponding key is pressed "L" when other cases
37	P53	K OUT 3	O	all	
38	P00/INT4	BATT IN	I		Clock select to 32 kHz when "L" and to 4.19 MHz with "H" when Battery is turned on. "L" is select.
39	P01/SCK	SCK	O	all	Serial clock output terminal. Serial clock (2 μ S) communication.
40	P02/S0/SB0	DATA TO SLVE	O	all	Serial bus output terminal. Serial clock (2 μ S) communication.
41	P03/S1/SB1	DATA TO MSTR	I	all	Serial bus input terminal. Serial clock (2 μ S) communication.
42	P10/INT0	SYSTEM SYNC	I	all	(Edge detection vector interruption). System synchronization input port from CXP80624 (IC402 on VS-100 board).

Pin No.	Port Name	Signal	I/O	Connection	Function
43	P1/INT1	PRE END	I		(Edge detection vector interruption). Lithium PRE END is selected with "L".
44	P12/INT2	LANC PWR ON	I		Power on signal input from wired remote control "L" when power switch pressed.
45	P13/INT0	TITLE BUSY	I	CAM	Not used.
46	P20/PT00	VTR DD ON	O	PS	VTR power source (VIDEO 5V, RP 5V, AUDIO 5V, EVF 5V, DSV, (SS5V), DAV, CORE AV) control signal. "H" when power switch is in "PLAYER" or "CAMERA" position.
47	P21	CAM DD ON	O	PS	CAMERA power source (CAM 5V, +15V, -9V) control signal. "H" when power switch is in "CAMERA" position.
48	P22/PCL	VIDEO DIA CS	O	VA	Serial data load signal to video circuit EVR (IC156, 158 on VS-100 board). 1V period "H" pulse.
49	P23/BUZ	BEEP	O		Buzzer output. Normally "L". 2 kHz pulse, alarm.
50	P30/LCDCL	VIDEO CS	O	VA	Chip select signal to Y process IC (IC151 on VS-100 board) 1V period "L" pulse.
51	P31/SYNC	VTR COSM CS	O		Chip select signal to mechanism controller (IC402 on VS-100 board). 1V period "L" pulse.
52	P32	SC CS	O	CAM	Chip select signal to sync generator (IC704 on VC-133 board). 1V period "L" pulse.
53	P33	CRTC CS	O	CAM	Strobe signal for character generator (IC406 on VS-100 board) 1V period "H" pulse.
54	VDD	VDD			VDD (+5V)
55	XT1	XT1	I		SUB system clock. 32 kHz oscillation terminal.
56	XT2	XT2			
57	N.C.	N.C.			Connected to +5V.
58	X1	X1	I		Main system clock.
59	X2	X2	I		4.19 MHz oscillation terminal.
60	P60/KK0	K IN 0	I	all	
61	P61/KR1	K IN 1	I	all	
62	P62/KR2	K IN 2	I	all	
63	P63/KR3	K IN 3	I	all	
64	P70/KR4	K IN 4	I	all	
65	P71/KP5	K IN 5	I	all	
66	P72/KP6	K IN 6	I	all	
67	P73/KP7	CC DOWN	I	MD	KEY matrix input. 1V period "L" pulse input when corresponding key is pressed "H" when other case.
68	RESET	RESET	I		Cassette compartment lock switch input. "L" Lock.
69	S0	CLK CHK	O		System reset input. "L": Reset, Normally "H".
70	S1	S1	O		N.C.
71	S2	S2	O		
72	S3	S3	O		
73	S4	S4	O		
74	S5	S5	O		
75	S6	S6	O		
76	S7	S7	O		
77	S8	S8	O		
78	S9	S9	O		
79	S10	S10	O		
80	S11	S11	O		

Segment terminal drive signal to LCD
(Four value output of 0, 1, 7, 3, 3, 5V)
Not used.

7-4. INTERFACE

7-4-1. System Control – Video/Audio Block Interface (VS-100 BOARD)

NAME	I/O	No.	VTR MODE										CAMERA MODE															
			STOP	FF	REW	FR SEARCH		PB	PICTURE SEARCH		PB- REVIEW	PB- PAUSE	FRAME	SLOW	X2	SHUTTLE EDIT *3		REC *4	PAUSE	REC *4	STAND BY	REC	EDIT SEARCH		REC REVIEW			
						CUE	REVIEW		CUE	REVIEW						FWD	REV						FWD	RVS		FWD	RVS	
SP/LP	O	IC402 ⑥1	*1	H	H	*2	*2	*2	*2	*2	*1	*1	*1	*1	*1	*1	*2	*2	*6	H/L	H/L	*6	*2	*2	H	H		
VA PB MODE	O	IC402 ⑥5	L	L	L	H	H	H	H	H	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H			
AUDIO MUTE *13	O	IC402 ④5	L	L	L	H	H	H	H	L	H	H	H	H	H	L	H	L	L	L	L	H	H	H	H			
VIDEO MUTE	O	IC402 ⑦0	*14	*14	*14	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*15	*14	L	L	L	*15	*15	*15			
CAM/LINE	O	IC402 ⑦5	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	H	H	L	L	L			
JOG VD	O	IC402 ③	L	L	L	*5	*5	*5	*5	L	*5	*5	*5	*5	*5	*5	*5	L	L	L	L	*5	*5	*5	*5			
RP PB MODE	O	IC402 ①	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	L	H	H	L	H	H	H	H			
FEON	O	IC402 ②	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	L	H	H	L	H	H	H	H			
RF SWP	O	IC402 ⑥7	L	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7	*7			
JOG	O	IC402 ④	L	L	L	H	H	H	H	L	H	H	H	H	H	H	H	L	L	L	L	H	H	H	H			
VIDEO CS	O	IC403 ⑤0	V period "L" pulse																									
VIDEO DIA CS	O	IC403 ④9	V period "H" pulse																									
DATA TO MSTR	I	IC403 ④1	V period "L" pulse																									
DATA TO SLVE	O	IC403 ④0	V period pulse train																									
SOX	I	IC403 ③9	V period "H" pulse																									
PB SP/LP DET	I	IC402 ⑥5	L	*10	*10	*10	*10	*10	L	*10	*10	*10	*10		*10	L	*10	H	H	H	H	L	L	L	*10			
CLOG	I	IC402 ⑥2	H	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	*11	H	*11	*11	H	*11	*11	*11	*11			
VTR SYNC	I	IC402 ⑥4	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12	*12			

- *1. Outputs discrimination result of the mode just before. "H": SP mode, "L": LP mode.
 *2. Outputs discrimination result of the playback tape. "H": SP mode, "L": LP mode.
 *3. Edit search button pressed when playback pause mode.
 *4. Mode for adjustment.
 *5. False VD signal.
 *6. By REC MODE switch. "H": SP mode, "L": LP mode.
 *7. 25 Hz duty 50% pulse (synchronized with drum rotation).
 *10. "H": SP recording area on tape. "L": LP recording area.
 *11. "H": no recording area or drop out area on tape. Head clog detection input.
 *12. Composite sync signal input separated from line input video signal, camera video signal or playback video signal. (polarity +)
 *13. "H": during camera mode load/unload.
 *14. "L": when external input (video) present. "H" when other cases.
 *15. "H": when tape no signal. "L" when other cases.

7-4-2. System Control – Servo Block Interface

NAME	I/O	No.	VTR MODE										CAMERA MODE									
			STOP	FF	REW	FR SEARCH		PB	PICTURE SEARCH		PB-PAUSE	FRAME	SLOW	X2	SHUTTLE EDIT		REC	EDIT SEARCH		REC	REC REVIEW	
						CUE	REVIEW		CUE	REVIEW					FWD	REV		FWD	RVS		FWD	RVS
T REEL FG	I	IC402 ⑤⑥	-	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	-	*1	*1	*1	*1	*1
S REEL FG	I	IC402 ⑤⑨	-	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	*1	-	*1	*1	*1	*1	*1
ATF ERROR	I	IC402 ⑤⑩	-	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2	*2
DRUM PG	I	IC402 ⑤⑪	-	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3	*3
DRUM FG	I	IC402 ⑤⑫	-	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4	*4
CAP FG/ CFG HMS	I	IC402 ⑤⑬, ⑦⑤	-	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5	*5
CAP ON	O	IC402 ⑤⑭	L	H	H	H	H	H	H	H	L	*8	*8	H	H	H	L	H	H	H	H	H
REF PILOT	O	IC402 ⑤⑮	*7	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6	*6
RP PB MODE	O	IC402 ①	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
DRUM REV	O	IC402 ⑤⑯	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H
CAP FWD/ RVS	O	IC402 ⑤⑰	L	H	L	H	L	H	L	H	L	*8	*8	H	L	L	L	H	L	H	L	L
DRUM PWM	O	IC402 ⑦④	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9	*9
CAP PWM	O	IC402 ⑦③	L	*9	*9	*9	*9	*9	*9	*9	L	*9	*9	*9	*9	*9	L	*9	*9	*9	*9	*9
LM LIM CONT	O	IC402 ⑤⑱	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L	L
DRUM ON	O	IC402 ⑧①	L	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H	H

*1. Inputting waveform which is similar to sine wave according to reel rotation.

*2. A TF error voltage input

*3. One PG pulse input per one drum rotation, approx. 25 Hz.

*4. 12 FG pulses input per one drum rotation, approx. 300 Hz.

*5. 520 FG pulses input per one capstan rotation. Approx. 1388 Hz when REC/PB (SP).

694 Hz when PB (LP).

*6. Four frequencies output synchronized with drum rotation: f1=101.0 kHz, f2=117.2 kHz,

f3=162.8 kHz and f4=146.5 kHz

*7. f2 (117.2 kHz) output

*8. "H" pulse when tape run.

*9. 21.5 μ sec period PWM signal

*10. Normally "H". Temporary "L" when load (drum reverse rotation).

*11. Temporary "H" when cassette loading (finger catch protection).

*12. "H": approx. 1.3 Vdc

*13. Edit search button pressed when playback pause mode.

*14. Mode for adjustment.

SECTION 8

CAMERA SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 204.

8-1. PREPARATIONS BEFORE ADJUSTMENT (CAMERA SECTION)

8-1-1. List of Service Tools

- Oscilloscope
- Stabilized power supply
- Vectorscope
- Adjusting driver
- Color monitor
- Digital voltmeter

Ref. No.	Name	Part Code	Usage
J-1	Filter for color temperature correction (C14)	J-6080-058-A	Auto white balance adjustment/check White balance adjustment/check
J-2	ND filter 1.0	J-6080-808-A	Max gain adjustment (2 used) White balance check
	ND filter 0.4	J-6080-806-A	Max gain adjustment
	ND filter 0.3	J-6080-818-A	White balance adjustment
	ND filter 0.1	J-6080-807-A	Max gain adjustment
J-3	Pattern box PTB-500	J-6029-140-A	
J-4	Color chart for pattern box	J-6020-250-A	
J-5	Adjusting remote control unit (RM-95-remodeled in part) ^{Note 1}	J-6082-053-B	
J-6	Extension cord (10P, 1 mm)	J-6082-064-A	For extension of JK-99 board
J-7	Extension cord (20P, 0.8 mm)	J-6082-196-A	For extension of CN-73 board (Cabinet (R)) (For the video and the camera section adjustment)
J-8	Relay board (21P, 0.5 mm) ^{Note 2}	J-6082-176-A	For the extension of the lens block (During the repair of the camera section)
J-9	Measuring pin for camera section	J-6082-139-A	For the camera section adjustment
J-10	Extension cord (42P, 0.8 mm)	J-6082-195-A	For the extension of DD-56 board (During the repair of the video section)
J-11	Siemens star	J-6080-875-A	For flange back check
J-12	Extension cord (20P, 0.5 mm) ^{Note 2}	J-6082-138-A	For extension between the lens block (FPC) and VC-133 board (CN851) (During the repair of the camera section)
J-13	Extension board (30P, 0.8 mm)	J-6082-167-A	For the extension of VS-100 board (For the mecha deck check)
J-14	Extension cord (32P, 0.8 mm)	J-6082-249-A	For extension of AU-150 board (During the repair of AU-150 board)

Note 1: If the micro processor IC in the adjusting remote control unit is not the new micro processor (UPD7503G-C56-12), the switchover of the page cannot be carried out. In this case, replace with the new micro processor (8-759-148-35).

Note 2: The extension code (J-6082-138-A) is also attached with a 21P, 0.5 mm code. Connect this code to the relay board (J-6082-176-A) for extensions between the lens block (FPC) and VC-133 board (CN851).

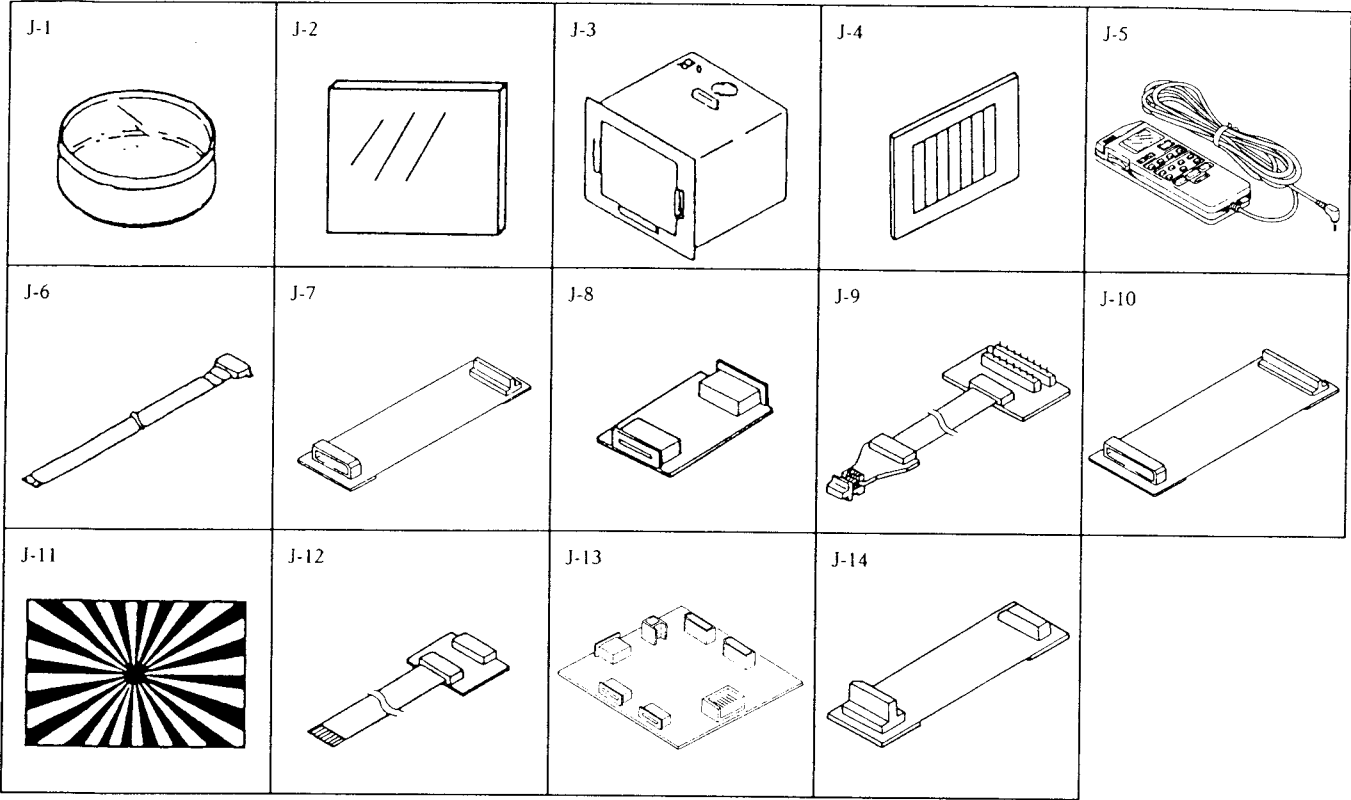


Fig. 8-1.

8-1-2. Preparations

Note: For further details on how to remove the cabinet and each board, refer to "2. Disassembly".

- 1) Connect the equipments for adjustment as shown in Fig. 8-3.
- 2) The EVF (Electronic viewfinder) is required for checking the white balance mode and shutter speeds. If the EVF is not required, remove the VS-100 board CN102.

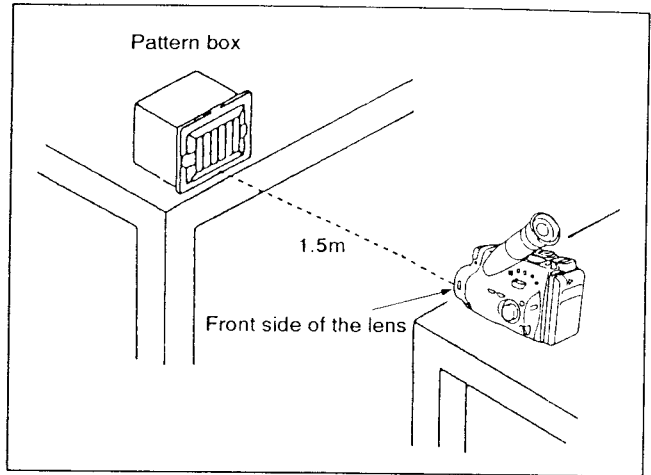


Fig. 8-2.

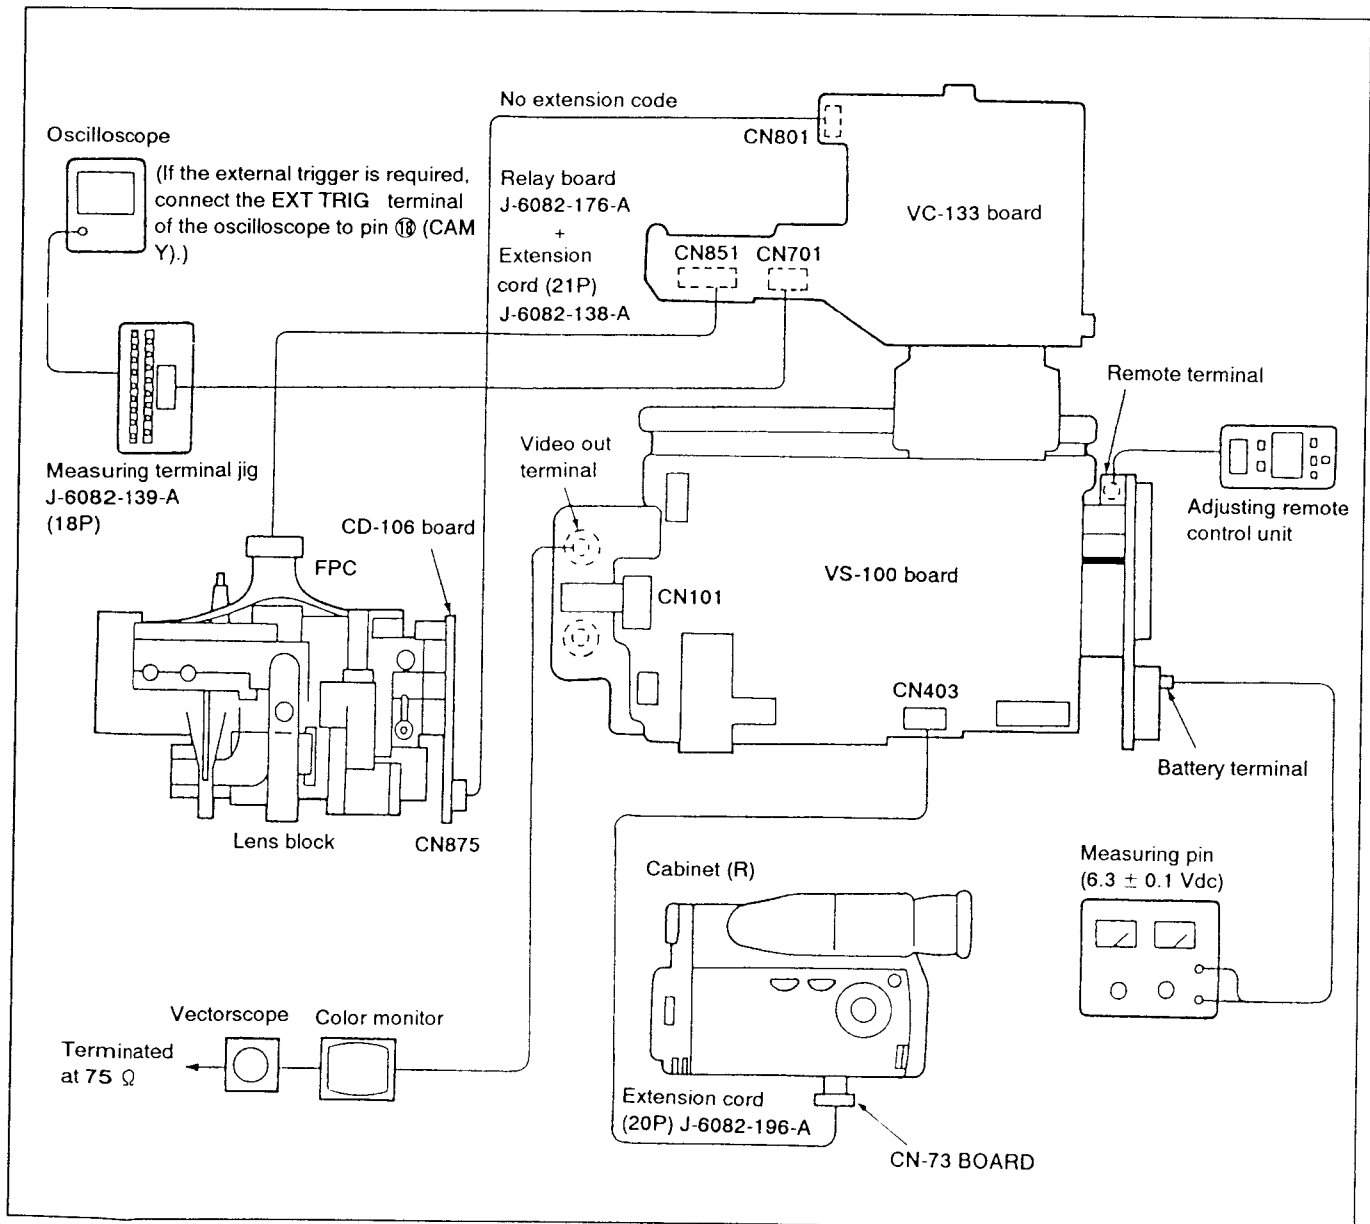


Fig. 8-3.

8-1-3. Precautions

1. Switch settings

Set the switches to the following positions, and perform the adjustments without inserting the tape, unless specified otherwise.

1. Camera/player power switch (VK-32 board S977).....Camera
2. Standby switch (SW-223 board S519).....Standby
3. LENS OPEN switch (MF-214 board S973) OPEN
4. FOCUS button (MF-214 board S971) MANUAL
5. PROGRAM AE selector (CF-34 board S997) NORMAL
6. WIDE ANGLE switch (WS-11 board S681)..... OFF

2. Adjustment Procedure

Perform in the given order as a rule.

3. Subject

- 1) Color bar chart (Standard picture frame)
Adjust the display frame as shown in Fig. 8-4. if adjustments are performed using the color bar chart.
(Standard picture frame)
- 2) White pattern (Standard picture frame)
Remove the color bar chart from the pattern box, and adjust the zoom lever so that the white pattern becomes the same size and is in the same position as the color bar chart
(Standard picture frame).

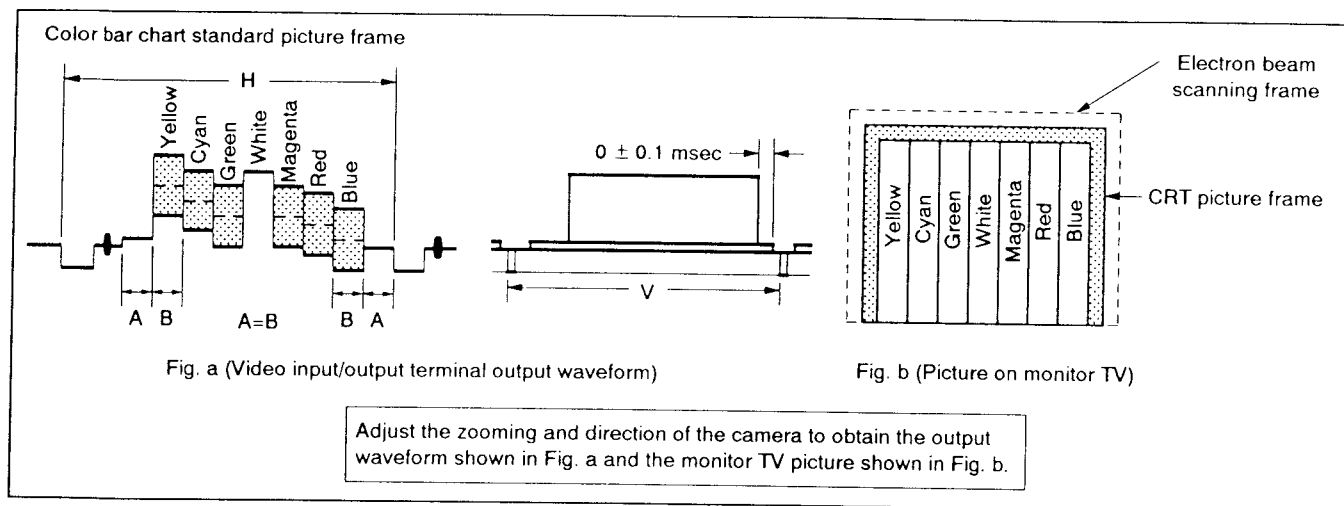


Fig. 8-4.

3) Chart for flange back adjustment

Combine a white A0 size (1189 mm× 841 mm) paper to a black one, and make the chart shown in Fig. 8-5.

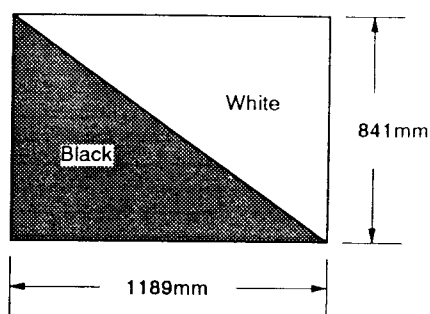


Fig. 8-5.

Note: Use the non-reflecting and non-glazing vellum paper whose size is more than A0, and make the boundary between white and black to be smoothly flat.

8-1-4. Adjusting Remote Control Unit

The camera section is adjusted by changing the constant using the coefficient of the digital signal processing calculation, or modifying the output voltage of EVR IC (VC-133 board IC702). These processes are carried out by the camera micro processor (VC-133 board IC709). This micro processor reads the data written in the non-volatile memory (VC-133 board IC712), and transmits it to the digital signal processing circuit and EVR.

The adjusting remote control unit is used for rewriting the adjustment data written in the non-volatile memory necessary for performing the adjustments.

The adjusting remote control unit uses the remote control signal line (LANC) to correspond mutually with the camera micro processor. The page, address and the up/down command of the data can be transmitted from the remote control unit to the camera micro processor. On the other hand, the page, address, and data can also be transmitted the other way round.

1. Using the adjusting remote control unit

- 1) Connect the adjusting remote control unit to the remote terminal (DD-56 board J902).
- 2) Adjust the HOLD switch of the adjusting remote control unit to HOLD (SERVICE position).

If it has been properly connected, the LCD on the adjusting remote control unit will show the display in Fig. 8-6.

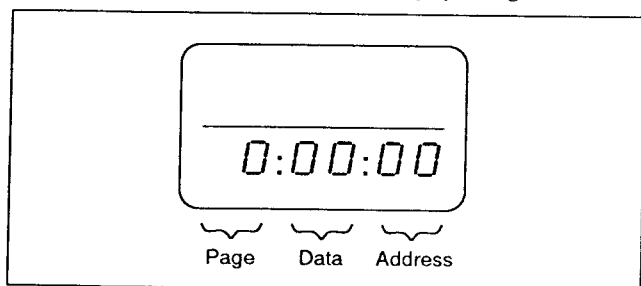


Fig. 8-6.

- 3) Operate the adjusting remote control unit as follows.

- Changing the page

The page will increase when the EDIT SEARCH+ button is pressed. It will decrease when the EDIT SEARCH- button is pressed. There are altogether 16 pages, from 0 to F.

Hexadecimal notation	0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Display on LCD	0	1	2	3	4	5	6	7	8	9	A	b	c	d	E	F
Decimal notation conversion value	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15

Table 8-1.

- Changing the address

The address will increase when the FF (▶▶) button is pressed, and decrease when the REW (◀◀) button is pressed. There are altogether 256 addresses, from 00 to FF.

- Changing the data (Data setting)

The data will increase when the PLAY (▶) button is pressed, and decrease when the STOP (■) button is pressed.

There are altogether 256 data, from 00 to FF.

- Writing the adjustment data

It is necessary to press the PAUSE button to write the adjustment data (F page, D page) in the non-volatile memory.

(The new adjustment data will not be recorded in the non-volatile memory if this operation is not performed.)

- 4) Select page: 6, address: 00, and adjust the data to 01. This releases the write protect of page F, and the camera section (F page) can be adjusted.
- 5) After completing all adjustments, turn off the main power (6.3V) once. This can release the adjustment mode (other than page F).

2. Precautions upon using the adjusting remote control unit

The correct adjustment data may be erased at times, due to operation errors of the adjusting remote control unit. To prevent this from occurring, it is recommended that all adjustment data be recorded in the memory before beginning adjustments, and the new adjustment data be recorded in the memory after each adjustment.

8-1-5. Page F Address List

Note 1: The data listed in the adjustment data memo column are fixed values.

Note 2: The adjustment data initial values are the values after performing "Page F Data Initialization" and "Page F Data Modification". They are different from the value after performing all the adjustments.

Address	Name	Function [] indicate the adjustment voltage output terminal	Adjustment data							
			Initial value	Memo column						
00	ID	Set ID	3E	3E						
01	FADER LEVEL	AE REF level modification during fader	E0	E0						
02	FADER ENDTIM	The setting of the AE REF modulation time during fader	10	10						
03	CS SL	Carrier balance adjustment	35							
04	VSUB	CCD imager V SUB adjustment [IC702 ③]	80							
05	VPGH	CCD imager VRG adjustment [IC702 ④]	80							
06	VREF Y	Camera core Y D/A standard voltage, SYNC level adjustment [IC702 ⑤]	7B							
07	VREF C	Camera core CHROMA D/A standard voltage, BURST level adjustment [IC702 ⑥]	99							
08	HALL GAIN	Hole amplifier gain adjustment [IC702 ⑦]	} HALL adjustment	47						
09	HALL OFFSET	Hole amplifier offset adjustment [IC702 ⑧]		71						
0A	LOWLIGHT CS	Low luminance intensity REF level modulation start setting	C0	C0						
0B	REF 2V	2V standard voltage for hole element [IC702 ⑩]	68	68						
0C	AD REF	Black level setting during A/D conversion, A/D off set adjustment [IC702 ⑬]	72							
0D	CORE DETH	CCD correction control	04	04						
0E	CORE VTR DELAY	1HDL longitudinal setting during VTR playback	16	16						
0F	CORE APCN4	Horizontal aperture setting	35	35						
10	CORE APCN5	Vertical aperture setting	3D	3D						
11	CORE EFECT	Special effect control	A0	A0						
12	CORE MATR	BLUE matrix constant	24	24						
13	CORE MATB	RED matrix constant	6C	6C						
14	CORE BURST LEVEL	Burst flag level setting, color modulation ON/OFF <table><tr><td>Data</td><td>Adjustment modeAdjustment</td></tr><tr><td>2E</td><td>Color modulation stopped</td></tr><tr><td>38</td><td>Normal level</td></tr></table>	Data	Adjustment modeAdjustment	2E	Color modulation stopped	38	Normal level	38	38
Data	Adjustment modeAdjustment									
2E	Color modulation stopped									
38	Normal level									
15	CORE CHROMA DLY	Y/C delay adjustment	02	02						
16	CORE Y SETUP	Set up level setting	06	06						
17	CORE VHAPCN	Slice and level setting of the aperture signal	17	17						
18	CORE B-Y GAIN	B-Y GAIN	} Color reproduction adjustments	13						
19	CORE R-Y GAIN	R-Y GAIN		11						
1A	CORE R-Y HUE	R-Y HUE		FF						
1B	CORE B-Y HUE	B-Y HUE		FD						
1C	CS/APCCUT	Low luminance intensity aperture and chroma suppress level	22	22						

Table 8-2 (1).

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
1D	NEXT LINE DEFECT BIT	CCD correction pattern	00	
1E	CCD DEFECT0	CCD correction data	00	
1F	CCD DEFECT1	CCD correction data	00	
20	CCD DEFECT2	CCD correction data	00	
21	CCD DEFECT3	CCD correction data	00	
22	CCD DEFECT4	CCD correction data	00	
23	CCD DEFECT5	CCD correction data	00	
24	CCD DEFECT6	CCD correction data	00	
25	CCD DEFECT7	CCD correction data	00	
26	CCD DEFECT8	CCD correction data	00	
27	CCD DEFECT9	CCD correction data	00	
28	CCD DEFECT10	CCD correction data	00	
29	CCD DEFECT11	CCD correction data	00	
2A	CCD DEFECT12	CCD correction data	00	
2B	CCD DEFECT13	CCD correction data	00	
2C	CCD DEFECT14	CCD correction data	00	
2D	RREF L	3200k Red standard data LSB	72	
2E	RREF H	3200k Red standard data MSB	5F	
2F	GREF L	3200k Green standard data LSB	D4	
30	GREF H	3200k Green standard data MSB	63	
31	BREF L	3200k Blue standard data LSB	3B	
32	BREF H	3200k Blue standard data MSB	2C	
33	RCONTREF	3200k RCONT adjustment value	42	
34	BCONTREF	3200k BCONT adjustment value	4A	
35	AWB NOWM R	Red regular correction coefficient	7E	
36	AWB NORM B	Blue regular correction coefficient	96	
37	AWB SHUT IN	Indoor determination shutter data	A8	A8
38	ABW SHUT OUT	Outdoor determination shutter data	A0	A0
39	AWB IRIS IN	Indoor determination hole data	79	
3A	AWB IRIS OUT	Outdoor determination hole data	7F	
3B	AWB G LEVEL	High luminance section green integral level	02	02
3C	AWB G WIDTH	High luminance section green integral level range	03	03
3D	DMAT HUE	Variable linear matrix HUE coefficient	00	
3E	DMAT GAIN	Variable linear matrix GAIN coefficient	00	
3F	AWB SELECT	AWB mode selection	00	00
40	AWB DIFF	Standard difference from the outdoor fixed value	0A	0A
41	AWB BOTTOM SLP R	AWB incoming frame bottom R coefficient	48	48
42	AWB BOTTOM SLP B	AWB incoming frame bottom B coefficient	78	78
43	AWB MIDDLE SLP R	AWB incoming frame middle R coefficient	60	60
44	AWB MIDDLE SLP B	AWB incoming frame middle B coefficient	40	40
45	AWB TOP SLP R	AWB incoming frame top R coefficient	66	66
46	AWB TOP SLP B	AWB incoming frame top B coefficient	18	18

Table 8-2 (2).

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data									
			Initial value	Memo column								
47	AWB KEIKO R	AWB incoming frame fluorescent light R coefficient	66	66								
48	AWB KEIKO B	AWB incoming frame fluorescent light B coefficient	18	18								
49	AWB BOTTOM UP	AWB incoming frame bottom upper value	C2	C2								
4A	AWB BOTTOM DWN	AWB incoming frame bottom lower value	8C	8C								
4B	AWB MIDDLE UP	AWB incoming frame middle upper value	AD	AD								
4C	AWB MIDDLE DWN	AWB incoming frame middle lower value	96	96								
4D	AWB TOP UP	AWB incoming frame top upper value	78	78								
4E	AWB TOP DWN	AWB incoming frame top lower value	60	60								
4F	AWB KEIKO	AWB incoming frame fluorescent light output lower value	66	66								
50	AWB KEIKO DWN	AWB incoming frame fluorescent light lower value	59	59								
51	AWB R TOP LMT	AWB incoming frame Rcont upper value	6E	6E								
52	AWB R DWN LMT	AWB incoming frame Rcont lower value	20	20								
53	AWB B TOP LMT	AWB incoming frame Bcont upper value	83	83								
54	AWB B IN TOP	AWB incoming frame Bcont	67	67								
55	AWB B IN MAX	AWB incoming frame Bcont	5C	5C								
56	AWB B OUT MIN	AWB incoming frame Bcont	5C	5C								
57	AWB B OUT DWN	AWB incoming frame Bcont	4A	4A								
58	AWB B DWN LMT	AWB incoming frame Bcont lower value	1B	1B								
59	AWB LL LMT	Low luminance intensity limiter	06	06								
5A	AWB T M DIVID	AWB incoming frame upper, middle border value	5E	5E								
5B	AWB B M DIVID	AWB incoming frame middle, lower border value	39	39								
5C	AWB DELAY TM	AWB tracking speed <table><tr><td>Data</td><td>Adjustment mode</td></tr><tr><td>01</td><td>High speed tracking mode</td></tr><tr><td>0C</td><td>Normal</td></tr></table>	Data	Adjustment mode	01	High speed tracking mode	0C	Normal	0C	0C		
Data	Adjustment mode											
01	High speed tracking mode											
0C	Normal											
5D	AWB FAST TM	AWB initial high speed tracking amount	40	40								
5E	AWB OUT HYS OFF	AWB outdoor hysteresis off difference	0C	0C								
5F	AWB OUT B HYS	AWB outdoor hysteresis amount	06	06								
60	AWB MODE	AWB adjustment mode <table><tr><td>Data</td><td>Adjustment mode</td></tr><tr><td>00</td><td>Normal</td></tr><tr><td>D0</td><td>AWB adjustment mode</td></tr><tr><td>F1</td><td>All area tracking mode</td></tr></table>	Data	Adjustment mode	00	Normal	D0	AWB adjustment mode	F1	All area tracking mode	00	00
Data	Adjustment mode											
00	Normal											
D0	AWB adjustment mode											
F1	All area tracking mode											
61	AE REFL	Reference value (lower) for AE	00	00								
62	AE REFH	Reference value (upper) for AE	1E	1E								
63	AGC MIN	AGC MIN value (AGCREF value), IRIS level adjustment	E3									
64	AE MIML	Low luminance intensity side limiter (MAXGAIN), MAX GAIN adjustment	32									
65	AE MAXL	High luminance intensity side limiter (lower)	80	80								
66	IRIS OFFSET	Iris ROM table OPEN side off set	D0	D0								
67	AE KEISU	Correction coefficient during detection weighting	00	00								
68	AE FUNCTION	SW for tuning each AE function ON and OFF	02	02								

Table 8-2 (3).

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
69	BL HOSEIH	Forcible back light level setting (upper)	40	40
6A	JITEISU DOWN	Constant during loop response DOWN side	28	28
6B	JITEISU UP	Constant during loop response UP side	0D	0D
6C	AE KNEE	KNEE setting value for AE	FF	FF
6D	ORETEN SET	Variable point due to time constant error amount	13	13
6E	OMOMIOUT	Outer frame weighting amount	40	40
6F	AFC WIDE	Coefficient required for the ANF integral loop	03	03
70	AFC GAIN	Loop gain of the flickerless loop	01	01
71	AFC LIMIL	Limiter corresponding to the error rate (Lower)	60	60
72	HIST P KEISU	Histocomp level setting P for counter light determination	20	20
73	HIST H KEISU	Histocomp level setting H for counter light determination	E0	E0
74	HIST L KEISU	Histocomp level setting L for counter light determination	90	90
75	GYAKOU JITEISU	Constant during auto back light response	08	08
76	SABUN LIMIT	Limiter for counter light determination	40	40
77	FUZZY RULE1	Correction amount 1 for auto back light	A0	A0
78	FUZZY RULE2	Correction amount 2 for auto back light	D0	D0
79	FUZZY RULE3	Correction amount 3 for auto back light	E0	E0
7A	FUZZY RULE4	Correction amount 4 for auto back light	B0	B0
7B	FUZZY RULE5	Correction amount 5 for auto back light	70	70
7C	FUZZY RULE6	Correction amount 6 for auto back light	90	90
7D	FUZZY RULE7	Correction amount 7 for auto back light	B0	B0
7E	FUZZY RULE8	Correction amount 8 for auto back light	B8	B8
7F	FUZZY RULE9	Correction amount 9 for auto back light	98	98
80	FUZZY RULE10	Correction amount 10 for auto back light	78	78
81	IRIS MIN L	Iris limit value (lower)	42	42
82	IRIS MIN H	Iris limit value (upper)	02	02
83	DELTA SHUT GAIN	Shutter smoothing value setting	04	04
84	AE WAKUH	Frame data for AE detection (vertical line)	0F	0F
85	AE WAKUV	Frame data for AE detection (horizontal line)	4F	4F
86	WIDE LIMIT	ZOOM limiter WIDE (lower)	DE	
87	WIDE LIMITH	ZOOM limiter WIDE (upper)	02	
88	TELE LIMIT	ZOOM limiter TELE (lower)	22	
89	TELE LIMITH	ZOOM limiter TELE (upper)	1D	
8A	STEP ZERO	Flange back value	90	
8B	STEP ZERO SPAN	Flange back value 2	A0	
8C	ZOOM SPD FAST	Zoom speed (fast)	73	73
8D	ZOOM SPD SUPER	Zoom speed (For adjustment)	6A	6A
8E	ZS INIT SLOW	Zoom speed initial value (slow)	6A	6A
8F	ZS INIT FAST	Zoom speed initial value (fast)	6A	6A
90	ZMSPD DAMIN	Zoom speed D/A MIN value	3D	3D
91	ZS K	Zoom servo coefficient K	11	11
92	ZS L	Zoom servo coefficient L	04	04

Table 8-2 (4).

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data																	
			Initial value	Memo column																
93	ZP HYS	Zoom potential hysteresis	03	03																
94	ZOOM SPD SLOW	Zoom speed (slow)	29	29																
95	AF MD2THL	MODE2 THR	20	20																
96	MAXCHG THR	MAX value renewal THR	1A	1A																
97	ERR THRL	Wobbling width THR	18	18																
98	WOB INTV	Wobbling second interval	04	04																
99	ERRPOL THR	MODE2 error possible THR	13	13																
9A	MAXCHK THR	MAX CHECK THR	12	12																
9B	REWOB THR	Wobbling second THR	0A	0A																
9C	MODE2 INOUT	MODE2 speed switchover	8B	8B																
9D	SMLWD THR	Small frame THR	0A	0A																
9E	ZOOM PULSE LIMIT	Maximum zoom pulse value	EE	EE																
9F	ZOOM RIZE	Zoom rise minimum speed time	0A	0A																
A0	FB CURVEPEAKL	Constant for flange back adjustment	F5	F5																
A1	FB CURVEPEAKH	Constant for flange back adjustment	0B	0B																
A2	FB ZOOMSL	Constant for flange back adjustment	02	02																
A3	FB ZOOMSH	Constant for flange back adjustment	07	07																
A4	LIMITREST WIDE	Zoom limiter WIDE side	14	14																
A5	LIMITREST TELE	Zoom limiter TELE side	17	17																
A6	FB PEAKTHR	Constant for flange back adjustment	FF	FF																
A7	FB ZOOM SLOW	Constant for flange back adjustment	1C	1C																
A8	DET IRIS ALT	Iris variation check THR	02	02																
A9	DET AGC ALT	AGC variation check THR	02	02																
AA	LIMIT INSURANCE	Focus limiter insurance value	02	02																
AB	FOCUS MODE	Focus mode <table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>08</td><td>Zoom, Focus fixed</td></tr><tr><td>00</td><td>Normal</td></tr></table>	Data	Adjustment mode	08	Zoom, Focus fixed	00	Normal	00	00										
Data	Adjustment mode																			
08	Zoom, Focus fixed																			
00	Normal																			
AC	LENS ADJ MODE	Flange back adjustment mode <table><tr><th>Data</th><th>Adjustment mode</th></tr><tr><td>00</td><td>Normal</td></tr><tr><td>01</td><td>Flange back adjustment</td></tr></table>	Data	Adjustment mode	00	Normal	01	Flange back adjustment	00	00										
Data	Adjustment mode																			
00	Normal																			
01	Flange back adjustment																			
AD	LENS EMRG	Lens emergency	00	00																
AE	NTSC PAL/H DEF DELAY	DELAY bit=0: NTSC, 1: PAL, bit4-7=CCD correction delay	21	21																
AF	FT SW	DDS display mode switchover <table><tr><th>Data</th><th>DDS display mode</th></tr><tr><td>00</td><td>Y sampling display</td></tr><tr><td>02</td><td>R-Y display</td></tr><tr><td>40</td><td>HALL data display</td></tr><tr><td>82</td><td>R ratio display</td></tr><tr><td>83</td><td>B ratio display</td></tr><tr><td>91</td><td>R, B ratio (M) display</td></tr><tr><td>B0</td><td>Focus step display</td></tr></table>	Data	DDS display mode	00	Y sampling display	02	R-Y display	40	HALL data display	82	R ratio display	83	B ratio display	91	R, B ratio (M) display	B0	Focus step display	00	00
Data	DDS display mode																			
00	Y sampling display																			
02	R-Y display																			
40	HALL data display																			
82	R ratio display																			
83	B ratio display																			
91	R, B ratio (M) display																			
B0	Focus step display																			

Table 8-2 (5).

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
B0	CORE OTHER	CORE MODE DATA 13 byte	10	10
B1	CORE Y GAIN	CORE FIELD DATA 0 byte	3A	3A
B2	E LOW LIGHT START	Low light chroma suppress start point	30	30
B3				
B4	YAKEI LEVEL	YAKEI mode gain setting value	40	40
B5	IRIS ROM TABLE SW	Iris ROM table switchover	00	00
B6	ZOOM DROP 1	F-No. dropping (1) by Zoom lens	60	60
B7	ZOOM DROP 2	F-No. dropping (2) by Zoom lens	75	75
B8				
B9				
BA	AWB IN B HYS	Hysteresis of AWB indoor BLUE	04	04
BB	AWB IN R HYS	Hysteresis of AWB indoor RED	02	02
BC	AWB KAKE NORM R	ADD: 35 NORM R × 1000H	20	20
BD	AWB KAKE NORM B	ADD: 36 NORM B × 1000H	20	20
BE	MF STEP CHNGE	Coefficient of MODE 2 THR	46	46
BF	MD2 LOWCON SPD	Speed for Low-contrast at MODE 2	07	07
C0	MAX CHECK NG CNT	MAX CHECK NG count	14	14
C1	AF CONTROL FLAG		0E	0E
C2	AE Y THR	Low light AE fluctuation THR 1	28	28
C3	AE Y MIN	Low light AE fluctuation THR 2	20	20
C4	MD2 SPD	Focus speed at MODE 2	61	61
C5	AE CHECK	Re-start up AE THR	10	10
C6	LOW CON THR	THR 1 for judging Low-contrast at MODE 2	10	10
C7	LOW CON THR2	THR 2 for judging Low-contrast at MODE 2	20	20
C8-EF		Not used		
F0		Input column of the unit ID No., etc. Not related to unit operations.	FF	
F1			FF	
F2			FF	
F3			FF	
F4			FF	
F5			FF	
F6			FF	
F7			FF	
F8			FF	
F9			FF	
FA			FF	
FB			FF	
FC			FF	
FD			FF	
FE			FF	
FF			FF	

Table 8-2 (6).

8-1-6. 6 Page, 1 Page Address List

The camera adjustment mode can be set by performing the following data settings at page: 6 or page: 1. (These page data can be set temporary, but when the main power (6.3V) is turned off, the original value (normal value) will be returned.

Therefore, these adjustment modes can be released very simply by turning the main power off.)

(Example) The camera adjustment mode (1) is set by setting data: 01 to page: 6, address: 00. The F page write protect will also be released.

1. Page 6

Address	Adjustment Mode	Data	Function
00	Camera adjustment mode	01 10 11	Camera adjustment mode (1), F page write protect released Normal Camera adjustment mode (2), F page write protect released
01	Camera adjustment switch Note: To set this address adjustment mode, it is necessary to press the PAUSE button of the adjusting remote control unit after setting the data.	00 01 03 05 07 09 0B 0D 0F 11 13 15 17 1D	Normal IRIS OPEN, AGC HOLD IRIS CLOSE1, AGC HOLD IRIS CLOSE2, AGC MIN IRIS CLOSE3, AGC MAX ND0.5 SHUTTER (PAL=1/160, NTSC=1/190) ND0.8 SHUTTER (PAL=1/320, NTSC=1/380) AWB PRESET1: 3200K PRESET DATA take in WB 3200K PRESET: Indoor white balance mode AWB PRESET2: Preparation of 3200K PRESET DATA take in ZOOM HUNTING1 ZOOM SPDSLOW ZOOM HUNTING2 ZOOM SPDFAST AE FB adjustment mode (IRIS: OPEN, AGC: REF, SHUTTER: 1/100 (NTSC), 1/120 (PAL)) EEPROM PRE WRITE: Page F initial data write
05	Shutter mode	00 19	NTSC=1/60, PAL=1/50 1/2000
06	FOCUS limiter ON/OFF	00 01	FOCUS limiter ON (Normal) FOCUS limiter OFF
07	ZOOM limiter ON/OFF	00 01	ZOOM limiter ON (Normal) ZOOM limiter OFF
08	ZOOM speed SLOW/FAST	00 01 02 03	Normal ZOOM speed SLOW ZOOM speed FAST ZOOM speed SUPER SLOW
09 ★	COMPLETED FLAG	00 01	Camera Adjustment not completed Camera adjustment completed
11 ★	ROM VERSION	03	Camera micro processor ver3
0C ★	LENS INITIAL END	00 01	During the initial operation of the lens Lens initial operation completed

Addresses with ★ are exclusively for reading.

Table 8-3.

2. Page 1

Address	Adjustment Mode	Data	Function
E6	VH address L		Title horizontal/vertical position (L)
E7	VH address H		Title horizontal/vertical position (H)

Table 8-4.

8-1-7. Adjustment Connector

Most of the measuring points for the camera section adjustment are concentrated on CN701 of the VC-133 board. Connect the oscilloscope and etc. via the measuring pin (J-6082-139-A). The following table lists the terminal numbers and the signal names of CN701.

Terminal Number	Signal Name	Terminal Number	Signal Name
1	DSV	2	NC
3	NC	4	CAM SI
5	NC	6	CAM SO
7	CS OPD	8	CAM SCK
9	CS CORE	10	GND
11	IRIS OUT	12	NC
13	V SUB CHK	14	CAM C
15	PG CONT	16	GND
17	NC	18	CAM Y

Table 8-5.

8-1-8. Data Processing

The calculation of the DDS display and the adjusting remote control unit display data (hexadecimal notation) are required for obtaining the adjustment data of some adjustment items. In this case, after converting the hexadecimal notation to decimal notation, calculate and convert the result to hexadecimal notation, and use it as the adjustment data. Table 8-6. indicates the hexadecimal notation-the decimal notation calculation table.

Hexadecimal notation-Decimal notation

The lower digits of the hexadecimal notation The upper digits of the hexadecimal notation																
	0	1	2	3	4	5	6	7	8	9	A (<i>A</i>)	B (<i>b</i>)	C (<i>c</i>)	D (<i>d</i>)	E (<i>E</i>)	F (<i>F</i>)
0	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15
1	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31
2	32	33	34	35	36	37	38	39	40	41	42	43	44	45	46	47
3	48	49	50	51	52	53	54	55	56	57	58	59	60	61	62	63
4	64	65	66	67	68	69	70	71	72	73	74	75	76	77	78	79
5	80	81	82	83	84	85	86	87	88	89	90	91	92	93	94	95
6	96	97	98	99	100	101	102	103	104	105	106	107	108	109	110	111
7	112	113	114	115	116	117	118	119	120	121	122	123	124	125	126	127
8	128	129	130	131	132	133	134	135	136	137	138	139	140	141	142	143
9	144	145	146	147	148	149	150	151	152	153	154	155	156	157	158	159
A (<i>A</i>)	160	161	162	163	164	165	166	167	168	169	170	171	172	173	174	175
B (<i>b</i>)	176	177	178	179	180	181	182	183	184	185	186	187	188	189	190	191
C (<i>c</i>)	192	193	194	195	196	197	198	199	200	201	202	203	204	205	206	207
D (<i>d</i>)	208	209	210	211	212	213	214	215	216	217	218	219	220	221	222	223
E (<i>E</i>)	224	225	226	227	228	229	230	231	232	233	234	235	236	237	238	239
F (<i>F</i>)	240	241	242	243	244	245	246	247	248	249	250	251	252	253	254	255

① → B (*b*) ② → D (*d*)

Note: () indicate the adjusting remote control unit display.

(Example) In the case that the DDS display and the adjusting remote control unit display are BD (*b d*).
As the upper digit of the hexadecimal notation is B (*b*), and the lower digit is D (*d*), the intersection "189" of the ① and ② in the above table is the decimal notation to be calculated.

Table 8-6.

8-2. CAMERA SYSTEM ADJUSTMENT

1. Power Supply Voltage Check (DD-56 board)

Subject	Option
Measuring instrument	Digital voltmeter
D5V check	
Measurement point	Pins ⑤ and ⑧ of CN901
Specified value	4.92 ± 0.15 Vdc
D4V check	
Measurement point	Pin ④ of CN901
Specified value	3.98 ± 0.15 Vdc
CAM 5V check	
Measurement point	Pins ⑦ and ⑩ of CN901
Specified value	$4.86 \begin{smallmatrix} +0.15 \\ -0.11 \end{smallmatrix}$ Vdc
CAM 15V check	
Measurement point	Pin ⑫ of CN901
Specified value	15.05 ± 0.4 Vdc
CAM -9V check	
Measurement point	Pin ⑨ of CN901
Specified value	-8.5 ± 0.4 Vdc

Checking method:

- 1) Check that each power supply voltage satisfies the specified value.

2. Page F Data Initialization

Note: It is necessary to perform all adjustments of the camera section from the beginning again if the data of page F has been initialized.

Initializing method:

- 1) Check that the data of page: 6, address: 09 is 00.
(Display indicating that page F data can be initialized)
- 2) Check that the data of page: 6, address: 01 is 00.
- 3) Set data: 1D to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Page F data initialization execution.
The data of all addresses of page F will be initialized.)
- 4) Check that the data of page: 6, address: 09 is 01.
(Displays that the initialization of page F data has been completed)
- 5) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Releases the page F data initialization mode)
- 6) After performing "Page F data modification", perform all the adjustments of the camera section (page F).

3. Page F Data Modification

The data (initial data) that is automatically written on page F after the initialization of the page F data will differ according to some camera micro processor versions. Change the data by manual input, and arrange it.

Note: When changing the data, to write the data to the non-volatile memory, press the PAUSE button of the adjusting remote control unit every time the new data is set.

Address	Data
00 (ID)	3E
0A (LOW LIGHT CS)	C0
11 (CORE EFFECT)	A0
12 (CORE MAT R)	24
14 (CORE BURST LEVEL)	38
15 (CORE CHROMA DLY)	02
17 (CORE VHAPCN)	17
5C (AWB DELAY TM)	0C
68 (AE FUNCTION)	02
6A (JITEISU DOWN)	28
6B (JITEISU UP)	0D
8C (ZOOM SPD FAST)	73
8D (ZOOM SPD SUPER)	6A
8E (ZS INIT SLOW)	6A
8F (ZS INIT FAST)	6A
94 (ZOOM SPD SLOW)	29
9E (ZOOM PULSE UNIT)	EE
A2 (FB ZOOM SL)	02
A3 (FB ZOOM SH)	07
AE (NTSC PAL/H DEF DELAY)	21
B0 (CORE OTHER)	10
B1 (CORE Y GAIN)	3A
B2 (E LOW LIGHT START)	30
C0 (MAX CHK NGCNT)	14

[Distinguishing the Camera Micro Computer (IC709) Versions]

Each version can be distinguished by looking at the part name of the camera micro processor or the data of page: 6, address: 11.

Version	Part Name	Page: 6 Address: 11
Ver.3	CXP80624-434R	03

4. 28 MHz Original Oscillation Adjustment (VC-133 board)

Subject	Not required
Measurement Point	Pin ⑰ of IC706 (14 MHz)
Measuring Instrument	Frequency counter
Adjusting Element	CT801
Specified Value	14187500 $\pm$ 71 Hz

Adjusting method:

- 1) Use CT801 to adjust the oscillation frequency to 14187500 $\pm$ 71 Hz.

5. V SUB Adjustment (VC-133 board)

Subject	Not required
Measurement Point	Pin ⑬ of CN701 (V SUB CHK)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	04 (V SUB)
Specified Value	(Imager display voltage) $\pm$ 0.1 Vdc

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Change the data of page: F, address: 04, and adjust the voltage of pin ⑬ of CN701 to (imager display voltage) $\pm$ 0.1 Vdc.
- 3) Press the PAUSE button of the adjusting remote control unit.

6. VRG Adjustment (VC-133 board)

Subject	Not required
Measurement Point	Pin ⑮ of CN701 (PG CONT)
Measuring Instrument	Digital voltmeter
Adjustment Page	F
Adjustment Address	05 (VRG)
Specified Value	(Imager display voltage) $\pm$ 0.1 Vdc

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Change the data of page: F, address: 05, and adjust the voltage of pin ⑮ of CN701 to (imager display voltage) $\pm$ 0.1 Vdc.
- 3) Press the PAUSE button of the adjusting remote control unit.

7. CCD Imager Correction Data Write

Subject	Not required
Adjustment Page	F
Adjustment	1D to 2C (CCD-DEFECT)

Perform CCD imager correction data write in the following cases.

1. When the CCD imager has been replaced
2. The occasion of exchanging a camera micro processor or EEPROM (IC712).
3. When the page F data has been initialized

In the case of 1, as the correction data is not required for the CCD imager for repair, adjust all data of addresses 1D to 2C to "00".

In the case of 2 and 3, write the correction data attached to the shield case of VC-133 board to addresses 1D to 2C.

If the correction data are not attached, adjust all data of addresses 1D to 2C to "00".

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Write the correction data to page: F, addresses: 1D to 2C.
Note: To perform write to the non-volatile memory, press the PAUSE button of the adjusting remote control unit before changing addresses.

Processing after completing adjustments

- 1) If the CCD imager has been replaced, remove the old correction data label attached on the shield case (UPPER) of VC-133 board.

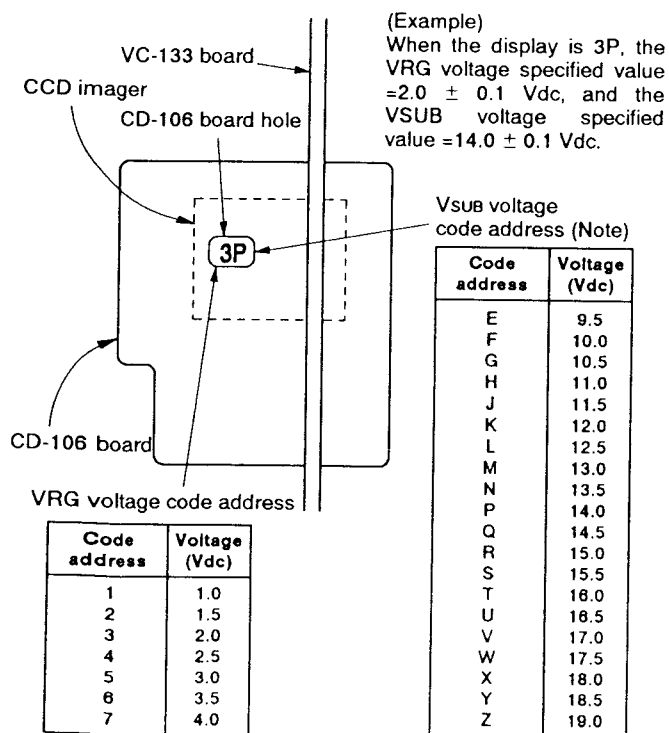


Fig. 8-7.

Note: This VSUB voltage code address can not be used for other models.

8. HALL Adjustment

Subject	Not required
Measurement Point	DDS display of EVF or monitor TV
Measuring Instrument	
Adjustment Page	F
Adjustment Address	08 (HALL GAIN) 09 (HALL OFFSET)
Specified Value	31 to 35 during IRIS OPEN B1 to B5 during IRIS CLOSE

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Set data: 40 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(HALL output display mode setting)
- 3) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)
- 4) Set data: 40 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
- 5) Read the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or the monitor TV display), and set to W₂.
- 6) Set data: 30 to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
- 7) Read the DDS display data, and set to W₁.
- 8) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS OPEN mode setting)
- 9) Read the DDS display data, and set to K₁.
- 10) Set data: 40 to page: F, address: 08, and press the PAUSE button.
- 11) Read the DDS display data, and set to K₂.
- 12) Convert W₁, W₂, K₁, K₂ to decimal notation, and obtain W₁', W₂', K₁', K₂'. (Refer to Table 8-6. "Hexadecimal notation-decimal notation conversion table".)
- 13) Calculate X₁' using the following equations (decimal notation calculation).

$$A' = W_2' + K_1' - W_1' - K_2' \dots \dots \dots \text{Equation 1}$$

$$B' = W_1' - K_1' \dots \dots \dots \text{Equation 2}$$

$$X_1' = \frac{2048 + (48 \times A') - (16 \times B')}{A'} \dots \dots \dots \text{Equation 3}$$
- 14) Convert X₁' to hexadecimal notation, and obtain X₁.
(Round off to one decimal place)
- 15) Set data: X₁ to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
- 16) Change the data of page: F, address: 09, and adjust the DDS display data to "33".
- 17) Press the PAUSE button of the adjusting remote control unit.
- 18) Set data: 03 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)

- 19) Read the DDS display data, and set to W₀. If W₀ lies within the "B1" to "B5" range, perform "Processing after completing adjustments". If it lies outside the range, perform the following adjustments.
- 20) Convert W₀ to hexadecimal notation, and obtain W₀'.
- 21) Calculate X₂' using the following equations (decimal notation calculation).

$$C' = W_0' - B' - 51 \dots \dots \dots \text{Equation 4}$$

$$X_2' = \frac{(128 - B') \times (X_1' - 48) + 48 \times C'}{C'} \dots \dots \dots \text{Equation 5}$$

(X₁' and B' are values obtained from equations 2 and 3)
- 22) Convert X₂' to hexadecimal notation and obtain X₂.
(Round off to one decimal place)
- 23) Set data X₂ to page: F, address: 08, and press the PAUSE button of the adjusting remote control unit.
- 24) Change the data of page: F, address: 09, and adjust the DDS display data to "B3".
- 25) Press the PAUSE button of the adjusting remote control unit.
- 26) Set data: 01 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS OPEN mode setting)
- 27) Check that the DDS display data lies within the "31" to "35" range.

Processing after Completing Adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS NORMAL mode setting)

9. Flange Back Adjustment

Subject	Chart for flange back adjustment (1998 ± 5mm from the front side of the lens Luminance: 300 ± 50 lux)
Measurement Point	Check the operations on the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	86 (WIDE LIMIT), 87 (WIDE LIMIT H), 88 (TELE LIMIT), 89 (TELE LIMIT H), 8A (STEP ZERO), 8B (STEP ZERO SPAN)

Adjusting method:

- 1) Turn the auto focus off.
- 2) Adjust the focus using the focus knob.
- 3) Check that the flange back adjustment chart center and the exposure display center coincide at both zoom lens TELE end and WIDE end.
- 4) Release the protect.
Page: 6, address: 00, data: 01
- 5) Check that the data of page: 6, address: 09 is 00.
(Flange back adjustment possible display)
- 6) Check that the page: F, address: 86 to 8B data is at the initial value. (Refer to Table 8-2. "Page F address list")
- 7) Set data: 01 to page: F, address: AC.
(This causes automatic adjustment to be performed.)
Adjustments are performed at the zoom lens TELE end first, and then at the WIDE end. The adjustment data is automatically input to page: F, addresses: 86 to 8B.
- 8) Check that the data of page: 6, address: 09 is 01.
(Display indicating flange back adjustment completion)

Processing after completing adjustments

- 1) Set data: 00 to page: F, address: AC.
- 2) Turn off the main power supply (6.3V).

10. Flange Back Check

Subject	Siemens star (2m (or 1.4m) from the front of the lens)
Measurement Point	DDS display of EVF or TV monitor
Measuring Instrument	
Specified Value	$D_2 = D_1 \pm 5$

Checking method:

- 1) Set data: 01 to page: 6, address: 00. (Camera adjustment mode)
- 2) Set data: B0 to page: F, address: AF. (Focus step display mode)
- 3) Place the Siemens star 2m (or 1.4m) from the front of the lens.
- 4) To open the IRIS, decrease the luminous intensity to the Siemens star up to a point before noise appears on the image displayed on the monitor TV screen.
- 5) Turn off the auto-focus.
- 6) Shoot the Siemens star with the zoom TELE end.
- 7) Rotate the focus ring, and adjust the focus.
- 8) Adjust to the zoom WIDE end.
- 9) Read the focus step value (4 digits) displayed on the TV monitor, and take the value as D_1 .
- 10) Rotate the focus ring, and adjust the focus.
Read the focus step value here, and take the value as D_2 .
- 11) Check that $D_2 = D_1 \pm 5$.

Process after checking

- 1) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.

11. SYNC Level Adjustment (VC-133 board)

Subject	Not required
Measurement Point	Pin ⑱ of CN701 (CAM Y)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	06 (VREF-Y)
Specified Value	$A=150 \pm 5 \text{ mV}$

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)
- 3) Change the data of page: F, address: 06, and adjust so that the SYNC level (A) becomes the specified value.
- 4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Release of IRIS CLOSE mode)

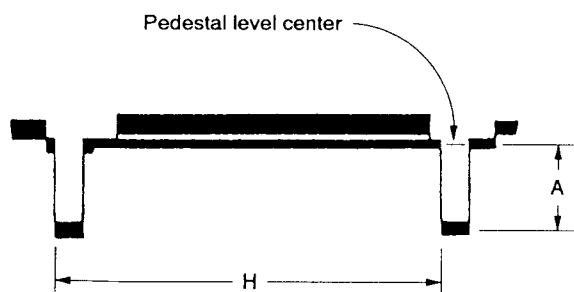


Fig. 8-8.

12. BURST Level Adjustment (VC-133 board)

Subject	Not required
Measurement Point	Pin ⑲ of CN701 (CAM C)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	07 (VREF-C)
Specified Value	$A=150 \pm 5 \text{ mVp-p}$

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE mode setting)
- 3) Change the data of page: F, address: 07, and adjust so that the burst level (A) becomes the specified value.
- 4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Release of IRIS CLOSE mode)

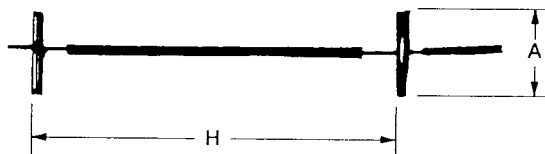


Fig. 8-9.

13. A/D Offset Adjustment

Subject	Not required
Measurement Point	DDS display on the EVF or the TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	0C (AD REF)
Specified Value	46 to 47

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Set data: 05 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE AGC MIN mode setting)
- 3) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(Y sampling output mode setting)
- 4) Set data: 35 to page: 1, address: E6.
(Setting 1 of the sampling position)
- 5) Set data: 6D to page: 1, address: E7.
(Setting 2 of the sampling position)
- 6) Change the data of page: F, address: 0C, and adjust the average value of the DDS display (the bottom two digits of the display data at the bottom right of the EVF or the TV monitor display) to 46 to 47.
(Set the data of address 0C to the maximum value)
(satisfying the specification.)
- 7) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Turn the main power supply (6.3V) off.

14. Carrier Balance Adjustment

Subject	Not required
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	03 (CS SL)
Specified Value	The center of the black luminance point should lie within the 1 ϕ circle whose center is the principle point.

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01.
- 2) Set data: 07 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS CLOSE, AGC MAX mode setting)
- 3) Change the data of page: F, address: 03, and adjust so that the center of the black luminance point coincides with the principle point.
- 4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(IRIS NORMAL mode setting)

The center of the black luminance point should be within this circle

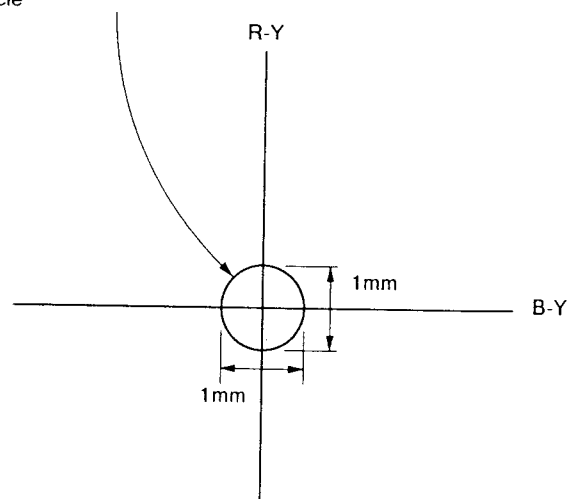


Fig. 8-10.

15. Picture Frame Setting


Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Oscilloscope and TV monitor.
Specified Value	$A=B, C=D, t=0 \pm 0.1 \text{ msec}$

Setting method:

- 1) Turn the auto focus off.
- 2) Adjust the focus using the focus knob.
- 3) Adjust the zoom and the camera direction, and set to the specified position.
- 4) Mark the position of the picture frame on the monitor display, and adjust the picture frame to this position in following adjustments using "color bar chart standard picture frame" and "white pattern standard picture frame".

Check on the oscilloscope

1. horizontal period

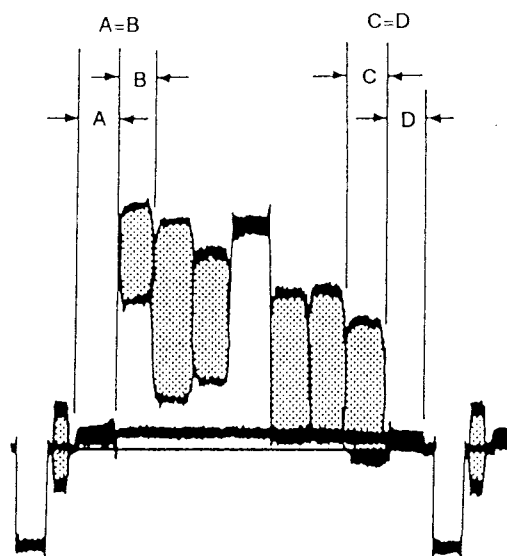

2. Vertical period

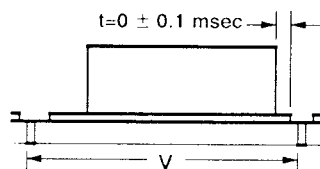


Fig. 8-11.

Check on the TV monitor

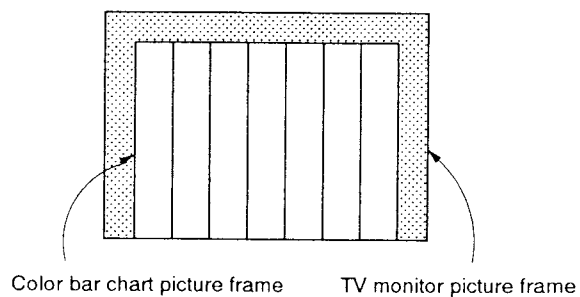


Fig. 8-12.

16. IRIS Level Adjustment (VC-133 board)

Subject	Color bar standard picture frame
Measurement Point	Pin ⑩ of CN701 (IRIS OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	63 (AGC MIN)
Specified Value	$A=200 \pm 5 \text{ mV}$

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Change the data of page: F, address: 63, and adjust so that the IRIS OUT signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

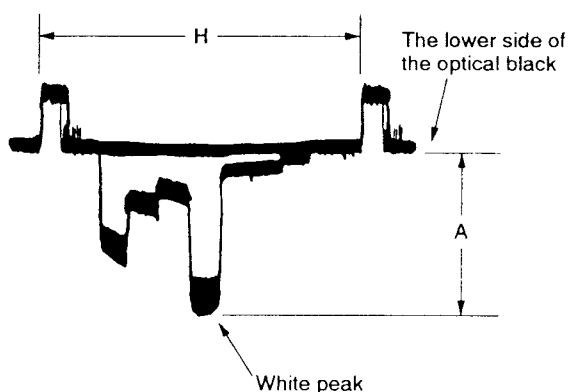


Fig. 8-13.

17. MAX GAIN Adjustment (VC-133 board)

Subject	Color bar standard picture frame
Filter	ND filter 1.0 (2 sheets) and 0.4 (1 sheet), 0.1 (1 sheet)
Measurement Point	Pin ⑩ of CN701 (CAM Y)
Measuring Instrument	Oscilloscope
Adjustment Page	F
Adjustment Address	64 (AE MIN L)
Specified Value	$A=200 \pm 5 \text{ mV}$

Adjusting method:

- 1) Place the ND filter 2.5 (1.0+1.0+0.4+0.1) on the lens.
- 2) Release the protect.
Page: 6, address: 00, data: 01
- 2) Change the data of page: F, address: 64, and adjust so that the CAM Y signal level (A) becomes the specified value.
- 4) Press the PAUSE button of the adjusting remote control unit.

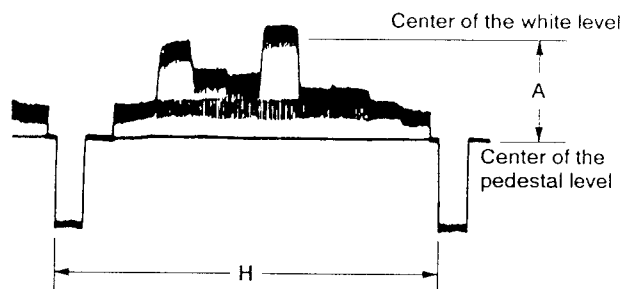


Fig. 8-14.

18. IRIS IN/OUT Adjustment

Subject	White pattern standard picture frame
Measurement Point	DDS display of the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	39 (AWB IRIS IN) 3A (AWB IRIS OUT)

Adjusting method:

- 1) Set data: 11 to page: 6, address: 00.
(Camera adjustment mode 2 setting)
- 2) Set data: 40 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(HALL data display)
- 3) Set data: 0B to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(ND0.8 shutter mode setting)
- 4) Read the DDS display data (the bottom two digits of the display data at the bottom right of the EVF or the TV monitor), and set to D39.
- 5) Set data: D39 to page: F, address: 39, and press the PAUSE button of the adjusting remote control unit.
- 6) Set data: 09 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(ND0.5 shutter mode setting)
- 7) Read the DDS display data and set to D3A.
- 8) Set data: D3A to page: F, address: 3A, and press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Release of the ND0.5 shutter mode)

19. Pre-white Balance Adjustment

Subject	White pattern standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	33 (R CONT REF), 34 (B CONT REF)
Specified Value	The center of the white luminance point should lie within the circle with a diameter of 1mm and whose center is the principle point

Adjusting method:

- 1) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(WB 3200K preset mode setting)
- 2) Set data: 11 to page: 6, address: 00.
(Camera adjustment mode 2 setting)
- 3) Change the data of addresses: 33 and 34 of page: F alternately, and coincide the white luminance point to the principle point.
Note: Be sure to press the PAUSE button of the adjusting remote control unit before changing the addresses.
If not, the new data will not be written to the memory.
- 4) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Release of the preset mode)
- 2) Set data: 10 to page: 6, address: 00.
(Protect mode setting)

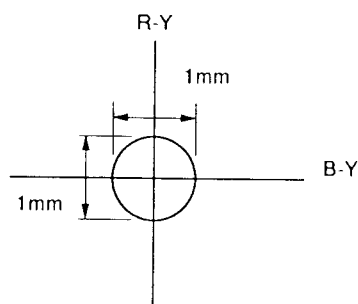


Fig. 8-15.

20. Color Reproduction Adjustment

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Adjustment Page	F
Adjustment Address	18 (CORE B-Y GAIN), 19 (CORE R-Y GAIN), 1A (CORE R-Y HUE), 1B (CORE B-Y HUE)
Specified Value	All color luminance points should settle within each color reproduction frame.

Adjusting method:

- 1) Release the protect.
Page: 6, address: 00, data: 01
- 2) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Indoor white balance mode setting)
- 3) Adjust the GAIN and PHASE of the vectorscope, and adjust the burst luminance point to the burst position of the color reproduction frame.
- 4) Change the data of addresses 18 to 1B of page: F, and settle each color luminance point in each color reproduction frame.
Note: Be sure to press the PAUSE button of the adjusting remote control unit before changing the addresses.
If not, the new data will not be written to the memory.
- 5) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01 and press the PAUSE button of the adjustment remote control unit.
(Release of the adjustment mode)
- 2) Set data: 10 to page: 6, address: 00.
(Protect mode setting)

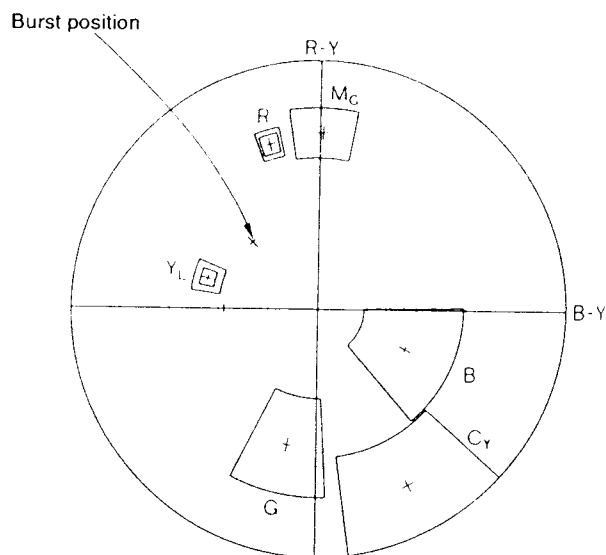


Fig. 8-16.

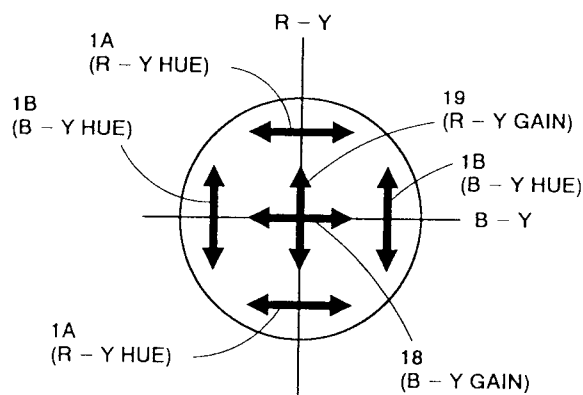


Fig. 8-17. Direction of the Movements of the Adjustment Address and Luminance Point

21. Auto White Balance Preset Adjustment

Subject	White pattern standard picture frame
Adjustment Page	F
Adjustment Address	2D (R REF L), 2E (R REF H), 2F (G REF L), 30 (G REF H), 31 (B REF L), 32 (B REF H)

Adjusting method:

- 1) Turn the power of the unit OFF/ON.
- 2) Check that the data of page: 6, address: 09 is 00.
(Auto white balance preset adjustment possible display)
- 3) Set data: 11 to page: 6, address: 00, and wait at least 2 seconds.
(Camera adjustment mode 2 setting)
- 5) Set data: 11 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(3200K preset data take in preparation mode)
- 6) Set data: 0D to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(When the 3200K preset data is taken in, the data will be automatically input to addresses 2D to 32 of page F.)
- 7) Check that the data of page: 6, address: 09 is 01.
(Auto white balance preset adjustment completion display)

Processing after completing adjustments

- 1) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Release of the auto white balance preset mode)
- 2) Set data: 10 to page: 6, address: 00.
(Release of camera adjustment mode 2)

22. Auto White Balance Adjustment

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	Check with the DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	35 (AWB NORM R) 36 (AWB NORM B)
Specified Value	R ratio 2980 ± 40 B ratio $5D80 \pm 40$

Note: Check that "Auto White Balance Preset Adjustment" have been completed.

Adjusting method:

- 1) Place the C14 filter for color temperature correction on the lens.
- 2) Set data: 11 to page: 6, address: 00.
(Camera adjustment mode 2 setting)
- 3) Set data: D0 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
(Auto white balance adjustment mode setting)
- 4) Set data: 82 to page: F, address: AF.
(R ratio display mode setting)
- 5) Change the data of page: F, address: 35, and adjust the average value of the DDS display data (the display data at the bottom right of the EVF or the TV monitor) to 2980 ± 40 .
- 6) Press the PAUSE button of the adjusting remote control unit.
- 7) Set data: 83 to page: F, address: AF.
(B ratio display mode setting)
- 8) Change the data of page: F, address: 36, and adjust the average value of the DDS display data to $5D80 \pm 40$.
- 9) Press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
(Release of the white balance adjustment mode)
- 2) Set data: 10 to page: 6, address: 00.
(Release of camera adjustment mode 2)

23. White Balance Check

Subject	White pattern standard picture frame
Filter	Filter C14 for color temperature correction ND filter 1.0 and 0.3
Measurement Point	Video output terminal
Measuring Instrument	Vectorscope
Specified Value	Fig. 8-18. A to C

Checking method:

- 1) Check that the lens is not covered with either filter.
- 2) Set data: 11 to page: 6, address: 00.
(Camera adjustment mode 2 setting)
- 3) Set data: 0F to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Indoor white balance mode setting)
- 4) Check that the center of the white luminance point is within the circle shown in Fig. 8-18.A.
(Indoor white balance check)
- 5) Set data: 00 to page: 6, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Auto white balance mode setting)
- 6) Set data: 01 to page: F, address: 5C, and press the PAUSE button of the adjusting remote control unit.
(Auto white balance high speed tracking mode setting)
- 7) Set data: 91 to page: F, address: AF (R, B ratio (M) display mode setting), and check that the top 2 digits and bottom 2 digits of the DDS display are 3D to 43. Or check that the center of the white luminance point is within the circle shown in Fig. 8-18. A.
- 8) Place the C14 filter on the lens.
- 9) Check that the center of the white luminance point settles in the circle shown in Fig. 8-18. B.
(Auto white balance outdoor mode check)
- 10) Remove the C14 filter, and place the ND filter 1.3 (1.0+0.3) on the lens.
- 11) Check that the center of the white luminance point settles in the circle shown in Fig. 8-18. C.
(Auto white balance outdoor mode check)

Processing after completing adjustments

- 1) Set data: 0C to page: F, address: 5C, and press the PAUSE button of the adjusting remote control unit.
(Release of the auto white balance fast tracking mode)
- 2) Set data: 10 to page: 6, address: 00.
(Release of camera adjustment mode 2)
- 3) Set data: 00 to page: 6, address: 01, and press the PAUSE button.

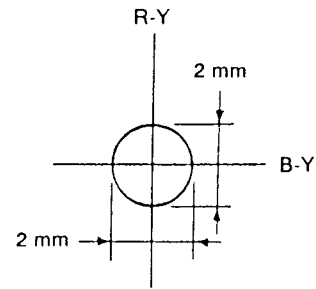


Fig. 8-18. A

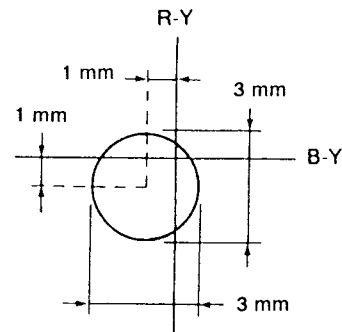


Fig. 8-18. B

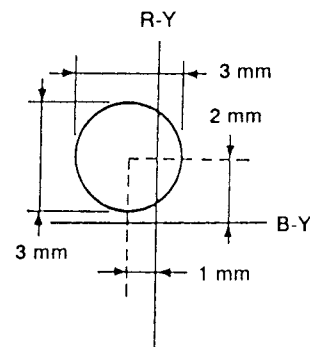


Fig. 8-18. C

24. Linear Matrix Adjustment

Subject	Color bar standard picture frame
Filter	Filter C14 for color temperature correction
Measurement Point	DDS display on the EVF or TV monitor
Measuring Instrument	
Adjustment Page	F
Adjustment Address	3D (DMAT HUE) 3E (DMAT GAIN)

Note 1: Check that position that was set in the color bar chart picture frame "15. Picture Frame Setting" is maintained, before beginning adjustments.

Adjusting method:

- 1) Remove the filter C14 for color temperature correction.
- 2) Release the protect.
Page: 6, address: 00, data: 01
- 3) Color bar data sampling mode setting
 1. Set data: F1 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
 2. Set data: 2E to page: F, address: 14, and press the PAUSE button of the adjusting remote control unit.
(Check that the colors on the monitor display at the color modulation stop mode have disappeared)
- 4) Specifying the Yellow position
 1. Set data: C9 to page: 1, address: E6.
 2. Set data: B6 to page: 1, address: E7.
- 5) Set data: 02 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(R-Y data display mode setting)
- 6) Read the average value of the DDS display data (Note 2), and set to Y1.
- 7) Specifying the Red position
 1. Set data: 59 to page: 1, address: E6.
 2. Set data: 6D to page: 1, address: E7.
- 8) Select page: F and read the average value of the DDS display data (Note 2), and set to R1.
- 9) Place the filter C14 for color temperature correction on the lens. (Ensure that the picture frame of the chart does not shift at this time.)
- 10) Specifying the yellow position.
 1. Set data: C9 to page: 1, address: E6.
 2. Set data: B6 to page: 1, address: E7.
- 11) Select page: F and read the average value of the DDS display data (Note 2), and set to Y2.
- 12) Specifying the Red position
 1. Set data: 59 to page: 1, address: E6.
 2. Set data: 6D to page: 1, address: E7.
- 13) Select page: F and read the average value of the DDS display data (Note 2), and set to R2.

- 14) Convert Y1, R1, Y2, R2 to decimal notation to obtain Y1', R1', Y2' and R2'.
(Refer to Table 8-6. "Hexadecimal notation-decimal notation conversion table")

- 15) Calculate X1' from the following equation (decimal notation calculation).
 $X1' = Y2' - Y1'$

- 16) Calculate D3D from the following table
(D3D is hexadecimal notation)

X1' value	D3D
$-1 \leq X1' \leq 1$	F0
$X1' > 1$	F1
$X1' < -1$	FF

- 17) Set data: D3D to page: F, address: 3D, and press the PAUSE button of the adjusting remote control unit.

- 18) Calculate X2' from the following equation (decimal notation calculation).
 $X2' = R2' - R1'$

- 19) Calculate D3E from the following table.

X2' value	D3E
$X2' \geq 0$	00
$0 > X2' \geq -1$	01
$-1 > X2'$	02

- 20) Set data: D3E to page: F, address: 3E, and press the PAUSE button of the adjusting remote control unit.

Processing after completing adjustments

- 1) Set data: 00 to page: F, address: 60, and press the PAUSE button of the adjusting remote control unit.
(Release of the sampling mode)
- 2) Set data: 38 to page: F, address: 14, and press the PAUSE button of the adjusting remote control unit.
(Color modulation ON mode setting)
- 3) Set data: 00 to page: F, address: AF, and press the PAUSE button of the adjusting remote control unit.
(Release of the R-Y data display mode)
- 4) Turn the main power supply (6.3V) off.

Note 2: As the R-Y data and B-Y data are displayed alternatively, it will be difficult to read the R-Y data. Record this data on a tape, and perform frame advancing playback so that only the R-Y data is read.
(Example)

If the frame advancing playback is performed, the following will be displayed.

81 → 7A → 82 → 7A → 80 → 7A → 81 → 7C → 81 → 79
As the R-Y data is above 80, and the B-Y data is below 7F, the data which is underlined is the R-Y data. If the average value is calculated, the R-Y data will become 81.

25. VIDEO OUT Level Check

Subject	Color bar chart standard picture frame
Measurement Point	Video output terminal (Terminated at 75 Ω)
Measuring Instrument	Oscilloscope
Specified Value	Y level= 680 ± 40 mV SYNC level= 300 ± 20 mV BURST level= 300 ± 30 mVp-p

Checking method:

- 1) Check that the Y level, SYNC level and BURST level satisfy the specified values.

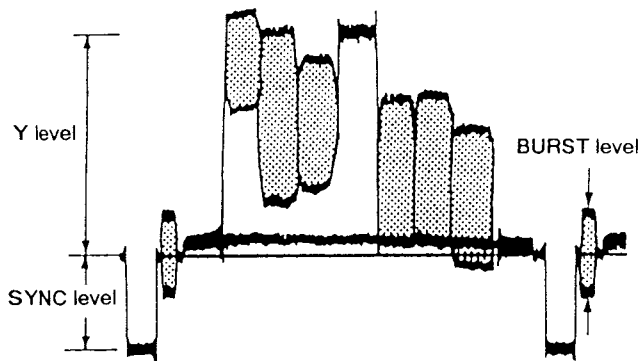


Fig. 8-19.


8-3. ELECTRONIC VIEWFINDER SYSTEM ADJUSTMENTS

8-3-1. Horizontal Slant Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WRS-5CSP) Monoscope section
Specified Value	Refer to Fig. 8-21.

Adjusting method:

- 1) Adjust RV504 (BRIGHT) so that the CRT can be seen easily and clearly.
- 2) Loosen the DY (deflection yoke) tightening nut.
- 3) Rotate DY, and adjust the image so that it is horizontal.
- 4) Tighten the DY tightening nut.
(Do not tighten it too tightly.)

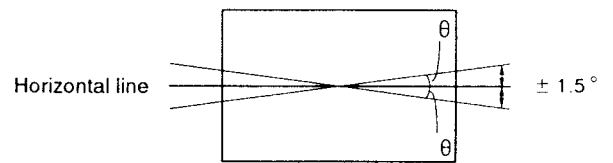

Specified value: The image should be within $\pm 1.5^\circ$ of the horizontal line.

Fig. 8-21.

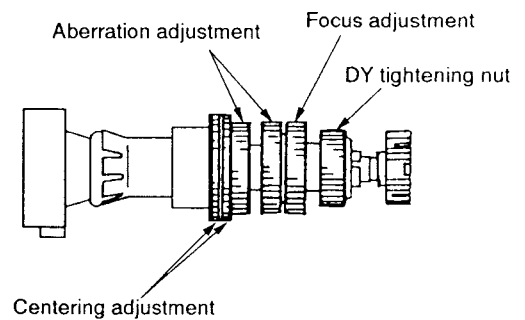


Fig. 8-22.

8-3-2. Centering Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Specified Value	Refer to Fig. 8-23.

Adjusting method:

- 1) Use the centering adjustment ring and adjust so that the left, right, top, and bottom sides of the display are uniform. (Refer to Fig. 8-22.)

Note: As the centering position changes due to earth magnetism, rotate it 360 ° in the horizontal direction, and adjust with the center section of the modifying position.

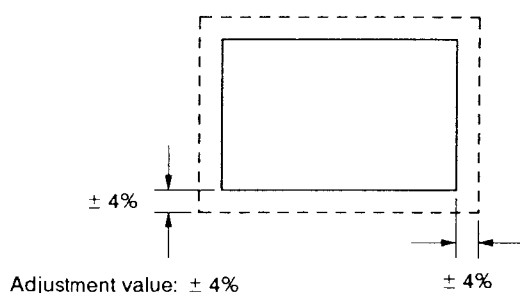


Fig. 8-23.

8-3-3. Focus Adjustment

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section

Adjusting method:

- 1) Adjust the focus ring to obtain the optimum focus. (Refer to Fig. 8-22.)

8-3-4. Aberration Adjustment

Model	E-E
Signal	Dot pattern
Specified Value	Refer to Fig. 8-24.

Adjusting method:

- 1) Adjust the aberration adjustment ring so that the tracing of the dot becomes less than twice the diameter of the dot, or the fan aberration becomes less than the diameter of the dot.
- 2) If the centering becomes displaced here, perform the centering adjustment from the beginning again.

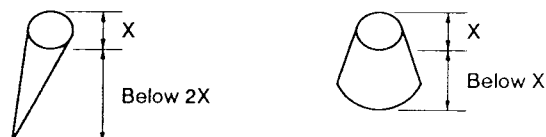


Fig. 8-24.

8-3-5. Horizontal Oscillation Frequency Adjustment (VF-42 board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP)
Measurement Point	Positive pole terminal of C516
Measuring Instrument	Digital voltmeter or oscilloscope (DC range)
Adjustment Element	RV501
Specified Value	2.60 ± 0.05 Vdc

Adjusting method:

- 1) Adjust to 2.60 ± 0.05 Vdc using RV501.

8-3-6. Horizontal Amplitude Adjustment (VF-42 board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	C504
Specified Value	$6 \pm 2\%$

Adjusting method:

- 1) Rotate RV502, and adjust the top and bottom sides of the monoscope image to the top and bottom edges of the display.
- 2) Rotate RV504 so that the brightness is the normal level.
- 3) Adjust the pattern (A) of the H size adjustment capacitor (C504) to "short" or "open", so that the horizontal direction over scan becomes $6 \pm 2\%$ (Left and right totals). (Refer to Fig. 8-26.)


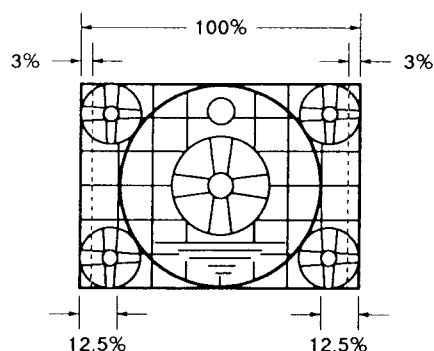


Fig. 8-25.

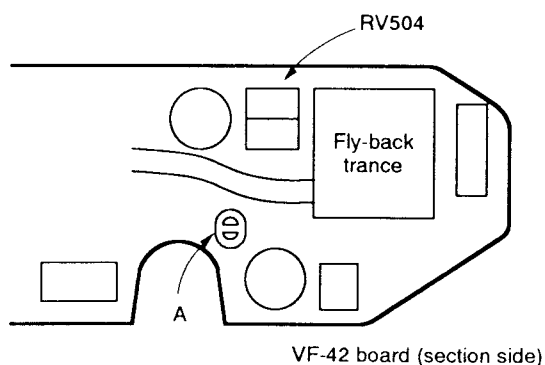

Section A	Size H
Open	Small
Short	Big

Fig. 8-26.

8-3-7. Vertical Amplitude Adjustment (VF-42 board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	RV502
Specified Value	$5 \pm 2\%$

Adjusting method:

- 1) Adjust RV502 so that the vertical direction over scan becomes $5 \pm 2\%$ (Top and bottom totals).

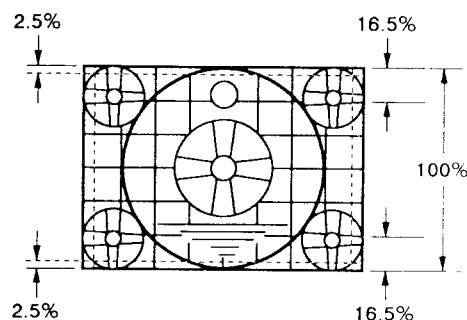


Fig. 8-27.

8-3-8. Brightness, Contrast Adjustments (VF-42 board)

Model	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Monoscope section
Adjusting Element	Brightness: RV504 Contrast: RV503

Adjusting method:


- 1) Rotate RV504 and RV503 alternately, and adjust so that the bright/dark sections of the gray scale are displayed correctly. (The bright section should be unsatisfactory till the cross hatch appears vague in the monoscope circle. The dark section should be unsatisfactory till the darkest section and the second darkest section of the gray scale cannot be differentiated.)

8-3-9. Horizontal Amplitude, Vertical Amplitude, Focus Check


"8-3-6. Horizontal Amplitude Adjustment" and "8-3-7. Vertical Amplitude Adjustment" should both satisfy the specified values. If not, perform the adjustments from the beginning again. In this case, perform [8-3-8. Brightness, Contrast Adjustments] again. Moreover, check the focus, and if it found to be vague, perform "8-3-3. Focus Adjustment" and "8-3-4. Aberration Adjustment".

8-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS

DD-56 BOARD (COMPONENT SIDE)

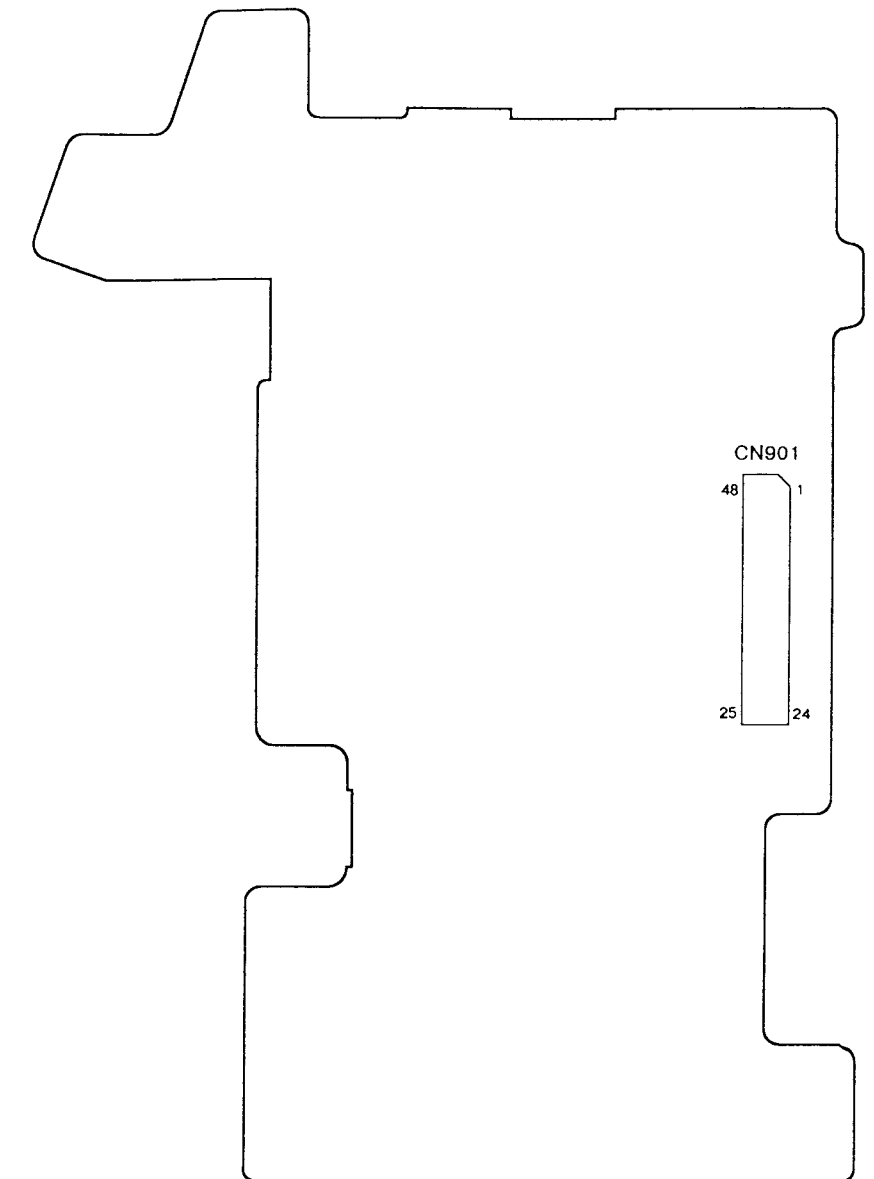


VF-42 BOARD (COMPONENT SIDE)

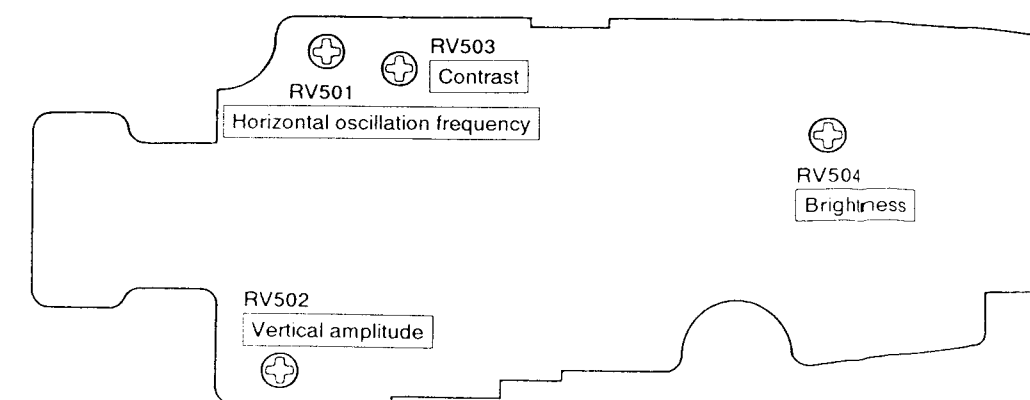


8-4. ARRANGEMENT DIAGRAM FOR ADJUSTMENT PARTS


DD-56 BOARD (COMPONENT SIDE)

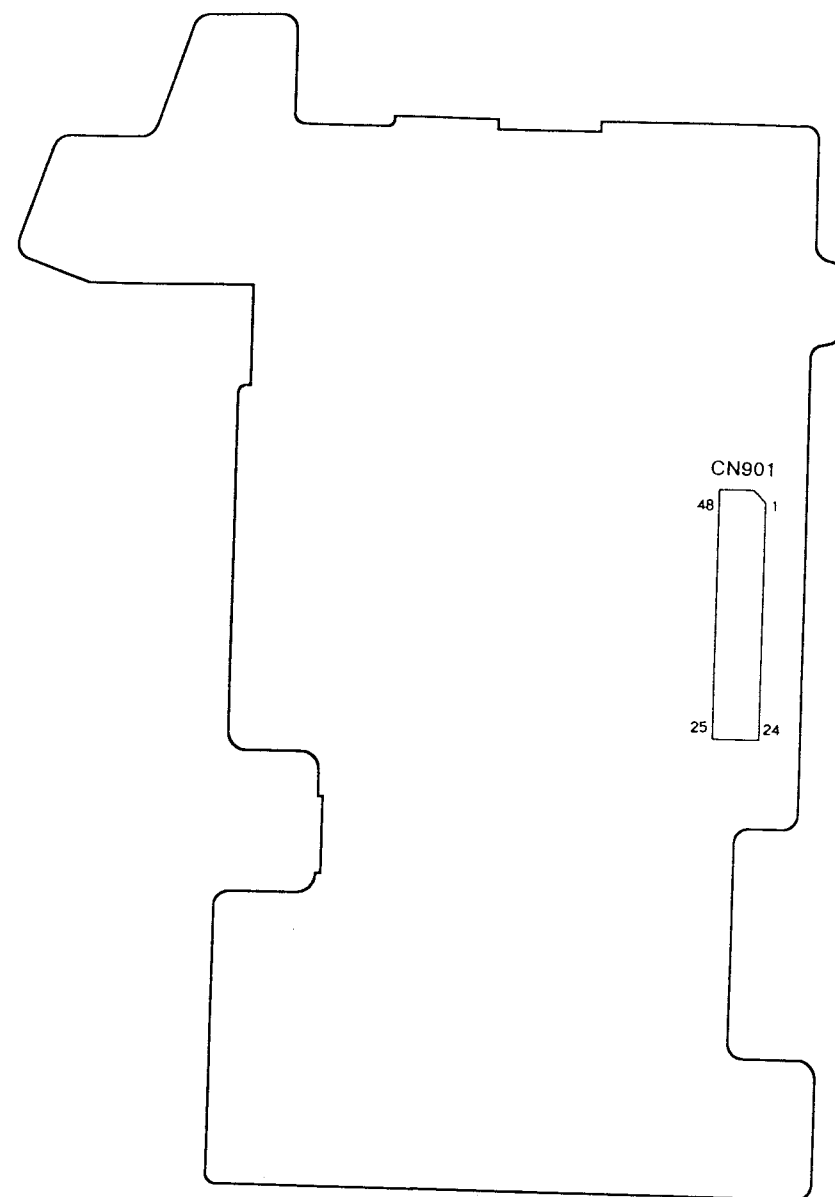

VC-133 BOARD (CONDUCTOR SIDE)

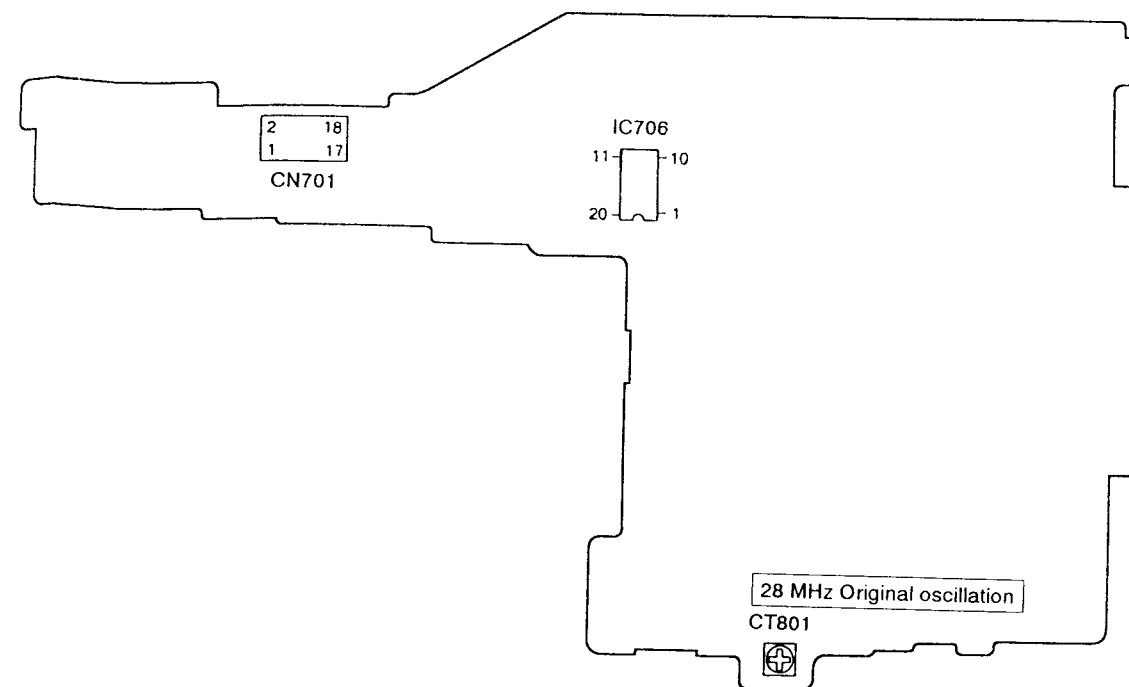

VF-42 BOARD (COMPONENT SIDE)

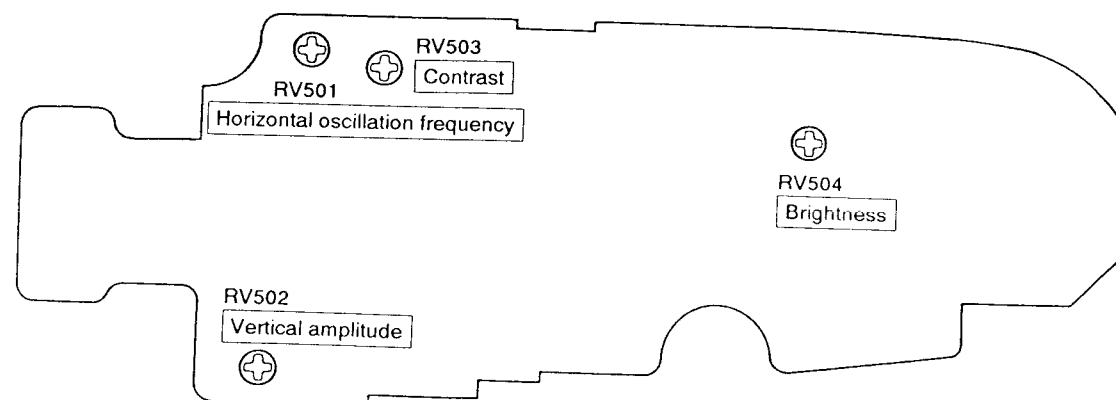

VF-42 BOARD (CONDUCTOR SIDE)



SECTION 9

MECHANICAL SECTION ADJUSTMENTS

For Mechanical Adjustments

Refer to the separate volume of mechanical adjustment "8 mm Video MECHANICAL ADJUSTMENT MANUAL IV (A Mechanism)" for the adjustments and checks of mechanism section and the mechanical parts replacement. (9-973-199-11)


For setting of the track shift mode, however, refer to the following.

9-1. SETTING THE TRACK SHIFT MODE

Note: Camera part and video part should have been installed.

[Setting Method]

- 1) Set the adjustment commander to the HOLD ON side.
- 2) Set page: 1, address: 01 and data: 01, and then release the protector.
- 3) Set page: D and address: 01.
- 4) Set adjustment data to 03 (test mode 3) by PLAY or STOP button.
 (When HOLD OFF once after the setting and HOLD ON again, the display of the address data will be changed. To set the another mode with shifting, repeat the procedures from 3).
- 5) Set to the HOLD OFF side in order to set the normal mode.

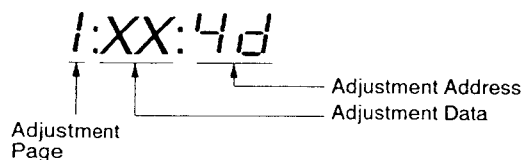

9-2. PREPARATION FOR ADJUSTMENT

- 1) Clean the tape running surfaces (tape guides, drum, capstan shaft, pinch roller.)
- 2) Connect to the oscilloscope.
 CH1: VS-100 board CN002 pin ③ (PB RF)
 CH2: VS-100 board CN002 pin ④ (SWP)
- 3) Play back the tracking alignment tape (WR5-1CP: 8-967-995-07).
- 4) Check that the RF waveform of the oscilloscope is flat at both inlet and outlet side. (Refer to Fig. 9-1 and 9-2)
 If not flat, perform necessary adjustment according to the separate 8 mm Video Mechanical Adjustment IV (A Mechanism).

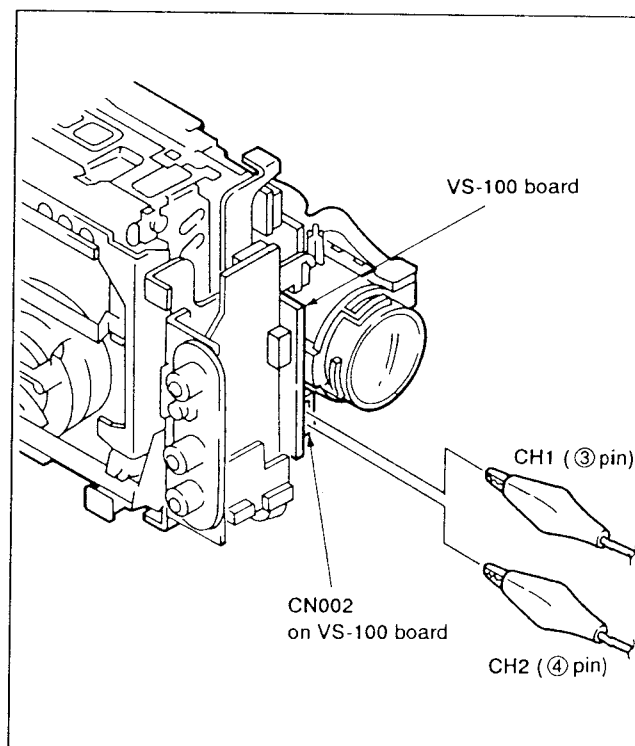


Fig.9-1.

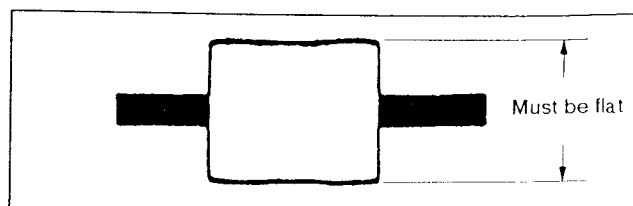


Fig.9-2.

SECTION 10 VIDEO SECTION ADJUSTMENTS

When performing adjustments, refer to the layout diagrams for adjustment related parts beginning from page 242.

10-1. PREPARATIONS BEFORE ADJUSTMENT

The following adjusting instruments are used for adjusting the video section.

10-1-1. Equipments to be used

- 1) TV monitor
- 2) Oscilloscope: 2 phenomena, band 30 MHz or wider, with delay mode. (Use a 10:1 probe unless specified otherwise.)
- 3) Frequency counter
- 4) Pattern generator with video output terminal
- 5) Digital voltmeter
- 6) Audio generator
- 7) Audio level meter
- 8) Audio distortion meter
- 9) Audio attenuator
- 10) Regulated power supply
- 11) Alignment tape

For tracking adjustment (WR5-1CP)

Part Code: 8-967-995-07

For video frequency characteristics adjustment (WR5-6C)

Part Code: 8-967-995-17

For checking operations

(WR5-4CL)^{Note 1}

Part Code: 8-967-995-56

(WR5-5CSP)^{Note 2}

Part Code: 8-967-995-47

Note: The following alignment tapes can also be used.

1) WR5-3CL (8-967-995-36)

2) WR5-4CSP (8-967-995-46)

12) Remote control unit for adjustment (J-6082-053-B)

13) DD-56 board extension cord (42P, 0.8 mm)

Part Code: J-6082-195-A

14) Cabinet (R) extension cord (20P, 0.8 mm)

Part Code: J-6082-196-A

15) AU-150 board extension cord (32P, 0.8 mm)

Part Code: J-6082-249-A

16) Mecha deck extension cord (30P, 0.8 mm)

Part Code: J-6082-167-A

10-1-2. Connecting the equipments

Unless specified otherwise, connect the measuring instruments as shown in Fig. 10-1 and perform the adjustments.

- Camera/player power switch Position of the player
- Connect the adjusting remote control unit to the remote terminal (DD-56 board CN902).

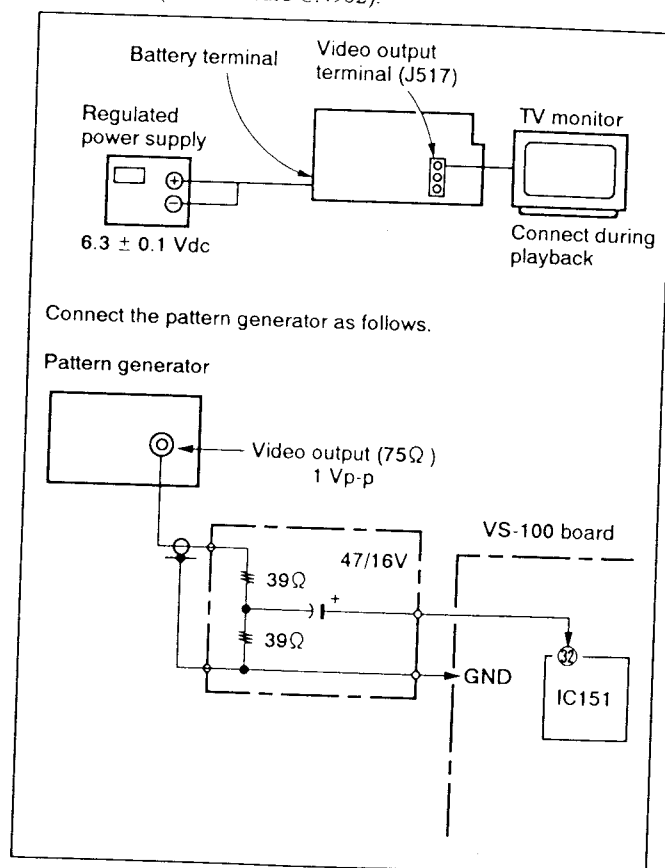


Fig. 10-1.

10-1-3. How to Set the REC Mode

1. REC key forbidden accept mode cancel
 1. Connect the adjustment remote controller to the REMOTE terminal.
 2. Turn on the power.
 3. Turn on the HOLD switch of the adjustment remote controller.
 4. Select the page: 1 address: 00, and set the data to 01. (Protect mode cancel)
 5. Select the page: D address: 02, and set the data to 8F [AF].^{Note 1} (REC key forbidden accept mode cancel)
 6. Press PAUSE button on the adjustment remote controller. (Write to the non-volatile memory)

The REC key is accepted through the above procedure.

2. REC mode setting
 1. Connect the collector of Q200 on the VS-100 board and GND with a jumper wire. (CCD delay (IC154) active mode setting)
 2. Turn on the HOLD switch of the adjustment remote controller.
 3. Select the page: 1 address: A3, and set data to 01.
 4. Select the page: 1 address: 0B, and set data to C8. (Line input mode setting)
 5. Turn off the HOLD switch of the adjustment remote controller.
 6. Press REC buttons of the adjustment remote controller.
 7. Remove the jumper wire and perform "3. Procedure after completed the adjustment", after completing adjustment.
3. Procedure after completed the adjustment

Be sure to return the mode to REC key forbidden accept mode after adjustment.

 1. Connect the adjustment remote controller to the REMOTE terminal.
 2. Turn on the power.
 3. Turn on HOLD switch of the adjustment remote controller.
 4. Select the page: 1 address: 00, and set the data to 01. (Protect mode cancel)
 5. Select the page: D address: 02, and set the data to 8E [AE].^{Note 1} (Setting of the REC key forbidden accept mode)
 6. Press PAUSE button on the adjustment remote controller. (Write to the non-volatile memory)

Note 1: No mark : AEP, UK model
[]: E, Australian model

10-1-4. Precautions upon adjustment

The EVF (Electronic viewfinder) is not required for adjusting the video section.

Remove the following connector when removing the EVF section.

1. VS-100 board CN102 (6 PIN)

The front panel section assembly is required for adjusting the video section. Remove the following connectors when removing the front panel section assembly.

1. AU-150 board CN601 (5 PIN)

The cabinet (R) is required for adjusting the video section. Use the extension cord (J-6082-196-A) when adjusting the video section.

10-1-5. Set-up during Adjustment

As the video signal obtained from the pattern generator is used as an adjustment signal during electric adjustments, ensure that this video output signal is within the specification. Connect the oscilloscope to pin ② of IC151 on the VS-100 board, and check that the amplitude of the sync signal of the video signal is approximately 0.15V, the amplitude of the video section is approximately 0.35V, the amplitude of the burst signal is approximately 0.15V and flat, and that the level ratio of the burst signal and the [red] signal is 0.30: 0.66. The video signal (color bar) used for electric adjustments is shown in Fig. 10-2.

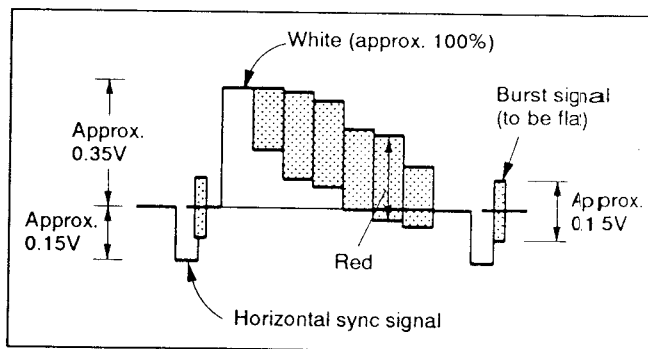


Fig. 10-2. Color Bar Signal of the Pattern Generator

10-1-6. Alignment Tape

The following table lists alignment tapes which are available.
Use the tape specified in the signal column for each adjustment.

If the type of tape to be used for checking operations is not specified, use whichever type.

Name	Record-ing mode	Tape type	Tape speed	Recording contents		Usage
				Video area	PCM area	
Tracking WR5-1CP	L	MP	SP	CH2: Signal for 1 MHz tape path adjustment		Tape path adjustment Switching position adjustment
Video frequency characteristics WR5-6C	L	MP	LP	RF sweep 0 to 10 MHz Marker 1, 3.58, 5.5, 7 MHz		Frequency characteristics adjustment
Operation check (SP mode) WR5-5CSP	L	MP	SP	- Video signal Color bar 4 minutes Monoscope 4 minutes - Audio signal (AFM) 400 Hz 60% modulation	- Audio signal (PCM) Monoscope section 20 Hz 20 sec. 400 Hz 20 sec. 14 kHz 20 sec. - Repeated 4 times 1 kHz 4 minutes	Checking operations
Operation check (LP mode) WR5-4CL	L	MP	LP	- Video signal Color bar 4 minutes Monoscope 4 minutes - Audio signal (AFM) 400 Hz 60% modulation		

Note: Recording mode

L Conventional mode

E hi8 (hi band) mode

Tape type

MP Particle type metal tape

ME Evaporated type metal tape

Table 10-1.

Fig. 10-3. shows the 75% color bar signals recorded on the alignment tape.

Note: Measure using the video input/output terminal
(Terminated at 75 Ω)

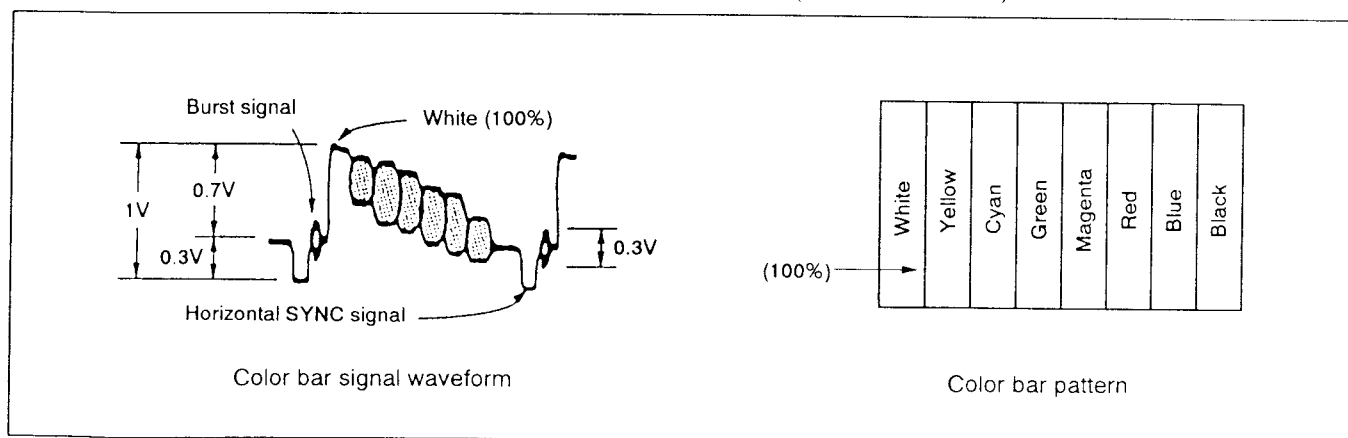


Fig. 10-3. Color Bar Signals of the Alignment Tape

10-1-7. Output Level and Impedance

Video output Phono jack

Output signal: 1 Vp-p, 75 unbalanced,
sync negative

Audio output Phono jack

Specified output: -7.5 dBs
(at load impedance 47k Ω)


Output impedance: Below 2.2 k Ω

10-1-8. Service Mode


1. Setting the Service mode

The service mode consists of the adjustment mode which adjusts the EVR and the test mode which displays the condition of the unit.


The unit can be shifted into the test mode and adjustment mode by connecting the adjusting remote control unit (set the HOLD switch to the HOLD side).

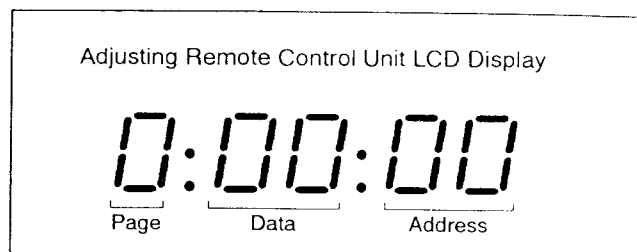

(1) Service LANC memory map

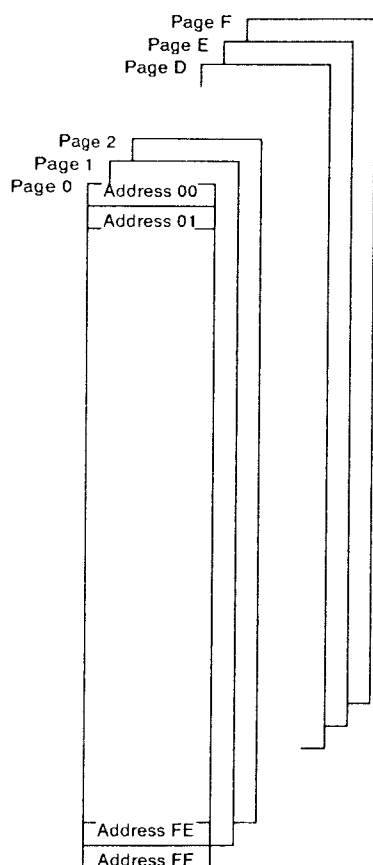


Adjusting remote control unit RM-95 (J-6082-053-B)

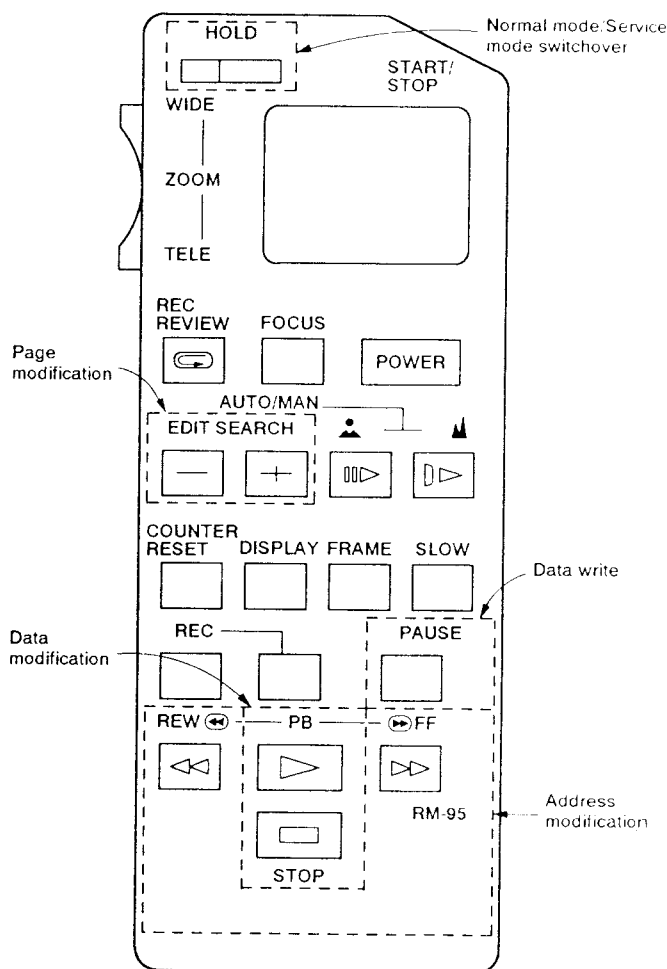

Page	Page allocation	Description
0	Not used	
1	Mode Control RAM, I/O	RAM and I/O interface data memory area required for operating the mode controller. Data is not held when the power is turned off because this area is not ROM.
2~4	Mechanical Control RAM, I/O	RAM and I/O memory area of the mechanical controller.
5	Not used	
6~8	Camera Control RAM, I/O	RAM and I/O memory area of the camera control.
9	Not used	
A	Camera Control RAM, I/O	RAM and I/O memory area of the camera control.
B, C	Not used	
D	VTR EE-PROM	ROM memory area of the VTR part. Data of this area is held by EE-PROM when the power is turned off. Releasing protect is required for changing data.
E	Not used	
F	Camera EE-PROM	ROM memory area of the camera part. Data of this area is held by EE-PROM when the power is turned off.

(2) Shifting to the Service Mode Using the Adjusting Remote Control Unit

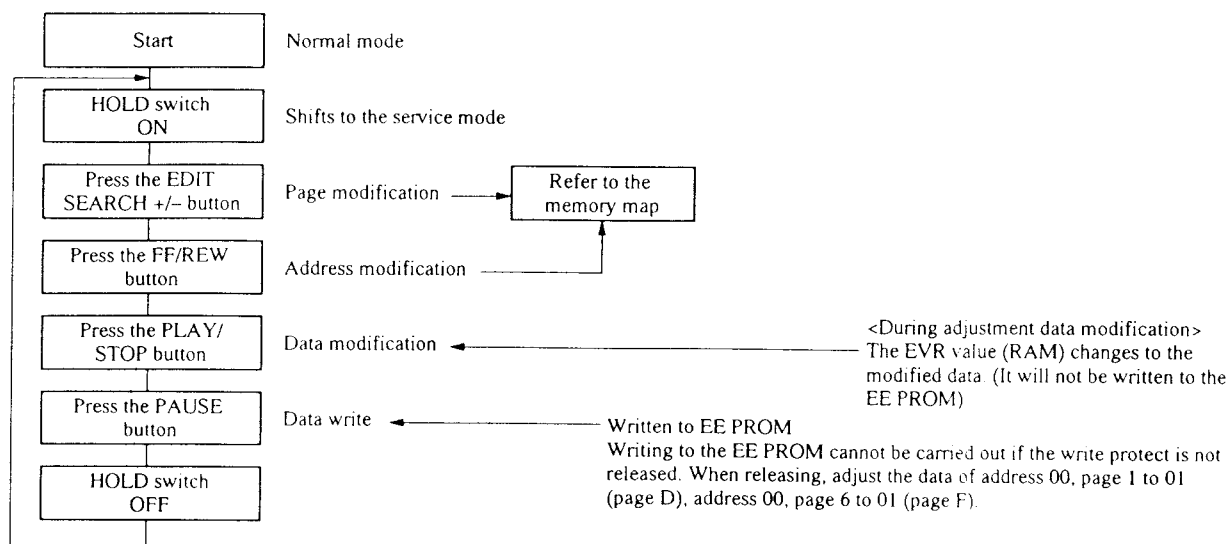

Command Name	Command Function	Normal LANC command
Page Up	Page +1	Edit Search +
Page Down	Page -1	Edit Search -
Direc Page Set	Sets the specified page	Event Clear
Address Up	Address +1	Fast Forward
Address Down	Address -1	Rewind
Data Up	Data +1	Play Back
Data Down	Data -1	Stop
Store	Write the data to the EE PROM. RAM	Pause

2. Types of Self-diagnostic Feature

MODE		Contents
TEST	Camera adjustment	Refer to Camera Adjustment
	Switching position adjustment	Refer to each adjustment page
	Battery DOWN adjustment	
	Video, Audio adjustment	
ADJUST	Pass Adjustment track shift	When adjusting tape pass, set this mode and shift the tracking.
	Emergency STOP inhibition	Detection of emergency is inhibited. This allows the following items. • Power is not turned off when the battery is ended. • SP/LP is not automatically distinguished. • Emergence is not detected except for TOP/END detection of the TAPE.
	Read of emergence code	The following functions are added to the emergency display function currently in use. ① The lithium battery is not required because to memorize into EE-PROM is allowed. ② The first emergency and the last emergency are memorized. ③ The mode when the emergency is generated is memorized, in addition to the emergency contents.
	Motor single check	Rotating in forward direction, reverse direction, stopping of each motor can be separately controlled. • Drum motor • Capstan motor • Loading motor
	Function switch check	The acceptance of the function switch of the unit can be confirmed by designating an address. On the contrary, RM-95 can command the substitution for the function switch of the unit.
	Mechanical switch check	The contents of the mechanical switch and the mode switch can be confirmed.
	Sensor check	The following sensor is input by performing A/D converting, and the A/D converted value can be confirmed. TOP sensor, End sensor, S REEL FG, T REEL FG, Thermistor for SWP correction, DEW sensor.
	Reception contents check of wireless remote control	The received code contents of the remote control code can be confirmed.

3. Page D Write Protect

Release/set the page D write protect.

Page 1	Address 00
--------	------------

Data	Function
00	Normal (Write protect condition)
01	Write protect release

4. Page F Write Protect

Release/set the page F write protect.

Page 6	Address 00
--------	------------

Data	Function
10	Normal (Write protect condition)
01	Write protect release

5. Test Mode Setting

Each type of test mode is set/released. Release the protect (page: 1, address: 00, data: 01), before setting the data.

Page D	Address 01
Data	Function
00	Normal
01	Test mode 1 Various emergency inhibition and release Drum, capstan, loading motor, reel, tape top, end, DEW SP/LP automatic distinction inhibition, manual switchover 5 minutes pause release inhibition Power off inhibition • release by battery end
02	Test mode 2 1'CH frequency response adjustment (Not used) SP/LP automatic distinction inhibition, manual switchover
03	Test mode 3 Track shift Plays back the track shift Rear lock distinction inhibition during PB SP/LP automatic distinction inhibition, manual switchover
04	Test mode 4 Rear lock mode Rear lock playback is performed SP/LP automatic distinction inhibition, manual switchover
05	Test mode 5 SP/LP automatic distinction inhibition, manual switchover

- ※ This address data will be recorded on the non-volatile memory by pressing the PAUSE button on the adjusting remote control unit. Take note, as when this happens, the test mode will not be released even if the main power is turned off (6.3 Vdc).
- ※ Be sure to return the data of this address data to 00 after completing adjustments/repairs.

6. Emergency code

Troubles (errors) can be checked.

Page D	Address 06
--------	------------

First emergency code

.....The first error code generated

Page D	Address 07
--------	------------

Last emergency code

..... The last error code generated (this data will be modified each time an error occurs.)

- ※ Be sure to rewrite the data of addresses 06 and 07 to 00 after completing repairs/adjustments.
- ※ When rewriting data, be sure to press the PAUSE button of the remote control unit after resetting the data.

Code	Error condition
00	No error
01	Loading motor error
02	Reel error during unloading
03	Other reel errors
04	Capstan error
05	DRUM FG error during drum start up
06	DRUM PG error during drum start up
07	DRUM FG error during drum regular condition
08	DRUM PG error during drum regular condition
09	DRUM Phase error during drum regular

7. Emergency mode

The operation mode during an error outbreak can be checked.

Page D	Address 08
--------	------------

First emergency mode

.....The operation mode when the first error is generated

Page D	Address 09
--------	------------

Last emergency mode

.....The operation mode when the last error is generated

(This data will be modified each time an error occurs.)

※ Be sure to rewrite the data of addresses 08 and 09 to 00 after completing repairs/adjustments.


※ When rewriting data, be sure to press the PAUSE button of the remote control unit after setting the data.

※ Addresses 08 and 09 of page 0 and addresses 08 and 09 of page D have the same functions.

Code	Error condition
00	BEFOR INITIALIZE
01	EJECTED
02	NORMAL STOP
03	FF
04	NORMAL REC
06	NORMAL PB
07	PB PAUSE
12	LOADING
14	REC PAUSE
26	X1
27	1/5 SLOW
31	UNLOADING
36	-X1
37	-1/5 SLOW
46	CUE
47	1/10 SLOW
56	REVIEW
57	-1/10 SLOW
62	STOP TAPE END
66	X2
67	FRAME
72	STOP TAPE TOP
76	-X2
77	-FRAME
83	REWIND
85	REC REVIEW(+)
95	REC REVIEW(-)
A2	EMERGENCY STOP
A5	EDIT SEARCH(+)
B1	EMERGENCY UNLOADING
B2	STOP EMERGENCY 1
B5	EDIT SEARCH(-)
C2	STOP EMERGENCY 2
E2	STOP NO CASSETTE
F5	EDIT PAUSE

8. Bit value Discrimination

It is necessary to discriminate the bit value by the adjusting remote control unit display data for the following items. Discriminate if the bit value is "1" or "0" using the following table.

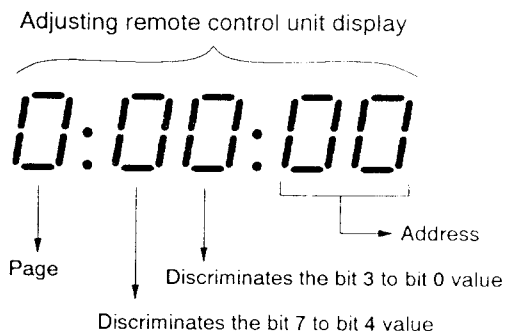

Remote Control Unit Display	Bit Value			
	bit 3 or bit 7	bit 2 or bit 6	bit 1 or bit 5	bit 0 or bit 4
0	0	0	0	0
1	0	0	0	1
2	0	0	1	0
3	0	0	1	1
4	0	1	0	0
5	0	1	0	1
6	0	1	1	0
7	0	1	1	1
Ⓐ→ 8	1	0	0	0
9	1	0	0	1
A (H)	1	0	1	0
B (h)	1	0	1	1
C (c)	1	1	0	0
D (d)	1	1	0	1
Ⓑ→ E (E)	1	1	1	0
F (F)	1	1	1	1

(Example) When the remote control unit display data is "8E", the bit values of bit 7 to bit 4 can be discriminated from column Ⓐ, and that of bit 3 to bit 0 can be discriminated from column Ⓑ.

9. Check of Tape Distinction Switch, etc.

Page 1	Address 3E
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
				REC PROOF	ME/MP	Hi8/Normal	

- "1"=Hi8 mode playback
 - "0"=Normal mode playback
 - "1"=ME tape
 - "0"=MP tape
 - "1"=Recording impossible
 - "0"=Recording possible

Page 1	Address 23
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
					CC DOWN		

- "0"=During cassette compartment lock

Page 1	Address 3D
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
V MUTE	A MUTE	VA PB MODE	JOG	PB CLOG	REC CLOG	SYNC DET	LP/SP

- "1"=LP mode playback
 - "0"=SP mode playback
 - "1"=SYNC is detected
 - "0"=SYNC is not detected
 - "1"=CLOG is detected
 - "0"=Normal
 - "1"=When the PB RF signals are being playback normally
 - "0"=Others
 - "1"=JOG mode
 - "0"=Other
 - "1"=Playback mode
 - "0"=Others
 - "1"=AUDIO MUTE: ON
 - "0"=AUDIO MUTE: OFF
 - "1"=VIDEO MUTE: ON
 - "0"=VIDEO MUTE: OFF

Page 1	Address 42
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
						DEW	

- "0"=Dew outbreak
 - "1"=Others


10. Mode Switch Check

The mode switch position (mechanical section condition) can be checked.

Page 1	Address 3E
--------	------------

Bit7	Bit6	Bit5	Bit4	Bit3	Bit2	Bit1	Bit0
MSW 0	MSW 1	MSW 2					

			POSITION	FUNCTION	CC DOWN
1	1	1	BL	Interval of each position	
0	1	1	END	FULL END processing (T side lock removal)	1
0	0	1	EJECT	Cassette compartment ejection	1
1	0	1	USE	EJECTED (Unskate end)	1
0	0	1	LOAD	LOADING (Skate in)	0
1	0	0	READY	NORMAL STOP position	0
1	1	0	TURN	OFF of pinch roller only with PB ↔ REV (oscillating position)	0
0	1	0	RP	PB, REC, RVS, REV, REW	0
0	0	0	FF	FF/CUE	0

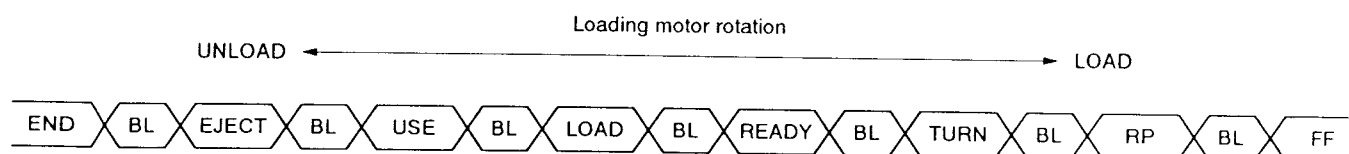

11. Mechanism Control A/D Port Input Voltage Check

Page 4	Address 14
--------	------------

Checking method:

- 1) Set data: 02 to page: 4, address: 0E.
(A/D conversion processing active)
- 2) Set the data in the following table to page: 4, address: 13,
and select the A/D port to be displayed.

Data	A/D Port
00	Pin ⑥②: AN0 (T REEL FG)
01	Pin ⑥①: AN1 (S REEL FG)
02	Pin ⑥④: AN2 (ATF ERROR)
03	Pin ⑤⑨: AN3 (BATT SENS)
04	Pin ⑤⑧: AN4 (DEW)

- 3) Check the data of page: 4, address: 14.

Adjusting Remote Control Unit Display Data	A/D Port Input Voltage
FF to 00	Approx. 5 Vdc to 0 Vdc

12. Tape Top/End Sensor Condition Check

Page 4	Address 0A
--------	------------

Checking method:

- 1) Set data: 10 to page: 4, address: 0E.
(Tape top/end sensor condition sampling processing active)
- 2) Check the data of page: 4, address: 0A.

Adjusting Remote Control Unit Display Data	Tape Top/End Sensor Condition
0 0	Tape present (Middle of tape)
0 1	Tape end
1 0	Tape top
1 1	No tape

Tape end sensor condition
 Tape top sensor condition

"0"=Non-active
 (Not receiving light)
 "1"=Active
 (Receiving light)

13. Battery Voltage Check

Page 4	Address 10
--------	------------

Adjusting Remote Control Unit Display Data	Battery Voltage
FF	Approx. 10 Vdc
F0	Approx. 9.4Vdc
E0	Approx. 8.8Vdc
D0	Approx. 8.2Vdc
C0	Approx. 7.5Vdc
B0	Approx. 6.9Vdc
A0	Approx. 6.3Vdc
90	Approx. 5.6Vdc
80	Approx. 5.0Vdc

14. Individual Operations of the Drum, Capstan, and Loading Motor

Page 4	Address 11
--------	------------

- 1) Adjust the mechanical section to the loading completion condition.
- 2) Release the protect.
Page: 1, address: 00, data: 01
- 3) Set data: 01 to page: 4, address: 0E.
(Control permission from the adjusting remote control unit of the motor)
- 4) By setting the data in the following table to page: 4, address: 11, the corresponding motors can be operated individually.
- 5) After checking the operations, turn off the main power (6.3 Vdc).

Data	Operation
00	Normal
02	Drum forward rotation
04	Drum reverse rotation
06	Capstan forward rotation
08	Capstan reverse rotation
0A	Loading motor forward rotation
0C	Loading motor reverse rotation
01	All motors stop
03	
05	
07	
09	
0B	
0D	
0F	

15. Mode control micro processor key matrix check

The key input can be checked.

Page 1		Address 68-6D						
	Bit7	Bit6 (K IN 6)	Bit5 (K IN 5)	Bit4 (K IN 4)	Bit3 (K IN 3)	Bit2 (K IN 2)	Bit1 (K IN 1)	Bit0 (K IN 0)
Address 68 (K OUT 0)		LENS COVER OPEN (MF-214 S973)	VTR POWER (VK-32 S977)		PAUSE (VK-32 S984)	EDIT SEARCH (+) (VK-32 S981)	EJECT (DD-56 S901)	
Address 69 (K OUT 1)		BUZZER ON/OFF (ED-37 S986)	CAMERA POWER (VK-32 S977) (SW-223 S519)	FF (VK-32 S983)	PLAY (VK-32 S980)	REW (VK-32 S979)	STOP (VK-32 S976)	
Address 6A (K OUT 2)		NIGHT (CF-34 S997)				EDIT SEARCH (-) (VK-32 S978)	COUNTER RESET (CF-34 S995)	SP/LP EDIT ON/OFF (ED-37 S990)
Address 6B (K OUT 3)		PORTREIT (CF-34 S997)			TIME (CF-34 S996)	DATE (CF-34 S993)		
Address 6C (K OUT 4)		SPORTS (CF-34 S997)		AUTO FOCUS ON/OFF (MF-214 S971)				
Address 6D (K OUT 5)		HIGH SPEED SHUTTER (CF-34 S997)	AREA (ED-37 S989)	SUMMER TIME (ED-37 S987)		FADER (CF-34 S991)	START/ STOP (SW-223 S520)	REMOTE COMMANDER (ED-37 S988)

"1"=key switch ON


"0"=key switch OFF

16. Wireless Remote Control Unit Reception Content Check

Page 1		Address 1E	
Wireless remote control unit key pressed		Data	
None		FF	
TELE		9A	
WIDE		9B	
Start/stop		99	
Rewind		1B	
Fast forward		1C	
Stop		18	
Playback		1A	
Data screen		5A	
Pause		19	
SLOW		23	

17. EDIT Switch, Remote Commander Switch Check

Page 1	Address 0A
--------	------------

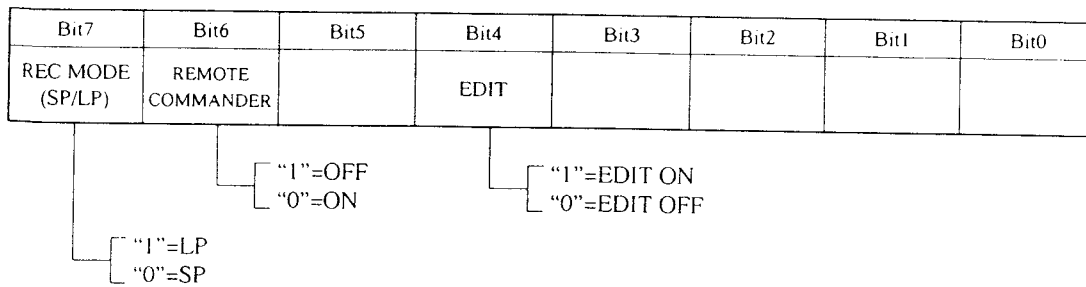

18. White Balance Mode and Focus Mode Display/Switchover

Page 1	Address 9A
--------	------------

The mode can be switched when the data of page: 1, address: A3 is set to 04.

Data	White Balance Mode
* 1	INDOOR
* 2	OUTDOOR
* 3	HOLD
* 6	AUTO

Data	Focus Mode
0 *	Manual
1 *	Automatic

* : 0 to F

19. LCD, LED Check, etc.

Page 1	Address A3
--------	------------

Data	Mode
00	Normal
01	Key input prohibited
04	Camera function renewal prohibited

20. Page D Address List

Note 1: The adjustment data initial value is the data to be input before performing video section adjustment (page D), when the page D data has been erased due to some cause.

Note 2: The data listed in the adjustment data memo column are the fixed data.

Check that these data have not been accidentally rewritten, after completing adjustments.

*1 No mark : AEP, UK model
[] : E, Australian model

Address	Name	Function [] Indicate the adjustment voltage output terminal	Adjustment data							
			Initial value	Memo column						
00	Category code	Not used								
01	Test mode		00	00						
02	Destination flag		8E[AE]*1	8E[AE]*1						
03	BATT END	Battery end adjustment	8C							
04	SW POSITION	SW POSITION adjustment	00							
05	SW POSITION	SW POSITION adjustment	0A							
06	EMERGENCY code (FIRST)	Error code and mode are memorized. Rewrite the data of these addresses to 00 after repairs/adjustments	00	00						
07	EMERGENCY code (LAST)		00	00						
08	EMERGENCY mode (FIRST)		00	00						
09	EMERGENCY mode (LAST)		00	00						
0A	SR DATA (MP Normal SP)	CXA1207 serial data	24	24						
0B	SR DATA (MP Normal LP)	CXA1207 serial data	16	16						
0C	SR DATA (ME Hi8 SP)	CXA1207 serial data	24	24						
0D	SR DATA (ME Hi8 LP)	CXA1207 serial data	16	16						
0E	SR DATA (ME Normal SP)	CXA1207 serial data	24	24						
0F	SR DATA (ME Normal LP)	CXA1207 serial data	16	16						
10	SR DATA (MP Hi8 SP)	CXA1207 serial data	24	24						
11	SR DATA (MP Hi8 LP)	CXA1207 serial data	16	16						
12	SR DATA (EDIT ON Normal)	CXA1207 serial data	16	16						
13	SR DATA (EDIT ON Hi8)	CXA1207 serial data	16	16						
14	CAM TITLE BLU R-Y	Camera titler color adjustment [Blue]. Not used								
15	CAM TITLE BLU B-Y	Camera titler color adjustment [Blue]. Not used								
16	CAM TITLE GRN R-Y	Camera titler color adjustment [Green]. Not used								
17	CAM TITLE GRN B-Y	Camera titler color adjustment [Green]. Not used								
18	CAM TITLE CYN R-Y	Camera titler color adjustment [Light blue]. Not used								
19	CAM TITLE CYN B-Y	Camera titler color adjustment [Light blue]. Not used								
1A	CAM TITLE RED R-Y	Camera titler color adjustment [Red]. Not used								
1B	CAM TITLE RED B-Y	Camera titler color adjustment [Red]. Not used								
1C	CAM TITLE VIO R-Y	Camera titler color adjustment [Violet]. Not used								
1D	CAM TITLE VIO B-Y	Camera titler color adjustment [Violet]. Not used								
1E	CAM TITLE YEL R-Y	Camera titler color adjustment [Yellow]. Not used								
1F	CAM TITLE YEL B-Y	Camera titler color adjustment [Yellow]. Not used								
20	Permission plug		44	44						
21	Adjustment plug	FORCED VTR ON, CAM ON etc <table><tr><th>DATA</th><th>MODE</th></tr><tr><td>01</td><td>FORCED CAMERA POWER ON</td></tr><tr><td>02</td><td>FORCED VTR POWER ON</td></tr></table>	DATA	MODE	01	FORCED CAMERA POWER ON	02	FORCED VTR POWER ON	00	00
DATA	MODE									
01	FORCED CAMERA POWER ON									
02	FORCED VTR POWER ON									
22~29		Not used								

Table 10-2 (1).

Address	Name	Function [] indicate the adjustment voltage output terminal	Adjustment data	
			Initial value	Memo column
2A	SLOW ADJ (FORWARD)		00	00
2B	SLOW ADJ (REVERSE)		00	00
2C	STILL ADJ		00	00
2D	BATT REMAIN LEVEL 1	Amount of remaining battery 1	A0	
2E	BATT REMAIN LEVEL 2	Amount of remaining battery 2	99	
2F	BATT REMAIN LEVEL 3	Amount of remaining battery 3	94	
30~42		Not used		
43	1-ch M.T NORMAL	1 ch playback frequency characteristic adjustment [IC158 ①]	C0	
44				
45	2-ch M.T NORMAL	2 ch playback frequency characteristic adjustment [IC158 ②]	C0	
46	REC C RF (EE)	REC C RF level adjustment (EE) [IC156 ⑩]	B8	
47	REC C RF (PB)	REC C RF level adjustment (PB) [IC156 ⑩]	00	00
48	RF CONT (ME)	ATF RF level (ME) [IC158 ④]	64	64
49	RF CONT (MP)	ATF RF level (MP) [IC158 ④]	70	70
4A	EE LEVEL	EE level adjustment [IC156 ⑪]	70	
4B		Not used		
4C	COMB ADJ	Chroma comb filter adjustment [IC156 ③]	A8	
4D	SR-IR	IR adjustment [IC156 ②]	AE	
4E	Y-FM CARRIER (Hi8)			
4F	Y-FM CARRIER (NORMAL)	Y-FM carrier frequency adjustment [IC156 ⑤]	A8	
50	Y-FM DEVIATION (Hi8)			
51	Y-FM DEVIATION (NORMAL)	Y-FM deviation adjustment [IC156 ⑥]	95	
52	REC Y LEVEL (EE Hi8 ME)			
53	REC Y LEVEL (EE Hi8 MP)			
54	REC Y LEVEL (EE NOR ME)	REC Y recording current adjustment (ME) [IC156 ⑦]	95	
55	REC Y LEVEL (EE NOR MP)	REC Y recording current adjustment (MP) [IC156 ⑦]	95	
56	REC Y LEVEL (PB)	Playback REC Y level [IC156 ⑦]	00	00
57	PB Y LEVEL (EE)	EE PB Y level [IC158 ⑩]	00	00
58	PB Y LEVEL (Hi8)			
59	PB Y LEVEL (NORMAL)	Normal PB Y level adjustment [IC158 ⑩]	B0	
5A	EMPHASIS INPUT LEVEL	EE emphasis input level adjustment [IC156 ④]	A5	
5B	PB LINE LEVEL	Playback emphasis input level adjustment [IC156 ④]	AF	
5C~77		Not used		
78	REC MX	REC matrix adjustment [IC158 ⑫]	B0	
79	PB MX	PB matrix adjustment [IC158 ⑫]	A0	
7A	1.5 IR	1.5 MHz IR adjustment [IC158 ⑤]	90	
7B	1.5 DEV	1.5 MHz deviation adjustment [IC158 ⑥]	B0	
7C	1.7 IR	1.7 MHz IR adjustment [IC158 ⑧]	90	
7D	1.7 DEV	1.7 MHz deviation adjustment [IC158 ⑨]	A0	
7E	AUDIO FADER	Audio fader [IC158 ⑦]		
7F~FF		Not used		

Table 10-2 (2)

10-2. POWER SYSTEM ADJUSTMENTS

1. Oscillator Frequency Check (DD-56 board)

Mode	Camera record
Subject	Arbitrary
Measurement Point	Q903 collector
Measuring Instrument	Frequency counter
Specified Value	510 $\pm$ 35 kHz

Adjusting method:

- 1) Check that the oscillator frequency satisfies the specified value.

2. Power Voltage Check (DD-56 board)

Mode	Camera record
Subject	Arbitrary
Measuring Instrument	Digital voltmeter
EVF 5V check	
Measurement Point	Pin ⑪ of CN901
Specified Value	4.93 $\pm$ 0.15 Vdc
DSV check	
Measurement Point	Pins ⑤ and ⑧ of CN901
Specified Value	4.92 $\pm$ 0.15 Vdc
D4V check	
Measurement Point	Pin ④ of CN901
Specified Value	3.98 $\pm$ 0.15 Vdc
VID 5V check	
Measurement Point	Pins ⑰, ⑳ of CN901
Specified Value	4.90 $\pm$ 0.10 Vdc
RP 5V check	
Measurement Point	Pin ㉒ of CN901
Specified Value	4.89 $\pm$ 0.15 Vdc
AU5V check	
Measurement Point	Pin ⑲ of CN901
Specified Value	4.90 $\pm$ 0.15 Vdc
CAM5V check	
Measurement Point	Pins ⑦ and ⑩ of CN901
Specified Value	4.86 $\begin{matrix} + 0.15 \\ - 0.11 \end{matrix}$ Vdc
CAM15V check	
Measurement Point	Pin ⑫ of CN901
Specified Value	15.05 $\pm$ 0.4 Vdc
CAM -9V check	
Measurement Point	Pin ⑨ of CN901
Specified Value	-8.5 $\pm$ 0.4 Vdc

10-3. SYSTEM CONTROL SYSTEM ADJUSTMENTS

1. Page D Initial Value Input

If the page D data has been erased due to some cause, input the page D initial value before performing adjustments. For details on the initial value, refer to "Page D address list" in "10-1-8. Service Mode".

Mode	E-E
Signal	Arbitrary
Adjustment Page	D
Adjustment Address	00 to 7E

Input method:

- 1) Release the write protect.
Page: 1, address: 00, data: 01
- 2) Select page D, and input the initial value to each address.
(After setting the data (initial value), be sure to press the PAUSE button of the adjusting remote control unit before changing the address.)

2. Battery End Adjustment

Mode	Camera record
Signal	Arbitrary
Measurement Point	LCD display of the adjusting remote control unit
Measuring Instrument	
Adjustment Page	D
Specified Value	03 (BATT END) 2D (BATT REMAIN LEVEL 1) 2E (BATT REMAIN LEVEL 2) 2F (BATT REMAIN LEVEL 3)

Connection:

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 10-4.

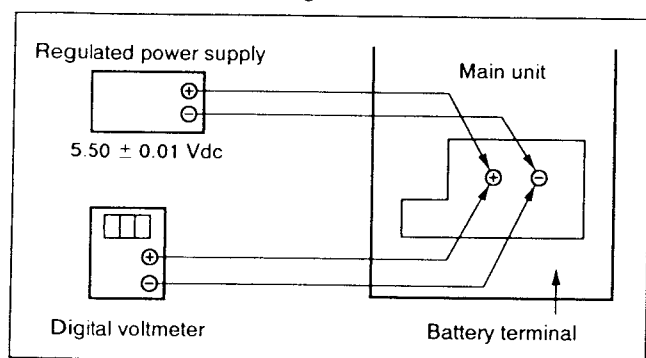


Fig. 10-4.

Adjusting method:

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 6.3 ± 0.1 Vdc.
- 2) Release the protect.
Page: 1, address: 00, data: 01
- 3) Set data: 01 to page: D, address: 01.
(Test mode 1 setting)
- 4) Set to the camera recording mode.
- 5) Adjust the output voltage of the regulated power supply so that the digital voltmeter display is 5.50 ± 0.01 Vdc.
- 6) Select page: 4, address: 10, read the adjusting remote control unit display data, and set to DEND.
- 7) Set data DEND to page: D, address: 03, and press the PAUSE button of the adjusting remote control unit.
- 8) Convert DEND to decimal to obtain DEND'. (Refer to Table 8-6. "Hexadecimal notation - decimal notation conversion table")
- 9) Obtain the adjustment data (decimal) by following formula (decimal notation calculation), convert to hexadecimal and enter the data into each adjustment address.
Address: 2D $D2D' = DEND' + 18$
Address: 2E $D2E' = DEND' + 14$
Address: 2F $D2F' = DEND' + 8$
Note: After setting the data, be sure to press the PAUSE button of the adjusting remote control unit before changing the address.
- 10) Set data: 00 to page: D, address: 01, and press the PAUSE button of the adjusting remote control unit.
(Test mode 1 release)
- 11) Perform "Battery Down Check".

3. Battery Down Check

Mode	Camera record
Subject	Arbitrary

Connection

- 1) Connect the regulated power supply and the digital voltmeter as shown in Fig. 10-4.

Checking method:

Remove the adjusting remote control unit, and perform the following check. If the check is not satisfied, perform from the beginning again.

- 1) Adjust the output voltage of the regulated power supply so that the digital voltmeter display becomes 6.3 ± 0.1 Vdc.
- 2) Set to the camera recording mode.
- 3) Decrease the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.70 ± 0.01 Vdc.
- 4) Check that the $\square$ mark on the EVF (viewfinder) display is not lighted up. (TALLY lamp lights up).
- 5) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.58 ± 0.01 Vdc.
- 6) Check that the $\square$ mark and the TALLY lamp on the EVF display on the EVF display blinks every second.
- 7) Decrease the the output voltage of the regulated power supply so that the digital voltmeter display becomes 5.42 ± 0.01 Vdc.
- 8) Check that the $\square$ mark and the TALLY lamp on the EVF display are blinking faster, the VTR stops and the power supply turns off.

10-4. SERVO SYSTEM ADJUSTMENTS

1. Switching Position Adjustment (VS-100 board)

Mode	Playback
Signal	Alignment tape: For tracking adjustment (WR5-1CP)
Measurement Point	CH1: Pin ④ of CN002 (RF SWP) CH2: Pin ③ of CN002 (PB RF)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	04 (SW POSITION) 05 (SW POSITION)
Specified Value	$t_1 = 0 \pm 10 \mu\text{sec}$

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Set data: 0A to page: D, address: 05.
- 3) Change the data of page: D, address: 05 and minimize "t₁".
(Coarse adjustment)
- 4) Press the PAUSE button of the remote control unit.
- 5) Change the data of page: D, address: 04, and adjust so that the switching position (t₁) becomes the specified value.
(Fine adjustment)
- 6) Press the PAUSE button of the adjusting remote control unit.

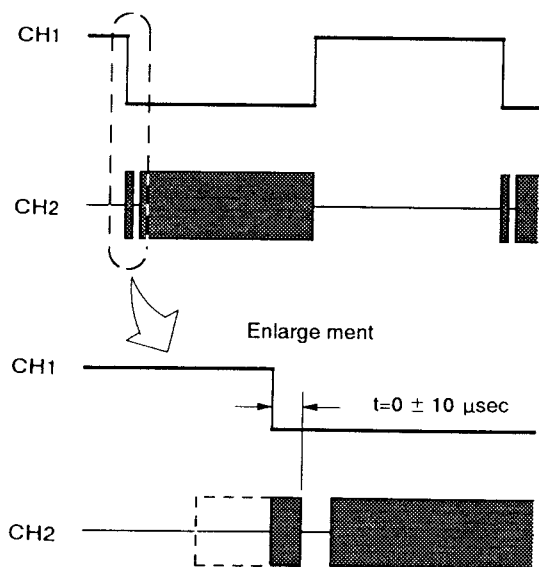


Fig. 10-5.

10-5. VIDEO ADJUSTMENTS

The adjustments of the video system must be performed according to the following adjustment procedure.

The color video signal supplied from the pattern generator is used as the video input signal for adjusting the video system in recording mode. Check that the sync signal and the color burst signal satisfy the specification specified during the adjustment set-up shown in Fig. 10-2.

[Adjusting procedure]

- 1) Playback frequency characteristic adjustment
- 2) Flying erase check
- 3) VXO oscillation frequency check
- 4) EE level adjustment
- 5) IR adjustment
- 6) Y/C separation adjustment
- 7) Emphasis input level adjustment
- 8) PB Y level adjustment
- 9) PB LINE OUT level adjustment
- 10) Y FM carrier frequency adjustment
- 11) Deviation adjustment
- 12) Chroma emphasis f₀ adjustment
- 13) REC Y level adjustment
- 14) REC C level adjustment
- 15) REC ATF level check
- 16) REC AFM level check

1. Playback Frequency Characteristic Adjustment (VS-100 board)

Note 1: The adjusting element for CH2 is shown in parentheses [].

Mode	Playback
Signal	Alignment tape: For frequency characteristic adjustment (WR5-6C)
Measurement Point	CH1: Pin ③ of CN002 EXT TRIG: Pin ④ of CN002
Measuring Instrument	Oscilloscope TRIG SLOPE: +, [-]
Adjustment Page	D
Adjustment Address	43 (MT 1CH) [45 (MT 2CH)]
Specified Value	3.58 MHz level: 5.5 MHz level=4: (3.2 ± 0.3)

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) After memorizing the data of page: D, address: 05, set data: 10.
- 3) Press the PAUSE button of the adjusting remote control unit.
- 4) Change the data of address: 43 [45] of page D, and adjust the level ratio of 3.58 MHz and 5.5 MHz of PB RF output waveform to the specified value.

Note 2: After each address adjustment, be sure to press the PAUSE button of the adjusting remote control unit and memorize the data.

- 5) Set the data memorized at step 2) to page: D, address: 05, and press the PAUSE button of the adjusting remote control unit.

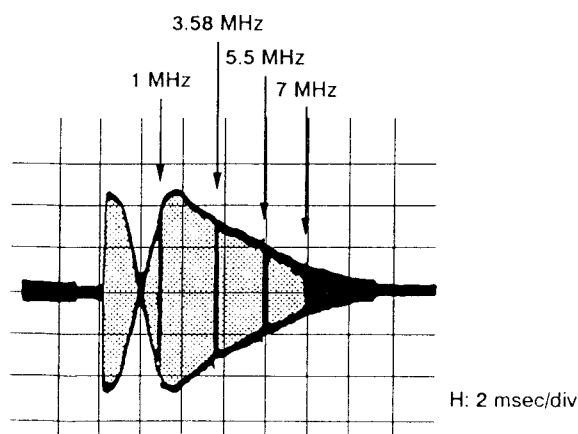


Fig. 10-6.

2. Flying Erase Check (VS-100 board)

Mode	Record
Signal	Arbitrary
Measurement Point	Pin ② of W001 (FE (X))
Measuring Instrument	Oscilloscope and frequency counter
Specified Value	Frequency: approx. 7.5 MHz Voltage: Above 1.5 Vp-p

Note: Use a MP type tape.

Checking method:

- 1) Check that the oscillation frequency is approx. 7.5 MHz and that the oscillation voltage is above 1.5 Vp-p.

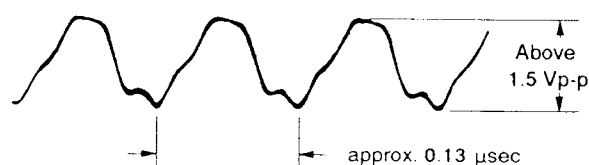


Fig. 10-7.

3. VXO Oscillation Frequency Check (VS-100 board)

Mode	STOP
Signal	Color bar
Measurement Point	Pin ⑫ of IC152
Measuring Instrument	Frequency counter
Specified Value	4433618 ± 70 Hz

Note: Connect the frequency counter via a high impedance (approximately $10 \text{ M}\Omega$) and low capacity (below 10 pF) buffer.

Adjusting method:

- 1) Check that the oscillation frequency of pin ⑫ of IC152 is 4433618 ± 70 Hz.

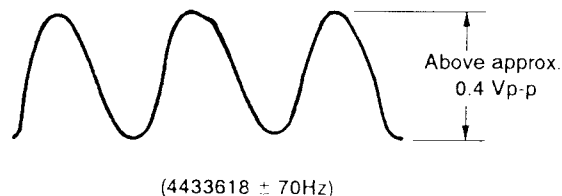


Fig. 10-8.

4. EE Level Adjustment (VS-100 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ② of CN101 (VIDEO OUT) ^{Note}
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4A (EE LEVEL)
Specified Value	$A=1.00 \pm 0.025V$

Note: Terminate pin ② of CN101 at 75 Ω .

After completing adjustments, remove the 75 Ω resistor.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 4A, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

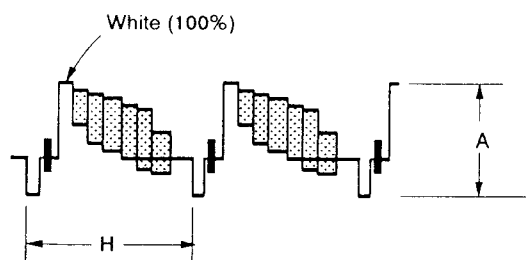


Fig. 10-9.

5. IR Adjustment (VS-100 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑦ of IC151 (Y COMB OUT)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	4D (SR IR)
Specified Value	Residual chroma component (A) is minimum (below 80 mVp-p)

Connection

- 1) Connect pin ⑭ of IC151 (VREF: 3.5 Vdc) or pin ② of IC159 to pin ⑤ of IC151 with a jumper wire.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 4D, and adjust so that the residual chroma component (A) becomes minimum.
- 3) Press the PAUSE button of the adjusting remote control unit.

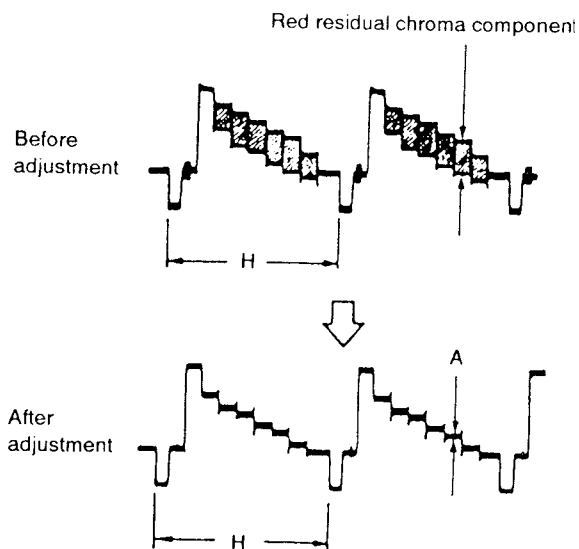


Fig. 10-10.

6. Y/C Separation Adjustment (VS-100 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ⑪ of IC151 (C+CD)
Adjusting Element	Oscilloscope
Measuring Instrument	RV151 (Phase)
Adjustment Page	D
Adjustment Address	4C (Y/C SEP DL LEVEL)
Specified Value	Residual chroma component (A) is minimum.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 4C, and adjust the residual chroma component to minimum.
- 3) Adjust RV151 so that the residual chroma component (A) becomes minimum.
- 4) Press the PAUSE button of the adjusting remote control unit.

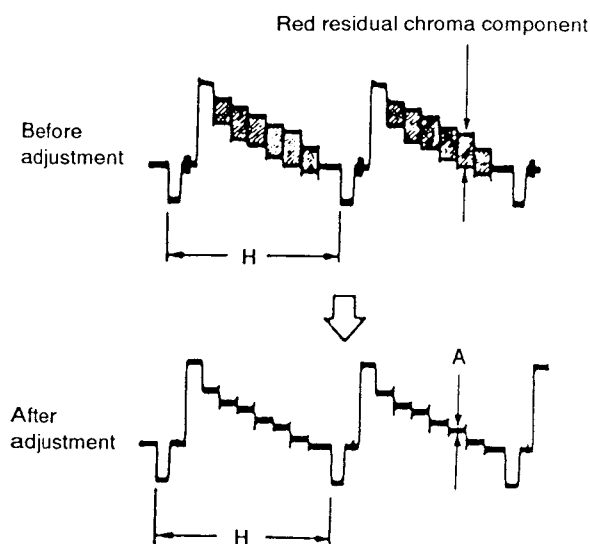


Fig. 10-11.

7. Emphasis Input Level Adjustment (VS-100 board)

Mode	E-E
Signal	Color bar without burst signal
Measurement Point	Pin ③ of IC155 (or Pin ③ of IC151)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5A (EMPHASIS INPUT LEVEL)
Specified Value	$A=0.50 \pm 0.025V$

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 5A, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

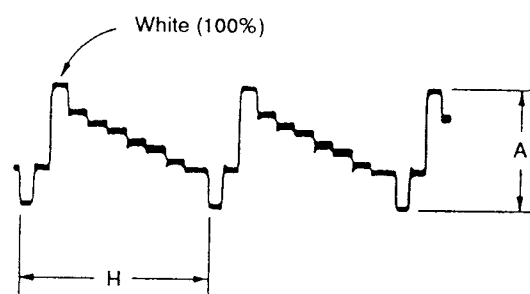


Fig. 10-12.

8. PB Y Level Adjustment (VS-100 board)

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Color bar section
Measurement Point	Pin ② of IC151
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	59 (NORMAL PB Y LEVEL)
Specified Value	$A=0.50 \pm 0.025V$

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Playback the color bar section of the normal mode alignment tape (WR5-5CSP).
- 3) Change the data of page: D, address: 59, and adjust so that the Y signal level (A) becomes the specified value.
- 4) Press the PAUSE button of the adjusting remote control unit.

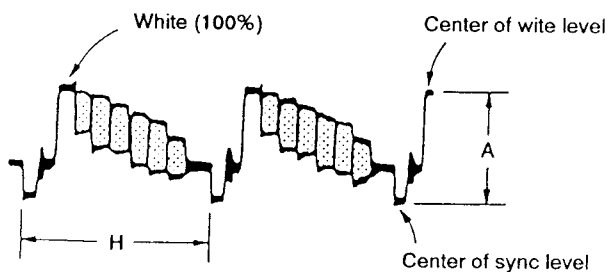


Fig. 10-13.

9. PB LINE OUT Level Adjustment

Mode	Playback
Signal	Alignment tape: For checking operations (WR5-5CSP) Color bar section
Measurement Point	Video output terminal (terminated at 75Ω)
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	5B (PB LINE LEVEL)
Specified Value	$A=1.0 \pm 0.05V$

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 5B, and adjust so that the video signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

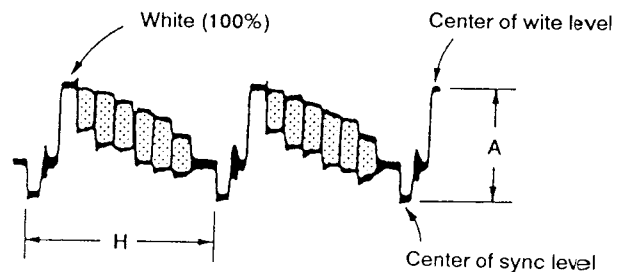


Fig. 10-14.

10. Y FM Carrier Frequency Adjustment (VS-100 board)

Mode	E-E
Signal	No signal
Measurement Point	Pin ⑤ of IC003 (REC Y RF OUT)
Measuring Instrument	Frequency counter
Adjustment Page	D
Adjustment Address	4F (Y FM CARRIER)
Specified Value	4.38 ± 0.04 MHz

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 4F, and adjust so that the Y FM carrier frequency becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.
- 4) Perform "Deviation Adjustment".

Pin ⑤ of IC003 waveform

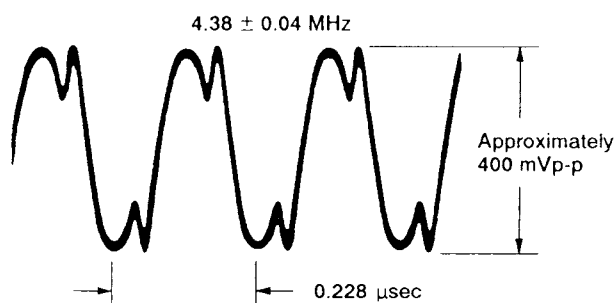


Fig. 10-15.

11. Deviation Adjustment (VS-100 board)

Mode	Record and playback
Signal	Color bar
Measurement Point	Pin ②① of IC151
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	51 (Y FM DEVIATION)
Specified Value	$A=0.50 \pm 0.025$ V

Note: Check that "Emphasis Input Level Adjustment", "PB Y Level Adjustment" and "Y FM Carrier Frequency Adjustment" have been completed.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Record the color bar signal.
- 3) Playback the recorded signal.
- 4) Check the playback signal level (A).
Specification: $A=0.50 \pm 0.025$ V
- 5) If the specification is not satisfied, change the data of page: D, address: 51, and repeat steps 2) to 4).

Playback signal level	Changing the data
When smaller than the specified value	Increase
When bigger than the specified value	Decrease

- 6) Press the PAUSE button of the adjusting remote control unit.

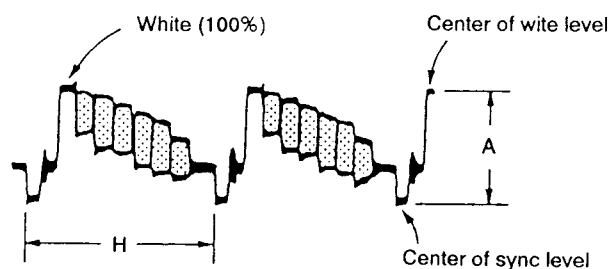


Fig. 10-16.

12. Chroma Emphasis fo Adjustment (VS-100 board)

Mode	E-E
Signal	Color bar
Measurement Point	Pin ②④ of IC152
Measuring Instrument	Oscilloscope
Adjustment Element	FL153
Specified Value	Minimum fo component

Connection:

- 1) Connect pin ②④ of IC152 to GND with a 3.3 k Ω resistor (1-249-423-11).

Adjusting method

- 1) Adjust FL153 so that the amplitude of the latter section of the chroma signal (yellow section) becomes minimum.

Minimize the amplitude of the latter section of the yellow section.

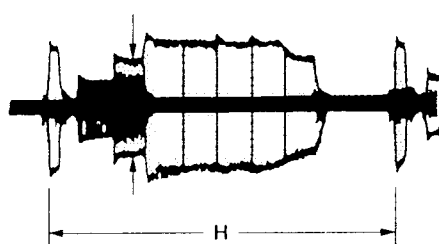


Fig. 10-17.

13. REC Y Level Adjustment (VS-100 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ⑤ of IC003
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	55 (REC Y LEVEL EE NOR MP) 54 (REC Y LEVEL EE NOR ME)
Specified Value	A=205 $\pm$ 5 mVp-p

Note: Use a MP type tape.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 55, and adjust so that the Y signal level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.
- 4) Set the data of page: D, address: 55 to page: D, address: 54
- 5) Press the PAUSE button of the adjusting remote control unit.

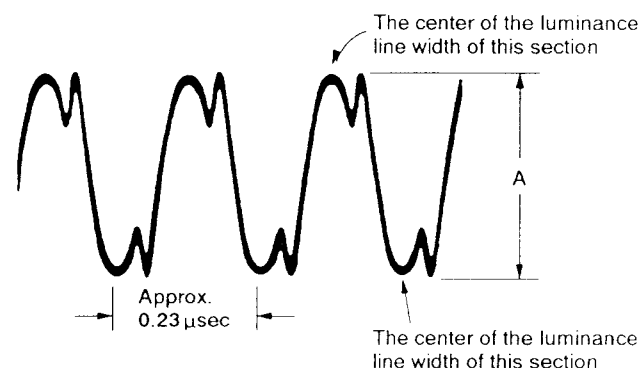


Fig. 10-18.

14. REC C Level Adjustment (VS-100 board)

Mode	Record (SP)
Signal	Color bar
Measurement Point	Pin ③ of IC003
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	46 (REC C RF (EE))
Specified Value	$A=110 \pm 10 \text{ mVp-p}$

Note: Use a MP type tape.

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 46, and adjust so that the REC C level (A) becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

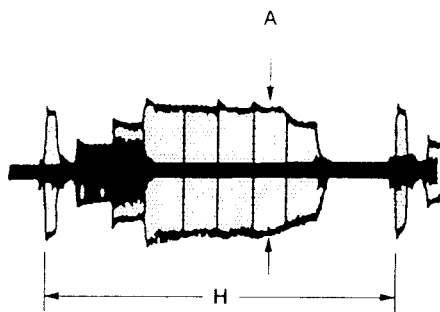


Fig. 10-19.

15. REC ATF Level Check (VS-100 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ② of IC001 (REC 1CH)
Measuring Instrument	Oscilloscope
Specified Value	$A=8 \pm 2 \text{ mVp-p}$

Note: Use a MP type tape.

Connection:

- 1) Remove the AU-150 board CN602.

Checking method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) To reduce the REC Y signal, set data: 00 to page: D, address: 55.
Note: Don't press the PAUSE button of the adjusting remote control unit.
- 3) Check that the REC ATF signal level (A) satisfies the specified value.
- 4) Turn the main power supply (6.3V) off.

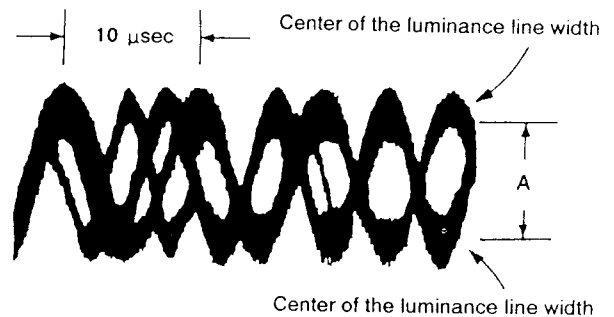


Fig. 10-20.

16. REC AFM Level Check (VS-100 board)

Mode	Record (SP)
Signal	No signal
Measurement Point	Pin ② of IC001 (REC ICH)
Measuring Instrument	Oscilloscope
Specified Value	$A=9 \pm 2 \text{ mVp-p}$

Note: Use a MP type tape.

Connection:

- 1) Connect Pin ⑨ of IC404 and GND with a $0.01 \mu\text{F}$ capacitor (1-101-004-00).

Checking method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) To reduce the REC Y signal, set data: 00 to page: D, address: 55.
Note: Don't press the PAUSE button of the adjusting remote control unit.
- 3) Check that the REC AFM signal level (A) satisfies the specified value.
- 4) Turn the main power supply (6.3V) off.

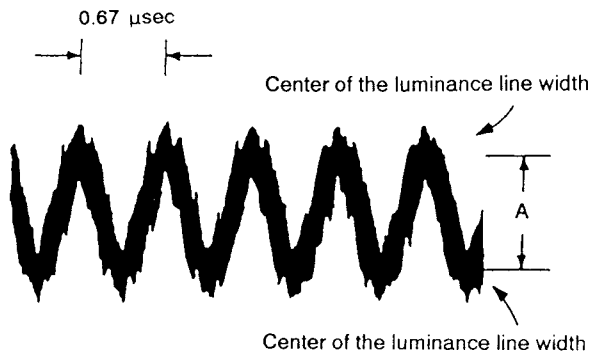


Fig. 10-21.

10-6. AUDIO SYSTEM ADJUSTMENT

- Perform the adjustment using the color bar signal as a video signal input.

[Connecting the measuring instruments for the audio]

Connect the audio system measuring instruments besides the video system measuring instruments as shown in Fig. 10-22, and perform adjustments with the power switch [player] position.

- Note:** 1) When inputting the audio signal, input the same signal to both L, and R channels, unless specified otherwise.
- 2) Be sure to insert the plug (shorting plug or dummy plug, e) into the audio output terminal (right). If the plug is inserted, the unit will be set into the monaural mode, and correct adjustments cannot be carried out.
(Monaural mode)
During recording -- REC AFM RF1.7 MHz carrier will not be output.
During playback -- The L+R signal will be output from the audio output terminal (left).
- 3) The items to be adjusted for the R channel will be indicated within the [], in regard to the adjusting items to be adjusted for both L and R channels.

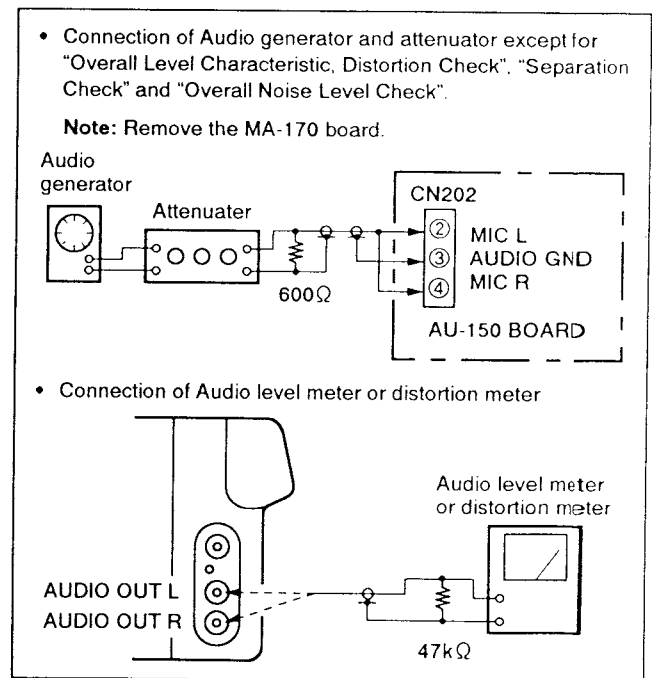


Fig. 10-22.

[Adjustment Procedure]

- 1) IR adjustment
- 2) 1.5 MHz carrier frequency check
- 3) 1.7 MHz carrier frequency check
- 4) 1.5 MHz record level check
- 5) 1.7 MHz record level check
- 6) E-E output level check
- 7) REC matrix L-R adjustment
- 8) REC matrix L+R check
- 9) 1.5 MHz deviation adjustment
- 10) 1.7 MHz deviation adjustment
- 11) PB matrix L adjustment
- 12) PB matrix R check
- 13) Overall level characteristics, distortion check
- 14) Separation check
- 15) Overall noise level check

1. IR Adjustment (AU-150 board)

Mode	Playback
Signal	Alignment tape: AFM stereo For checking operations (WR5-9CS)
Measurement Point	Pins ④ and ⑥ of IC601 (1.5 MHz IR) Pins ④ and ⑥ of IC602 (1.7 MHz IR)
Measuring Instrument	Digital voltmeter
Adjustment Page	D
Adjustment Address	7A (1.5 IR), 7C (1.7 IR)
Specified Value	The DC voltage difference between pins ④ and ⑥ is 0 ± 10 mVdc

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 1.5 MHz IR adjustment
- 2) Connect the digital voltmeter to pin ④ of IC601, and read the voltage. (Approximately 2100 mVdc)
- 3) Connect the digital voltmeter to pin ⑥ of IC601.
- 4) Change the data of page: D, address: 7A, and adjust so that the voltage of pin ⑥ of IC601 becomes equal to the voltage of pin ④. (Voltage difference below 10 mVdc)
- 5) Press the PAUSE button of the adjusting remote control unit.
- 1.7 MHz IR adjustment
- 6) Connect the digital voltmeter to pin ④ of IC602, and read the voltage. (Approximately 2100 mVdc)
- 7) Connect the digital voltmeter to pin ⑥ of IC602.
- 8) Change the data of page: D, address: 7C, and adjust so that the voltage of pin ⑥ of IC602 becomes equal to the voltage of pin ④. (Voltage difference below 10 mVdc)
- 9) Press the PAUSE button of the adjusting remote control unit.

2. 1.5 MHz Carrier Frequency Check (AU-150 board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of IC601
Measuring Instrument	Frequency counter (Note 1)
Specified Value	1.500 ± 0.002 MHz

Note: Use a high impedance (above $1\text{ M}\Omega$) and low capacity (below 20 pF) probe.

Checking method:

- 1) Check that the 1.5 MHz carrier frequency satisfies the specified value.

3. 1.7 MHz Carrier Frequency Check (AU-150 board)

Mode	Record
Signal	No signal
Measurement Point	Pin ⑧ of IC602
Measuring Instrument	Frequency counter (Note 1)
Specified Value	1.700 ± 0.002 MHz

Note: 1) Use a high impedance (above $1\text{ M}\Omega$) and low capacity (below 20 pF) probe.

- 2) Insert a shorting plug into the audio input terminal (right).

Checking method:

- 1) Check that the 1.7 MHz carrier frequency satisfies the specified value.

4. 1.5 MHz Record Level Check (AU-150 board)

Mode	Record (Monaural)
Signal	No signal
Measurement Point	Pin ⑧ of CN601 (REC AFM)
Measuring Instrument	Oscilloscope
Specified Value	$A=41 \pm 5$ mVp-p

Note: Remove the plug inserted into the audio output terminal (right), or connect the collector of Q605 and GND with a jumper wire.

Checking method:

- 1) Check that the 1.5 MHz carrier level satisfies the specified value.
(Read the center of the luminance line width and note down the level read.)

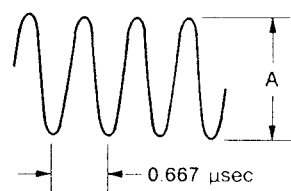


Fig. 10-23.

5. 1.7 MHz Record Level Check (AU-150 board)

Mode	Record
Signal	No signal
Measurement Point	Pin ③ of CN601 (REC AFM)
Measuring Instrument	Oscilloscope
Specified Value	1.7 MHz carrier level 1.5 MHz carrier level = 0.80 ± 0.12

Note: Insert a shorting plug into the audio output terminal (right).

Connection:

- 1) Remove C690 (0.01 μ F) and check. After checking, connect a new capacitor.

Checking method:

- 1) Check that the level ratio of 1.5 MHz carrier and 1.7 MHz carrier satisfies the specified value.

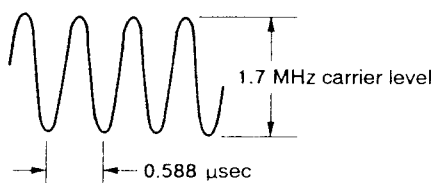


Fig. 10-24.

6. E-E Output Level Check (AU-150 board)

Mode	Record
Signal	400 Hz, -38 dBs Pin ② [Pin ④] of CN602
Measurement Point	Audio output terminal left [right]
Measuring Instrument	Oscilloscope
Specified Value	925^{+240}_{-190} mVp-p (-7.5 ± 2 dBs)

Checking method:

- 1) Check that the 400 Hz signal level satisfies the specified value.

7. REC Matrix L-R Adjustment (AU-150 board)

Mode	Record
Signal	400 Hz, -38 dBs Input to both Pin ② and Pin ④ of CN602
Measurement Point	Pin ③ of IC603
Measuring Instrument	Oscilloscope (Use 1:1 probe)
Adjustment Page	D
Adjustment Address	78 (L/R MX LEVEL (REC))
Specified Value	0 ± 5 mVp-p

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 78, and minimize the 400 Hz signal level.
- 3) Press the PAUSE button of the adjusting remote control unit.

8. REC Matrix L+R Check (AU-150 board)

Mode	Record
Signal	1. 400 Hz, -38 dBs: Pin ② of CN602 (MIC L) No signal: Pin ④ of CN602 (MIC R) 2. No signal: Pin ② of CN602 (MIC L) 400 Hz, -38 dBs: Pin ④ of CN602 (MIC R)
Measurement Point	Pin ⑤ of IC603
Measuring Instrument	Oscilloscope
Specified Value	The level difference is 0 ± 10 mVp-p when only the left channel is input and when only the right channel is input.

Note: When measuring the signal level of pin ⑤ of IC603, wait for more than 1 minute after signal input before measuring. (To stabilize the AGC)

Adjusting method:

- 1) Input the 400 Hz, -38 dBs signal only to pin ② of CN602 (MIC L). (Connect pin ④ of CN602 (MIC R) and GND with a jumper wire.)
- 2) Read the 400 Hz signal level of pin ⑤ of IC603, and take it down. (Approximately 200 mVp-p)
- 3) Input the 400 Hz, -38 dBs signal only to pin ④ of CN602 (MIC R). (Connect pin ② of CN602 (MIC L) and GND with a jumper wire.)
- 4) Check that the 400 Hz signal level of pin ⑤ of IC603 is (the value that was taken down at step 2) ± 10 mVp-p.

9. 1.5 MHz Deviation Adjustment

Mode	Playback
Signal	Alignment tape: For checking the operation (WR5-5CSP)
Measurement Point	Audio output terminal left or right
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7B (1.5 DEV)
Specified Value	-7.5 ± 0.5 dBs

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Change the data of page: D, address: 7B, and adjust so that the 400 Hz signal level becomes the specified value.
- 3) Press the PAUSE button of the adjusting remote control unit.

10. 1.7 MHz Deviation Adjustment (AU-150 board)

Mode	Playback
Signal	Alignment tape: AFM stereo For checking operations (WR5-9CS) Bilingual (Monoscope) section
Measurement Point	1. Pin ② of IC603 2. Pin ③ of IC603
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	7D (1.7 DEV)
Specified Value	8 ± 0.05 graduation

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Connect the oscilloscope to pin ② of IC603.
- 3) Adjust the 400 Hz signal amplitude to the 8.0 graduation using the VOLT/DIV knob of the oscilloscope.
- 4) Connect the oscilloscope to pin ③ of IC603.
- 5) Change the data of page: D, address: 7D, and adjust so that the 1 kHz signal level becomes 8 ± 0.05 graduation. (Adjust with the center of the luminance line width.)
- 6) Press the PAUSE button of the adjusting remote control unit.

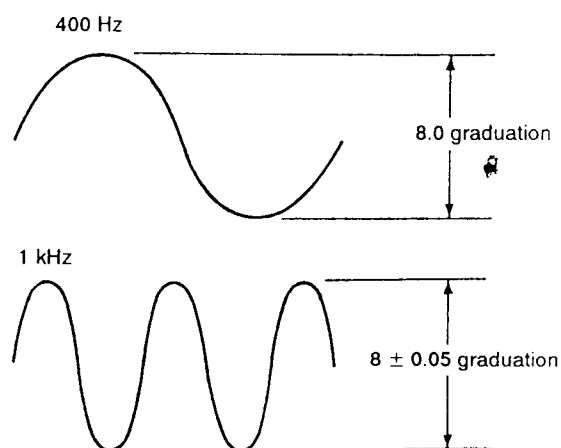


Fig. 10-25.

11. PB Matrix L Adjustment (AU-150 board)

Mode	Self recording/playback
Signal	No signal: Pin ② of CN602 (MIC L) 400 Hz, -38 dBs: Pin ④ of CN602 (MIC R)
Measurement Point	Audio output terminal left
Measuring Instrument	Oscilloscope
Adjustment Page	D
Adjustment Address	79 (L/R MX LEVEL (PB))
Specified Value	Below 20 mVp-p

Adjusting method:

- 1) Release the protect.
Page: 1, address: 00, data: 01
- 2) Input the 400 Hz, -38 dBs signal only to pin ④ of CN602 (MIC R). (Connect pin ② of CN602 (MIC L) and GND with a jumper wire.)
- 3) Record.
- 4) Remove the input signal.
- 5) Playback the recorded section.
- 6) Change the data of page: D, address: 79, and minimize the cross talk component (400 Hz).
- 7) Press the PAUSE button of the adjusting remote control unit.

12. PB Matrix R Check (AU-150 board)

Mode	Self recording/playback
Signal	400 Hz, -38 dBs: Pin ② of CN602 (MIC L) No signal: Pin ④ of CN602 (MIC R)
Measurement Point	Audio output terminal right
Measuring Instrument	Oscilloscope
Specified Value	Below 30 mVp-p

Checking method:

- 1) Input the 400 Hz, -38 dBs signal only to pin ② of CN602 (MIC L). (Connect pin ④ of CN602 (MIC R) and GND with a jumper wire.)
- 2) Record.
- 3) Remove the input signal.
- 4) Playback the recorded section.
- 5) Check that the cross talk component (400 Hz) is below 30 mVp-p.

13. Overall Level Characteristic, Distortion Check

Mode	Self recording/playback
Signal	400 Hz, -66.0 dBs: Ext mic terminal (left) [right] No signal: Ext mic terminal (right) [left]
Measurement Point	Audio output terminal (left) [right]
Measuring Instrument	Audio level meter and distortion meter
Specified Value	Level: -8.5 ± 2 dBs Distortion rate: Below 0.8% (Note 2)

- Note:** 1) The [] indicates the measuring point during the right channel check
2) Value when the following filter is used

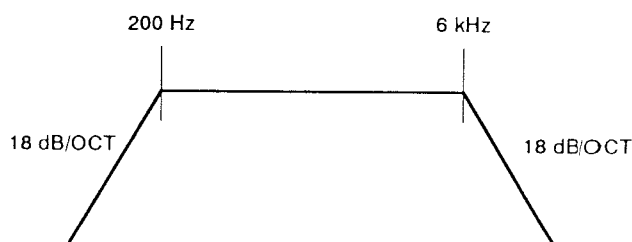


Fig. 10-26.

Checking method:

- 1) Input the 400 Hz, -66.0 dBs signal only to the Ext mic terminal (left) [right].
Note: Connect the Ext mic terminal (right) [left] and GND with a jumper wire.
- 2) Record the signal.
- 3) Remove the input signal.
- 4) Playback the recorded section.
- 5) Check that the 400 Hz signal level of the audio output terminal (left) [right] is -8.5 ± 2 dBs, and that the distortion rate is below 0.8% (Note 2).

14. Separation Check

Mode	Self recording /playback
Signal	No signal: Ext mic terminal (left) [right] 1 kHz, -66.0 dBs: Ext mic terminal (right) [left]
Measurement Point	Audio output terminal (left) [right]
Measuring Instrument	Audio level meter (Use an IHF-A curve audio correction filter)
Specified Value	Below -27.5 dBs

Note: The [] indicates the measuring point during the right channel check.

Checking method:

- 1) Connect the Ext mic terminal (left) [right] and GND with a jumper wire, and input a 1kHz, -66.0 dBs signal only to the Ext mic terminal (right) [left].
- 2) Record the signal.
- 3) Remove the input signal.
- 4) Playback the recorded section.
- 5) Check that the cross talk level (1 kHz) of the audio output terminal (left) [right] is below -27.5 dBs.

15. Overall Noise Level Check

Mode	Self recording
Signal	No signal: Ext mic terminal left and right
Measurement Point	Audio output terminal (left) [right]
Measuring Instrument	Audio level meter (Use an IHF-A curve auditory correction filter)
Specified Value	Below -62.5 dBs

Note: The [] indicates the measuring point during the right channel check.

Checking method:

- 1) Connect the Ext mic terminal left and GND with a jumper wire, and connect the terminal right and GND with a jumper wire
- 2) Record.
- 3) Remove the jumper wire.
- 4) Playback the recorded section.
- 5) Check that the noise level of the audio output terminal (left) [right] is below -62.5 dBs.